


# Installation & Servicing Instructions



0. E.

8G.51.81.00 / 03.15 Changes reserved. E.&

## **Explanation of the Control Panel & Buttons**

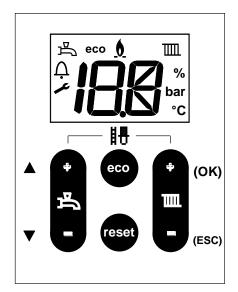

Error Error indication (accompanied with a code).

✓ Alert Service-mode or blocking

Flame Visible when boiler is active for heating or DHW

Heating Visible when heating program is active

Flashing when there is a heat demand for heating

Central heating program (On = +, Off = -)
 Setting of boiler temperature (max. flow temperature)

+/-function (ancillary function: OK and Escape)

Press 6 seconds for Information

reset Reset button

DHW button+/-function (ancillary function: Scroll and +/-function)

Commissioning function (Press both + buttons for 6 seconds)

See chapter 12 for more information about button functions and read-out.

# Contents

1	Introduction						
2	Rules & Regulations (Symbols)						
3	Techn	ical specifications	7				
4	Dimer	nsions	8				
5	Delive	ery package	9				
6	Boiler description						
7	Boiler photo components list						
8	Moun	ting boiler frame	. 11				
	8.1	Wall frame	12				
9	Conn	ecting boiler	13				
	9.1	Open vent heating system	13				
	9.2	Water quality	14				
	9.3	Heating systems with plastic pipes	15				
	9.4	Gas connection in general					
	9.4.1	Natural gas connection (NG)					
	9.4.2	Propane gas connection (LPG)	16				
	9.5	Condensation drain pipe	18				
	9.6	Flue gas exhaust system	22				
	9.6.1	Flue terminal locations	23				
	9.6.2	Dimensioning of the flue gas and air intake duct	26				
	9.7	Fitting the boiler onto the boiler frame	28				
10	Electr	ical connection	.30				
	10.1	Electrical diagram	31				
11	Filling	system	.32				
12	Boiler	controls	.32				
	12.1	Controls and explanation of the functions	.33				
13	Comn	nissioning the boiler	34				
	13.1	Settings	.36				
	13.2	Parameter chapter	.36				
14		ring the boiler					
15	Comn	nissioning	.38				
	15.1	Checking the CO <sub>2</sub>	.39				
16	Routir	ne servicing					
	16.1	Component replacement					
	16.2	User's instructions					
	16.3	Maintenance frequency	.45				
	16.4	Warranty	.45				
17	Error	codes and fault finding	.46				
Ann	ex A	System water additives					
Ann	ex B	Declaration of conformity	.48				
Δnn	ev C	Short parts list	10				

Work on the installation should only be carried out by qualified personnel with calibrated equipment and appropriate tools.

## 1 Introduction

These instructions describe the functioning, installation, use and primary maintenance of ATAG central heating boilers for the United Kingdom.

These instructions are intended for the use of Gas Safe registed installers in connection with the installation and putting into operation of ATAG boilers. It is advisable to read these instructions thoroughly, well in advance of installation. Separate instructions for use are supplied with the boiler for users of ATAG central heating boilers. ATAG is not liable for the consequences of mistakes or shortcomings which have found their way into the installation instructions or user's manual. Further, ATAG reserves the right to alter its products without prior notification.



When delivering the boiler, give the customer clear instructions concerning its use; present the customer with the user's manual and warranty card.

Each boiler is fitted with an identification plate. Consult the details on this plate to verify whether the boiler is compliant with its intended location, e.g.: gas type, power source and exhaust classification.

On completion of the installation the installer or commissioning engineer must fill out and complete the Benchmark Commissioning Checklist found on page 53 of this manual and hand this to the customer for future record keeping. The Benchmark Service Record must also be completed by the service agent following each service call, and return to the customer.

## 2 Rules & Regulations (Symbols)

The following regulations apply to installation of ATAG central heating boilers:

Legislation and Regulations.

Gas Safety (Installation and Use). All gas appliances must by law, be installed by a competent person, eg. Members of Gas Safe Register and in accordance with the current Gas Safety Regulation. Failure to install appliance correctly could lead to prosecution.

All Gas Safe registered installers carry a Gas Safe ID card and have a registration number. You can call Gas Safe Register directly on 0800 408 5577.

In addition to the above regulations this appliance must be installed in compliance with the current IEE Regulations, the Building Standards (Scotland Consolidation) Regulations. Regulations and bye laws of the Local Water Authority and the Current Health and Safety Regulation.

#### The Benchmark Scheme

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the



requirements of the appropriate Building Regulations. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.

Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme.

Visit www.centralheating.co.uk for more information.

The current Electricity at Work Regulation must be complied with and also be in accordance with the relevant and current editions of the British Standards.

The ATAG iR boiler is a certified appliance and must not be modified or installed in any way contrary to this Installation Manual. Manufacturers instructions must not be taken, in any way, as overriding statutory obligations.

The ATAG iR boiler is a central heating boiler for "open" expansion tank systems (open vent) only. The boiler must be connected according to these instructions and all installation norms in respect of the part of the boiler to be connected.

Observe the following rules of safety:

- All work on the boiler must take place in a dry environment.
- ATAG boilers may never be in operation without their housing, except in connection with maintenance or adjustments (see Chapter 15 and 16).
- Never allow electrical or electronic components to come into contact with water.

Carry out the following tasks in connection with maintenance, etc. to an already-installed boiler:

- Shut down all programs
- Close the gas isolation valve
- Shut down the 230V power supply

See chapter 15 and 16 for further instructions.

Take note of the following when maintenance or adjustments are needed:

 The boiler must be able to function during these activities; for this reason, the boiler's 230V power supply, gas pressure and water pressure must be maintained. Ensure that there is not a source of potential danger during these activities.



Following maintenance or other activities; always check the installation of all parts through which gas flows (using leak detection spray).

The following (safety) symbols may be encountered in these installation instructions and on the boiler (packaging):



Boiler must be stored away from frost.



Protect packaging and/or contents from damage as a result of insufficient care taken during transport.



Protect the boiler from weather conditions during transport and storage whilst still in its packaging.



If and how to clamp when using transport trucks with clamp equipment.



If and how to transport when using a rolling jack.



The whole packaging is made of recycled materials and can be recycled again.



Transport and place the boiler in its packaging in this position.



Do not to step on or stand on the package.



An assembly or dismantling must be carried out.



Pay extra attention in connection with a particular operation.





Useful tip or advice


# 3 Technical specifications


Technical specifications Natural gas							
		ATAG iR-Series					
				Reg	gular		
Boiler type		iR 12	iR 15	iR 18	iR 24	iR 32	iR 40
Type heat exchanger	•	iCon1	iCon1	iCon1	iCon1	iCon2	iCon2
Input CH Net	kW	10.8	13.5	16.2	21.6	28.8	36.0
Q <sub>n</sub> Input CH Gross	kW	12.0	15.0	18.0	24.0	32.0	40.0
Modulation range CH (capacity 50/30°C)	kW	5.0 - 11.8	5.0 - 14.7	5.0 - 17.5	5.0 - 23.2	6.9 - 31.2	6.9 - 38.8
Nox class EN15502-1					5		
O <sub>2</sub> (at full load)	%			4	1.7		
CO <sub>2</sub> (at full load)	%			ç	9.0		
Temperature class flue				T.	100		
Appliance type	•	·	B23, B33, C	C13, C33, C	43, C53, C	63, C83, C9	3
Flue gas temp. CH (80/60°C on full load)	°C		;	59		Į.	59
Flue gas temp. CH (50/30°C on low load)	°C			29		3	30
Categories				II2	H3P		
Electr. power consumption max.	W	20	23	28	36	40	46
Electr. power consumption part load	W	15	17	21	27	30	35
Electr. power consumption stand by	W	4					
Current	V/Hz		230/50				
Degree of protection acc. EN 60529				IPX4D (B22		,	
Weight boiler + jig (empty)	kg	32	32	32	32	35	35
Width	mm	440	440	440	440	440	440
Height (excl. flue)	mm	700	700	700	700	700	700
Depth	mm	355	355	355	355	355	355
Overrun time pump CH	sec				30		
Flow temperature max.	°C				35		
SAP Annual Efficiency NG		89.7	89.7	89.7	89.7	89.8	89.7
CE product identification number(PIN)				00630	CQ3634		
Technical specifications Propane gas	<del></del>						
Boiler type		iR 12	iR 15	iR 18	iR 24	iR 32	iR 40
Heat exchanger type		iCon1	iCon1	iCon1	iCon2	iCon2	iCon2
O <sub>2</sub> (at full load)	%			5	5.1		
CO <sub>2</sub> (at full load)	%			1	0.3		
Pre pressure	mbar			see data	plate LPG		
Input CH Net	kW	10.8	13.5	16.2	21.6	28.8	36.0
Output (80/60°C)	kW	10.7	13.3	15.9	21.2	28.4	35.4
Output (50/30°C)	kW	11.8	14.7	17.5	23.2	31.2	38.8
Weight boiler + jig (empty)	kg	32	32	32	35	35	35

## 4 Dimensions

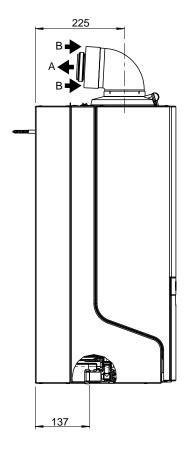

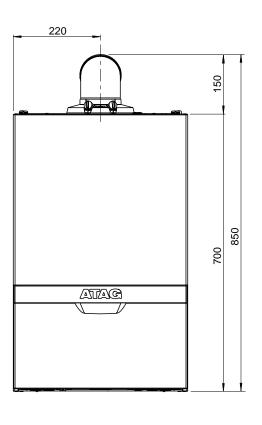

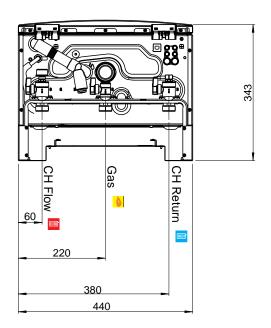

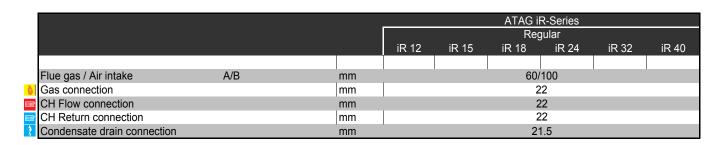

## 5 Delivery package

The delivery package of the boiler is composed as follows:

- Boiler frame:
- Boiler with cover;
- Automatic air vent (in boiler);
- Isolation valves with drainpoint (CH 2x)
- Gas isolating valve;
- Fittings consisting of plugs and screws;
- Drawing template;
- Installation instructions;
- User manual;
- Warranty Card.

The following components are not present in the boiler packaging as a standard and should be included in the installation according to the requirements:

- Flue system;
- External controls.

## 6 Boiler description

The ATAG iR is a room sealed, condensing and modulating CH boiler for "open" expansion tank systems (open vent) only.

The boiler is equipped with a compact stainless steel heat exchanger with smooth pipes. It is a well thoughtout principle using sustainable materials.

The boiler burns gas to supply heat (natural gas and LPG versions available). This heat is transferred in the heat exchanger to the water in the CH installation. The rapid cooling off of the flue gases causes condensation. This results in a very high efficiency. The condensate that is formed, has no negative impact on the heat exchanger and it's operation, and is removed through the internal siphon. This feature requires a condensate drain pipe connected to the drain of the building.

The boiler is equipped with an intelligent control system. The boiler anticipates on the heat demand of the heating installation or hot water demand. This will cause the boiler to tune its capacity to the installation. This means that the boiler will function longer and at a low level.

The boiler has been tested according to valid CE standards and has a CE certificate and >88% Efficient SEDBUK 2009.



Statement: No banned materials including asbestos, mercury, CFC's have or will not be included in the product.

# **Boiler photo components list**



ATAG iR Figure 7.a

1	Heat exchanger	9	Flue gas exhaust	T1	Flow sensor
2	Ignition unit	10	Combustion air supply	T2	Return sensor
3	Fan unit	11	Boiler data plate	F1	Flow switch
4	Air supply damper	12	Siphon	G	Gas pipe
5	Gas valve	13	Isolation valve flow CH	Α	Flow pipe CH
6	Automatic de-aerator	14	Isolation valve gas	R	Return pipe CH
7	Control unit	15	Isolation valve return CH	С	Condensation pipe
8	Control panel				

## 8 Mounting boiler frame



Install the boiler in a boiler room in accordance to the actual local regulations BS5440-2:2000.

The installation location of the boiler has to be, and remain, frost-free. The boiler casing is splash water tight (IPX4D) and is suitable to be installed in e.g. a bathroom.

It is NOT necessary to have a purpose provided air vent in the room or internal space in which the boiler is installed. Neither is it necessary to ventilate a cupboard or compartment in which the boiler is installed, due to the extremely low surface temperature of the boiler casing during operation. Therefore the requirements of BS 6798, Clause 12, and BS5440:2 may be disregarded.


The boiler can be mounted practically to any wall with the wall frame and the enclosed fixing equipment. The wall must be flat and of sufficient strength in order to be able to carry the boiler weight with its water content. Above the boiler there must be at least 175 mm working space in order to be able to fit a horizontal concentric flue system to the rear (See chapter 9.6 for more flue options). Make sure there is sufficient service space arround the boiler according figure 8.a. The location of the boiler can be determined by using the template.

The wall frame allows the possibity to pre-fit the complete heating system before fitting the boiler. Also the flue system can be prepared. Finally fitting of the flue system is done after fitting the boiler. See next page for all options for connection the heating, condensate, flue and gas installation.

Before hanging the boiler to the boiler frame remove the front panel of the boiler first. The front panel is also the air cabinet and is attached to the boiler case with 2 fasteners (A and B) (see figure 8.a).



Note that there is an earth cable to disconnect when removing the boiler front panel. Free space for removing the connector is about 400 mm. Remember to connect this earth cable when placing back the boiler front panel and take care the wire does not get stuck between front panel and boiler.

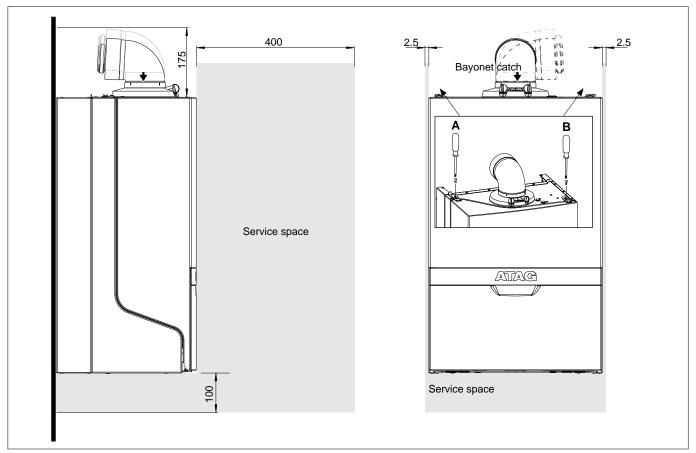

Service dimensions (in mm) Figure 8.a

See chapter 9.8 for further procedure to fit the boiler onto the boiler frame.


## 8.1 Wall frame

- Position the boiler frame against the wall using the template and a level.
- Use the level for horizontal positioning and checking the vertical position.
- Drill 4x ø10mm holes, 60mm deep
- Press the nylon wall plug (ø10x55mm) in the holes
- Mount the boiler frame to wall with the 4 coach screws (ø8x60mm) using a 13mm wrench

The boiler frame allows pipe work to be installed behind the boiler.



The pipe work must be installed at least 10mm inside the front of the frame.

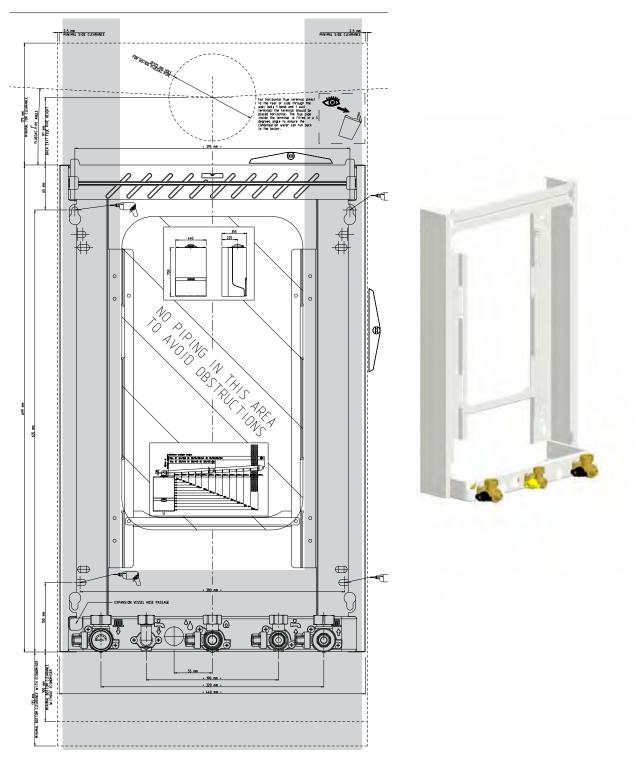

ATAG i-Serie template and boiler frame

Figure 8.1.a

## 9 Connecting boiler

The boiler has the following connection pipes;

- The central heating pipes.
  - The boiler is provided with isolation valves on the flow and return pipe to which the installation can be connected by means of 22mm compression fittings;
- The gas pipe.
  - The boiler is provided with an isolation gas valve to which the gas line can be fitted with 22mm compression fitting;
- The condensation drain pipe.
   It consists of a 25mm flexible plastic pipe. The drain pipe can be connected to this by means of an open connection;
- The flue gas exhaust system and air supply system. *It consists of a concentric connection 60/100 mm.*

See following chapters for detailed information regarding each connection.




It is advisable to clean all of the boiler's connecting pipes and/or to power flush the installation before connecting it to the boiler.

## 9.1 Open vent heating system



This boiler is only suitable for installations that have been equipped with "open" expansion tanks (open vent).

Connect the central heating system according to the current regulations.

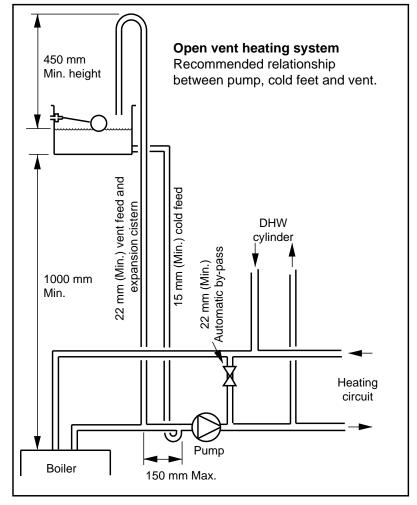

Scheme open vent system

Figure 9.1.a

The boiler pipes can be connected to the installation by means of 22mm compression fittings. For connecting to thick-walled pipe (welded or fitted), adapters should be used.



The boiler is NOT equipped with a built-in internal filter.

Advice: ATAG Heating Technology Ltd recommend the installation of an in-line filter installed into the heating return as close to the boiler as possible. ATAG Heating Technology Ltd recommend the use of the:

ATAG iGuard Magnatic Filter FC000100 (5 year warranty)



Additives in the installation water are only permitted in consultation with the country distributor. See chapter 9.2 for detailed information.

## 9.2 Water quality

Fill the installation with mains cold water.

In most cases, a heating system can be filled with water according to national standards for water and treatment of this water is not necessary.

In order to avoid problems with the CH-installations, the quality of the filling water has to meet the specifications mentioned in table 9.2.a:

If the filling water does not meet the required specifications, you are advised to treat the water to such an extent that it does meet the required specifications.



The warranty becomes invalid, if the installation is not being flushed and/or the quality of the filling water does not meet the specifications recommended by ATAG Heating Technology Ltd. Always contact ATAG Heating Technology Ltd in advance, if things are not clear or you wish to discuss any deviations. Without approval, the warranty becomes invalid.

#### Installation:

- The use of groundwater, demi-water and distilled water is prohibited. (on the next page you will find an explanation of these definitions)
- If the mains water quality meets the specifications mentioned in table 9.3.a, you can start flushing the installation before installing the device.
- Whilst flushing, corrosion products (magnetite), fitting products, cutting oil and other undesirable products have to be removed.
- Another possibility is to remove the pollution by installing a filter. The filter type has to fit the type and grain size of the pollution. ATAG Heating Technology Ltd recommends filter usage.
- In this case, the whole piping system should be taken into consideration.
- The CH-installation has to be properly vented before using the system. For that purpose, we refer to the commissioning chapter.
- If a regular water top up is required (>5% on an annual basis), then there is a structural problem and an installer has to solve the problem. Regularly adding fresh water to the system also adds additional calcium and oxygen implying that magnetite and calcium residues can continue. The result may be blockages and/or leakages.
- The use of anti-freeze and other additives requires periodical quality checks of the filling water in accordance with the period laid down by the additives supplier.
- Chemical additions are to be avoided and should only be used after ATAG Heating Technology Ltd has approved their corresponding use.
- Should you wish to achieve the required water quality by using chemical additives, then this is your own responsibility. The warranty on the product delivered by ATAG Heating Technology Ltd expires, if the water quality does not meet ATAG Heating Technology's specifications or the chemical additives have not been approved by ATAG Heating Technology Ltd.
- On installation and during additions or changes at a later stage, ATAG Heating Technology Ltd recommends to keep a record of the type of water used, its quality at the time, and if applicable, which additives and quantities were added.

Parameter	Value
Water type	Potable water
	Softened water
рН	6.0-8.5
Conductivity (at 20°C in µS/cm)	Max. 2500
Iron (ppm)	Max. 0.2
Hardness (°dH / ppm):	
Installation volume/capacity <20 l/kW	1-12 °dH / 17-214 ppm
Installation volume/capacity >=20 l/kW	1-7 °dH / 17-125 ppm
Oxygen	No oxygen diffusion allowed during operation. Max. 5% filling water addition annually
Corrosion inhibitors	Refer to Additives Attachment
pH increasing or lowering agents	Refer to Additives Attachment
Anti-freeze additives	Refer to Additives Attachment
Other chemical additives	Refer to Additives Attachment
Solid substances	Not allowed
Residues of processing water not forming part of the drinking water	Not allowed

table 9.2.a

#### Water type definition:

Potable water: Tap water compliant with the European drinking water guideline:

98/83/EG dated 3 November 1998.

Softened water: Water with partly de-ionised calcium and magnesium.

Demi-water: Virtually completely demineralised water (very low conductivity)

Distilled water: Water no longer containing minerals.

## 9.3 Heating systems with plastic pipes

When connecting or using an underfloor heating system, designed with plastic pipes, or plastic pipes are used elsewhere in the installation, one should ensure that the plastic pipes used comply with the DIN 4726/4729 standard. It is set out in this standard that the pipes may not have oxygen permeability higher than 0.1 g/m³.d at 40°C. If the system does not comply with this DIN standard, the underfloor heating component will have to be separated from the central heating appliance by means of a plate exchanger.



No recourse can be made to the terms of the warranty in the event of failure to observe the regulations pertaining to plastic underfloor heating pipes.

## 9.4 Gas connection in general

The local gas supplier should be consulted, at the installation planning stage, in order to establish the availability of an adequate supply of gas. An existing service pipe must NOT be used without prior consultation with the local gas supplier.



ATAG supplies boilers suitable for natural gas only and boilers for LPG only. Verify the identification plate on the boiler if the boiler is suitable for the gas kind on site. The boilers cannot be converted to another kind of gas.



Make sure that the gas pipe work does not contain dirt, particularly with new pipes.



The complete installation MUST be tested for gas tightness and purged as described in the above code.

The boiler connection is provided with an isolation valve with 22mm compression fitting, into which the gas line can be fitted.

## 9.4.1 Natural gas connection (NG)

The gas supply must comply to the current Gas Safety, Installation & Use Regulations, in accordance with BS.6891.

The nominal inlet working gas pressure measured at the appliance should be 20 mbar for Nat gas (G20). Allowing for the acceptable pressure loss of 1mbar across the installation pipework, it can be assumed that a minimum permitted operating pressure of 18mbar will be delivered to the inlet of the appliance. (Reference BS 6400-1 Clause 6.2 Pressure Absorption). When tested at the gas valve, the pressure drop from the meter to the gas valve must not be more than 3.8 mbar.

## 9.4.2 Propane gas connection (LPG)

The LPG installation has to comply with British Standard 813 and Domestic Gas Installations



Installing of a LPG installation should only be done by a registered LPG installer.

The tank must be provided with a high pressure regulator with a minimum capacity of 24 kg/h to reduce the tank pressure from 5 to 1.5 bar. The 1.5 bar high pressure gas line should have a minimum diameter of 15mm. In the high pressure gas line a house pressure regulator must be installed. When tested at the gas valve, the pressure drop from the pressure regulator to the gas valve must not be more than 3.7 mbar.

### 9.4.3 House pressure regulator




Each gas appliance which is connected to the propane installation must be provided with its own house pressure regulator. The house pressure regulator is a third party delivery.

The house pressure regulator must have a minimum capacity of 10 kg/h / 30 mbar and a CE certification.

ATAG advices to install the house pressure regulator as close as possible to the boiler. When placing the regulator inside, a discharge drain of ø6mm must be installed. The discharge drain must be directed outdoor. In case of a discharge the gasses will go outside.

If fitting the regulator outside the regulator should be protected against influences of the weather. The (de-) aeration must be positioned downwards (see figure 9.5.3.a).

ATAG advices to install measure points on all gas line parts to have the possibility to check for pressure loss.

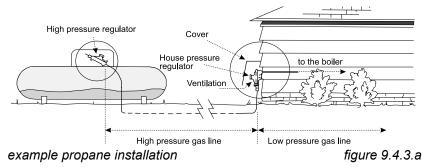



Pre-pressure must be adjusted to 30 mbar by means of the house pressure regulator. The maximum permitted closing pressure may be 5 mbar higher than the maximum pre-pressure.

A too high closing pressure in the low pressure gas line can be caused by a high resistance or jam in this gas line. When the closing pressure keeps increasing the valve in the regulator is not closing correctly. In this case the regulator should be replaced.

## 9.4.4 Dimensioning of the low pressure gas line

The gas line from the house pressure regulator to the boiler must have the dimensions according the table below.

Boiler type	iR 12	iR 15	iR 18	iR 24	iR 32	iR 40
Diameter gas line	m	m	m	m	m	m
ø15mm	3	-	-	-	-	-
ø22mm	30	18	18	18	18	18
ø28mm	-	30	30	30	30	30

## 9.4.5 De-aerating the LPG tank



When placing a new or revised LPG tank the tank must alway be de-aerated.

ATAG advices to inform the gas supplier that a central heating boiler is connected to the LPG tank. For the boiler it is absolutly necessary that the tank is free of air. When not the boiler will give ignition problems and will not function.

ATAG advices to measure the content of  $\,{\rm O}_{2}$ . This value should be lower than 1.3%. Contact the gas supplier in case of doubt.

## 9.5 Condensation drain pipe

The ATAG condensing boiler has the >88% Efficient SEDBUK 2009 for high energy efficiency in heating and domestic hot water. The ATAG wall hung gas fired condensing boiler contain a siphonic condensate trap to collect and realease condensate. The amount of condensate formed is determind by the type of boiler and the water temperature produced by the boiler.

#### Condensate pipework.

Use plastic pipework of an internal diameter no less then 19mm ID (typically 22mm OD).

#### Routing of the pipework,

The condensate pipework must fall at least 45mm per metre away from the boiler, taking the shortest practicle route to the termination point.

Support the pipe at least every 50 cm for near horizontal sections and 1 metre for vertical sections. Wherever possible, the condensate pipework should be routed internally to prevent freezing. In order to minimise the risk of freezing during prolonged very cold spells, one of the following methods of terminating condensate drainage pipe should be adopted.

#### Internal pipework

Wherever possible, the condensate drainage pipe should be terminated at a suitable internal foul water discharge point such as (a) an internal soil and vent stack or (b) an internal kitchen or bathroom waste pipe, washing machine waste pipe etc. A suitable permanent connection to the foul waste pipe should be used. Figures 9.5.1, 9.5.2(a), 9.5.2(b) show appropriate connection methods.

The possibility of waste pipes freezing downstream of the connection point should be considered when determining a suitable connection point - e.g. a slightly longer pipe run to an internal soil stack may be preferable to a shorter run connecting into a kitchen waste pipe discharging directly through the wall to an external drain.


Where "gravity discharge" to an internal termination is not physically possible (e.g. the discharge point is above the appliance location, or access is obstructed by a doorway), or where very long internal pipe runs would be required to reach a suitable discharge point, the following measures may be adopted.

#### Use of a condensate pump (to an internal termination):


Condensate can be removed using a proprietary condensate pump (third party delivery), of a specification recommended by the pump manufacturer.

The pump outlet should discharge to a suitable internal foul water discharge point, such as (a) an internal soil and vent stack or (b) an internal kitchen or bathroom waste pipe, washing machine waste pipe etc. Figure 9.5.3 shows a typical connection method.

A suitable permanent connection to the foul waste pipe should be used and the manufacturer's detailed installation instructions for the pump should be followed.

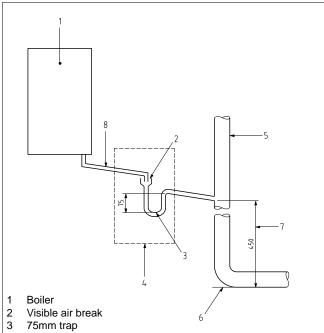


- Visible air break and trap is not required because there is a trap with a condensate seal of 180mm incorporated into the boiler (minimum requirement is 75mm)
- 5 Soil and vent stack
- 6 Invert
- 450mm minimum up to three storeys
- 8 Minimum internal diameter 19mm (fall at least 45mm per meter)

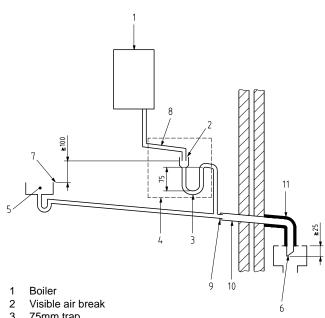

- 3 75mm trap
- Visible air break and trap is not required because there is a trap with a condensate seal of 180mm incorporated into the boiler (minimum requirement is 75mm). In this case the 100mm is measured to the trap in the boiler.
- Sink, basin, bath or shower
- Open end of condensate drainage pipe direct into gully 25mm min below grating but above water level; end cut at 45°
- 7
- 8 Minimum internal diameter 19mm (fall at least 45mm per meter)
- 9 Pipe size transition
- Minimum internal diameter 30mm
- Water/weather proof insulation

Drain requirements


Figure 9.5.1

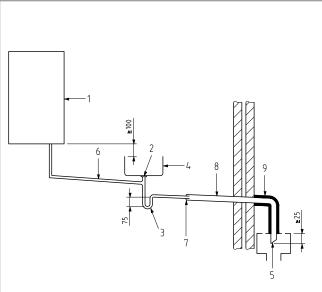

- 1 Boiler
- 2 Visible air break at plug-hole
- 3 75 mm sink, basin, bath or shower waste trap
- Sink, basin, bath or shower with integral overflow
- 5 Open end of condensate drainage pipe direct into gully 25mm min below grating but above water level; end cut at 45°
- 6 Minimum internal diameter 19mm (fall at least 45mm per meter)
- Pipe size transition
- 8 Minimum internal diameter 30mm
- Water/weather proof insulation

Drain requirements

Figure 9.5.2 (a)

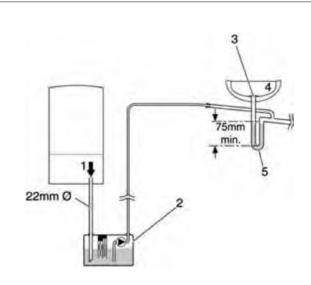

- Condensate discharge from boiler
- 2 Condensate pump
- Visible air break at plug hole
- 4 Sink or basin with integrated overflow
- 75mm sink waste trap

Drain requirements Figure 9.5.2 (b)

Drain requirements

Figure 9.5.3

#### **External pipework**

The use of an externally-run condensate drainage pipe, terminating at a suitable foul water discharge point or purpose-designed soakaway, may be also be considered; however if this termination method is chosen then the following measures should be adopted

- The pipe should be run internally as far as possible before going externally and the pipe diameter should be increased to a minimum of 30mm ID (typically 32mm OD) before it passes through the wall.
- The external run should be kept as short as possible, taking the most direct and "most vertical" route possible to the discharge point, with no horizontal sections in which condensate might collect. Do not exceed 3 metres outside the dwelling.
- The external pipe should be insulated using suitable waterproof and weatherproof insulation ("Class O" pipe insulation is suitable for this purpose).
- The use of fittings, elbows etc should be kept to a minimum and any internal "burrs" on cut pipework should be removed so that the internal pipe section is as smooth as possible.

The customer/householder should be advised that even with the above measures this type of installation could freeze, and that if this were to occur then boiler shutdown could result, requiring remedial action - possibly involving a chargeable engineer call-out.

Where there are likely to be extremes of temperature or wind-chill, the use of a proprietary trace-heating system for external condensate drainage pipework, incorporating an external frost thermostat, should therefore be considered. If such a system is used then the installation instructions of the trace heating manufacturer and any specific recommendations regarding pipe diameter, insulation, etc. should be followed. All other relevant guidance on condensate drainage pipe installation should also be followed.

Other cold weather protection methods approved or endorsed by boiler manufacturers and/or service organisations may be adopted if these are considered suitable by the parties involved.

If an external soil/vent stack is used as the external termination then the connection method shown in Figure 9.5.4 should be used, together with the measures on insulation etc. as described above and shown in the diagram.

When a rain water downpipe is used as the termination (NB only permissible if this downpipe passes to a combined foul and rainwater drainage system) an air break must be installed between the condensate drainage pipe and the downpipe to avoid reverse flow of rainwater into the boiler should the downpipe itself become flooded or frozen. Figure 9.5.5 shows a suitable connection method.

Where the condensate drainage pipe is terminated over an open foul drain or gully, the pipe should terminate below the grating level, but above water level, in order to minimise "wind chill" at the open end. Pipe drainage will be improved if the end is cut at 45° as opposed to a straight cut. The use of a drain cover (such as those used to prevent blockage by leaves) may offer further protection from wind chill. Figure 9.5.6 shows a suitable connection method.

Where the condensate drain pipe terminates in a purpose-designed soakaway (see BS 6798:2009 or boiler installation manual for soakaway design requirements) any above-ground section of condensate drainage pipe should be run and insulated as described above. Figure 9.5.7 shows a suitable connection method.

#### **Unheated internal areas:**


Internal condensate drainage pipes run in unheated areas such as lofts, basements and garages should be treated as external pipe.



Draining of the condensation water to the external rain guttering is not permitted in view of the danger of freezing.




Before putting the boiler into operation fill the siphon with 150 ml of water.

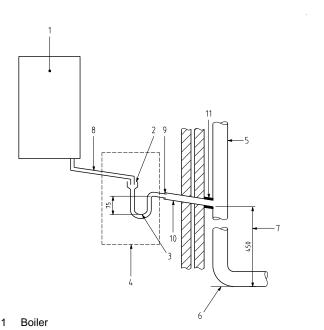


- Visible air break
- 3 75mm trap
- Visible air break and trap is not required because there is a trap with a condensate seal of 180mm incorporated into the boiler (minimum requirement is 75mm)
- 5 Soil and vent stack
- 6 Invert
- 450mm minimum up to three storeys
- 8 Minimum internal diameter 19mm (fall at least 45mm per meter)
- Pipe size transition
- 10 Minimum internal diameter 30mm
- Water/weather proof insulation



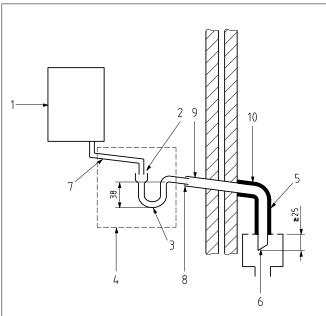

- Boiler
- 2 Visible air break
- 3 38mm minimum trap
- Visible air break and trap is not required because there is a trap with a condensate seal of 180mm incorporated into the boiler (minimum requirement is 38mm)
- External length of pipe 3m maximum
- 6 Open end of condensate drainage pipe direct into gully 25mm min below grating but above water level; end cut at 45°
- Minimum internal diameter 19mm (fall at least 45mm per meter)
- Pipe size transition point
- Minimum internal diameter 30mm
- 10 Water/weather proof insulation

Drain requirements Figure 9.5.6

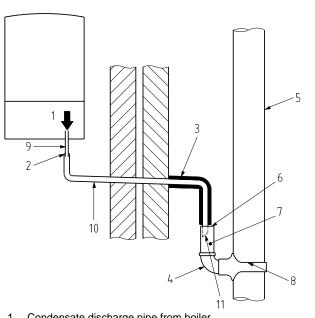


- Condensate discharge pipe from boiler
- 2 Pipe size transition point
- Water/weather proof insulation 3
- 4 43mm 90° male/female bend
- External rain water pipe into foul water 5
- 6 External air break
- 7 Air gap
- 68 mm ø PVCu strap-on fitting 8
- Minimum internal diameter 19mm
- 10 Minimum internal diameter 30mm
- End cut at 45°

Drain requirements

Figure 9.5.4

Figure 9.5.5

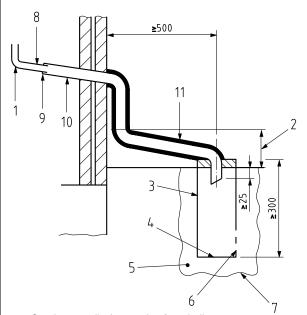

- Condensate discharge pipe from boiler
- Ground (this section of the condensate drainage pipe may be run either above or below ground level); End cut at 45°
- Diameter 100mm minimum plastic tube
- Bottom of tube sealed
- 5 Limestone chippings
- Two rows of three 12mm holes at 25mm centres, 50mm from bottom of tube and facing away from house
- 7 Hole depth 400mm minimum by 300mm diameter
- 8 Minimum internal diameter 19mm (fall at least 45mm per meter)
- 9 Pipe size transition point
- Minimum internal diameter 30mm
- Water/weather proof insulation

Drain requirements Figure 9.5.7

## 9.6 Flue gas exhaust system

The flue gas exhaust system and air supply system consists of:

- Flue gas pipe;
- Air supply pipe;
- Roof or wall terminal.

The flue gas exhaust system and air supply system must comply with:

The flue gas outlet and air supply installation must comply with the current regulation requirements. IG UP 10 and BS 715.




#### The ATAG iR boiler as described in this manual is NOT suitable for a combined flue system.

The appliance concentric connection diameter is 60/100 mm, to which the flue gas outlet and air supply system can be fitted, with or without elbow pieces. The maximum permissible pipe length is set out in Table 9.6.2.a.

For further information about the available components of the flue gas and air supply system we recommend you consult the Flue system literature. Combinations with other brands or systems are, without written permission from ATAG Heating, not permitted.

The ATAG flue gas system is meant, and designed, solely for the use on ATAG central heating boilers adjusted to Nat gas or LPG. For this purpose the CE Certificate has been supplemented under the Gastec nr: 0063CQ3634 The maximum flue gas temperatures are below 70°C (full load 80/60°C).

The proper operation may be adversely influenced by changes of or adjustments to the correct set up. Possible warranty claims will not be honoured if incorrect changes result in non compliance with the installation manual or local rules and regulations.

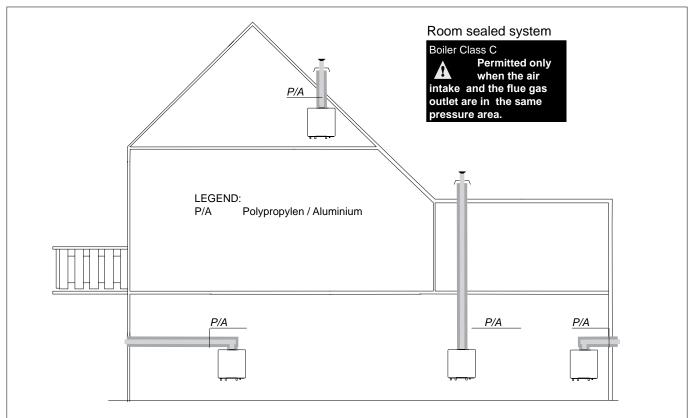

Room sealed system Figure 9.6.a

#### 9.6.1 Flue terminal locations

The terminal should be located where dispersal of combustion products is not unimpeded and with due regard for the damage or discolouration that might occur to parts of the building in the vicinity (see fig 9.6.1.c).

In certain weather conditions condensation may also accumulate on the outside of the air inlet pipe. Such conditions must be considered and where necessary insulation of the inlet pipe may be required. In cold and/or humid weather water vapour may condense on leaving the flue terminal. The effect of such 'plumeing' must be considered.

The terminal must not be located in a place where it is likely to cause a nuisance. For protection of combustibles, refer to IS 813 section 9.10.1. where the terminal is less than 2m (6.6ft) above a pavement or platform to which people have access (including) any balcony or flat roof. The terminal must be protected by a guard of durable material.



Where a terminal is fitted below a window which is hinged at the top, and where the hinge axis is horizontal, and the window opens outwards, the terminal shall be 1m below the bottom of the window opening.



If the boiler is to be located under stairs, a smoke alarm meeting the requirements of I.S. 409 or equivalent must be fitted.



The flue must be terminated in a place not likely to cause a nuisance.

For horizontal flue terminal direct to the rear or side through the wall (only 1 bend and 1 wall terminal) the terminal should be placed horizontal. The flue pipe inside the terminal is fitted in a 3 degrees angle to ensure the condensation water can run back to the boiler. See figure 9.6.1.a.

For longer horizontal sections, the outlet system should always be fitted on an incline ( $52 \text{ mm/m} = 3^{\circ}$ ) sloping down towards the boiler so that no condensation water is able to accumulate in the outlet system. The chances of icicles forming on the outlet is minimised by causing the condensation water to run back towards the boiler. See figure 9.6.1.b.

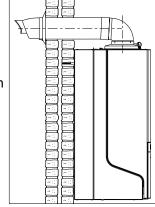


Figure 9.6.1.a

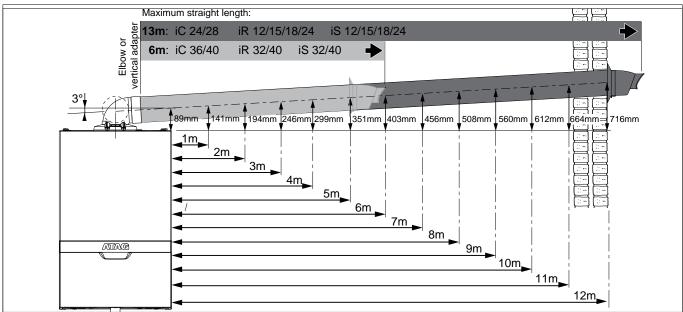


Figure 9.6.1.b

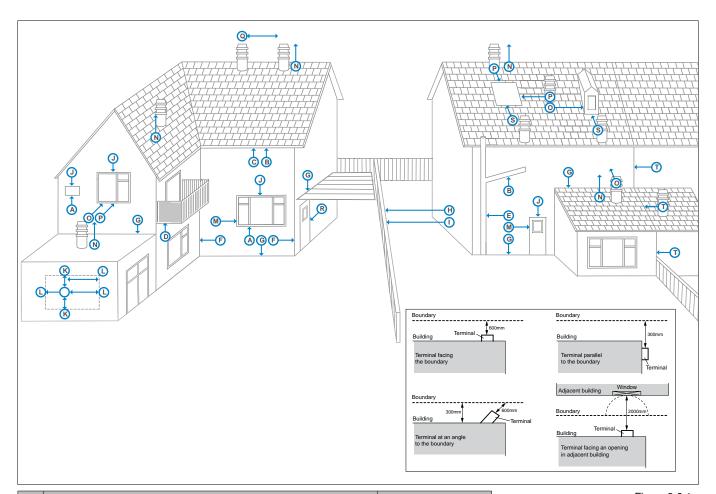


Figure 9.6.1.c

	Terminal position	Min. distance (mm)
Α	Directly below an opening, air brick, windows, etc.	300 (See Note 1)
В	Below gutters, soil pipes or drain pipes	75 (See Note 3)
С	Below eaves	200 (See Note 3)
D	Below balconies	200 (See Note 3)
Е	From a vertical drain pipe or soil pipe	150 (See Note 3)
F	From an internal or external corner	300 (See Note 2)
G	Above ground, roof or balcony level	300
Н	From a surface or boundary facing the terminal	600 (See Note 4)
1	From a terminal facing the terminal	1200
J	Above an opening, air brick, window etc.	300 (See Note 1)
K	Vertically from a terminal on the same wall	1500
L	Horizontally from a terminal on the same wall	300
М	Horizontally from an opening, air brick, window etc.	300 (See Note 1)
N	Minimum protrusion through a roof	300
0	From a vertical obstruction	300
Р	From an openable window	600
Q	From an adjacent vertical terminal	600
R	From an opening in the car port (e.g. door, window) into the dwelling	1200
S	Below a Velux window	2000
Т	Terminal parallel to a boundary	300

#### Notes:

- 1. In addition, the terminal should not be nearer than 150mm to the framework of an opening into the building, i.e. a window surround or door surround.
- 2. This clearance may be reduced to 25mm without effecting the performance of the boiler. However, to ensure the condensate plume does not affect adjacent surfaces a clearance of 300mm is preferable.
- 3. These clearances may be reduced to 25mm without effecting the performance of the boiler. However, to ensure the condensate plume does not affect adjacent surfaces the terminal can be extended beyond gutters, pipes, eaves, balconies etc. by up to 500mm. If the flue is extended more than 500mm outside, it should be boxed and insulated.
- 4. To reduce the possibility of nuisance to neighbouring buildings etc. it is recommended the terminal should not be less than 2500mm from car parking spaces, building boundary walls, fences etc.
- 5. A terminal must not be sited under a car port roof.
- 6. In certain weather conditions the terminal will emit a plume of steam. If possible avoid positioning the terminal where this may cause a nuisance, i.e. positions A, D, G, H, J or M.
- 7. The flue terminal must be exposed to the external air and the position must allow the free passage of air across it at all times.
- 8. A terminal must not be sited below 2m where people have access to, such as public footpaths, access routes, patios etc. However, If the terminal is fitted less than 2m above a surface where there is no public access, the terminal must be protected by a terminal guard.

The appliance produces a white wisp of condensate (plumeing). This wisp of condensation is harmless, but can be unattractive, particularly in the case of outlets in outside walls.

For wall terminals a plume management kit is available as an option (see fig. 9.8.1.d).

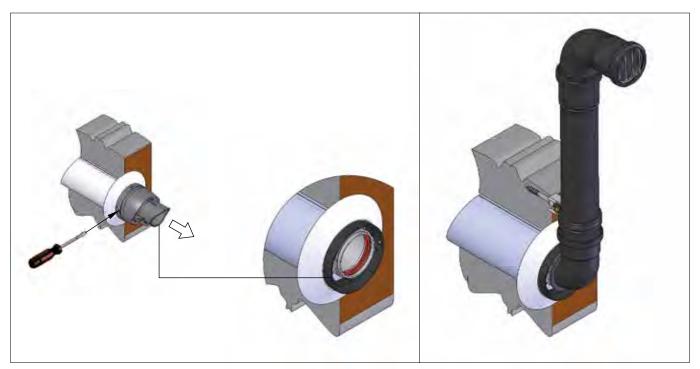


Figure 9.6.1.d Plume management kit

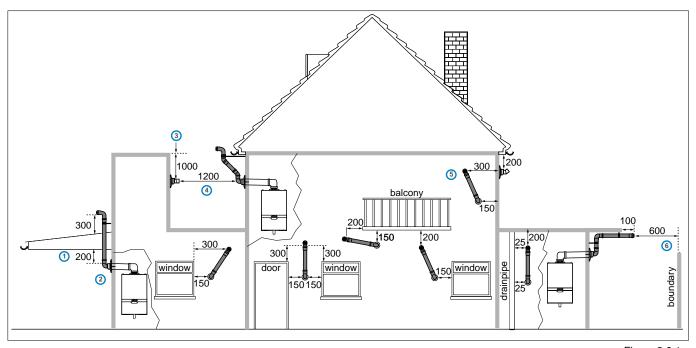


Figure 9.6.1.e

	Terminal position Plume Management Kit (mm)
1	Clearance no less than 200 mm from the lowest point of the balcony or overhang.
2	1,200 mm from an opening in a car port on the same wall i.e. door or window leading into dwelling.
3	The flue cannot be lower than 1,000 mm from the top of the light well due to the build up of combustion products.
4	1,200 mm between air intake and facing terminal.
5	Internal/external corners. The air intake clearance can be reduced to 150 mm providing the flue exhaust outlet has a 300 mm clearance.
6	600 mm distance to a boundary or surface facing a boundary, unless it will cause a nuisance. BS 5440: Part 1 recommends that care is taken when siting terminals in relation to boundaries.

#### Notes:

- See also Notes on previous page.

  Plume kits running horizontally must have a 10° fall back to the boiler for proper disposal of condensate.

  For details on specific lengths see relevant chapter Dimensioning of the flue gas and air intake duct.
- 3. 4.
- A terminal must not be sited under a car port roof.

## 9.6.2 Dimensioning of the flue gas and air intake duct

The total length of the run of the flue is determined by the flue diameter, including for the connection pipe, elbows fittings and terminal covers etc..

 
An incorrect dimensioned flue system can lead to disorders. Look at table 9.6.2.a for the choice of the boiler and the corresponding maximum flue lenght.

Explanation table 9.6.2.a:

#### Concentric flue gas system:

maximum noted length L = distance between boiler (from elbow or vertical adapter) and the end of terminal

When using bends the noted value behind every bend should be deducted from the maximum straight length.



#### Example:


An iR24 with a concentric flue gas system  $\emptyset$ 60/100mm has according to the table a maximum flue straight length of 13m In the system that is going to be put in there are 2 x 45° bends, so the maximum flue gas length is 13 – (2 x -1.0) = 11 m.

	Concentric flue system ø60/100mm	
		L
	ø60/100mm	in m
iR 12	Maximum straight length 60/100	13
iR 15	87° bend resistance length	1.6
iR 18	45° bend resistance length	1.0
iR 24		
iR 32	Maximum straight length 60/100	6
iR 40	87° bend resistance length	1.6
	45° bend resistance length	1.0

Dimensions flue gas system and air supply system


Table 9.6.2.a

#### Flue dimensions

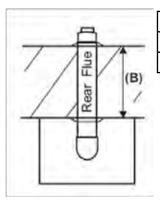

Rear Flue B (mm)		
	Min	Max
Telescopic flue (FA100100)	280	430

Side Flue	Flue B + C (mm		
	Min	Max	
Telescopic flue (FA100100)	285	435	

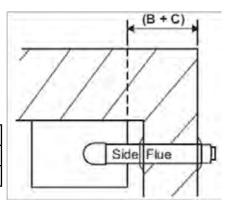

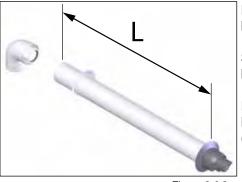


Figure 9.6.2.a

#### Rear Flue

L = wall thickness (B) + 150mm

#### Side Flue

L = wall thickness (B) + distance between boiler and wall (C) + 150mm

If the length L is more than 580mm rear flue or 585mm side flue, then a Horizontal flue fixed length 1000mm (60/100mm) with lock function elbow (FA100250) will need to be used instead, up to 810mm.

#### Fitting the flue

**Note**: If it is required to cut an extension, **DO NOT** cut the end of the inner duct that incorporates the seal joint.

Ensure the inner duct end without the seal joint is cut so that it is flush with the outer duct.

Ensure that all cuts are square and free from burrs.

Once assembled with the components pushed home, the flue is fully sealed.

- 1. Adjust the telescopic flue and secure with sealing tape supplied or cut the fixed length terminal flue to the required length.
- 2. Fit the flue to the extensions (if required) by locating the inner duct into the seal joint and push fully home the inner and outer duct.
- 3. When connecting the horizontal flue terminal length ensure the terminal end outlet is at the uppermost part of the flue.
- 4. Pass the terminal flue assembly through the wall.
- 5. Fit the bend to the boiler and rotate to the correct position and secure in position.
- 6. If the inside sealing collar (white) is being used to make good the inside wall, then it will need to be fitted before assembling the flue.
- 7. Pull the flue assembly towards the bend, locating the inner duct into the seal joint on the bend and secure the flue assembly to the bend by pushing fully home.
- 8. Make good the outside wall by fitting the outside sealing collar (grey) onto the location provided immediately behind the flue terminal grille. Make good the inside wall using the inside sealing collar (white) if required.

When mounting the flue gas system, pay attention to the flow direction (See figure 9.6.2.b). It is not permitted to mount a system upside down and will lead to complaints.

Use a soap solvent or special grease (supplied in the accessory bag with the boiler) to simplify the fitting.



Flow direction

Figure 9.6.2.b

## 9.7 Fitting the boiler onto the boiler frame

After the pipe work of gas, heating installation installation has been fitted to the boiler frame, the boiler can be placed on the boilerframe.

Before hanging the boiler to the boiler frame remove first the cover of the boiler first. The cover is also the air cabinet and is attached to the boiler case with 2 fasteners (A and B) (see figure 8.a).



Note that there is an earth cable to disconnect when removing the cover from the boiler. Free space for removing the connector is 400mm. Remember to connect this earth cable when replacing the cover.



Always secure the fasteners with the screws (A and B) after replacing the cover.

Remove furthermore the 4 plastic caps from the boiler connections.




When removing the plastic sealing caps from the pipes, contaminated testing water may be released.



Lift the boiler only by the boilers case.

#### Lifting and carrying precautions:

- Lift only a manageable weight, or ask for help.
- When lifting the boiler, bend the knees, and keep the back straight and feet apart.
- Do not lift and twist at the same time.
- Lift and carry the boiler close to the body.
- Wear protective clothing and gloves to protect from any sharp edges.

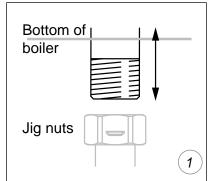

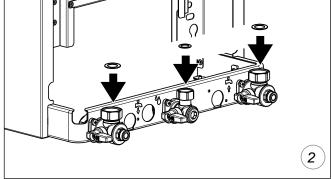


Figure 9.7.a

- 1. Press all connection underneath the boiler upwards
- 2. Put on each valve and the elbow fitting a fibre washer (supplied)

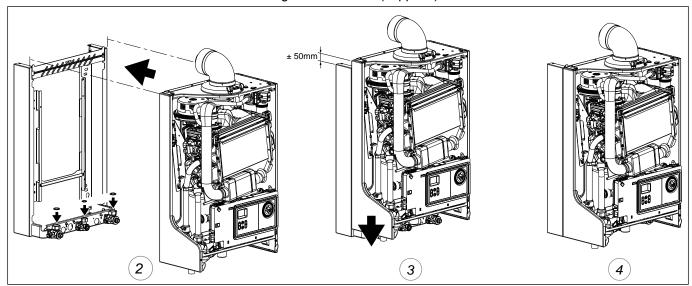


Figure 9.7.b

3 and 4. Take the boiler and hang it from approx. 50mm higher than the boiler frame vertical downwards on the boiler frame so the fittings will be axial approached.



Figure 9.7.c

#### Fitting the nuts:

Turn each nut of the fittings on the boiler connections by hand and tighten each nut with a wrench. Note: 1/2" with 25Nm and 3/4"with 40Nm.

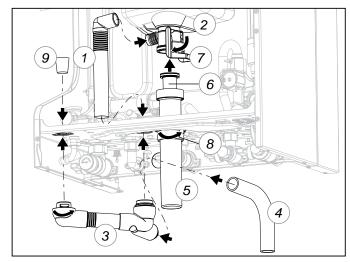


Figure 9.7.d

#### Fitting siphon:

- Press and turn the assembly (3), with the elbow first, in the corresponding holes in the bottom plate of the boiler.
- Press the black rubber elbow with flexible drain pipe (1) on the condensate tray (2).
- Press the black flexible pipe (1) from inside the boiler in the rubber T-piece (3).
- Press the black rubber plug (9) from inside the boiler in the rubber elbow of assembly (3).
- Lead the long black flexible pipe (4) through the free hole of the boiler frame and press it in the T-piece (3)
- Lead the other end of the flexible pipe outside the boiler to the drain as installed according to chapter 9.7.
- Fill the siphon cup (5) with **150 ml water**, insert the siphon pipe (6) in the siphon cup (do not press) and insert this through the hole in the bottom plate of the boiler into the condensate tray (2) of the heat exchanger without any force. Secure the siphon cup with the securing clip (7) by turning it clockwise (click!)
- Press the sealing ring (8) around the siphon cup and press/turn it in the bottom plate of the boiler.



Before putting the boiler into operation fill the siphon with 150 ml of water.

## 10 Electrical connection

The appliance complies with the actual directives. The installation must continue to comply with:

- A 230V -50Hz mains electrical supply is required fused externally at 3A.
- A deviation on the grid of 230V (+10% or -15%) and 50Hz
- the national rules for electrical installations.


The appliance must be connected to an earthed socket. This must be visible and within reach.

The following general stipulations also apply:

- No changes may be made to the wiring of the appliance;
- All connections should be designed in accordance with the enclosed regulations;
- Should it be necessary to change it, the mains power supply cable may only be replaced with an ATAG mains power supply cable.

The connection terminals are positioned at the back of the control unit:

- Press handle A slightly to the left (see fig. 10.a)
- Turn the control unit downwards.

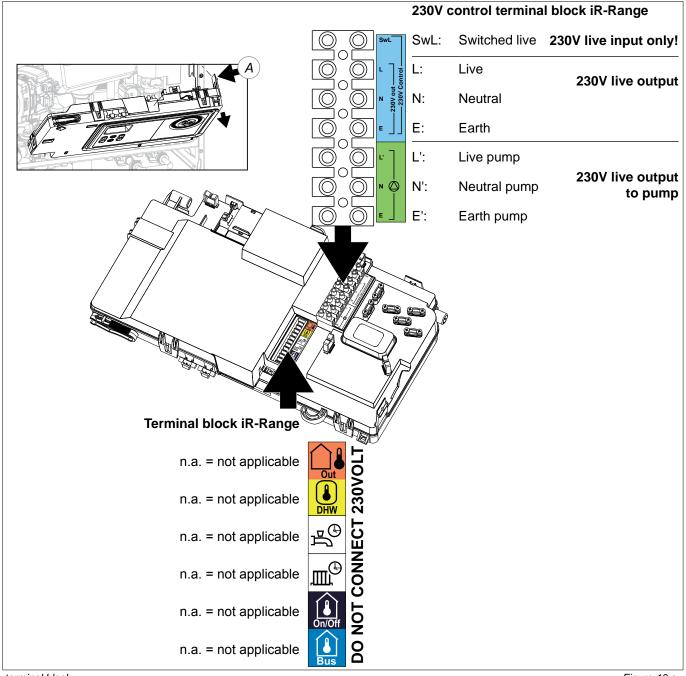

terminal block Figure 10.a

# 10.1 Electrical diagram

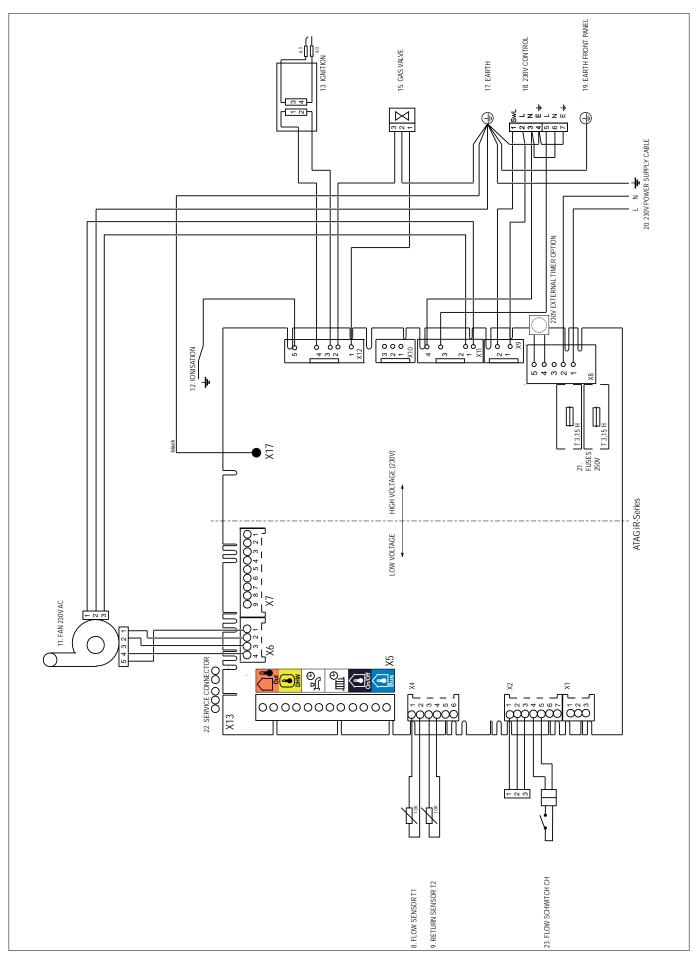


Figure 10.1.a

## 11 Filling system

The central heating installation needs to be filled with potable water according to the requirements in chapter 9.3 'Water quality'. For filling the CH installation, use the feed and expansion header tank. Use the following procedure:

1	Ensure all system and boiler drain points are closed;		
2	Open all isolation and motorised valves;		
3	Turn on the water supply to the system header tank		
4	Vent all radiators and pipework;		
5	Check system for any visable leaks;		

When powering up the boiler (described in chapter 13) an automatic de-aeration program will run to vent the boiler.

## 12 Boiler controls

Before the electrical power is switched on, it helps to know the operation of the boiler in advance. On this page the controls are described in short. The next page describes the button functions and the symbols on the display.

Resistance ta	ble sensors	ATAG iC-, iS- an	d iR-series
Outside sensor	r T4	Flow sensor T1	
		Return sensor T	2
		DHW sensor T3	
		Flue sensor T5	
NTC1k (25°C)		NTC10k (25°C)	
Temperature	Resistance	Temperature	Resistance
[°C]	[Ohm]	[°C]	[Ohm]
-10	4.574	-10	55.047
-9	4.358	0	32.555
-8	4.152	10	19.873
-7	3.958	12	18.069
-6	3.774	14	16.447
-5	3.600	16	14.988
-4	3.435	18	13.674
-3	3.279	20	12.488
-2	3.131	22	11.417
-1	2.990	24	10.449
0	2.857	26	9.573
1	2.730	28	8.779
2	2.610	30	8.059
3	2.496	32	7.406
4	2.387	34	6.811
5	2.284	36	6.271
6	2.186	38	5.779
7	2.093	40	5.330
8	2.004	42	4.921
9	1.920	44	4.547
10	1.840	46	4.205
11	1.763	48	3.892
12	1.690	50	3.605
13	1.621	52	3.343
14	1.555	54	3.102
15 16	1.492	56	2.880
	1.433	58	2.677
<u>17</u>	1.375 1.320	60 62	2.490
19	1.268	64	2.159
20	1.218	66	2.139
21	1.170	68	1.878
22	1.170	70	1.753
23	1.081	70	1.638
24	1.040	74	1.531
25	1.000	76	1.433
25	962	78	1.433
27	926	80	1.256
28	892	82	1.178
29	858	84	1.105
30	827	86	1.037
35	687	88	974
40	575	90	915

The boiler is equipped with self-managing control system. This control system takes over a large part of the manual settings, which simplifies the start-up of the installation considerably.

After filling the installation and switching on the electrical power supply a short start-up program is activated. This shows all digits, boiler type and software version.

After parameter P0 is set, the automatic de-aeration program is activated. The automatic de-aeration program lasts for approx. 7 minutes and stops automatically. Then the boiler will switch on for the enabled program.

#### **CH** controls

With a demand from the heating controls, the boiler activates its 1 minute delay period. This is to prevent the heat exchanger from losing its heat too quickly in the event of a hot water demand. Then the pump starts and after 30 seconds the gradient control becomes active. The starting point of the gradient control is the currently existing flow temperature. A Delta-T control (25K) ensures a stable control according to heat request.

If the flow temperature is below the T-set value of 20°C the boiler will immediately start.

If during a demand from the heating the burner switches off, because the desired flow temperature is exceeded, there will be an anti-cycle time in operation for 5 minutes. This means that the burner switches on again after 5 minutes if there is still a demand from the heating.

The ATAG iR is equipped with boiler sensors of 10kOhm. The resistance value and corresponding temperature are shown in the accompanying table.

Resistance table

table 12.a

## 12.1 Controls and explanation of the functions

#### **Central heating**



Setting the CH water temperature:

Briefly press + or -; the display will show the flashing preset value;

Briefly press + or – to change the set value. Each change becomes active directly.

CH program OFF: Press – until the lowest value is reached and then press – again. The display is showing - - .

Switching on works in reverse order.

#### **Boiler information**

Requesting current data:

Press the eco-button for 6 seconds in order to obtain the following value using the scroll buttons:



K	A0	Flow water temperature
sc.	A1	Return water temperature
	A2	n.a.
	А3	T-set temperature (calculated)
	A4	Flue gas temperature (only if a flue gas sensor is connected)
	A5	Outside temperature (only if an outside sensor is connected)
	A6	Water pressure
Ì	A7	n.a.
	A8	Ionisation current in μA.
Ī	A9	rpm of fan (x100)

To return to the standard view press ESC.



#### **Reset button**


The reset button allows the boiler to restart if an error has occurred.

In case of an error the  $\Omega$  symbol is displayed with a XXX code.

In other cases the Reset button does not function and will not respond to operation.


See chapter 17 for a brief overview of codes

#### **Ancillary functions:**

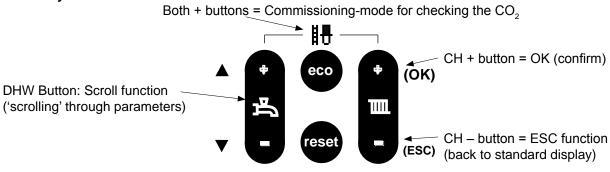


## Commissioning the boiler

 Make sure before the boiler is put into operation that the boiler and installation have been fully vented. Vent the gas line and open the gas isolation valve to the boiler. The boiler requires no adjustment of the burner pressure and quantity, because it is self-regulatory and has been set in the factory and should not be reset.




1. Turn on the boiler electrical supply;

 
2. When the boiler starts up for the first time the following will be shown:



(power on)

 

All digits (segment test)

 

0 (parameter 9: from factory 0) (boilertype: parameter 8)

03 followed by 03 (software version part 1 and software version part 2)



The code 105 appears on the display; The 7 minute de-aeration cycle starts;



4. This will take approx. 7 minutes and will be followed by the default display (OK).

The iR boilers are supplied with a flow switch.

If the external pump starts, the flow switch is made, the burner is set free, if the flow switch not made the boiler will not fire.

## a CH system



The CH program is always active after start-up.

If there is heat request, it is indicated by a flashing and the heating will be put into operation **()**.

The circulation pump will switch on and the boiler will switch on after 1 to 2 minutes.

## b Pump function

The central heating pump is wired to the pump electrical connections on the back of the control panel. See figure 10.a.



#### **Danger of frost**

If there is danger of frost damage to the CH installation, it is advisable to let the pump run continuously.

By pressing both - buttons at the same time for 8 seconds the pump can be switched on continuously.

If the pump is set to continuously this is displayed by  $\frac{4}{3}$ .

#### **Boiler frost protection**

If the (T1) flow sensor registers a temperature of 5°C or below in the boiler, the boiler will fire up. The boiler keeps on firing until the temperature reaches 10°C (measured on the flow sensor) and the boiler switches off again.

In this mode the \*\* symbol will flash.

## 13.1 Settings

When the boiler is installed, it is in principle ready to be put into service. Most settings of the control system are already programmed from factory. Only parameter P0 (kind of heating installation) has to be checked and set, if necessary, to adjust the boiler to the connected installation.

To change this setting, proceed as follows:

1. Press the OK button for 3 seconds.

The display shows 'P0';

2. Press the OK button for 3 seconds again.

The display shows 'on' shortly followed by 'P0';

- 3. Press the OK button to enter P0;
- 4. Choose one of the following options by using the left + and button (DHW symbol);

1. CH Tmax: 85°C; Gradient: 5; Heating line 24

2. CH Tmax: 70°C; Gradient: 5; Heating line 19

3. CH Tmax: 60°C; Gradient: 4; Heating line 15

4. CH Tmax: 50°C; Gradient: 3; Heating line 11

5. Press the OK button to confirm your choice;

When you want to change more settings proceed with step 6:

When you are ready press the ESC button until the default display is shown again.

- 6. Press the Scroll button to select another parameter;
- 7. Press the OK button if you want to change the selected parameter;
- 8. Adjust the value if desired / possible with the + or button (DHW button)
- 9. Briefly press the OK button to confirm the new setting.

The display shows the selected parameter again

7. Press the ESC button until the default display is shown again:

If during 8 minutes no button is used, the default display is automatically shown on the screen.


## 13.2 Parameter chapter

Par.	Factory setting	Description	Range
P0	1	1. CH Tmax: 85°C; Gradient: 5; Heating line 24 2. CH Tmax: 70°C; Gradient: 5; Heating line 19 3. CH Tmax: 60°C; Gradient: 4; Heating line 15 4. CH Tmax: 50°C; Gradient: 3; Heating line 11	-
P1	max	Maximum power CH in % Can only be reduced. 0 = low load	0 - max
P2	max	Pump, max. percentage <i>N.A.</i>	XX - 100%
P3	min	Pump, min. percentage <i>N.A.</i>	min - XX / XX*
P4	0%	Correction factor fan speed. Do not change!	
P5	5	Gradient speed CH	0 - 15 (0=off)
P6	24	Heating line CH-water temperature (see also heating line graph)	1 - 30
P7	25	Summer-Eco temperature N.A.	8 - 30
P8	1	Boiler type. <b>Do not change!</b> 1 = Natural gas fired boiler, 2 = Boiler with flue non-return valve, 3 = Propane gas fired boiler	1-3
P9	0	Service-parameter. Do not change!	

<sup>\*</sup> Depending of connected type of boiler control





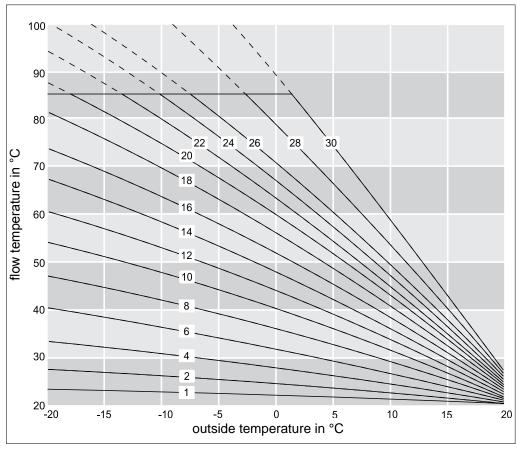

heating line Graph 11.4.a

## 14 Isolating the boiler

In some situations it may happen that the entire boiler has to be deactivated. With the function buttons for the CH program the boiler is put out of service.



CH program OFF: Press – until the lowest value is reached and then press – again. The display is showing -- and the upper is off.

Switching on with the + button takes place in reverse order.

ATAG recommends to leave the electrical power supply on, so that the circulation pump is activated automatically once every 24 hours in order to prevent jamming.



If there is danger of frost it is advisable in this case to drain the boiler and/or installation. (See following chapter)

## 15 Commissioning



Work on the installation and/or boiler should only be carried out by qualified personnel with calibrated equipment.



At the time of commissioning, complete all revelant sections of the Benchmark Checklist located on the inside back pages of the document.

For maintenance of the boiler the cover has to be removed.

Unscrew the 2 locking screws from the fasteners at the top of the boiler, unlock the fasteners and remove the cover in a forward motion.



Note that there is an earth cable to disconnect when removing the boiler front panel. Free space for removing the connector is about 400 mm. Remember to connect this earth cable when placing back the boiler front panel and take care the wire does not get stuck between front panel and boiler.

Changing settings, such as the burner pressure and the amount of air flow, is superfluous. Only in case of a failure or when replacing the gas block, venturi and/or fan, the CO<sub>2</sub> percentage should be checked.



Always check all gas carrying parts for leaks (with a leak detection spray) after (maintenance) work to the boiler.

Close the relevant commissioning valves during the maintenance activities. See figure 15.a.

#### Draining the boiler

The heating installation must be provided with a fill and drain valve. Use this feature also for draining the boiler.

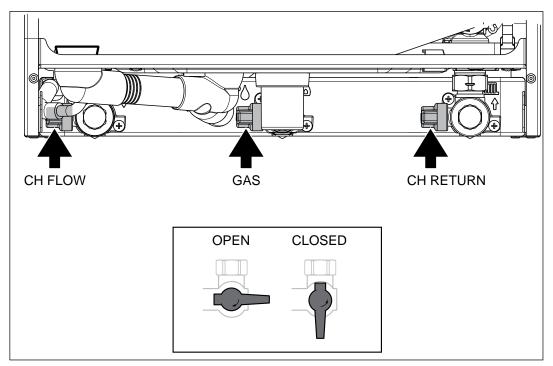


Figure 15.a


## 15.1 Checking the CO,



The CO<sub>2</sub> percentage is set in the factory. This has to be checked during inspection, maintenance and in case of a failure.

This can be verified by means of the following action:

- Set the external controls to call for heat:
- Make sure the boiler is operational and can get rid of the heat it produces;
- Calibrate the flue gas analyser;
- Place the lance of the flue gas analyser into the flue gas test point (see Figure 15.1.a);

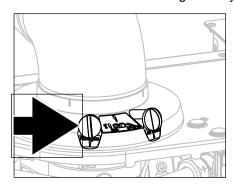

Measuring point CO<sub>2</sub> Figure 15.1.a

- Press both + buttons for 6 seconds;
- When the flame symbol appears in the display press both + buttons again for 6 seconds;
- The display shows the supply water temperature ( appears in the display);




The boiler will switch to maximum power of the heating capacity

- Press 1x the eco- button; the display shows XX% (heating capacity)
- Leave measuring  $\mathbf{CO_2}$  to the measuring equipment.

	Natural gas	Propane
<ul> <li>CO<sub>2</sub> percentage at full load =</li> </ul>	9.0% (-0.4%, +0.6%)	10.3% (+/- 0.6%)

- If required, you may turn the setting screw to set the correct CO<sub>2</sub> percentage. (refer to Figure 15.1.b).

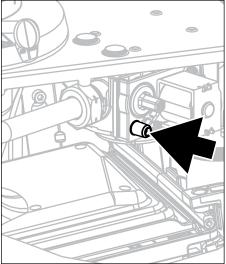

Adjustment screw CO<sub>2</sub> Figure 15.1.b

Finally, the CO<sub>2</sub> percentage at low load must be checked:

- Press on the button until the minimum value (0%) has been reached (low load)
- Leave measuring  ${\rm CO_2}$  to the measuring equipment and check if the measured  ${\rm CO_2}$  percentage on low load is between following values:

Natural gas Propane

- CO<sub>2</sub> percentage at <u>low load</u> between **8.7% and 9.6% 9.5% and 10.5%** 

Contact ATAG when the measured values are outside this range.

End of measuring:

- Press the ESC button ( button).

The device switches off.

The display shows for 2 seconds code 180 or 181.

This completes the procedure.

## 16 Routine servicing

#### Required tools:


- Cross head screwdriver
- T-handle key set with 3 bits (hex key 4mm, hex key 5mm and cross head PZ2)
- Open end wrench 8mm


In order to perform maintenance, the following actions have to be taken:

- Switch off the electrical power to the boiler;
- Remove the screws from the 2 fasteners A and B (see fig. 16.a);
- Unlock the fasteners A and B and remove the cover in a forward motion and remove the earth cable from the cover.



Note that there is an earth cable to disconnect when removing the boiler front panel. Free space for removing the connector is about 400 mm. Remind to connect this earth cable when placing back the boiler front panel and take care the wire does not get stuck between front panel and boiler.

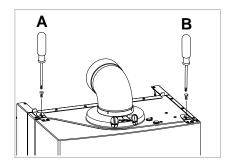

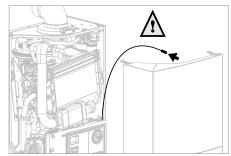

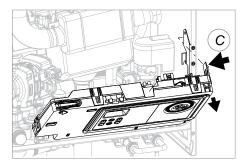


Figure 16.a

#### Air box/cover

The cover also doubles as air box:

- Clean the air box/cover with a cloth and a non-abrasive cleaner:

#### Siphon (see fig. 16.b)

The degree of pollution resedue in the siphon is an important indication for the need of maintenance

- Turn the control unit towards by moving the handle (C) slightly to the left (see figure 16.a);
- Turn/pull the sealing ring (1) downwards;
- Turn the siphon securing clip (2) anti-clockwise;
- Pull the siphon cup (3) and siphon pipe (4) out of the heat exchanger;
- Take the siphon cup and pipe out of the boiler by moving it downwards or turn it in forward motion upwards along the heat exchanger;
- Clean the parts by rinsing them with water;
- Check the O-ring of the siphon cup and replace it if necessary;
- Grease the O-ring again with acid-free O-ring grease to simplify the reassembly.

Reassembly takes place in reverse order.

- fill the siphon with 150 ml of water.
- If a leakage has occurred to the siphon, replace the entire siphon.

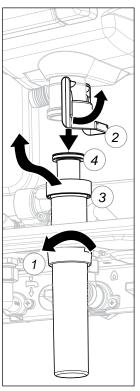



Figure 16.b

#### Fan unit and burner cassette (see fig. 13.2.b-f)

- Remove the tie wrap from the silencer and remove the silencer (1);
- Unscrew the coupling (2) of the gas block and the coupling on the venturi (3) and remove the gasline (4);



- Replace the gaskets of the gasline (O-ring) with new ones;

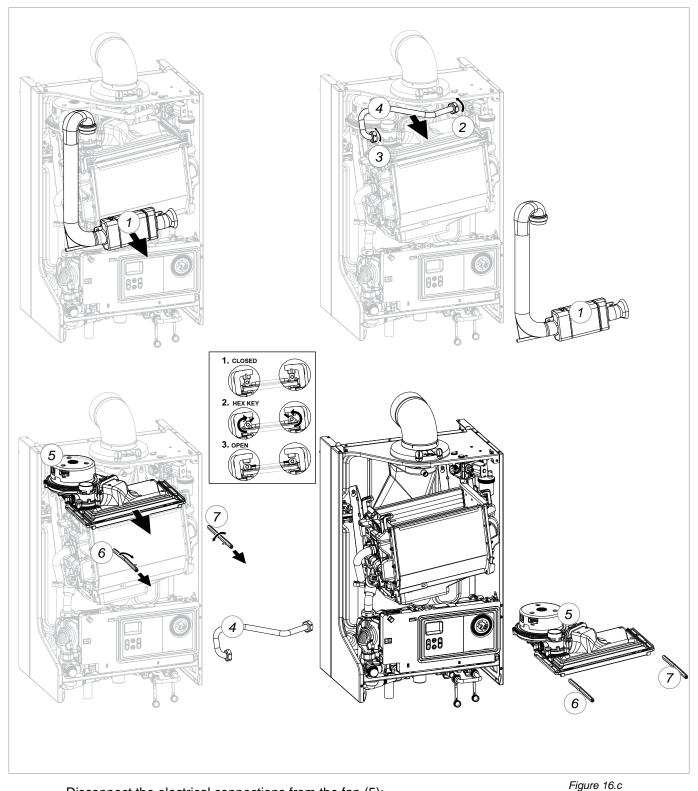


- Disconnect the electrical connections from the fan (5);

Turn the left (6) and right (7) clamp bars a quarter turn with the hex key and pull these out in a forward motion. Mind the direction of rotation (red control cams);

- Now lift the complete fan unit (5) with the upper tray of the heat exchanger and remove it in a forward motion;

- Turn the unit up side down and remove the burner cassette (8) from the ventilator unit;
- Check the burner cassette for wear and tear, pollution and any breakages. Clean the burner cassette with a soft brush and vacuum cleaner. In the case of breakages, always replace the complete burner cassette (8):
- Replace the gasket (9) between the burner (8) and upper casing (10);
- Replace the gasket (11) between the upper casing (10) and exchanger:

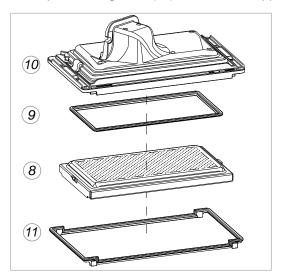

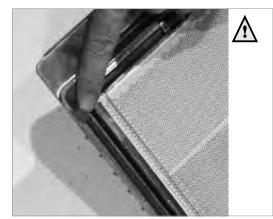


Figure 16.d

- Check the venturi (12) for pollution and clean them with a soft brush in combination with a vacuum cleaner, if necessary.

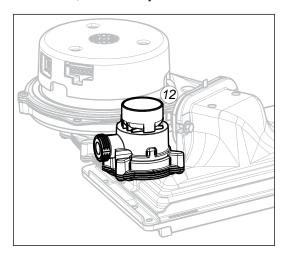


Figure 16.e

If the inside of the boiler casing is heavily polluted with dust, it is likely that the fan impeller is also polluted. To clean the fan, it has to be removed from the upper tray and the venturi. Clean the impeller with a soft brush and a vacuum cleaner. Replace the gasket and take care that the new gasket is installed properly when reassembling the fan parts.

Reassembly takes place in reverse order.

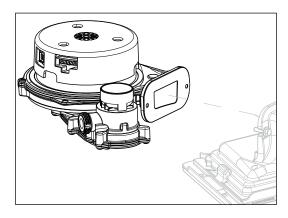


Figure 16.e

#### Heat exchanger

- Check the heat exchanger for pollution. Clean it, if necessary, with a soft brush and a vacuum cleaner. Avoid any pollution falling down.




#### TOP-FLUSHING THE EXCHANGER WITH WATER IS NOT ALLOWED.

Reassembly takes place in reverse order.



During installation pay attention to the correct position of the clamp bars. These have to be in a vertical position.

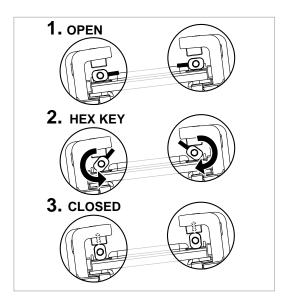

#### **Ignition electrode**

Replacing the ignition electrode is necessary when the pins are worn. If the inspection hole is damaged, the entire ignition electrode has to be replaced.

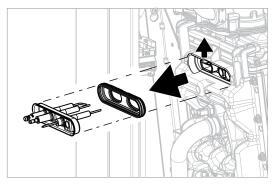


Figure 16.f

It is replaced as follows:

- Take away the plug connections on the ignition electrode;
- Push the clip on top of the electrode upwards and take away the electrode;
- Remove and replace the gasket;

Reassembly takes place in reverse order.




Always replace the gaskets of the removed parts during maintenance.

Put the boiler back into operation and carry out a flue gas analysis (see page 34).



Always put back the cover after (maintenance) work and secure it with screws A and B. Remind to connect this earth cable when placing back the boiler front panel and take care the wire does not get stuck between front panel and boiler.

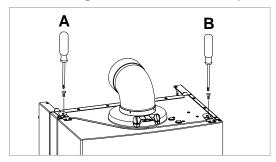

Please contact your installer or ATAG Heating Technology Ltd. for further details. Contact details can be found on the back page of this manual.



After servicing, complete the relevant Service Interval Record section of the Benchmark Checklist located on the inside back page of the document.

### 16.1 Component replacement



In the event that parts require replacement, use only genuine parts supplied by ATAG Heating Technology Ltd.

#### 16.2 User's instructions

Advise the user that for continued efficient and safe operation, the boiler should be serviced at least once a year by qualified servicing company. It is important and strongly recommended that arrangements are made for a maintenance agreement with a qualified servicing company to ensure regular servicing of the boiler.

Please contact ATAG Heating Technology Ltd. for further details. Contact details can be found on the back page of this manual.

## 16.3 Maintenance frequency

ATAG Heating Technology Ltd advises an annual inspection or every 1600 running hours, with a full strip down service as required, every 4 years or every 6400 running hours, whatever comes first.

## 16.4 Warranty

For the warranty conditions we refer to the Warranty Card that is supplied with the boiler.

## 17 Error codes and fault finding

A detected failure is indicated on the display in blocking or error messages.

- Blocking code with spanner symbol Error is temporary and will cancel itself or will lock the boiler after several attempts (error)
- Error code with bell symbol Error means a lock on the boiler and can only be remedied by a reset and/or intervention by a service technician.
- 10 Outside sensor error (e.g. open, short circuit, out of range) 20 Flow sensor error (e.g. open, short circuit, out of range) 40 Return sensor error (e.g. open, short circuit, out of range) 50 T3 (DHW) sensor error (e.g. open, short circuit, out of range) Bus communication error (contact open) 61 Venting program active when power turned on or interrupted (runs approx. 7 mins.) 105 110 Safety temperature exceeded Maximum temperature exceeded 111 119 Link on X2 position 4 and 5 missing 129 Fan error (fan does not start up) No flame after 5 ignition attempts 133 151 Fan error (speed control is not achieved or is out of range) or control unit defective Flow increases to fast  $\Delta T$  to large, return > flow 154 180 No error: shortly visible when leaving chimney sweep function 181 No error: shortly visible when leaving commissioning mode

Example of display of error message



## Annex A System water additives

When the filling water requirements as referred to in chapter Water Quality have been met, certain additives are allowed for the below mentioned applications and related dosage. Warranty on ATAG delivered installation products expires, if these additives and concentrations are not used in accordance with this annex.

Additive type	Supplier and specifications	Max. concentration	Application				
Corrosion inhibitors	ATAG Central Heating Protector. Build Cert Approved	500 ml / 100 litres	Suitable for mixed metal and plastic systems. Prevents corrosion and limscale.				
	Sentinel X100 Corrosion resistant protection agent of CH systems Kiwa certified	1-2 I/100 litres CH water content	Aqueous solution of organic and inorganic agents preventing corrosion and scale forming				
	Fernox F1 Protector Corrosion resistant protection agent of CH systems Kiwa certified KIWA-ATA K62581, Belgaqua certified Cat III	500 ml can or 265 ml Express / 100 litres CH water content	Preventing corrosion and scale forming				
Anti-freeze	Kalsbeek Monopropyleneglycol / propane- 1,2-diol + inhibitors AKWA-Colpro KIWA-ATA Nr. 2104/1	50% w/w	Anti-freeze				
	Tyfocor L Monopropyleneglycol / propane- 1,2-diol + inhibitors	50% w/w	Anti-freeze				
	Sentinel X500 Monopropyleneglycol + inhibitors Kiwa certified	20-50% w/w	Anti-freeze				
	Fernox Alphi 11 Monopropyleneglycol + inhibitors Kiwa certified KIWA-ATA K62581, Belgaqua certified Cat III	25-50% w/w	Anti-freeze in combination with F1 Protector				
System cleaners	ATAG Central Heating Universal Cleaner	500 ml / 100 litres	Suitable for mixed metal and plastic systems. Disperses sludge, limescale and other deposits.				
	Sentinel X300 Solution of phosphate, organic heterocyclic compounds, polymers and organic bases Kiwa certified	1 litre / 100 litres	For new CH installations Removes oils/grease and flow control agents				
	Sentinel X400 Solution of synthetic organic polymers	1-2 litres / 100 litres	For cleaning existing CH- installations Removes sediments.				
	Sentinel X800 Jetflo Aqueous emulsion of dispersants, moistening agents and inhibitors	1-2 litres / 100 litres	For cleaning new and existing CH- installations Removes iron and lime-related sediments.				
	Fernox F3 Cleaner Liquid pH neutral universal cleaner for pre-commissioning new systems	500 ml / 100 litres	For cleaning new and existing CH-installations Removes sludge, limescale and other debris.				
	Fernox F5 Cleaner, Express pH neutral universal cleaner concentrate for pre-commissioning new systems	295 / 100 litres	For cleaning new and existing CH-installations Removes sludge, limescale and other debris.				

ATAG support the use of inhibitors suitable for mixed metal applications that keep the pH level between 6 and 8. Dosage levels as per manufacturers instructions. Preferred inhibitor suppliers are ATAG Heating Technology, Fernox and Sentinel.

# Annex B Declaration of conformity

## **CE DECLARATION OF CONFORMITY**

Hereby declares ATAG Verwarming Nederland BV that,

the condensing boiler types: ATAG

iR 12 iR 32 iR 15 iR 40

iR 18 iR 24

are in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

<u>Directive</u> <u>Used standards</u>
Gas Appliance Directive 2009/142/EC EN15502-1:2012

(ex.90/396/EEG) EN15502-2:2012

EN297:2004 EN437:2009

Efficiency Directive 92/42/EEC EN677: 1998

EN13203-1/2:2006

Low Voltage Directive 2006/95/EG EN60335-2-102:2010

EN60335-1:2012

EMC Directive 2004/108//EG EN61000-3-2: 2013

EN61000-3-3: 2013 EN55014-1/2:2010

Report numbers

GAD ED LVD EMC D

and that the products are in conformity with EC type-examination certificate number E0430, as stated by KIWA-Gastec Certification BV, Apeldoorn, The Netherlands.

Date : 24 - 04 - 2015

Signature

Full name : Drs. C. Berlo

**CEO** 

ATAG Verwarming

Adres: Galileïstraat 27, 7131 PE Lichtenvoorde • Postadres: Postbus 105, 7130 AC Lichtenvoorde Telefoon: +31(0) 544 391777, Fax: +31(0) 544 391703

E-mail: info@atagverwarming.com Internet: http://www.atagverwarming.nl

# Annex C Short parts list

# Benchmark Commissioning and Servicing Section

It is a requirement that the boiler is installed and commissioned to the manufacturers instructions and the data fields on the commissioning checklist completed in full.

To instigate the boiler guarantee the boiler needs to be registered with the manufacturer within one month of the installation.

To maintain the boiler guarantee it is essential that the boiler is serviced annually by a Gas Safe registered engineer who has been trained on the boiler installed. The service details should be recorded on the Benchmark Service Interval Record and left with the householder.



www.centralheating.co.uk

#### GAS BOILER SYSTEM COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the boiler as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission according to the manufacturer's instructions and complete this Benchmark Commissioning Checklist will invalidate the warranty. This does not affect the customer's statutory rights.

Customer name:							Tele	phone	e num	nber:									
Address:																			
Boiler make and model:																			
Boiler serial number:																			
Commissioned by (PRINT NAME):							Gas	Safe	regis	ter numl	oer:								
Company name: Telephone number:																			
Company address:																			
	Commissioning date:																		
To be completed by the customer on receipt of a Building Regulations Compliance Certificate*																			
Building Regulations Notification Nur	mber (if applic	able):																	
CONTROLS (tick the appropriate bo	xes)																		
Room thermostat and programmer/timer Programmable room thermostat																			
Time and temperature control to hea	ting				Loa	d/weath	er com	pensa	ation					0	ptimur	m star	t contro	ы	_
Time and temperature control to hot	water		Cylind	ler the	rmost	at and p	rogram	mer/ti	imer						Comb	oinatio	n Boile	r	_
Heating zone valves								F	itted							Not	require	b	
Hot water zone valves								F	itted							Not	require	b	
Thermostatic radiator valves								F	itted							Not	require	d	
Automatic bypass to system								F	itted							Not	require	b	
Boiler interlock																F	Provide	d	
ALL SYSTEMS																			
The system has been flushed and cle	eaned in acco	rdance	with B	S7593	and h	oiler ma	anufact	urer's	instru	ıctions							Ye	s	
What system cleaner was used?																			_
What inhibitor was used?														Quanti	itv			litre	es
Has a primary water system filter bed	en installed?													Yes			N	_	_
																		_	_
Central HEATING MODE measu	e and record.						m3/h r	Г			OB			T				£43/	/br
Gas rate	, bla						m³/hr				OR							ft³/	
Burner operating pressure (if applica	bie)						mbar			OR Gas i	niet pre	essure						mb	
Central heating flow temperature																		_	°C
Central heating return temperature																			=
COMBINATION BOILERS ONLY	- (-1																		
Is the installation in a hard water are								-						Yes			N <sub>1</sub>	+	
If yes, and if required by the manufac		vater s	cale red	ucer b	een fi	tted?								Yes			N <sub>1</sub>	0	
What type of scale reducer has been																			
DOMESTIC HOT WATER MODE ME	easure and Re	ecora:					2.0	Т						<u> </u>				5121	
Gas rate							m³/hr				OR							ft³/	
Burner operating pressure (at maxim	ium rate)						mbar	OR	Gas ir	nlet pres	sure at	maxim	um rate	•				mb	
Cold water inlet temperature							-				-		.	1_			-		°C
Hot water has been checked at all or	utlets												'es	Tem	peratu	ıre			°C
Water flow rate																		I/m	iin
CONDENSING BOILERS ONLY																			
The condensate drain has been insta	alled in accord	lance v	vith the	manut	facture	er's instr	ructions	and/	or BS	5546/BS	6798						Ye	S	
ALL INSTALLATIONS																			
Depart the following:	At max. r	ate:			С	0		ŗ	opm	AND	CO/	CO <sub>2</sub>			Ratio	0			
Record the following:	At min. ra	ate: (wl	nere pos	ssible)	С	0		-	ppm	AND	CO/	CO <sub>2</sub>			Ratio	0			
The heating and hot water system co	omplies with the	ne app	ropriate	Buildi	ng Re	gulation	s										Ye	s	_
The boiler and associated products have been installed and commissioned in accordance with the manufacturer's instructions									s										
The operation of the boiler and system controls have been demonstrated to and understood by the customer  Yes									s										
The manufacturer's literature, includi	ing Benchmar	k Chec	klist an	d Serv	rice Re	ecord, h	as beer	n expl	ained	and left	with th	e cust	omer				Ye	s	
Commissioning Engineer's Signature	<del></del>																		=
Customer's Signature																			
(To confirm satisfactory demonstration	on and receint	of mai	nufactur	er's lit	eratur	e)													
and the second s				J. J		- /	-				-			_				_	_

<sup>\*</sup>All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.



#### **SERVICE RECORD**

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

#### Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions. Always use the manufacturer's specified spare part when replacing controls.

								,				
SER	VICE 01			Date:	SER	VICE 02			Date:			
Engineer name:					Engineer							
Company name:					⊣⊢ <u>ٽ</u>							
Telephone No:					Company name: Telephone No:							
Gas safe register No:					Gas safe register No:							
	At max. rate:	CO ppm	AND	CO <sub>2</sub> %	11	At max. rate:	CO ppm	AND	CO <sub>2</sub> %			
Record:	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %	Record:	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %			
Commer					Commer							
Signature					Signature							
050	\//OF 00				i oen	\/\OF 04						
SER	VICE 03			Date:	SEK	SERVICE 04 Date:						
Engineer	name:				Enginee	name:						
Compan	y name:				Company name:							
Telephon	e No:				Telephor	ne No:						
Gas safe	register No:				Gas safe	register No:						
Record:	At max. rate:	CO ppm	AND	CO₂ %	Record:	At max. rate:	CO ppm	AND	CO₂ %			
rkecord.	At min. rate: (Where Possible)	CO ppm	AND	CO₂ %	TKecord.	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %			
Commen	ts:				Commer	nts:						
Signature	9				Signatur	e						
SED	VICE 05			Date:	CED	VICE 06			Date:			
-				Date.	<b></b>				Date.			
Engineer					Engineer							
Company name:					Company name:							
Telephor					Telephone No:							
Gas safe	register No:	00		Tag. 84	Gas safe register No:							
Record:	At max. rate:	CO ppm	AND	CO <sub>2</sub> %	Record:	At max. rate:	CO ppm	AND	CO <sub>2</sub> %			
At min. rate: (Where Possible) CO ppm			AND	CO <sub>2</sub> %		At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %			
Commer	its:				Commer	nts:						
0:												
Signature	<del></del>				Signatur	<u>e                                      </u>						
SER	VICE 07			Date:	SER	VICE 08			Date:			
Engineer	name:				Engineer	name:						
Compan					Company name:							
Telephon	•					Telephone No:						
Gas safe	register No:				Gas safe	register No:						
	At max. rate:	CO ppm	AND	CO <sub>2</sub> %	11	At max. rate:	CO ppm	AND	CO <sub>2</sub> %			
Record:	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %	Record:	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %			
Commen	ts:				Commer							
Signature	 e				Signatur	 e						
					╡┝╧━							
SER	VICE 09			Date:	SER	VICE 10			Date:			
Engineer	name:				Enginee	name:						
Compan	y name:				Compan	y name:						
Telephone No:				Telephone No:								
Gas safe register No:					Gas safe	register No:						
Record:	At max. rate:	CO ppm	AND	CO <sub>2</sub> %	Record:	At max. rate:	CO ppm	AND	CO₂ %			
record.	At min. rate: (Where Possible)	CO ppm	AND	CO <sub>2</sub> %		At min. rate: (Where Possible)	CO ppm	AND	CO₂ %			
Commen	ts:				Commer	nts:						
Signature					Signatur	e						

<sup>\*</sup>All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.







