

Installation and service manual

## Remeha Avanta 18v

Remeha Avanta 18v

- Wall hung high-efficiency condensing boiler for open vented systems
- Output 19 kW




 **remeha**

## TABLE OF CONTENTS

<b>INTRODUCTION</b>	<b>4</b>
<b>1 SAFETY</b>	<b>5</b>
1.1 General safety	5
1.2 Safety during assembly and installation	5
1.3 Safety during installation, inspection and maintenance	5
<b>2 INSTALLATION</b>	<b>7</b>
2.1 Scope of delivery	7
2.2 Mounting the boiler	7
2.2.1 Clearance requirements	7
2.2.2 Dimensions and connection points.	8
2.2.3 Mounting the Remeha Avanta 18v	9
2.3 Water-side connections	9
2.3.1 Water flow	9
2.3.2 System Pump	9
2.3.3 Pressure loss of the boiler	10
2.3.4 Open-Vented System	10
2.3.5 Sealed systems	10
2.3.6 Additional guidelines for the domestic and CH water	10
2.3.7 Water treatment	11
2.3.8 Safety valve discharge	12
2.3.9 Draining Provision	12
2.3.10 Connecting the 'CH return'	12
2.3.11 Connecting 'CH flow'	12
2.3.12 Connecting condensate drain	13
2.4 Gas-side connections	13
2.4.1 Additional guidelines for gas connections	13
2.4.2 Adjusting boiler to other gas-type	13
2.4.3 Connecting the gas supply	14
2.5 Flue terminal and air supply connections	14
2.5.1 Flue terminal positions	14
2.5.2 Room sealed flue	16
2.5.3 Connecting the flue terminal and air supply	16
2.6 Electrical connection	17
2.6.1 The control unit	17
2.7 Connecting external controls	18
2.7.1 Connecting an on/off control – room temperature (volt free switching)	19
2.7.2 Connecting a time control using an external 230 V clock	20
2.7.3 Connecting a 230 V time clock in combination with a modulating room control	20
2.7.4 Connecting a modulating control – room or outside compensation	21
2.7.5 Connecting an outside temperature sensor	21
2.7.6 Connecting the DHW sensor/thermostat	22
2.7.7 Connecting a three-way valve	22
2.7.8 Connecting a frost thermostat	22
2.7.9 Connecting an external interlock	23
2.7.10 Connecting remote alarm and boiler run indication	23
2.7.11 Connecting a PC/PDA	24
2.8 Connecting an external pump	24
2.9 Wiring diagram	25

2.10	Commissioning	26
2.10.1	Control Panel	26
2.10.2	Additional guidelines for commissioning	26
2.10.3	Putting the boiler into operation	26
2.10.4	Normal start-up procedure	32
2.10.5	Error during the start-up procedure	32
2.10.6	Read out settings	33
2.10.7	Adjust the boiler according to the system	34
2.10.8	Changing the parameters at service level (with access code)	34
2.10.9	Changing the maximum output (Hi) for CH operation	37
2.10.10	Restore factory settings	38
2.11	Putting the boiler out of operation	38
2.11.1	Boiler with frost protection, during longer periods of non-use	38
2.11.2	Boiler without frost protection, during longer periods of non-use	38
<b>3</b>	<b>INSPECTION AND MAINTENANCE</b>	<b>39</b>
3.1	Inspection	39
3.1.1	Checking the flue pipes and air supply pipes for leaks	39
3.1.2	Checking the condensate siphon	40
3.1.3	Checking the ignition electrode	40
3.1.4	Checking the combustion	41
3.2	Maintenance	42
<b>4</b>	<b>ERRORS</b>	<b>46</b>
4.1	General	46
4.2	Error codes	46
4.3	Control stop or lock-out	49
4.4	Error memory	49
4.4.1	Error read outs	50
4.4.2	Deleting errors	50
<b>5</b>	<b>SERVICE PARTS</b>	<b>51</b>
5.1	General	51
<b>6</b>	<b>EC DECLARATION</b>	<b>54</b>
<b>7</b>	<b>REGULATIONS</b>	<b>55</b>
7.1	EC regulations	55
7.2	Remeha factory test	55
7.3	Additional guidelines	55
<b>8</b>	<b>TECHNICAL SPECIFICATIONS AND WORKING PRINCIPLE</b>	<b>56</b>
8.1	Technical data	56
8.2	The boiler components	57
8.3	Working principle	57
8.3.1	Regulating	57
8.3.2	Advanced boiler control ('abc <sup>®</sup> '-control)	58
8.3.3	Regulating the water temperature	58
8.3.4	Low flow / water protection	58
8.3.5	High Limit temperature protection	58
<b>9</b>	<b>EFFICIENCY DATA AND GAS EFFICIENCY LABELS</b>	<b>59</b>
9.1	Annual efficiency	59
9.2	Water-side efficiency	59

## INTRODUCTION

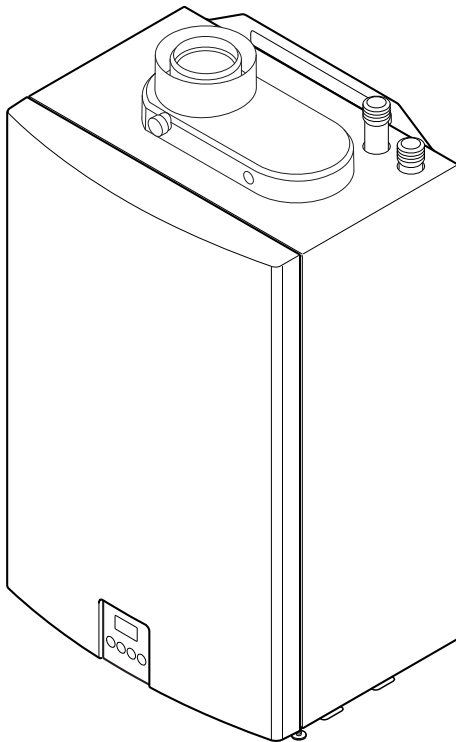

59970LTGBW7H046

The Remeha Avanta 18v is a wall mounted high-efficiency fully condensing central heating boiler, for open vented systems

These technical instructions contain useful and important information for the correct installation, operation and maintenance of the Remeha Avanta 18v boiler.



Read these instructions carefully before putting the boiler into operation, familiarise yourself with their control functions and operation, strictly observing the instructions given. Failure to do so may invalidate warranty or prevent the boiler from operating correctly.

The installation, commissioning, inspection and servicing of the boiler must be carried out by a competent Corgi registered Engineer who holds valid ACOPS certification and in accordance with current gas safety (installation and use) regulations, the building regulations and all other relevant codes of practice.

All electrical work must be carried out by a competent Engineer and to be installed in accordance with the current IEE regulations.



On commissioning the certificate in the Boiler Service Log book (supplied with the boiler) must be completed and left on site with a copy send on to Broag Ltd for registration purposes.

If you have any questions, require an engineer to call on site, or if you need more information about specific subjects relating to this boiler, or its installation please do not hesitate to contact our technical help line 0118 978 3434.



When contacting Broag with a problem on the boiler please have available the boiler type, Serial No (located on the bottom of the casing), and the symptoms or fault code (the fault code is a series of flashing red digits in the display panel).





The data published in these technical instructions is based on the latest information (at date of publication) and may be subject to revisions.

We reserve the right to continuous development in both design and manufacture, therefore any changes to the materials or technology employed may not be retrospective nor may we be obliged to adjust earlier supplies accordingly.

## 1 SAFETY

### 1.1 General safety

The following pictograms are used in this Installation and Service manual to specifically draw certain points to your attention:

<b>Tip</b>		Useful tip or practical advice.
<b>Indication</b>		Important instruction in carrying out a particular operation.
<b>Warning</b>		Possible danger of personal injury or material damage to the regulator, building or environment.
<b>Danger</b>		Serious personal injury can occur because of risk of electric shocks.

### 1.2 Safety during assembly and installation

Observe the appropriate safety measures, as given in these instructions.



#### Can you smell gas? What to do:

- do not smoke and do not create any flame or sparks;
- do not use any electric switches;
- turn off the gas tap;
- open windows and doors;
- trace possible leaks and seal them.

**Warning!** If the leak is before the gas meter, alert your gas supplier, TRANSCO, tel. 0800 111 999.



#### Can you smell smoke or flue gasses? What to do:

- isolate power supply
- open windows and doors
- trace possible leaks and seal them.

### 1.3 Safety during installation, inspection and maintenance

Under the Gas Safety (Installation & Use) Regulations 1998, the Remeha Avanta 18v, in common with all gas appliances, must be installed by a competent person in accordance with that regulation.

Statutory regulations, in any country, cannot be overridden by any of the notes or instructions from the manufacturer.

Compliance with National Standards does not provide any degree of immunity from legal obligations. In the UK, the installation must be in accordance with the national and local norms and requirements.

## Remeha Avanta 18v

For any issues or circumstances not addressed within these instructions, please call our Customer Care Department.

Remeha Avanta 18v - PIN: 0063BQ3009


Gas Council numbers: Remeha Avanta 18v: 41-288-06

Classification type for evacuation of the combustion products; according EN 483: *see par. 8.1.*

### **Health and safety information**

- All sealants and gaskets are free from harmful products.  
On first firing the boiler, a smell of these products may be present and should cease after a short period.

## 2 INSTALLATION

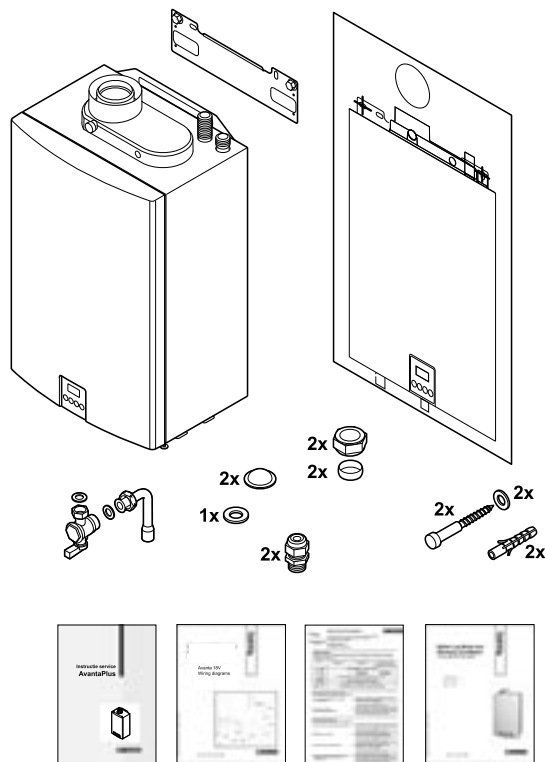

59970.LT.GB.W7H.006

### 2.1 Scope of delivery

The standard delivery of the Remeha Avanta 18v boiler includes:

- Boiler + mounting bracket
- Installation and Service manual, Quick reference card and Mounting Template
- Boiler Service Log Book
- Wiring diagrams
- Gas cock with gasket + 90° gas pipe ( 22 mm)
- nylon plugs and screws for fixing mounting plate
- olives and nuts
- spacers
- cable glands;

This Installation and Service manual deals with the standard supplied boiler only. For the installation or assembly of any optional accessories supplied with the boiler, such as stand off frame, pipe work kits, cover plate, control kits, etc, please refer to the Assembly Instructions supplied with these accessories.

### 2.2 Mounting the boiler

Packed in the box with the Remeha Avanta 18v box is this Installation and Service manual. Read instructions and remarks carefully. This section includes the guidelines and instructions for the connection of gas, water, electricity, safety devices, the regulator, control unit, flue discharge and air supply.

#### 2.2.1 Installation / maintenance clearance requirements


The gas connection is located on the bottom of the boiler whilst the water connections, air inlet and flue gas outlet are located on the top of the boiler. The boiler is supplied as standard with gas pipe work tails.

For installation, servicing and inspection min. 600 mm in front of the boiler is required. If this free space is obtained by opening a door or removing a panel, the boiler may be installed for instance in a closed cupboard. All servicing / inspection / repairs are made from the front of the boiler.





For ease of installation we recommend clearances of 0.5 cm at the side so that the unit is easy to open, with a free space of 25 cm under the appliance and 25 cm above the appliance, as the minimum requirement.

However once installed, it is possible to reduce these clearances to 22 cm at the top, and 25 cm at the bottom provided the boiler front panel can be removed and the isolating valves are easily accessible without the use of tools"

# Remeha Avanta 18v

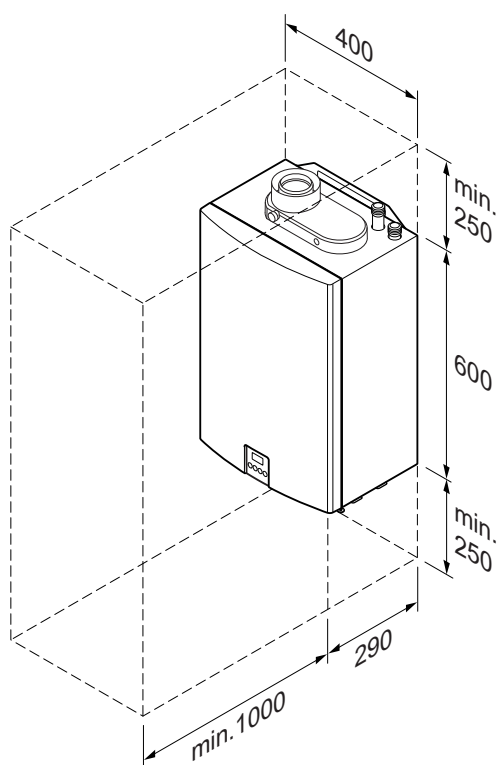

59970LTGBW7H047

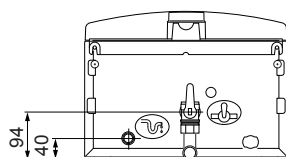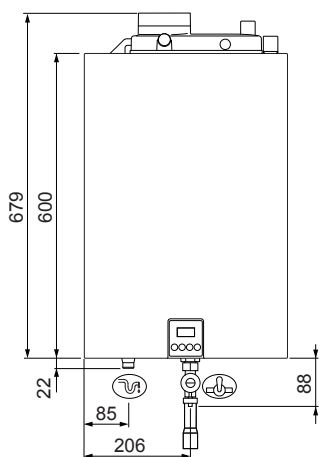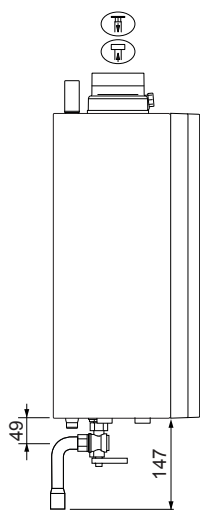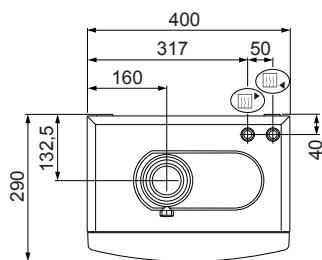







59970.LT.GB.W7H.001



Clearances shown are for ease of installation – once fitted it is possible to enclose the boiler in a cupboard with 25mm clearances around the casing provided a door is included to allow the front cover to be removed completely for maintenance and allowance is made to access the gas valve and flow / return connections.



## 2.2.2 Dimensions and connection points.

-  Return connection Ø 22 mm
-  Flow connection Ø 22 mm
-  Gas connection Ø 22 mm
-  Combustion air inlet Ø 100 mm (concentric)
-  Flue duct Ø 60 mm (concentric)
-  Condensate drain connection 3/4" (standard overflow pipe size)



- Based on the guidelines and the required installation space, determine where to mount the Remeha Avanta 18v.
- In determining the boiler position, consider carefully the flue outlet position and any plumbing consequences.



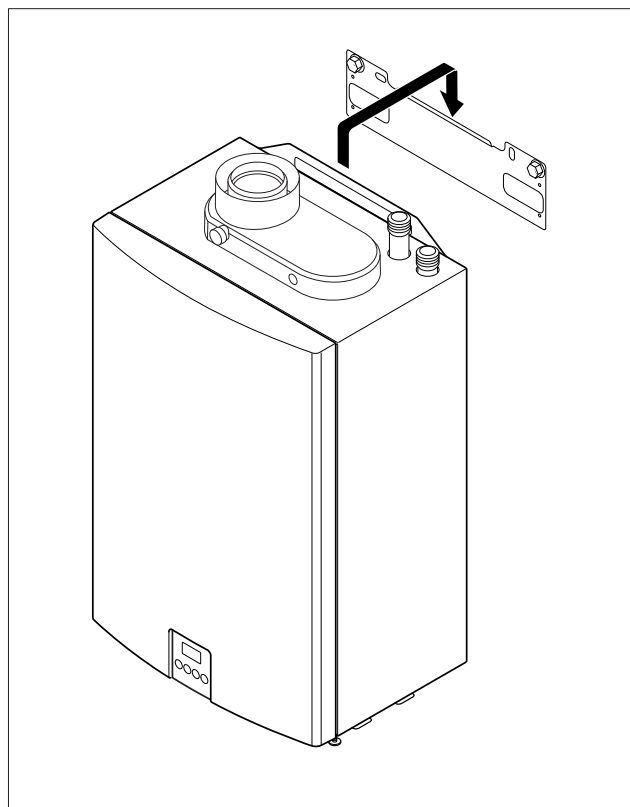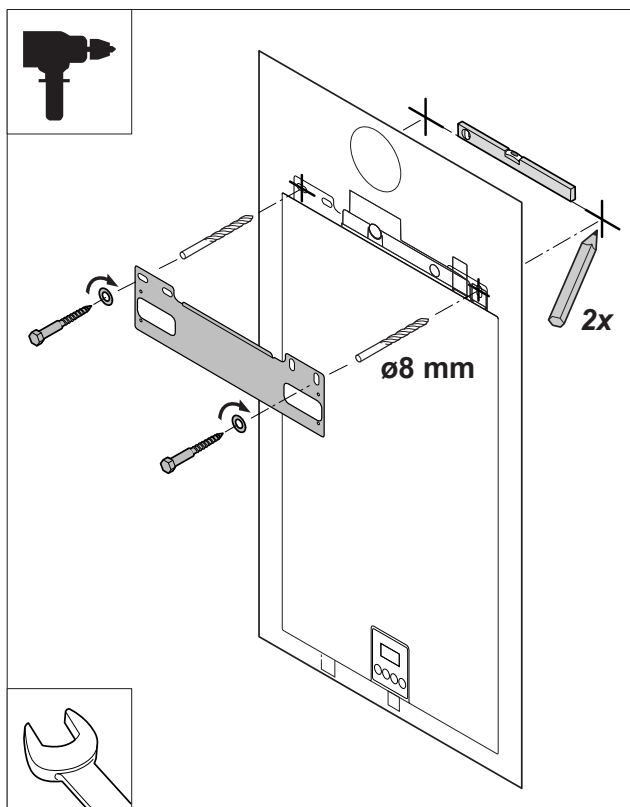

59970.LT.GB.W7H.002

### 2.2.3 Mounting the Remeha Avanta 18v

- Remove template from the box.
- Using the template determine and mark the position of the mounting bracket and flue outlet.
- Drill the (Ø 8 mm) holes.
- Fit the (Ø 8 mm) plugs.
- Core drill the (Ø 125 mm) hole for the flue outlet
- Fit (Ø 6 mm) screws into the plugs.
- Remove boiler from the box and mount on bracket.



- The boiler should be mounted on a suitable vertical wall which is able to support the weight of the boiler.
- The boiler should be mounted in a room which, even during severe cold weather, remains frost-free, or frost protection controls **MUST** be fitted.
- If the boiler is to be installed in a timber framed building, please refer to British Gas publication: 'Guide for Gas Installations in Timber frame Housing', reference DM2.



- Make sure the boiler and any open connections are protected from building etc. dust during the installation.
- There must be a 3 amp fused switched spur within 1 m of the boiler.
- Provision must be made for the condensate discharge.

## 2.3 Water-side connections

### 2.3.1 Water flow

The central heating system should not require a bypass, unless all radiators are fitted with TRV's or when the system controls could allow the boiler and pump to operate when there is no flow. Where a bypass has to be fitted, the bypass must be placed at least 1.5 metres away from the boiler. The 'abc<sup>®</sup>' control also monitors the temperature difference across the flow and return connections and the rate of temperature rise and will automatically regulate the boiler output to ensure that it remains operational for as long as possible without the need to 'lock out' requiring a manual reset.



### 2.3.2 System Pump

The system pump must be wired directly to the boiler terminal strip and be capable of providing the nominal flow at design conditions against the combined resistance of the boiler and system.

The minimum flow rate is 1.05 m<sup>3</sup>/h (0.29 l/s) at maximum heat input and 15°C differential across flow and return. To operate at 81°/70°/C the flow rate must be 1.37 m<sup>3</sup>/h (0.38 l/s) Higher resistance systems may require a higher duty pump.

The maximum power consumption of the pump may not exceed 150 W /1.5 amps.

The connection of the pump is described in *par. 2.8*

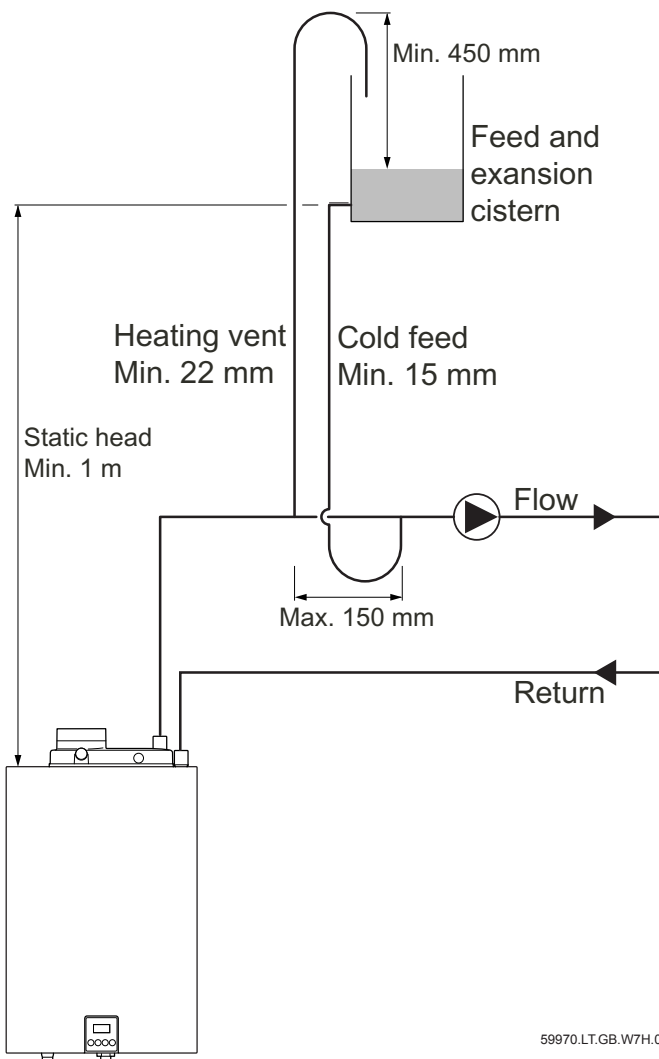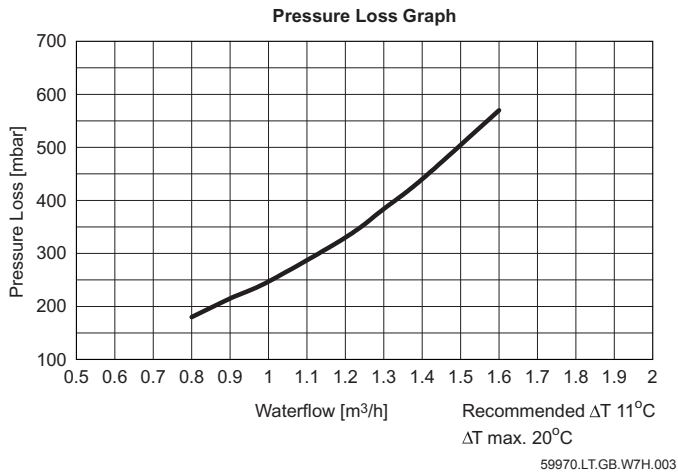

## 2.3.3 Pressure loss of the boiler

### 2.3.4 Open-Vented System

The feed and expansion tank must be situated at a minimum height of 1 metre and a maximum height of 30 metres above the boiler to provide the correct operating head pressure. The cold feed must be at least 15 mm and the open vent must be at least 22 mm. The pipes must rise continuously from the system. The heating vent must be at least 450 mm above the water level in the feed and expansion cistern. The pump should be fitted on the flow pipe from the boiler and have isolating valves each side.

### 2.3.5 Sealed systems

If the Avanta 18v is installed on a sealed system, an appropriately sized expansion vessel and a safety valve **MUST** be installed close to the inlet side of the pump. A mains filling loop **MUST** be installed close to the outlet side of the system pump, along with automatic air vents positioned in the system pipe work to ensure adequate system venting during filling and operation. An adequate pressure gauge should be fitted in a position where it can be seen during filling of the system. All in accordance with the current issue of the relevant British Standards.

### 2.3.6 Additional guidelines for the domestic and CH water

- Power flush the pipes and radiators thoroughly before connecting the boiler to the central heating system in accordance with BS 7593 (1992).
- Following power flush, re-fill the system with clean tap water and run the system up to 60°C – turn boiler off and allow to cool slightly, then completely drain system from all low points. Re-fill system.



- The temperature of the central heating pipes and the radiators can rise to 95°C.
- Use untreated tap water only to fill the CH system.
- The pH value of the system water must be between 6 and 9.
- In case inhibitors are being used, please follow the instructions given in, see *par.* 2.3.7.

### 2.3.7 Water treatment

If used correctly water treatment can improve the boilers efficiency and increase the anticipated life expectancy of the boiler. For further information a special document "Quality requirements CH water" is available from Broag.

As most systems contain a variety of metals, it is considered good practice to provide some form of water treatment in order to prevent or reduce the following:

- Metallic corrosion
- Formation of scale and sludge
- Microbiological contamination
- Chemical changes in the untreated system water



All scale deposits however small will reduce the efficiency of the boiler and should be prevented.

Suitable chemicals and their use should be discussed with a specialist water treatment company prior to carrying out any work (environmental aspects, health aspects). The specification of the system and manufacturers recommendations must be taken into account, along with the age and condition of the system. New systems should be flushed thoroughly to BS 7593(1992) to remove all traces of flux, debris, grease and metal swarf generated during installation. Care to be taken with old systems to ensure any black metallic iron oxide sludge and other corrosive residues are removed, again by power flushing, ensuring that the system is drained completely from all low points.



Please ensure that the new boiler plant is not in circuit when the flushing takes place, especially if cleansing chemicals are used to assist the process.

It is important to check the inhibitor concentration after installation, system modifications, filling the system and every service in accordance with these instructions.

For the correct dosage and the suitability of inhibitors for use with our boilers and for further information on water treatment or system cleaning we advise direct contact with either of the following companies:

**'Copal®'**

manufactured by:  
 Fernox, Cookson Electronics  
 Forsyth Road  
 Sheerwater  
 Woking  
 Surrey GU21 5RZ  
 Tel No: 01483 793200  
 Fax No: 01483 793201  
 Email: sales@fernox.com  
 Web site: www.fernox.com

or: **Sentinal 'X100®'**

manufactured by:  
 BetzDearborn Ltd  
 Sentinal  
 Foundry Lane  
 Widnes  
 Cheshire WA8 8UD  
 Tel No: 0151 424 5351  
 Fax No: 0151 420 5447


## 2.3.8 Safety valve discharge


A pressure relief safety valve is not needed for Open-Vented systems.

## 2.3.9 Draining Provision


Drain points must be provided at all the low points of the system to ensure that the entire system can be completely drained. The boiler is provided with a drain in the return pipe.


## 2.3.10 Connecting the 'CH return'


- Remove the dust cap from the 'CH return' connection  at the top of the boiler.
- Fit the return pipe to 22 mm Ø compression fitting.

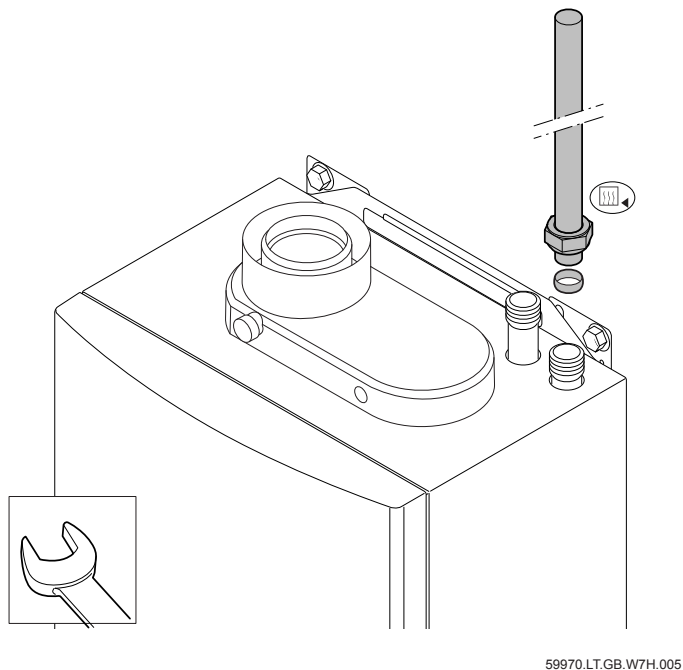

## 2.3.11 Connecting 'CH flow'

- Remove the dust cap from the 'CH flow' connection  at the top of the boiler.
- Fit the flow pipe to the 22 mm Ø compression fitting.

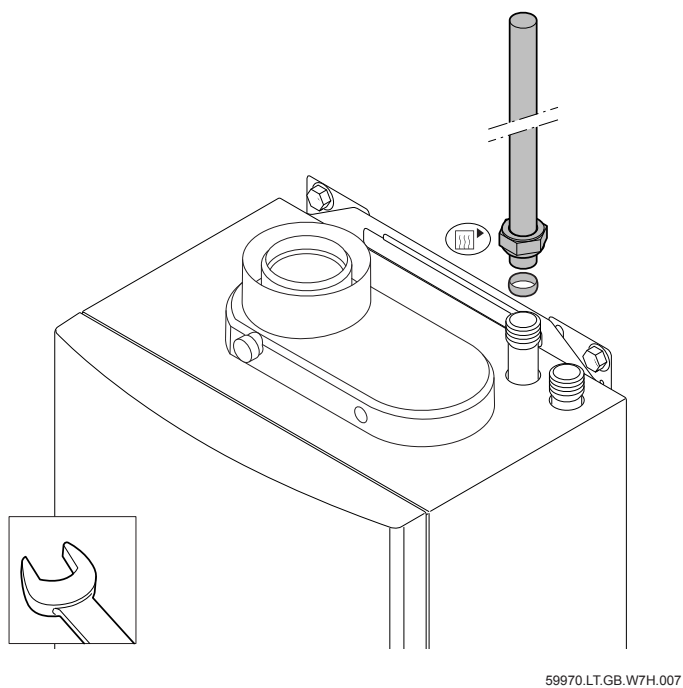

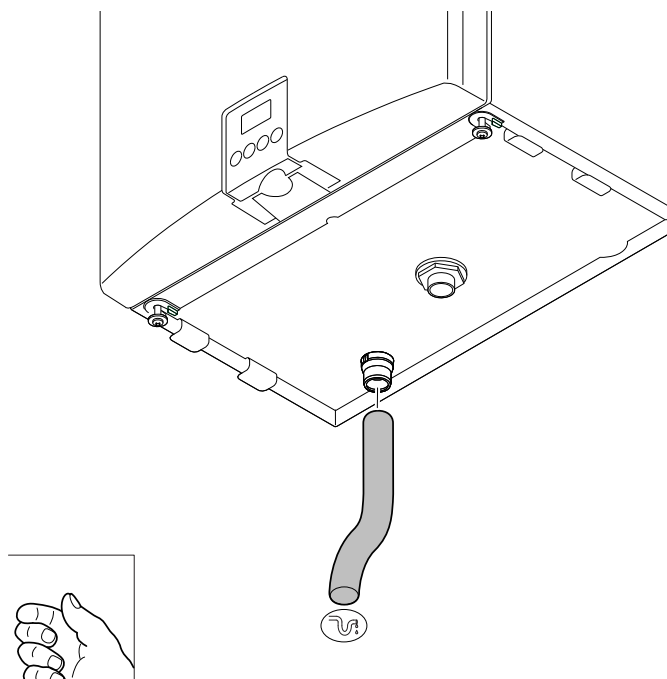

59970.LT.GB.W7H.034

### 2.3.12 Connecting condensate drain

- Connect the condensate drain outlet (U) to a suitable waste water drain point using acid resisting pipe work (i.e. - 3/4" overflow). To enable the siphon in the boiler to be removed / serviced, the connection should not be a permanent one (i.e. "push fit" system or a "tundish" immediately below the boiler).
- To prevent the risk of freezing connect the condensate into an internal vertical soil pipe using a tundish (air break) c/w a min 75 mm water seal trap.
- If the condensate pipe has to run externally make sure this is done by realizing the shortest possible route, and increase the diameter to at least 1 1/4" or insulate it with weather resistant insulation.
- The drain should slope at least 3 cm per meter, with a maximum horizontal length of 5 m.



- If connecting into an internal discharge branch (i.e. sink waste etc) the connection must be down stream of the existing waste trap.
- Fill the boiler siphon with water before operation, to prevent flue gasses discharging into the room.
- The condensate drain must be connected in accordance with current regulations.

## 2.4 Gas-side connections

### 2.4.1 Additional guidelines for gas connections




Before installation, check that the gas meter has sufficient capacity for the demand. Remember to consider the consumption of all household appliances.

### 2.4.2 Adjusting boiler to other gas-type

The Avanta 18v boiler is suitable for both natural gas and propane firing.


The boiler is supplied as standard set for natural gas (H), therefore the following procedure must be carried out BEFORE the boilers are fired and commissioned for the first time on propane:

Adjust the fan speed (see par. 2.10.8) and adjust the gas/air ratio (see par. 2.10.3).

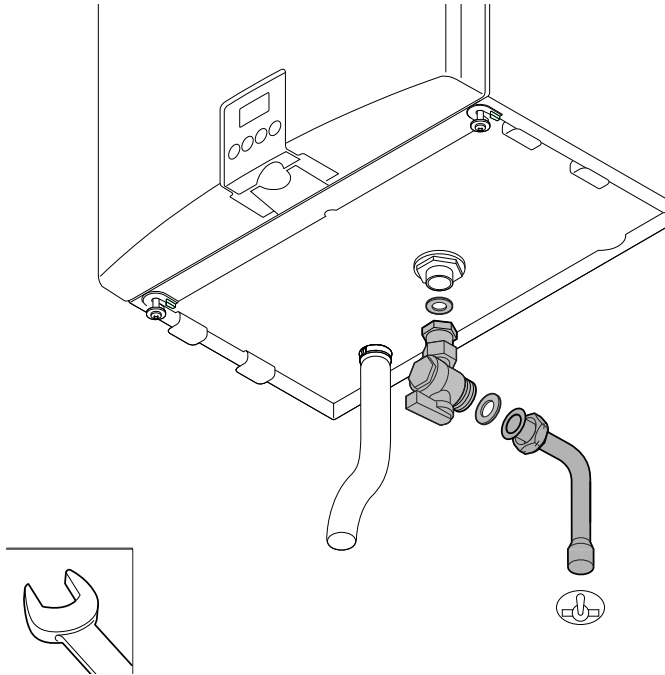

59970.LT.GB.W7H.035

## 2.4.3 Connecting the gas supply

- Before starting any work on the gas supply, turn off the main isolation valve.
- Remove the dust cap from the gas connection  at the bottom of the boiler.
- Connect the gas supply to the 22 mm Ø connection (copper tail supplied).



- Make sure there is no dirt in the gas pipe. Blow through the pipe before installation or tap well to clear.
- Make sure that there is sufficient gas pressure available (at full load > 17 mbar).
- Preferably install a gas filter in the gas pipe to protect the boiler.
- The gas supply must be connected, tested for soundness and purged by a qualified Engineer and in accordance with BS6891.

## 2.5 Flue terminal and air supply connections


The Remeha Avanta 18v is only suitable for room sealed operation with a standard concentric connection 60/100 mm Ø or the optional 80/125 mm Ø connection. Detailed recommendations for air supply and flue terminals are given in BS 5440.

### 2.5.1 Flue terminal positions

The flue terminal must be located with care to ensure that the products of combustion are dispersed properly in all weather conditions and cause minimum nuisance to the building user or any adjacent buildings. If the terminal is positioned less than 2 m above the ground, balcony, or flat roof where access by persons is possible a suitable guard must be employed.



The boiler will produce a water vapour plume during normal operation. Positions for the Remeha Avanta 18v are shown in the figure and *table 01*.

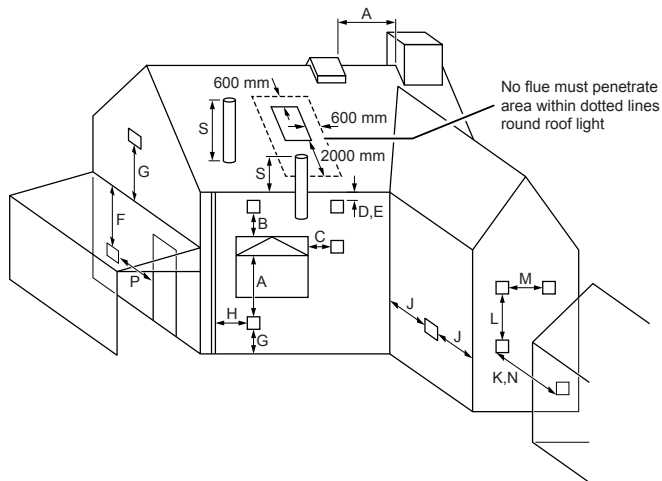

LT.AL.W7H.000.020

Dimensions	Terminal location	Minimum distance (in mm) to terminal (room sealed)
A	Directly below an opening, air brick, opening window, etc.	300
B	Above an opening, air brick, opening window, etc.	300
C	Horizontally to an opening, air brick, opening window, etc.	300
D	Below a gutter or sanitary pipe work	40 <sup>1)</sup>
E	Below the eaves	40
F	Below a balcony or carport roof	40
G	Above ground, roof or balcony level	300
H	From vertical drain/soil pipe work	40 <sup>1)</sup>
J	From an internal or external corner	40
K	From a surface or boundary facing the terminal	600 <sup>2)</sup>
L	Vertically from a terminal on same wall	1500
M	Horizontally from a terminal on same wall	300
N	From a terminal facing the terminal	1200
P	From an opening in a carport (e.g. door, window) into the building	1200
R	From a vertical structure on the roof	n/a
S	Above an intersection with the roof	n/a

table 01 Minimum distances to terminal

<sup>1)</sup> = For combustible materials the min should be 150 mm

<sup>2)</sup> = Where the terminal is positioned directly opposite an opening in the facing wall the min will be 2 m.

n/a = not applicable.

## 2.5.2 Room sealed flue

See table 02 for the maximum pipe length of flue ducts and air supply pipes for this 'room sealed' application.

It is not necessary to provide combustion air to the room or internal space in which the boiler is installed.








 <p>80/125 or 60/100</p>  <p>VRS roof mounted room sealed terminal</p> <p>L</p>	Standard			M&G material		
	Diameter in mm Ø		60/100	80/125	60/100	80/125
	Maximum length 'L' allowed [m]		2	20	8	34
	Eq. Length of 90° elbow			2	1.4	
	Eq. Length of 45° elbow			1	0.65	

table 02 Maximum pipe lengths for flue duct and air supply in room sealed application



59970LTGBW7H010

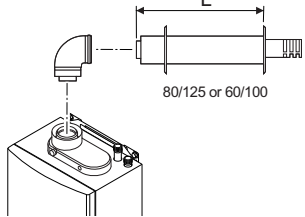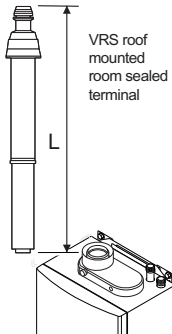

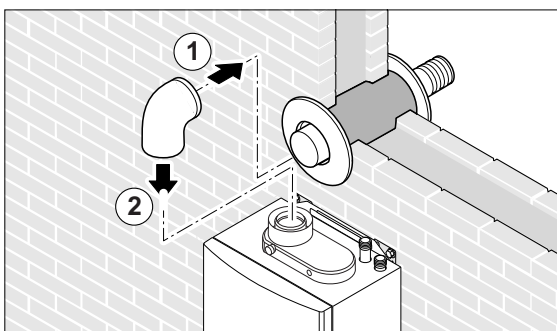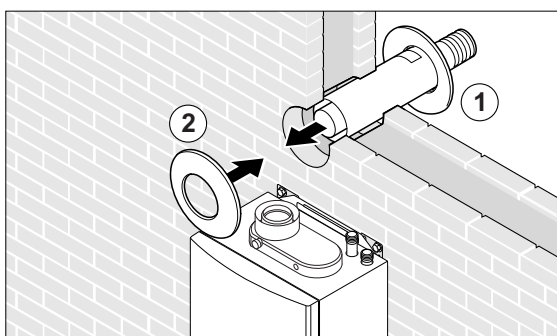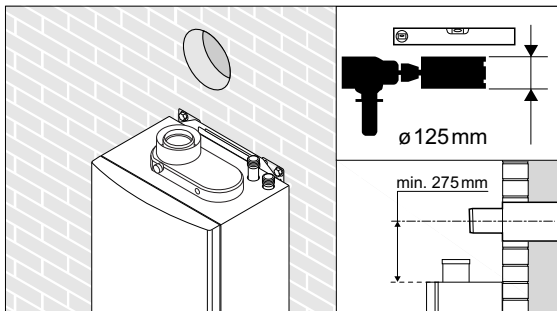For flue installations not covered by this booklet, please contact our technical help line 0118 978 3434.


## 2.5.3 Connecting the flue terminal and air supply

- Check the depth of the wall and cut the terminal to suit – taking note of the cutting instructions supplied with it
- Core drill a 125mm Ø hole in the wall, fit the rubber closure plate at the exit end and slide the terminal through the wall until the closure plate is clear of the outer edge of the wall – pull back the terminal till the closure plate is flush then fit inner wall closure to secure.




- All connections must be airtight and waterproof.
- Horizontal extension sections should slope towards the boiler (at least 3 cm per metre).



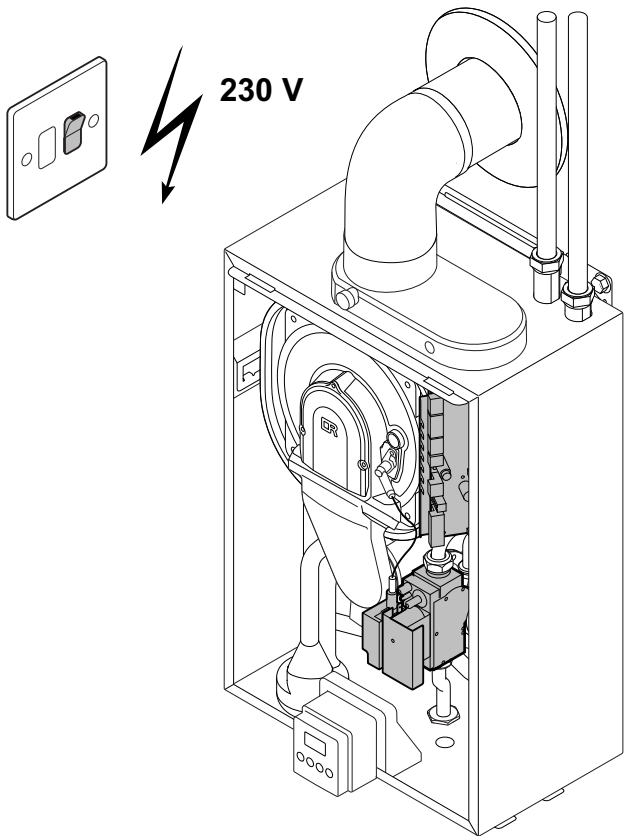

59970LTGBW7H011

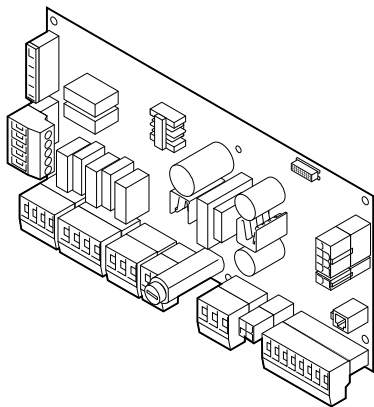

LTALW7H000023

### 2.6 Electrical connection

- Connect the boiler to the fused (3 amp) switch spur unit adjacent to the boiler.
- The switch unit must always be accessible.



When the switch spur is on the following components of this appliance can be live (230 V):

- electrical connection gas combination block;
- most parts of the control unit;
- ignition transformer;
- X1, X2, X4, X5, X6 and X7 terminal strip;
- 230 V supply cable connection.

#### 2.6.1 The control unit

The Remeha Avanta 18v has an electronic regulation and control unit with an integrated ionisation flame detector. The heart of the boiler control unit is a microprocessor, the ‘**abc**®’, which controls and protects the boiler.

The maximum rated input of the boiler is 130 W. The boiler is fully pre-wired internally, all external connections can be made using the terminal strips X5 - X7 - X9 and 230 V input (X2 terminal). See the diagram for the position of the connectors and fuse (F2) on the control unit.

The most important properties of the control unit are summarized in *table 03*.

Manufacturer	Sit Controls
Supply voltage	230 V – 1ph – 50 Hz
Pre-purge time	3 s
Post-purge time	5 s
Ignition time	2.5 s
Safety time	5 s
Anti-cycling time	3 till 10 min.
Fuse value F1 (230 V)	2 AT
DC fan	24 VDC

table 03 Control unit characteristics



Any loads other than those specified above are only allowed if an isolating transformer is used.

The output of the Remeha Avanta 18v can be controlled in the following ways:

**On/off control – volt free switching** - The boiler's internal control will modulate the output to achieve the flow temperature set point of the boiler. This contact is on the X9 terminal strip (low voltage only).


**On/off control – 230 V switching** - The boiler's internal control will modulate the output to achieve the flow temperature set point of the boiler. This contact is on the X2 terminal strip (230 VAC only).

**Modulated control – Open Therm** - The external controls will modulate the boiler's output to achieve the flow temperature determined by the modulating regulator. This contact is on the X9 terminal strip (low voltage only).

**Modulated control – Open Therm in combination with an externally mounted simple 230 V switching time clock** - The boiler will provide room compensated heating and time control over CH and DHW (System boiler).



- All connections on terminal X1, X2, X4, X5, X6 and X7 are 230 VAC.
- All connections on terminal X9 are low voltage only.

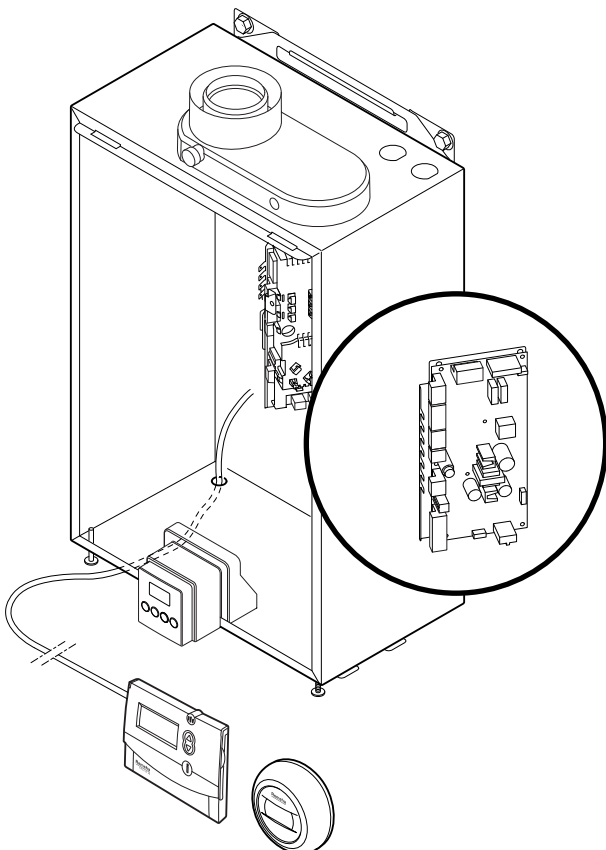


59970LTGBW7H012

## 2.7 Connecting external controls

- Release the two screws at the bottom of the front casing, release plastic clip below display and remove the front casing.
- Remove one of the supplied grommets in the base of the boiler, fit a cable gland and feed the cables through.
- Connect the cables to the relevant connectors, as shown in the diagrams.




- Isolate power supply at the fused spur before carrying out any work on the boiler controls.

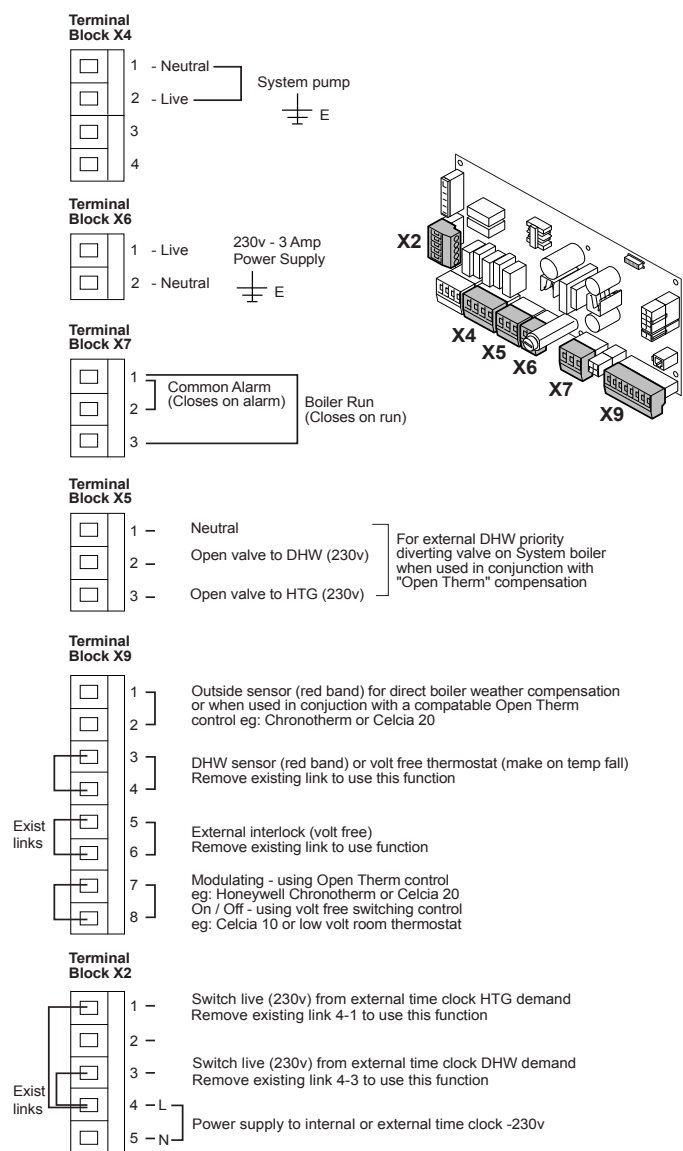

NOTE: Terminal blocks are not in line as shown - diagramatic only

LT.AL.W7H.000.025

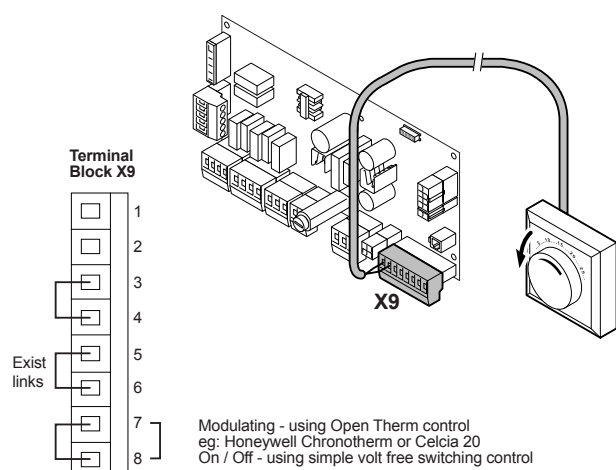

LT.AL.W7H.000.026

## 2.7.1 Connecting an on/off control – room temperature (volt free switching)



The Remeha Avanta 18v can be connected to a 2-wire on/off thermostat, such as the Remeha Celcia 10.

Mount the thermostat in a reference room (usually the living room).

- Remove existing link and connect the 2-wire 24 V room thermostat to connectors 7 and 8 of the X9 terminal strip.



If a room thermostat with an anticipation resistor is being used, parameter **P5** should be changed from **0** to **1**, see par. 2.10.8.

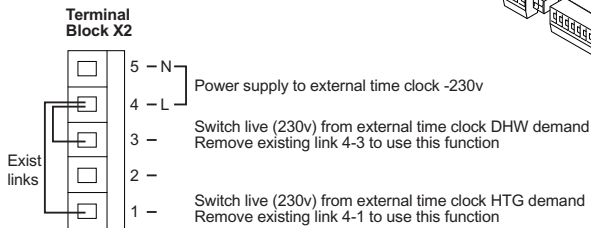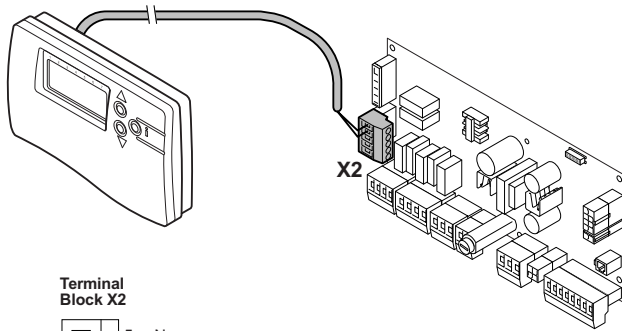

LTALW7H000027

## 2.7.2 Connecting a time control using an external 230 V clock



When the switch spur is on, the terminal strip X2 will be live (230 V).

- A 230 V two channel time clock for CH and DHW control can be connected to the Remeha Avanta 18v. Live 230 V supply for the time clock - connect to connectors 4 (L) and 5 (N) on X2 terminal strip.
- For CH - remove exist link between connectors 4 and 1 of the X2 terminal strip and connect the 230 V output from the time clock to terminal 1 on the terminal strip X2.
- For DHW - remove exist link between connectors 4 and 3 of the X2 terminal strip and connect the 230 V output from the time clock to terminal 3 on the terminal strip X2.



For this option to function correctly, a link or room control must be fitted between connectors 7 and 8 of X9 terminal strip (remove existing link before use).


If the 230 V supply for the external time clock is not taken from the boiler – terminal block X2 connections 4 & 5, it must be taken from the same phase as the boiler 230 V supply and correct polarities observed.

## 2.7.3 Connecting a 230 V time clock in combination with a modulating room control

With an externally mounted simple 230 V switching time clock connected to connectors on X2 terminal strip and a Celcia 15 connected to connectors 7 and 8 of X9 terminal strip (remove existing link), the Remeha Avanta 18v will provide room compensated heating and time control over CH and DHW.



An OpenTherm® room modulating control (Celcia 15) used in conjunction with a simple external 230 V time clock will provide easy to set up and operate - timed room compensation heating

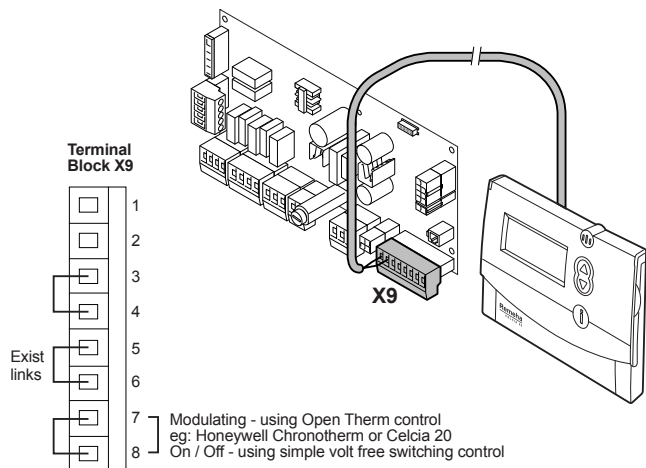

LTALW7H000028

#### 2.7.4 Connecting a modulating control – room or outside compensation


The Remeha Avanta 18v has an OpenTherm® interface. This enables our modulating range of OpenTherm® room controls (e.g. the Remeha Celcia 15 or 20) to be connected without any further modifications.

- Mount the control in a reference room (usually the living room).
- Remove existing link and connect the two-wire interface cables to connectors 7 and 8 of the X9 terminal strip.
- When using the Celcia 20 it is possible to add an outside sensor to provide weather compensation with room adjustment. Connect the outside sensor to connectors 1 and 2 on the X9 terminal strip.

If the DHW water temperature on the OpenTherm® control can be adjusted, then the Remeha Avanta 18v will supply water at the temperature determined at the OpenTherm® with the maximum being set in the boiler. OpenTherm® is an industry standard modulating control available from several control manufacturers.



The Remeha Avanta 18v can therefore be controlled directly by any other controls with this OpenTherm® logo

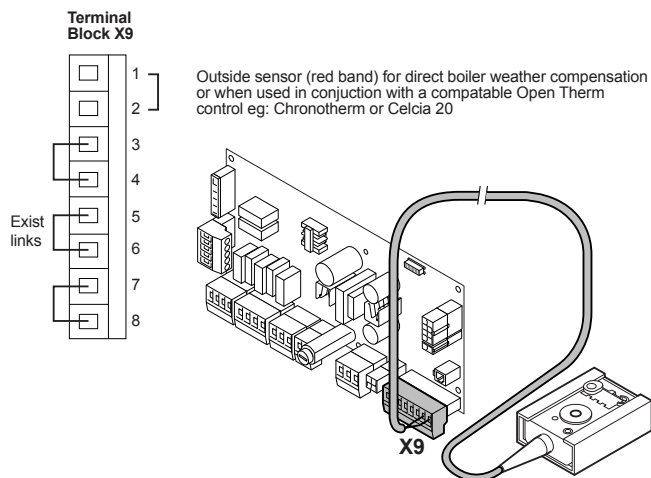

LTALW7H000029


#### 2.7.5 Connecting an outside temperature sensor

An outside temperature sensor can be connected to connectors 1 and 2 of the X9 terminal strip.

The boiler will regulate the output using the set point of the internal heat curve.

This can be set as follows:


- Outside temperature minimum set point =  $-15^{\circ}\text{C}$  (adjustable with parameter  $P29$  to between  $0$  and  $-30^{\circ}\text{C}$ )
- Outside temperature maximum set point =  $20^{\circ}\text{C}$  (adjustable with parameter  $P28$  to between  $0$  and  $40^{\circ}\text{C}$ )
- Flow temperature set point at maximum outside temperature =  $20^{\circ}\text{C}$  (adjustable with parameter  $P27$  to between  $0$  and  $60^{\circ}\text{C}$ )
- Flow temperature set point at minimum outside temperature =  $20^{\circ}\text{C}$  (adjustable with parameter  $P1$  to between  $20$  and  $85^{\circ}\text{C}$ )

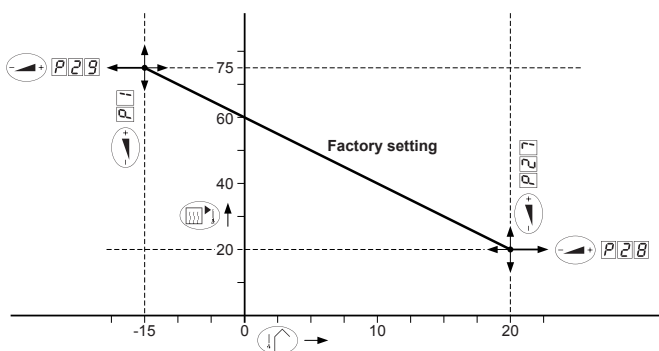



LTALW7H000030




An outside sensor used in conjunction with a simple 230 V time clock will provide easy to set up and operate - timed weather compensation heating based on the above graph.

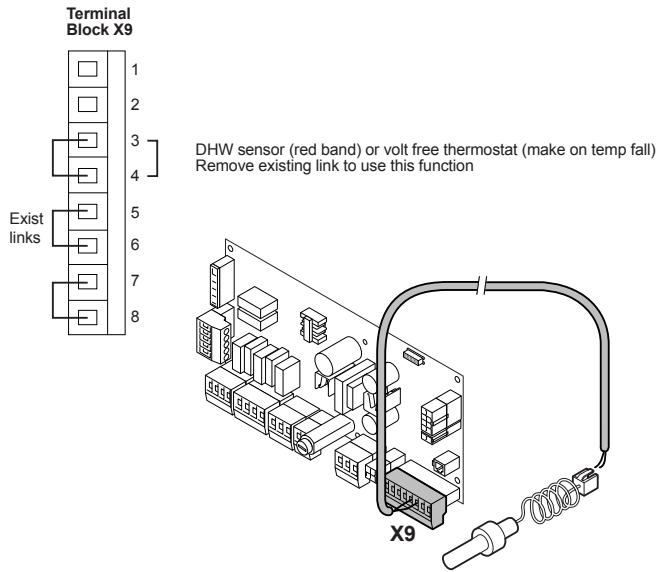

LTALW7H000031

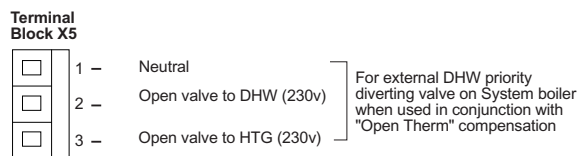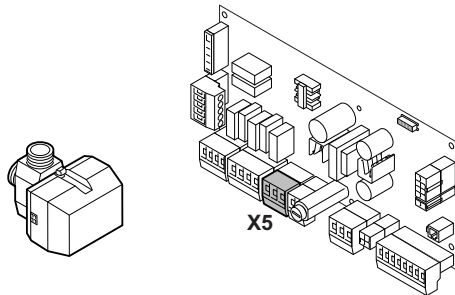

59970LTGBW7H041

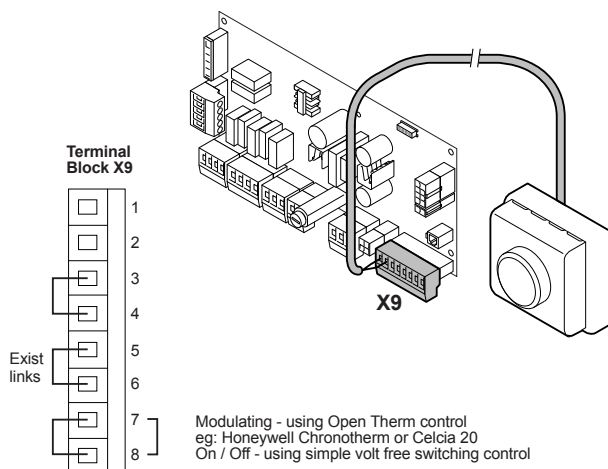

LTALW7H000032

## 2.7.6 Connecting the DHW sensor/thermostat

- If an external DHW calorifier is being used with the Avanta 18v system boiler a DHW control sensor or volt-free thermostat can be connected to connectors 3 and 4 of the X9 terminal strip after removing the existing link. The control will automatically detect whether a sensor or a thermostat has been connected.

## 2.7.7 Connecting a three-way valve

If required a 230 V three-way valve can be connected to terminal X5 of the control unit. When used in conjunction with an "Open Therm" compensator the DHW-production operates with priority. Connector X5-1 for N (neutral), connector X5-2 for "open valve to DHW" (port A of three-way valve) and connector X5-3 for "open valve to CH" (port B of three-way valve). The cable must be fed through the boiler's casing by means of the supplied cable gland and run through the cable clamp on the right-hand inside of the boiler.

## 2.7.8 Connecting a frost thermostat

The boiler must be installed in a frost-free area to prevent the condensate drain from freezing. However if the temperature of the CH water in the boiler drops too low, the integrated boiler protection device is activated as follows:

- at a water temperature below 7°C: the circulation pump is switched on;
- at a water temperature below 3°C: the boiler is switched on;
- when the water temperature is above 10°C: the boiler is switched off and the circulation pump runs for another 15 minutes.




- A frost thermostat should preferably be installed in rooms with a high frost risk.
- Connect the frost thermostat in parallel to the room thermostat - connectors 7 and 8 of the X9 terminal strip (remove existing link between connectors 7 and 8 before use).



- The integrated boiler protection described above will not provide complete system or fabric protection.
- When a Celcia 20 control has been fitted to connectors 7 and 8 on X9 (see par. 2.7.4) an outside sensor as detailed in par. 2.7.5) must be used to provide system and building fabric frost protection. I
- If a frost thermostat is connected parallel to the Celcia on connectors 7 and 8 on X9, when the frost thermostat calls for heat (contact closed) it will override the Celcia 20 control and cause an error message (OT ERROR) flashes in the display and the boiler will operate continuously to achieve the flow set point.

### 2.7.9 Connecting an external interlock

The Remeha Avanta 18v is supplied with an external interlock function. A volt free switching device (i.e. external gas pressure switch, safety thermostat for under floor heating) can be connected to connectors 5 and 6 of the X9 terminal strip after removing the existing link. When this circuit is open the boiler will shut down with the display showing (code 9) and will restart when the circuit is closed.

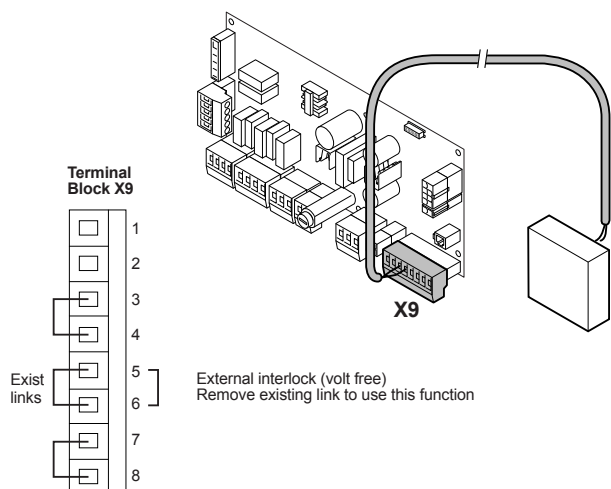


LTALW7H000033

### 2.7.10 Connecting remote alarm and boiler run indication

As standard the boiler is supplied with 3 volt free connectors on terminal X7. They can be used for an external gas valve, remote alarm and boiler run indication.

- Common alarm signal connect to connectors 1 and 2 on terminal X7. Contact closes on lock out. For this purpose set parameter 24 from 0 to 1.
- Boiler run signal connect to connectors 1 and 3 on terminal X7. Contact closes on heat demand. For this purpose set parameter 24 from 0 to 2.
- Connect an external gas valve to connectors 1 and 3 on terminal X7. Contact closes when the gas valve is activated. For this purpose set parameter 24 from 0 to 3.

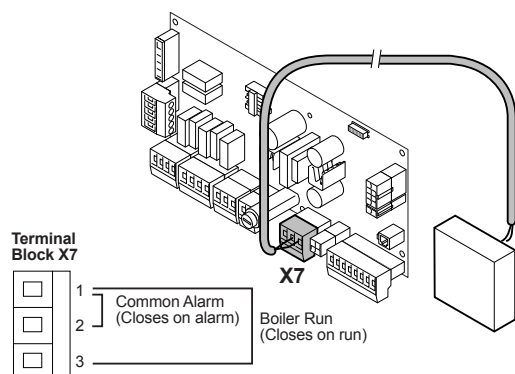

LTALW7H000034




## 2.7.11 Connecting a PC/PDA

Using the optional Recom interface package a PC or PDA can be connected to the X10 “telephone connector”. Using the Recom PDA service software you can load, change and download various boiler settings and readings. See the user instructions supplied with the software/hardware.




Not all PDA will run the Recom software - check with Broag before buying a unit.

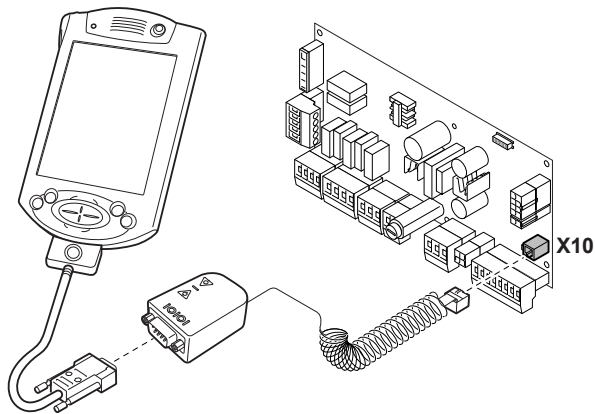

LTALW7H000035

## 2.8 Connecting an external pump


Connect the system pump to terminal X4 (X4 -1 and X4 -2) of the control unit. The pump's earth connection must be connected to the control unit's earth connection with an AMP-connector (supplied with boiler). The cable must be fed through the boiler's casing by means of the supplied cable gland and run through the cable clamp on the right-hand inside of the boiler.

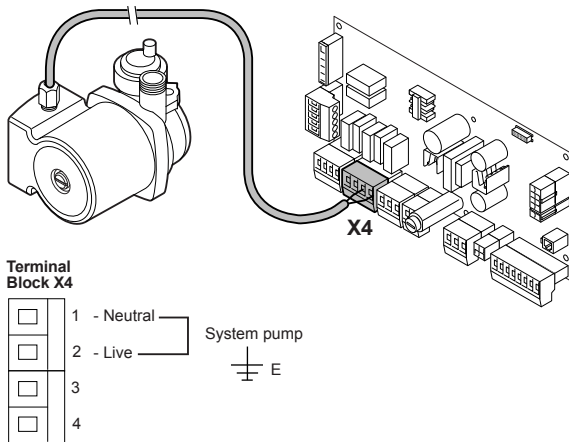


59970LTGBW7H043



2.9 Wiring diagram

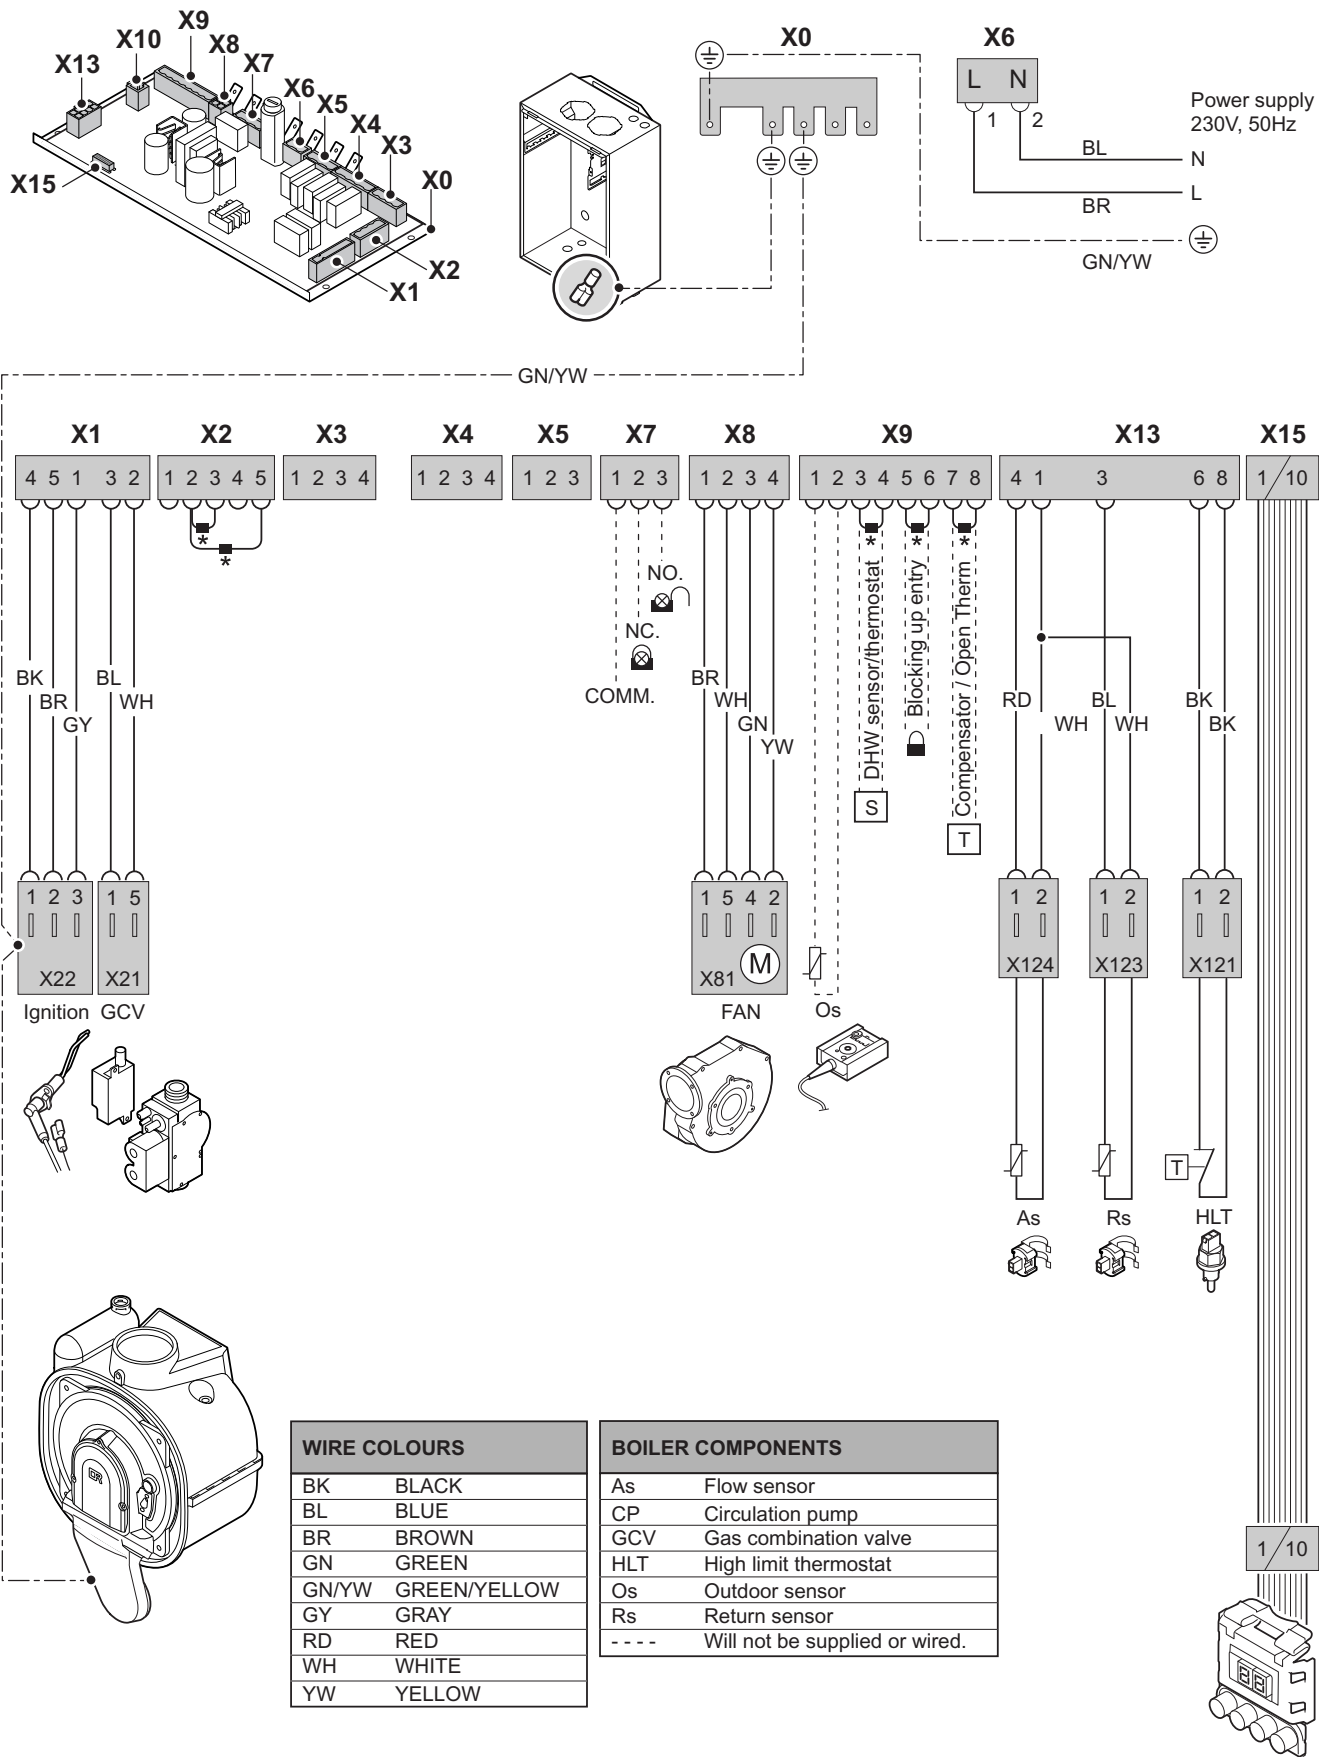

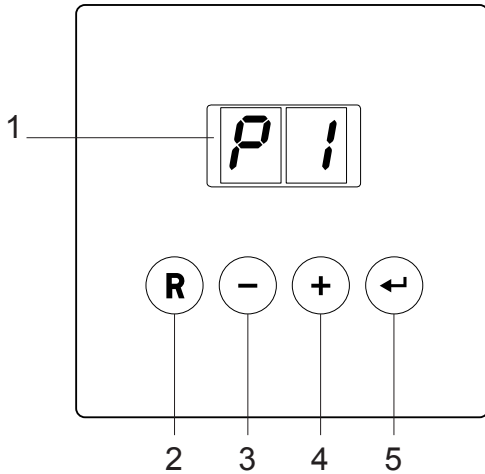

LTALW7H000036

## 2.10 Commissioning

### 2.10.1 Control Panel

The control panel of the Remeha Avanta 18v has 4 function keys and a LED display. The function keys are used to read or change the settings and temperatures.

- 1 = display
- 2 = **[reset]** key
- 3 = **[-]** key
- 4 = **[+]** key
- 5 = **[enter]** key

The display has two positions and displays information on the current operating status of the boiler and any errors. Numbers, dots and/or letters can appear in the display.

If no key is pressed for longer than three minutes with the “boiler in stand-by mode”, only one dot is lit. With the “boiler operating”, two dots are displayed.

- Press any key and the current boiler status and operation code will appear in the display.
- In the event of a fault, the fault code is displayed instead of the dots.

### 2.10.2 Additional guidelines for commissioning

- When commissioning, complete the Boiler Log Book.
- Work through all the stages of this section, complete the commissioning details in the supplied boiler log book and send a copy of the completed documents to Broag to register the boiler.
- This Avanta boiler has been live test fired on the production line and set up for Natural Gas with an inlet gas pressure of 17- 20 mbar whilst operating and should therefore not require any further adjustments.




The boiler must not be put into operation with a different type of gas without reference to Broag.

### 2.10.3 Putting the boiler into operation

This section details the procedure for putting the boiler into operation. There are 7 stages to the procedure:



1. Isolating the power supply and opening the front cover;
2. Checking the connections and making the boiler operational;
3. Switching the boiler on and setting the controls;
4. Checking/setting the gas/air ratio at full load;
5. Checking/setting the gas/air ratio at low load;
6. Making the boiler ready for use;
7. Instructing the user.

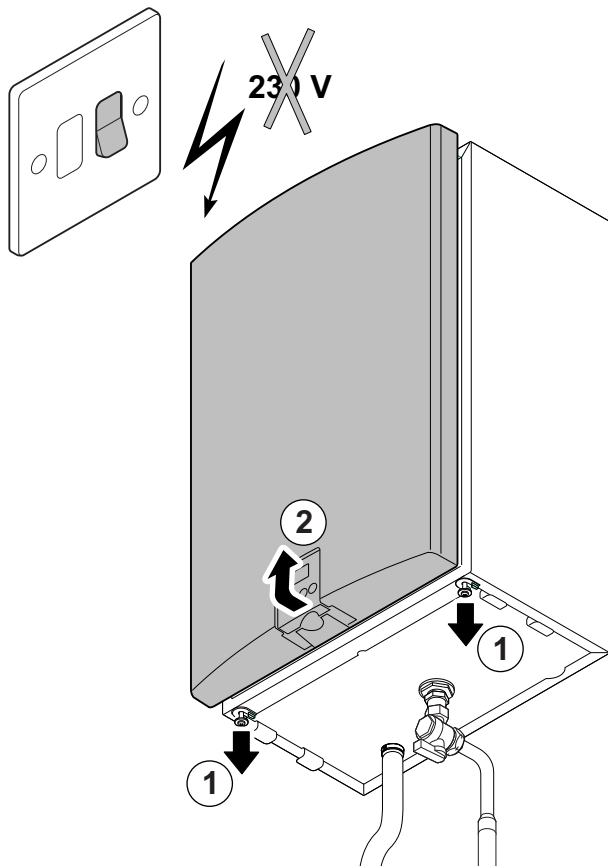

59970LTGBW7H036


## 1. Isolating the power supply and opening the front cover

- Switch off the boiler at the fused spur and remove the fuse;
- Remove the front panel - release the two screws at the bottom of the front panel, pull the bottom of the panel towards you from the centre, making sure that the plastic catch is released from the central display.

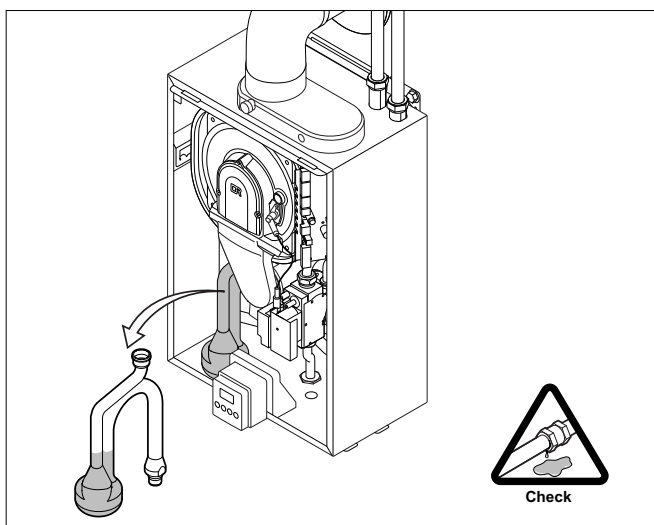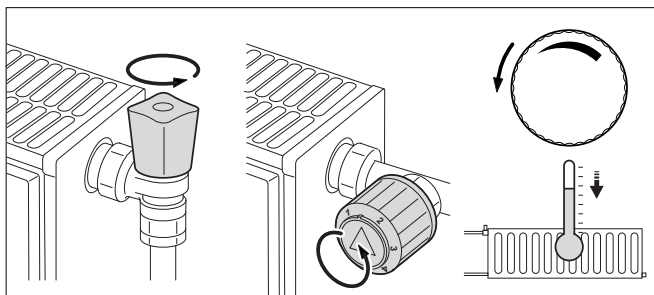

59970LTGBW7H014

## 2. Checking the connections and making the boiler operational


 Open the valves on all the radiators connected to the central heating system before filling the system with water.

- Open the valves on all the radiators connected to the central heating system;
- Fill the system with water, making sure that the feed and expansion tank is full;
- Vent the system;
- Check the condensate siphon. This should be filled with clean water if necessary.





- Avoid water getting into the boiler.

- Check the system pump (spin the shaft to check that the impellor can move freely);
- Check that all boiler connections are watertight;

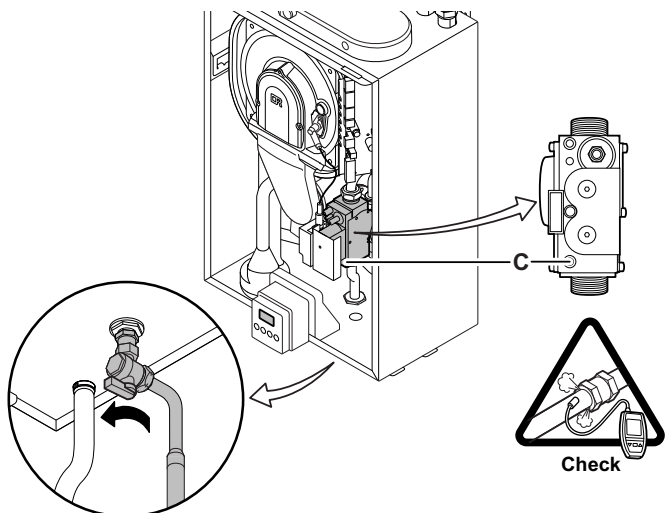

59970LTGBW7H037

 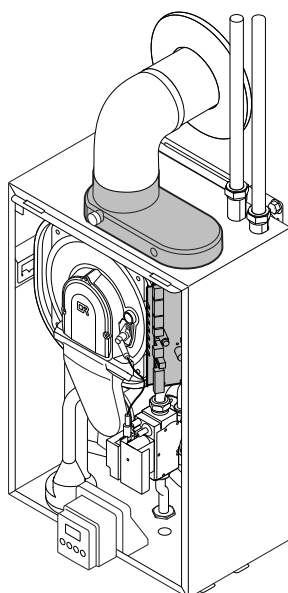


59970LTGBW7H015

- Open the boiler gas valve and check the static pressure to the boiler at the measurement point (C) on the gas block.




- The boiler has been factory tested for natural gas at 20 mbar.
- The minimum gas inlet pressure is 17 mbar for natural gas
- The minimum gas inlet pressure is 37 mbar for propane.
- Check that the gas supply to the boiler is gas tight (in compliance with the current regulations, see *Chapter 7* the maximum test pressure at the gas pipe inlet, with the boiler gas valve open, is 60 mbar.
- Vent the gas pipe by unscrewing the measurement point (C) on the gas block (tighten it again as soon as the pipe is fully vented).
- Check that the gas connections in the boiler are sealed.
- Check that all electrical connections, including the earth connection, have been made correctly.
- Check the electrical connections to the thermostat and other external controls.
- Check that the flue-gas and air-supply connections are sealed.

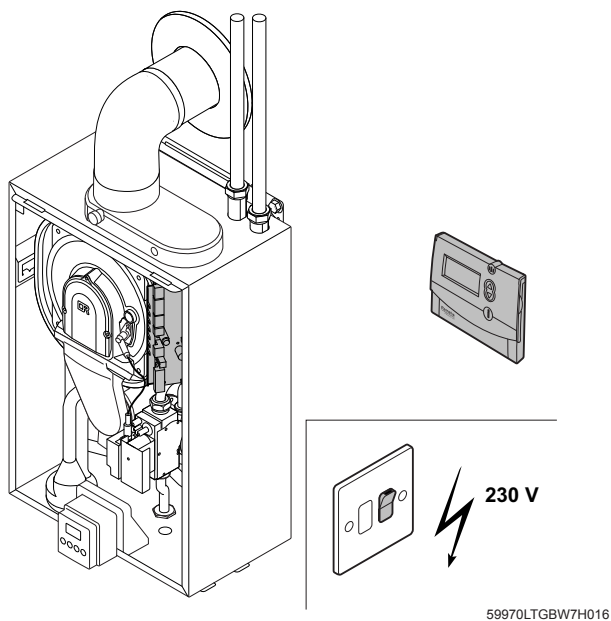

### 3. Switching the boiler on and setting the controls

- Replace the fuse and switch on the 230 V power supply.
- Set the controls to heat demand.
- When 230v power is first applied to the boiler or after the 230v supply has been isolated for maintenance the boiler will not start until it has fully completed its venting cycle – this will take about 3 minutes during which time the display will show **F** **X****X** alternating with **P** **X****X** (where **X****X** displays the software version number). This is not a fault please, wait until the cycle is finished. Provided no error codes appear during this time, the boiler will then start to run if called for by the controls.
- The boiler now starts to run. The operational status is shown in the display. The normal operating status finally shows **0** in the display.

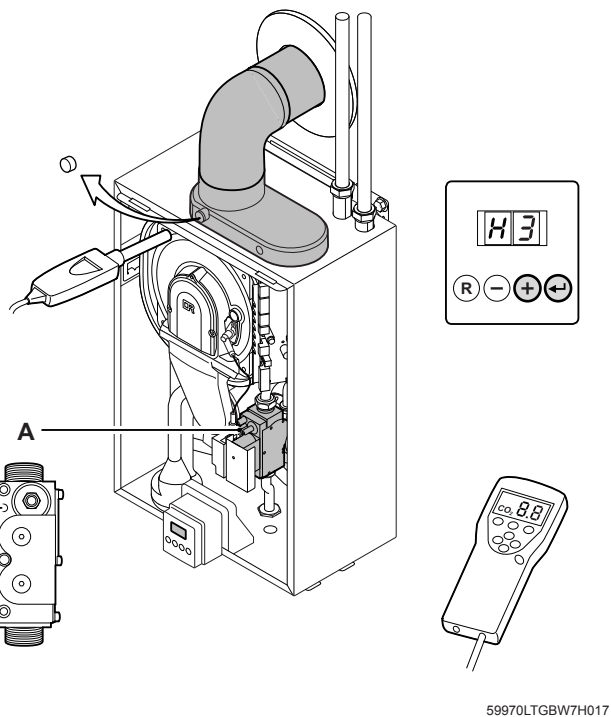

### 4. Checking/setting the gas/air ratio at full load

The Avanta 18v boilers are suitable for both natural gas and propane firing. The boilers are supplied as standard set for natural gas (H), therefore the following procedure must be carried out BEFORE the boilers are fired and commissioned for the first time on propane:

- adjust the fan speed (for procedure see par.2.10.8, for values see table 05 and table 07) and;
- adjust the gas/air ratio (for values see table 05 and table 07).

Setting values O <sub>2</sub> /CO <sub>2</sub> for natural gas			
Boiler type	Fan speed (rpm)	O <sub>2</sub>	CO <sub>2</sub>
	Full load <b>H</b> <b>3</b> *)	%	%
18v	approx. 3500	5.2 ± 0.1	8.8 ± 0.1

table 04 Setting values full load CO<sub>2</sub> and O<sub>2</sub> (front panel not fitted)

Setting values O <sub>2</sub> /CO <sub>2</sub> for LPG (propane)			
Boiler type	Fan speed (rpm)	O <sub>2</sub>	CO <sub>2</sub>
	Full load <b>H</b> <b>3</b> *)	%	%
18v	Approx. 3200	5.1 ± 0.1	10.5 ± 0.1


table 05 Setting values full load CO<sub>2</sub> and O<sub>2</sub> (front panel not fitted)

\*) On forced full load, the 2<sup>nd</sup> digit indicates the operating code

- Unscrew the flue gas sampling cap and connect the flue gas analyser.
- Set boiler to full load:  
Press the **[enter]**- key, keep it pressed and also press the **[+]**-key until **H|3** appears in the display; full load has been set.
- Once the unit has reached the full-load fan speed, measure the O<sub>2</sub>/CO<sub>2</sub>-percentage and compare this to the values in *table 04*.
- If the values are not in accordance with the table then correct the gas /air ratio controls using the adjusting screw A on the gas block.
- If the value is too low turn the screw A anti clockwise this increases the gas rate – if the value is too high turn the screw clockwise which decreases the gas rate
- Check the flame through the sight glass which should be stable with a regular blue distribution



Ensure that the analysing probe has a gas tight seal in the sampling point with the probe end in the centre of the flue duct.

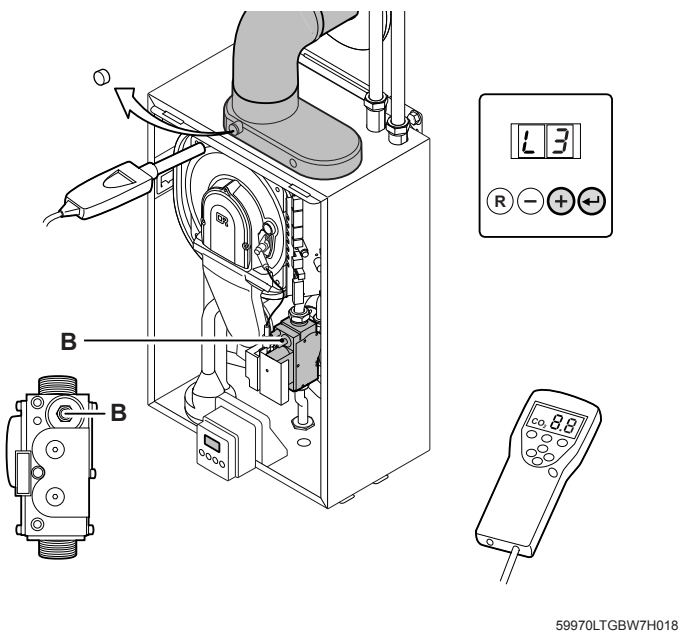

5. Checking/setting the gas/air ratio at part load

Setting values O <sub>2</sub> /CO <sub>2</sub> for natural gas			
Boiler type	Fan speed (rpm)	O <sub>2</sub>	CO <sub>2</sub>
	Part load <b>L 3</b> *)	%	%
18v	Approx. 1300	5,2 ± 0,1	9.0 ± 0,1

table 06 Setting values part load CO<sub>2</sub> and O<sub>2</sub> (front panel not fitted)

Setting values O <sub>2</sub> /CO <sub>2</sub> for LPG (propane)			
Boiler type	Fan speed (rpm)	O <sub>2</sub>	CO <sub>2</sub>
	Part load <b>L 3</b> *)	%	%
18v	Approx. 2000	5.1 ± 0.1	10.5 ± 0.1

table 07 Setting values part load CO<sub>2</sub> and O<sub>2</sub> (front panel not fitted)

\*) On forced part load, the 2<sup>nd</sup> digit indicates the operating code.

- Set boiler to part load:
  - Press the **[enter]**- key until **L3** appears in the display, part load has been set.
  - Once the unit has reached the part load fan speed, measure the  $O_2/CO_2$ -percentage and compare this to the value in *table 06*.
  - If the values are not in accordance with the table then correct the gas /air ratio controls using the adjusting screw B on the gas block.
  - If the value is too low turn the screw B clockwise this increases the gas rate – if the value is too high turn the screw B anti clockwise which decreases the gas rate
- Check the flame through the sight glass which should be stable with a regular orange distribution. Once the unit has been set to part load, the 'test at full load' should be repeated.



Ensure that the analysing probe has a gas tight seal in the sampling point with the probe end in the centre of the flue duct.

- Repeat the 'test at full load' and 'test at part load' as often as necessary until the correct values are achieved without further adjustments

## 6. Preparing the boiler for use


- Remove the analysing probe and replace the cap on the flue gas sampling point.
- Refit the front panel and secure with the two screws again.
- Press **[reset]**-key for the boiler to return to the normal operating mode.



Following a manual override the boiler will return to normal operating mode if no keys are pressed for 15 minutes.

- Run the boiler on heating until the system reaches approx 70°C
- Switch the boiler off (using the controls i.e. thermostat or time clock)
- Complete the type plate in the boiler by adding the gas type – Natural or LPG
- Fill in the commissioning sheet and log book data.



The boiler is now ready for operation.

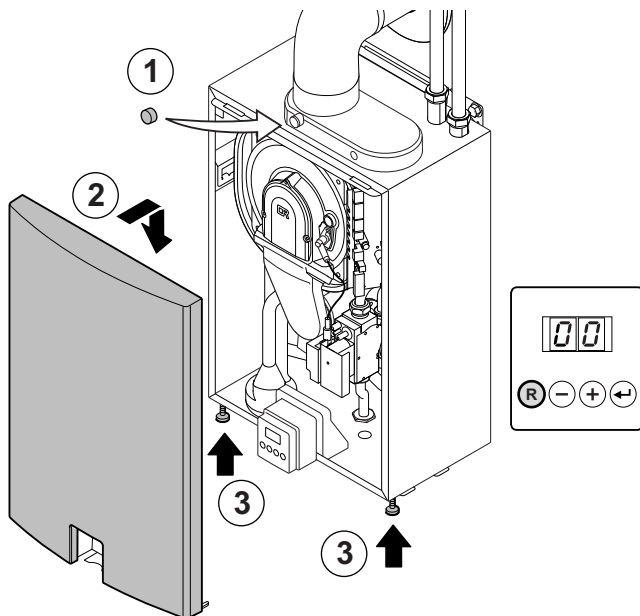

59970LTGBW7H019



The Remeha Avanta 18v is delivered pre-tested and operating parameters set up with standard factory settings to suit the most common systems. These settings can be adjusted to suit specific site conditions but must not be changed without reference to Broag or one of our approved contractors

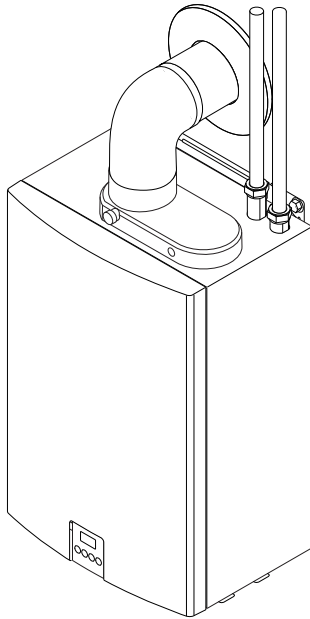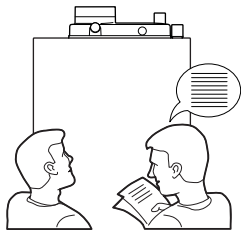

59970LTGBW7H020

## 7. Instructing the user

- It is the responsibility of the installer as part of the commissioning procedure to instruct the user in the day to day operation of the boiler and controls fitted to the system and to hand over the completed Boiler Log Book and appropriate documentation.

### 2.10.4 Normal start-up procedure

- Switch on the boiler at the fused spur unit and ensure that the time control is in the on position and any other controls (i.e. room thermostat etc) calling for heat
- The boiler will begin its start sequence.

The following sequence will appear in the display:

- A display test will briefly appear showing all segments of the display.

$\boxed{F}\boxed{\phantom{0}}\boxed{XX}$  software version;

$\boxed{P}\boxed{\phantom{0}}\boxed{XX}$  parameter version;

- A venting cycle of 3 minutes now follows, the version numbers will be displayed alternately;
- Next, the following will appear in the display:  
 $\boxed{\phantom{0}}\boxed{0}$  ; stand-by mode

### 2.10.5 Error during the start-up procedure


- If the display is blank (should show red dots or letters), check:
  - 230 V main supply available to switch spur
  - switch spur fuse
  - cable and connections between the switched spur and the boiler control unit
  - fuse on the boiler control unit (F2 = 2AT, 230V)
- An error code appearing in the display can be recognised as follows:
  - $\boxed{E}\boxed{\phantom{0}}\boxed{10}$ , (the display alternately shows an  $\boxed{E}$  and a number e.g.  $\boxed{10}$ ). The meaning of this error codes can be found in the error table, see *Chapter 4*.
  - Resolve the error first if possible.
  - Press the **[reset]**- key and hold for at least 1 second to restart the boiler.





After any error **E1**, **E2**, **E7**, **E10** or **E13**; the 3 minute venting cycle will run first before starting the boiler.

- Checking **CH** function;
  - Ensure the time control is in the CH on position
  - Set the room thermostat on a high demanding temperature and, the display shows
    - 1**; pre-purge stage
    - 2**; Ignition stage
    - 3**; operating in CH mode.
  - Set the room thermostat back to a lower temperature (no more heat demand), the display shows;
    - 5**; waiting-time; 3 to 10 minutes (only when flow temperature has already been reached and heating demand is still existing)
    - 1**; pre-purge stage
    - 6**; pump run on after CH or DHW is satisfied
    - 0**; stand-by mode

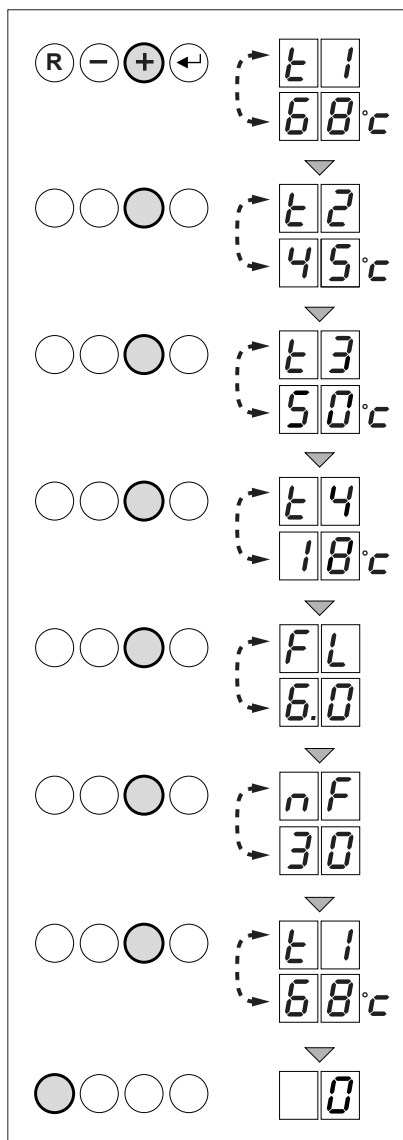

## 2.10.6 Read out settings

The following settings can be read out in the 'user menu':

- **E1** = flow temperature [°C];
  - **E2** = return temperature [°C];
  - **E3** = calorifier temperature [°C];
  - **E4** = outside temperature [°C];
  - **FL** = ionisation current [µA];
  - **nF** = fan speed [rpm];
- Press the **[+]** key, until **E1** appears and, for example, **68** (68°C), the current flow temperature;
  - Press the **[+]** key again until **E2** appears and, for example, **45** (45°C), the current return temperature;
  - Press **[+]** key again until **FL** appears and e.g. **6.0** (6µA), the present ionisation current;
  - Press **[+]** key again until **nF** appears and e.g. **30** (3000 rpm), the present fan speed;
  - Press **[+]** key again and the read-out cycle will start again with **E1**, etc.;
  - Press **[reset]** key to return to the display with the current operating status.

## 2.10.7 Adjust the boiler according to the system

The operating parameters of the Remeha Avanta 18v have been factory set to suit most systems. However it is possible to adjust some of the parameters to enable the Remeha Avanta 18v to operate more efficiently to match specific system designs and site conditions. These parameters are split into two specific sections

1. User level – Parameters **P 1** to **P 6**; can be changed by the user to suit CH and DHW comfort conditions
2. Service level – **P 17** to **d F**; must only be changed by Broag approved Engineer after consultation with the system designer.



How to change the parameters at user level can be read on the “Short reference card” provided and therefore will not be detailed in this Installation and Service manual.

## 2.10.8 Changing the parameters at service level (with access code)

To avoid non authorised adjustments, some parameter settings can only be changed once the special access code **12** has been entered. This code may only be used by qualified installers. The following settings can be changed at user and service level:

Codes in display		Description	Setting range and notes where applicable	Factory settings 18v
Can also be changed by users	<b>P 1</b>	T <sub>set</sub> flow	20 - 85°C	75°C
	<b>P 2</b>	T <sub>set</sub> DHW	40 - 65°C	55°C
	<b>P 3</b>	Boiler regulation	0 = CH <sub>off</sub> and DHW <sub>off</sub> 1 = CH <sub>on</sub> and DHW <sub>on</sub> 2 = CH <sub>on</sub> and DHW <sub>off</sub> 3 = CH <sub>off</sub> and DHW <sub>on</sub>	2
	<b>P 4</b>	Eco or comfort setting	0 = comfort setting 1 = eco mode* 2 = regulated by controller	2
	<b>P 5</b>	Anticipated current	0 = no anticipated current for thermostat on/off 1 = anticipated current for thermostat on/off	0
	<b>P 6</b>	Display off automatically	0 = display stays off 1 = display stays on 2 = display light switches off automatically after 3 minutes	2

 

To be changed by installer only	P 17	Maximum fan speed CH (natural gas)	10 – 70 x 100 rpm	35 <sup>1</sup>
	P 18	Maximum fan speed CH (propane)	10 – 70 x 100 rpm	33 <sup>1</sup>
	P 19	Maximum fan speed DHW (natural gas)	<b>Do not change</b>	35 <sup>1</sup>
	P 20	Maximum fan speed DHW (propane)	<b>Do not change</b>	33 <sup>1</sup>
	P 21	Minimum fan speed (natural gas)	<b>Do not change</b>	13
	P 22	Minimum fan speed (propane)	<b>Do not change</b>	20
	P 23	Starting fan speed (natural gas)	<b>Do not change</b>	25
	P 24	Starting fan speed (propane)	<b>Do not change</b>	25
	P 25	Pump setting CH	<b>Do not change</b>	0
	P 26	Pump running time after CH	1 - 99 minutes	2
	P 27	Connection with Heat Recovery Unit (HRU)	0 = no connection with HRU 1 = connection with HRU	0
	P 28	State remote alarm (X7 terminal)	0 = off (connectors 1 and 2 closed) 1 = alarm signal (connectors 1 and 2 closed) 2 = run indication (connectors 1 and 3 closed) 3 = ext. gas valve (connectors 1 and 3 closed)	0
	P 29	Legionella protection	0 = off 1 = on 2 = automatic (after putting boiler into operation, it will run for DHW operation 65°C once a week)	0
	P 30	DHW cut-in temperature	2 - 15°C	5**
	P 31	Heat curve set point flow temperature	0 - 60 °C	20
	P 32	Heat curve set point outside temperature (min)	0 - 30 °C	20
	P 33	Heat curve set point outside temperature (max)	-40 - 0 °C	- 15***
	P 34	Boiler type	<b>Do not change</b>	3
	P 35	Set point augmentation calorifier	0 - 20 °C	15**
	P 40 (P 41 is shown later)	Restore factory settings	On identification plate  setting X is shown. Change parameter into X will restore the factory settings, see par. 2.10.10	X
			On identification plate  setting Y is shown. Change parameter into Y will restore the factory settings, see par. 2.10.10	Y

table 08 Settings at service level

<sup>1</sup> Do not exceed this value


\* The boiler in combination with an external calorifier will not warm up the calorifier in the Eco-mode.

\*\* Only in combination with a calorifier with a DHW sensor

\*\*\* "Minus" character is not shown in display



Changing the factory settings could result in the boiler not working properly.

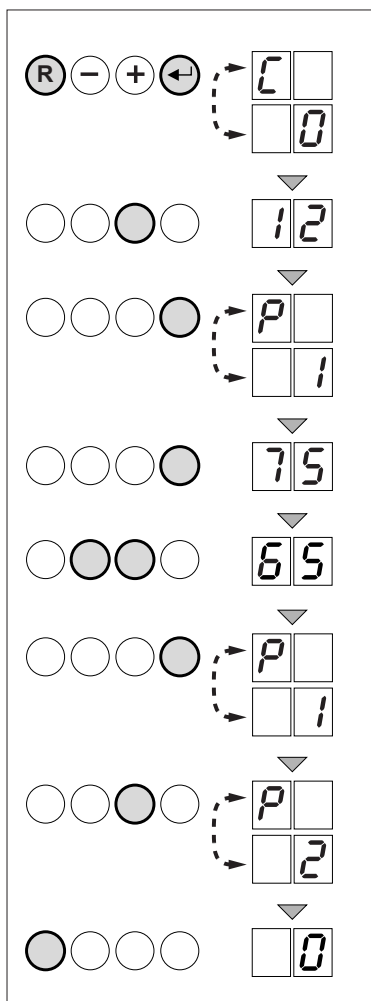


LT.AL.W7H.000.047

The parameters can be changed from the stand-by status as follows:

- Press the **[enter]**-key and briefly the **[reset]**- key until codes **[C]** and **[0]** appear alternately in the display.
- Press the **[+]**-key until access code **[12]** is displayed.
- Press the **[enter]**-key until **[P]** appears (codes **[P]** and **[1]** are displayed alternately);
- This parameter can now be changed as follows;
- Press the **[enter]**-key; the set value for the maximum flow temperature now appears e.g.; **[75]** (75°C).
- Press the **[+]** or **[-]**-key to change this value, for example to **[65]** (65°C).
- Press **[enter]**-key to confirm the value; codes **[P]** and **[1]** are displayed alternately.
- Press the **[+]**-key to change the next parameter, etc.
- Press **[reset]**-key to return to the operating mode.



The boiler will automatically return to the normal operating mode if no keys are pressed for 10 minutes.

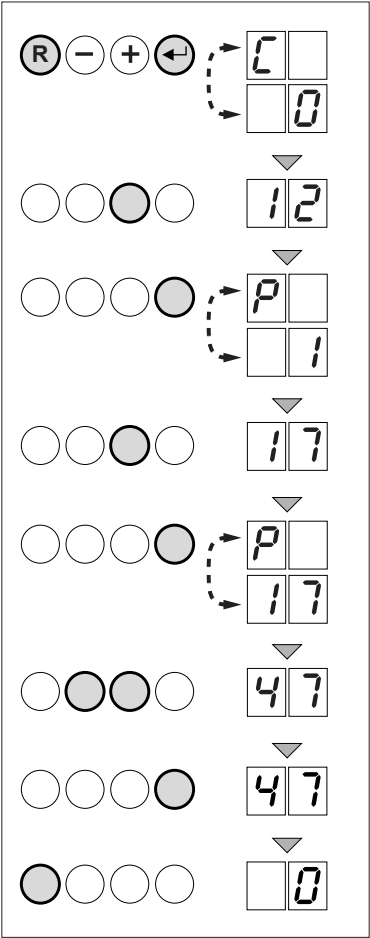


LT.AL.W7H.000.048

2.10.9
Changing the maximum output (Hi) for CH operation


The maximum output for CH operation can be changed with parameter **P 17** (maximum fan speed) and is set standard to the maximum fan speed of 3500 rpm. See the speed-input ratio figures.

This parameter can be changed from the stand-by status as follows:

- Press the **[enter]**-key and briefly the **[reset]**- key until codes **C** and **0** appear alternately in the display.
- Press the **[+]**-key until access code **12** is displayed.
- Press the **[enter]**-key until **P 1** appears (codes **P** and **1** are displayed alternately);
- Press the **[+]**-key to go to parameter **17**.
- Press the **[enter]**-key until **P 17** appears (codes **P** and **17** are displayed alternately);
- Press the **[+]** or **[-]**-key to change this value for Avanta 18v, for example to **35** (3500 rpm corresponds with 18kW).
- Press **[enter]**-key to confirm the value.
- Press **[reset]**-key to return to the operating mode.

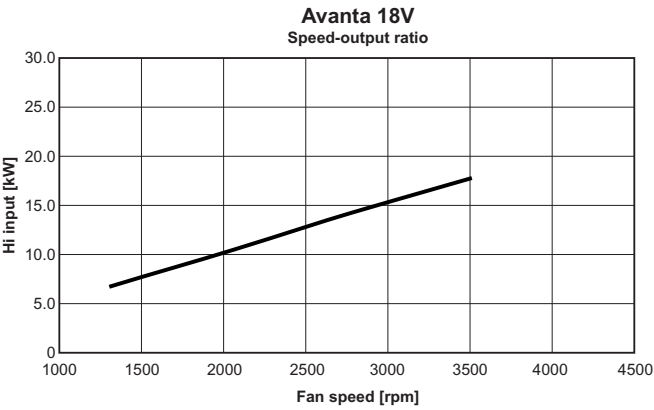

59970LTGBW7H021

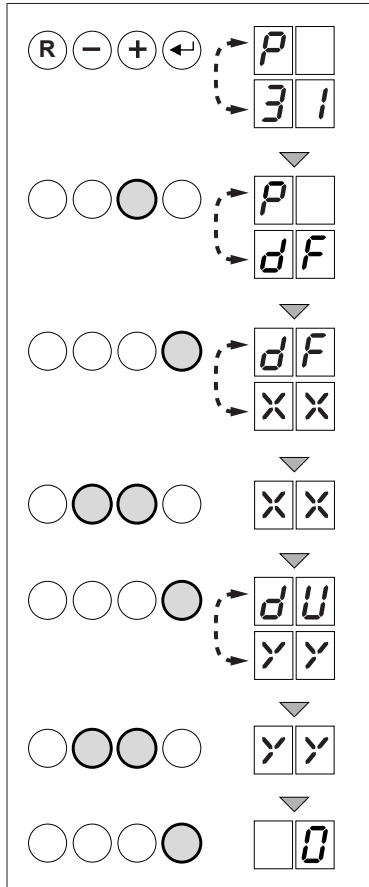

LT.AL.W7H.000.052

## 2.10.10 Restore factory settings

The factory settings can be restored in the service level as follows:

1. After parameter  $P 3 1$  has shown, press the  $[+]$ -key;  $d F$  and  $X X$  appear alternately;
2. Press  $\leftarrow$ -key;  $X X$  appears;
3. Read boiler identification plate for value of  $d F$ ; press  $[+]$  or  $[-]$  key to reach this value;
4. Press  $\leftarrow$ -key to confirm;  $d U$  and  $Y Y$  appear alternately;
5. Read boiler identification plate for value of  $d U$ ; press  $[+]$  or  $[-]$  key to reach this value;
6. Press  $\leftarrow$ -key to confirm; boiler restarts with original factory settings.

## 2.11 Putting the boiler out of operation

The boiler must be switched off and allowed to cool down before any maintenance or repairs are carried out. If the central heating system is not going to be used for a long time (during the holidays, for instance, or frost-free periods) it is advisable to put the boiler out of operation.

### 2.11.1 Boiler with frost protection, during longer periods of non-use

- Set the room thermostat or other controls to a low temperature, e.g. 10°C,
- Switch setting  $P 4$  to  $1$  (Eco mode), this will switch off the heat retention function.

Now the boiler will only start working to protect itself against freezing.

With external frost protection, the boiler can also prevent the central heating system from freezing.

### 2.11.2 Boiler without frost protection, during longer periods of non-use

- Turn time clock off and allow system to cool down then isolate mains power supply at the fused spur unit
- Isolate the gas supply at the boiler valve



Drain the boiler and central heating system if you will not be using the home for a long period and there is a chance of night frost.

### 3 INSPECTION AND MAINTENANCE

The Remeha Avanta 18v is practically maintenance free but should be inspected annually.




If during the annual inspection the flue gas analysis indicates that the values are outside the figures given in *table 09*, maintenance work should be carried out as described in *par.3.2*. Also carry out maintenance if the ionisation read-out value is lower than 3 or higher than 9 $\mu$ A, or when the flame core is not satisfying.

Only Remeha spare parts/materials should be used. All service and maintenance must be carried out by a qualified Engineer with the relevant training and certification (i.e. CORGI - ACS - IEE registrations etc).


#### 3.1 Inspection

The annual inspection of the Remeha Avanta 18v can be limited to the following checks:

- check the flue pipes and air supply pipes for leaks, see par. 3.1.1.;
- check and clean (if necessary) the condensate siphon, see par.3.1.2.;
- check the ignition electrode and ionisation, see par. 3.1.3;
- check the combustion and flame colour, see par. 3.1.4;
- fill in the boiler log book.

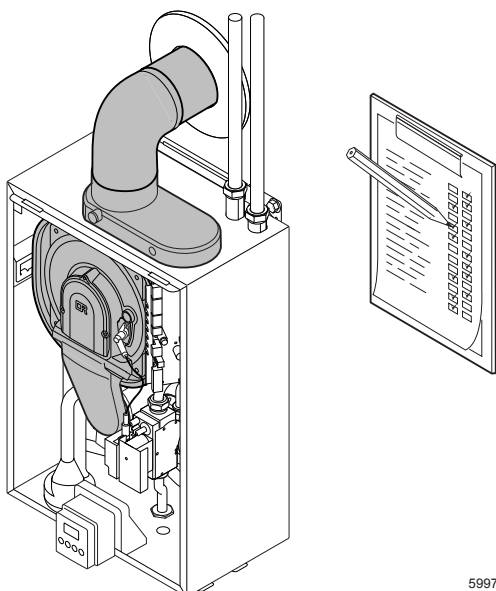


59970LTGBW7H022

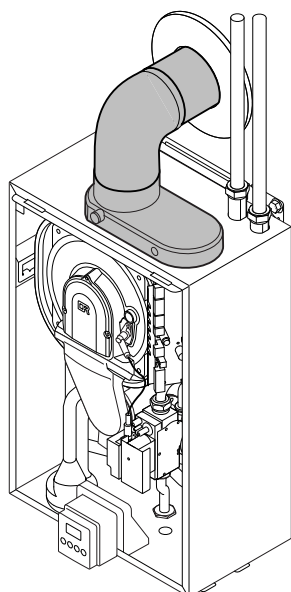

59970LTGBW7H023

##### 3.1.1 Checking the flue pipes and air supply pipes for leaks


- Check that the flue and air-supply connections and pipes are sealed and the terminal exit is clear.

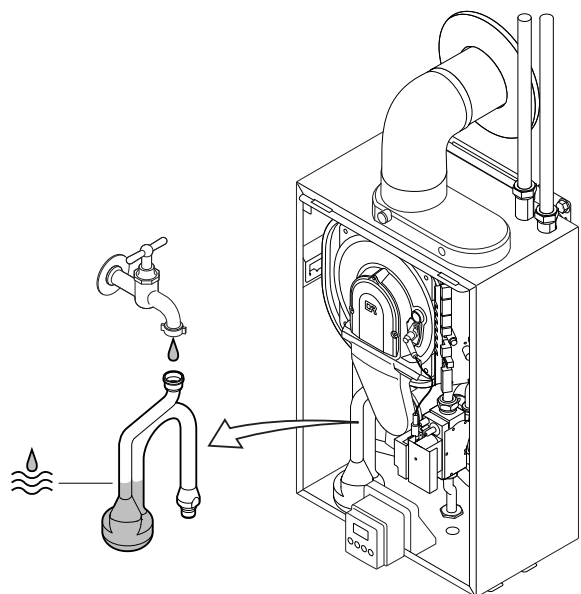

59970LTGBW7H0234

## 3.1.2 Checking the condensate siphon

- Check the condensate siphon. Remove any dirt residues and refill with clean water to the mark.

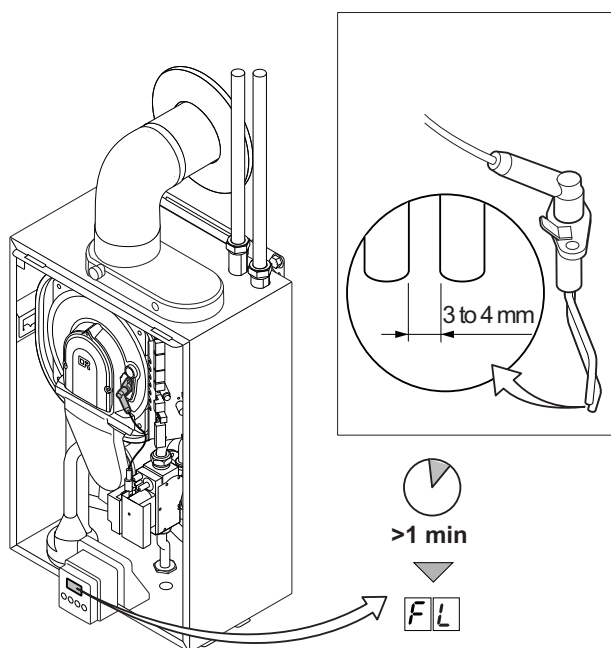

59970LTGBW7H026

## 3.1.3 Checking the ignition electrode


- Check the ionisation /ignition electrode for:
  - deposits (remove any white deposits with abrasive cloth);
  - the adjustment of the ignition electrode (between 3 and 4 mm);
  - the quality of the gasket and condition of the porcelain (this should not be cracked);
- Check the ionisation current after 1 minute on the display code **FL**, see par. 2.10.6.

If the read-out value is lower than 3 or higher than 9µA, check cable and connections are sound if OK replace the ignition electrode.



The ignition cap is fixed on the ignition electrode and therefore cannot be removed.



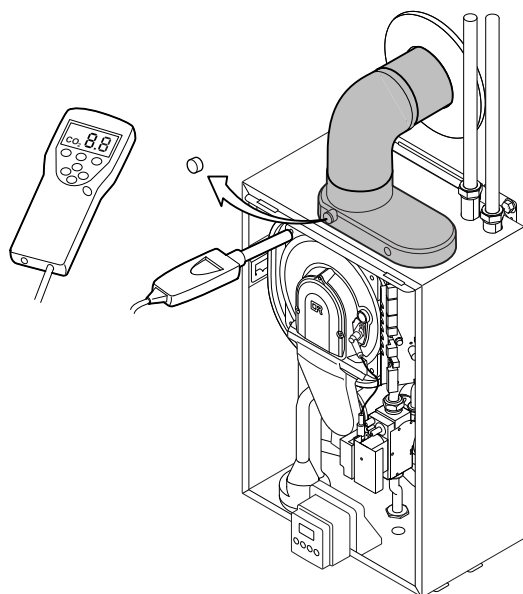

59970LTGBW7H025

### 3.1.4 Checking the combustion

- Measure the  $O_2/CO_2$  percentage and the flue gas temperature at the flue gas sample point.

Do this as follows:

- heat the water temperature in the boiler to approx. 70°C;
- unscrew the top of the flue gas point of measurement;
- measure the  $O_2/CO_2$  percentage and compare this to the check values in *table 09*.



Ensure that the analysing probe has a gas tight seal in the sampling point with the probe end in the centre of the flue duct.

Checking values $O_2/CO_2$ for natural gas H / L				
Boilertype	Fan speed (rpm)		$O_2$	$CO_2$
	Full load <i>H</i> <i>3</i>	Part load <i>L</i> <i>3</i>	%	%
18v	ca. 3500	ca. 1300	5,2 ± 0.2	8.8 ± 0.3

table 09 checking values  $O_2/CO_2$  (front panel not fitted)

Checking values $O_2/CO_2$ for LPG (propane) H / L				
Boilertype	Fan speed (rpm)		$O_2$	$CO_2$
	Full load <i>H</i> <i>3</i>	Part load <i>L</i> <i>3</i>	%	%
18v	ca. 3200	ca. 2000	5.1 ± 0.2	10.5 ± 0.3

table 10 Checking values  $O_2/CO_2$  (front panel not fitted)



The  $O_2/CO_2$  - values in *table 09* are **checking** values. For **setting** values see *table 04*, *table 05*, *table 06* and *table 07*

If the flue gas analysis readings are within the values in *table 09* the boiler combustion is OK. However, if the readings are outside the given values, then adjust the gas air ratio control to the given values, see *table 04* and *table 06* in *par.2.10.3*.

If the adjustments cannot achieve the mentioned values, the boiler will require a full service please refer to the maintenance instructions in *par. 3.2*.

- Check the flame via the inspection glass; in full load the flame should be stable with an even blue colour and in part load should be stable with an even orange colour.

## 3.2 Maintenance


To conduct maintenance:



Ensure that a service gasket set and new ignition/ionisation electrode is available before carrying out this procedure.




- Isolate power supply at the fused spur before carrying out any work on the boiler.

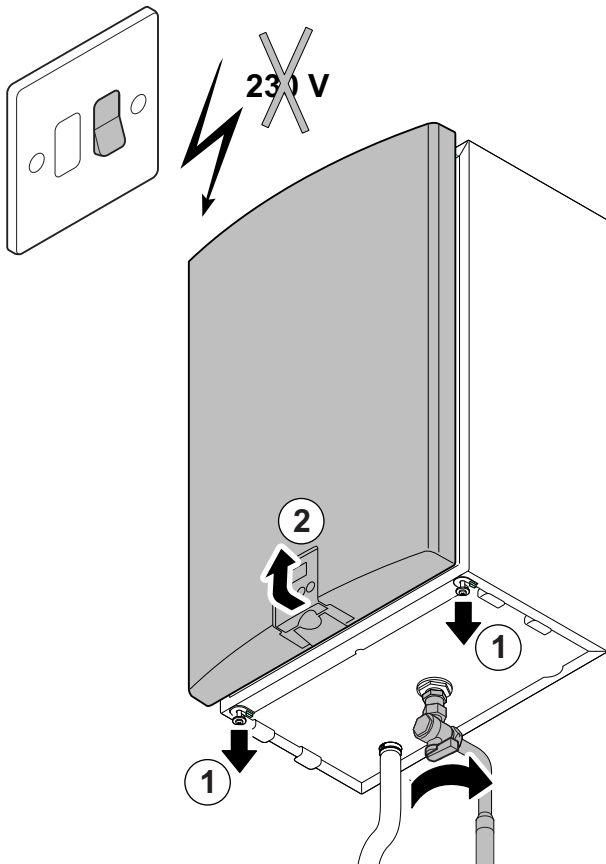

59970LTGBW7H038

### 1. Open the boiler


- Isolate the 230 V supply at the switched spur and remove the fuse
- Isolate the gas supply at the boiler gas valve
- Remove the front panel - release the two screws at the bottom of the front panel, pull the bottom of the panel towards you from the centre, making sure that the plastic catch is released from the central display.

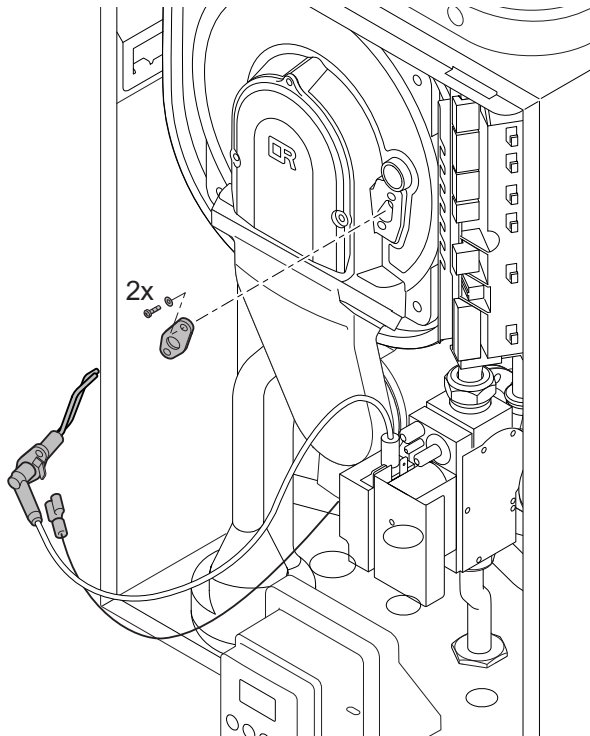

59970LTGBW7H027

## 2. Maintenance of the ignition/ionisation electrode


- Disconnect the earth wire from the electrode mounting plate.
- Release the two screws on the electrode and remove the assembly.
- Inspect, clean re-gap or replace the electrode, *see par* 3.1.3.
- Do not over tighten the screws when replacing.

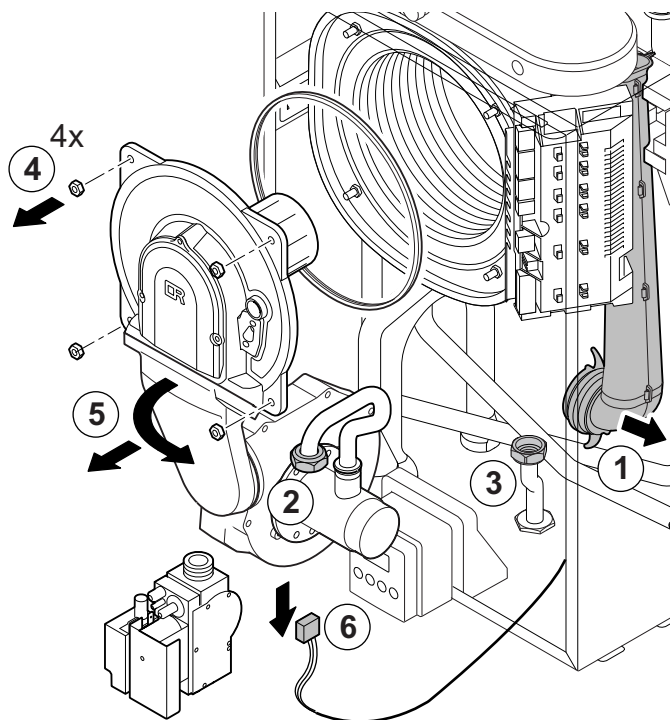

59970LTGBW7H028

## 3. Dismantling the front plate of the heat exchanger


- Release the ignition transformer mounting plate and remove it completely.
- Disconnect the electrical connection on the gas block.
- Release the union nut from the gas pipe on the inlet to the gas block.
- Disconnect the electrical plug on the back of the fan, so it becomes accessible.
- Release the four nuts on the heat exchanger front plate
- Carefully pull the front plate assembly c/w fan, gas block, venturi pipe and burner unit away from the heat exchanger by approx. 10 cm.
- Remove the front plate assembly completely.

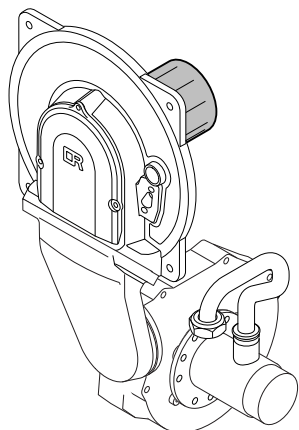

59970LTGBW7H029

## 4. Maintenance to the burner


- Carefully clean the burner with pressured air (do not keep the nozzle to close to the surface).
- Visual inspection of the burner for any damages or cracks on the surface. If you see any damages, than replace the burner.

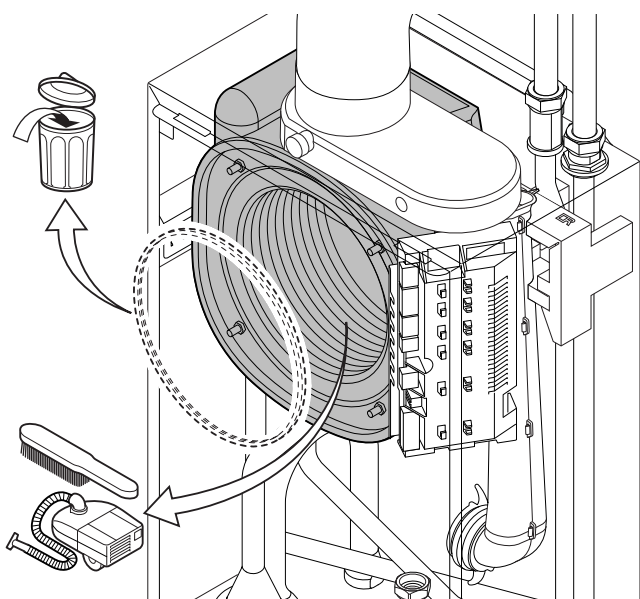

59970LTGBW7H030

## 5. Maintenance to the heat exchanger (CH)

- Check the seal between the front plate and the heat exchanger and the insulation section. Replace sealing.
- Handle the fragile front-plate insulation and the back-plate insulation of the heat exchanger with great care and do not let them get wet.
- Visual inspection of the heat exchanger for scale or dirt. If you see obvious deposits, than clean the heat exchanger carefully. Carefully remove any loose dirt with a vacuum cleaner. Then brush the coils of the heat exchanger (if required a cleaning brush is available as an accessory) and remove the loosened particles with a vacuum cleaner.

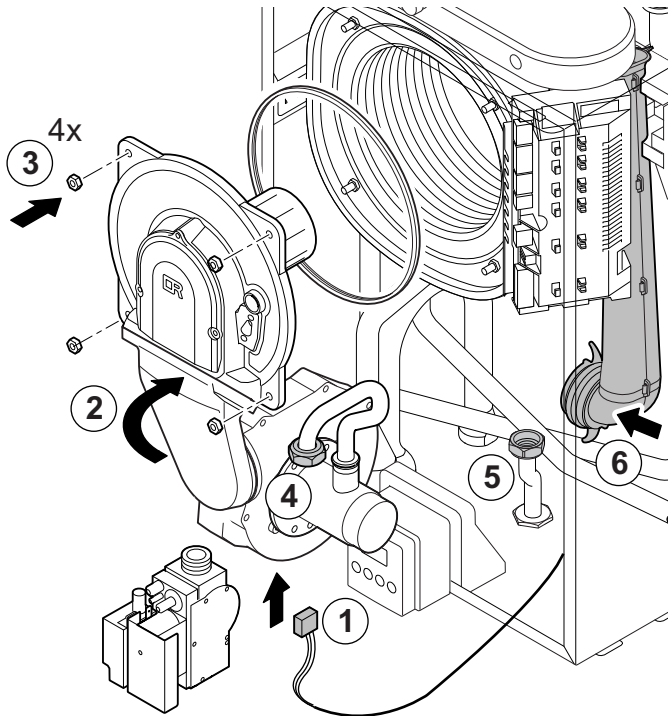

## 6. Re-Assembling the boiler and checking the combustion

- Re-assemble all the components in reverse order.




- Remember to connect the fan plug again before it is completely home on the front of the heat exchanger.
- Check that the packing between the front plate and the heat exchanger has been fitted correctly.

- Switch the boiler back on.
- Check the CO<sub>2</sub>/O<sub>2</sub>-percentage, 2.10.3, point 4.
- Check the ionisation current by reading the display, see par.3.1.3
- Check the connections on the gas block on gas-leaking.



Fill in the Boiler Log Book after conducting any maintenance.

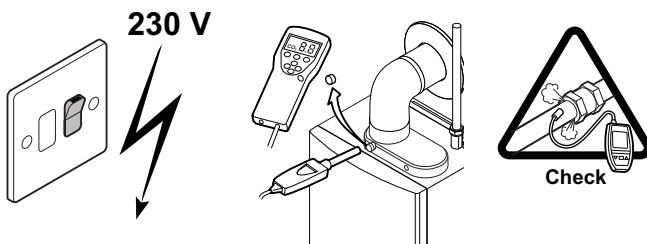




59970LTGBW7H031

## 4 ERRORS
 
### 4.1 General

The Remeha Avanta 18v has an advanced control unit. The heart of this control unit is a microprocessor, the **abc**®-control which both controls and protects the boiler. If an error is detected anywhere in the boiler, it will lock out and an error code will appear in the display.

### 4.2 Error codes

The Remeha Avanta 18v displays the error codes as follows:  (the display alternately shows an  and a number e.g. ) The meaning of the various error codes can be found in the error table, see *table 11*.



#### How to deal with errors:

- Make a note of the displayed error code.



The error code is important for the correct and swift detection of the nature of the error and for possible support from our technical help line 0118 978 3434.

- Press the **'reset'** key for 3 seconds. If the error code continues to appear, look for the cause in the error table below and resolve it.

Error code	Description	Possible cause	Check / solution
	Flow or return sensor fault.	Short circuit in the flow, return or boiler temperature sensor.	Check the wiring and the connections of the sensors visually: are the plugs all correctly in position? With a multimeter: measure the resistance in the wiring and connection.
		Defective or not (properly) connected flow, return or boiler temperature sensor.	Check that the sensors are working; take the sensors out* and measure the resistance with a multimeter at room temperature (20 - 25°C); the sensor is working properly if the resistance is between 12 and 15 kΩ
	Flow temperature is higher than the set maximum temperature	Insufficient water.	Check the water level and check for leaks.
		No through flow.	Check that the pump is working; turn the spindle with a screwdriver, if that works but the pump still does not respond, check the wiring; if that is in order the pump is faulty.
		Too much air in the system.	Vent the system.
		Deviation in the flow or return temperature sensor.	Check that the sensors are working; take the sensors out* and measure the resistance with a multimeter at room temperature (20 - 25°C); the sensor is working properly if the resistance is between 12 and 15 kΩ


E2	Return temperature is higher than the flow temperature	Insufficient water.	Check the water level and check for leaks.
		No through flow.	Check that the pump is working; turn the spindle with a screwdriver, if that works but the pump still does not respond, check the wiring; that is in order the pump is faulty.
		Too much air in the system.	Vent the system.
		Sensors not wired correctly	Check the wiring between sensors and control unit.
		Pump operating in wrong direction	Check wiring from and to control unit.
		Flow and return connections crossed	flow and return connections
		Deviation in the flow or return temperature sensor.	Check that the sensors are working; take the sensors out* and measure the resistance with a multimeter at room temperature (20 - 25°C); the sensor is working properly if the resistance is between 12 and 15 kΩ
E3	Control unit or earth fault	Mains supply not correctly earthed. Control unit faulty.	Check that the power supply from the switch spur is properly earthed, if that is the case the control unit is faulty.
E4	More than 5 start attempts without any flame formation.	No ignition spark.	Check: <ul style="list-style-type: none"> <li>the connection between the ignition wire and the ignition trafo;</li> <li>the ignition wire and electrode for 'dielectric breakdown';</li> <li>the inter-electrode distance, this should be 3-4 mm; that weather the ignition electrode is properly earthed.</li> </ul>
		A spark but no flame.	Check that: <ul style="list-style-type: none"> <li>the gas tap is open;</li> <li>the gas pre-pressure is sufficient;</li> <li>the gas pipe is de-aerated;</li> <li>the gas valve is energised during ignition and opens;</li> <li>the electrode is correctly fitted and clean;</li> <li>the CO<sub>2</sub> adjustment at low and full load;</li> <li>there is no obstruction / fitting fault in the gas pipe;</li> <li>there is no obstruction in the air supply or flue (e.g. a blocked siphon); there is no recirculation of flue gasses (either inside or outside the boiler).</li> </ul>
		There is a flame but no, or insufficient ionisation (lower than 3 or higher than 9 µA)	Check: <ul style="list-style-type: none"> <li>the flame, is the heart of the flame visible and the flame stable?</li> <li>the CO<sub>2</sub> adjustment at low and full load;</li> <li>that the ignition electrode is correctly earthed;</li> <li>visual check of the ignition/ionisation electrode: look for white oxide film (remove with sandpaper or a screwdriver); look at the shape (are the pins still the original shape and is the distance between the two ends of the pins between 3 and 4 mm).</li> </ul>
E5	No ionisation or ionisation failure more than 5 times during one heat demand.	CO <sub>2</sub> wrongly adjusted	Check: <ul style="list-style-type: none"> <li>CO<sub>2</sub> adjustment on the gas block;</li> <li>Ignition/ionisation pin;</li> <li>Flue/air-supply connections;</li> <li>Gas flow at full load;</li> <li>If there is no recirculation of flue gasses (either inside or outside the boiler).</li> </ul>
E6	Unwanted flame formation	Ignition Unit	Faulty ignition unit, replace ignition unit.
		Control unit	Faulty control unit, replace control unit.
E7	No water in the boiler or the pump is not working	Insufficient water.	Check the water level and check for leaks.
		No through flow.	Check that the pump is working; turn the spindle with a screwdriver, if that works but the pump still does not respond, check the wiring; that is in order the pump is faulty.
		Too much air in the system.	Vent the system.
		Pump operating in wrong direction.	Check wiring from and to control unit.
		Pump not running	Check wiring, connections and pump

E 8	Fan fault	Fan is not working	Check: • Fan function; • Fan wiring and connection.
		Fan does not stop	Check: • Fan function; • Fan wiring and connection; • Excess chimney draught.
E 1 0	No through flow during venting cycle	Insufficient water.	Check the water level and check for leaks.
		Heat exchanger faulty.	Check wiring between heat exchanger fuse.
		Too much air in the system.	Vent the system.
		No through flow	• Check that the pump is working; turn the spindle with a screwdriver, if that works but the pump still does not respond, check the wiring; if that is in order the pump is faulty. • Open the radiator valves.
E 1 1	Air box temperature to high	Air leakage from heat exchanger to air box	Check: • The sealing of the viewing glass; • Whether front plate of heat exchanger is properly tightened • Front plate sealing; • Whether ignition electrode is properly fitted
E 1 3	Heat-exchanger fuse protection has responded; replace the heat exchanger after finding and solving the cause.	Heat exchanger faulty.	Check wiring between heat exchanger fuse.
		Insufficient water.	Check the water level and check for leaks.
		No through flow.	Check that the pump is working; turn the spindle with a screwdriver, if that works but the pump still does not respond, check the wiring; if that is in order the pump is faulty.
E 4 3	Parameter limits	Automation settings	Replace $\square \square \square$ / $\square \square \square$ settings, see par. 2.10.10 If this error code still returns after resetting; please contact Broag.
E 4 4	Parameter check	Automation settings	Replace $\square \square \square$ / $\square \square \square$ settings, see par. 2.10.10 If this error code still returns after resetting; please contact Broag.
E	Default parameters	Automation settings	Replace boiler control unit.

table 11 Error codes

\* When sensors have been taken out, be sure to replace them max. 40 mm underneath heat exchanger.

If you read out a not listed error, please report to Broag.

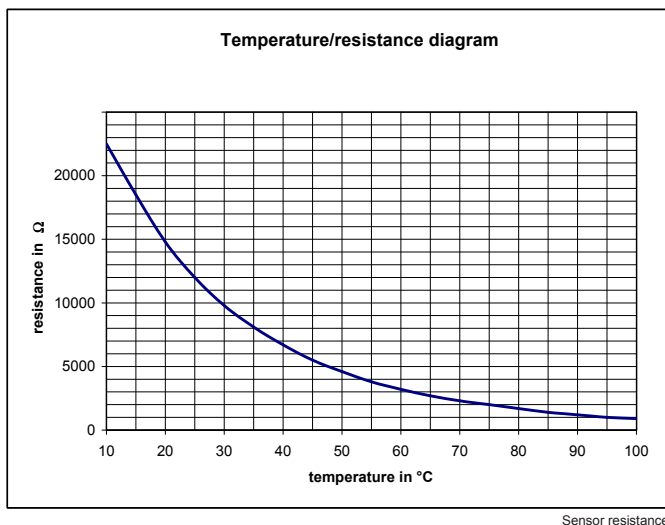



### 4.3 Control stop or lock-out

The code  $\square\square8$ ,  $\square\square5$  or  $\square\square9$  can appear in the display.

- Code  $\square\square8$  is a control stop and will appear if the measured flow temperature ( $\square\square1$ ) is higher than the flow temperature set ( $T_{\text{set flow}}$ ). The boiler will start working again automatically once the flow temperature falls below the flow temperature set.
- Code  $\square\square5$  is a control stop from 3 till 10 minutes and appears if the set flow temperature ( $t_1$ ) has already been reached and the heating demand still exists.
- Code  $\square\square9$  is a lock-out and appears if the maximum temperature rise is exceeded or if the  $\Delta T$  between the supply and return temperature  $\geq 22^\circ\text{C}$  or a rate of rise in the flow temperature  $> 2,7^\circ\text{C/sec.}$  and also at a boiler-start with noth-rough flow or insufficient water. The boiler will try to restart after 10 minutes.



Every 10 minutes the boiler will try to restart until the cause has been removed.

- Code  $\square\square9$  is a lock-out and can appear in the following situation:
  - the shut down input (between terminals 5 and 6 on X9) has been activated (= opened).



The lock-out will disappear once the cause has been removed!


### 4.4 Error code memory

The Remeha Avanta 18v control unit has an error code memory, in which the last 16 errors are stored. In addition to the error code ( $\square\square E$ ) and a number ( $\square\square X$ ).

The following data is also stored:

- the number of times the error occurred ( $\square\square n$  and a number  $\square\square X$ )
- the operating status of the boiler ( $\square\square S$  and a number  $\square\square X$ )
- the flow temperature ( $\square\square 1$ ) and the value ( $\square\square X$ ) return temperature ( $\square\square 2$ ) and the value ( $\square\square X$ ) at the time the error occurred.

To get access to the error memory, access code must be entered.

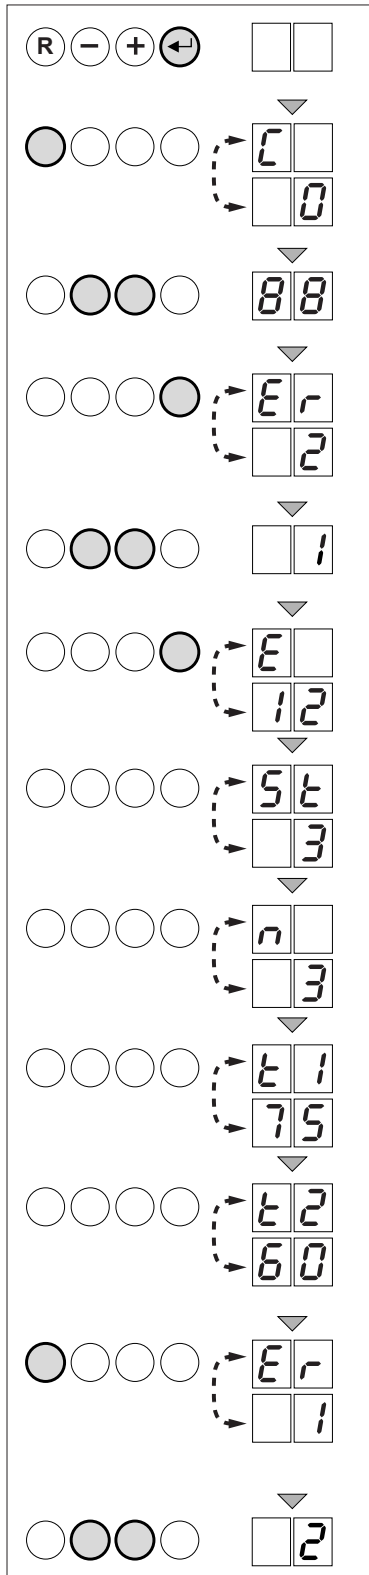

LT.AL.W7H.000.064

## 4.4.1 Error read outs

- Press the **[enter]**-key and keep it pressed;
- Press the **[reset]**-key until codes **E** and **r** appear alternately in the display;
- Enter the special access code **88** with the **[+]** or **[-]**- key;
- Press the **[enter]**-key; the display shows **E****r** and the number of the last error alternately, for example **02**.
- Press the **[+]** or **[-]**-key to go forwards or backwards in the list of errors.
- Press the **[enter]**-key to take a closer look at the error. The display shows the error code as follows;
  - first error code **E** with error number e.g. **12**
  - then status code **S****t** with status number e.g. **3** (burning for central heating)
  - then number of time that the error has occurred **n** and a number e.g. **3**
  - then the flow temperature when the error occurred **t****1** and temperature e.g. **75**
  - final the return temperature when the error occurred **t****2** and temperature e.g. **60**

This cycle continues to repeat itself.

- Press the **[reset]**-key to stop the cycle; the following appears in the display; **E****r** and e.g. the numbers **1** and **8**.
- Press the **[+]** or **[-]**-key to look at the following error data.

## 4.4.2 Deleting errors

The last message in the list, **E****r** followed by **E****L** will appear in the display;

- Press the **[enter]**-key again, and the following will appear in the display: **0**
- Press the **[+]**-key to set the parameter to **1**.
- Press the **[enter]**-key, to delete the error memory:
- Press the **[escape]**-key twice to exit the error memory.



When tracing an error, the cause can often be found more quickly if the operating status at the time the error occurred can be retrieved from the error memory.

## 5 SERVICE PARTS

---

### 5.1 General

If, following the annual inspection or maintenance any part of the boiler is found to need replacing, use Remeha spare parts only or spare parts and materials recommended by Remeha.

If the component to be replaced is covered by the Remeha guarantee terms (see the Remeha General Terms of Sale and Delivery) send the component to the Remeha Quality department. Always enclose a fully completed return form, see example below. This will enable Remeha to meet its guarantee obligations more quickly and efficiently.



The enclosed (returned) component comes from boiler:	<b>model*</b>	<b>year/day/serialNr.*</b>	
	<i>Avanta 18v</i>	<i>05 094 000 000 087</i>	
Installation date of the boiler	<i>June 2005</i>		
<b>Description (returned) component</b>	<b>sort</b>	<b>Brand</b>	<b>type</b>
	<i>Gas valve multi block</i>	<i>Dungs</i>	<i>GB ND 055</i>
<b>Problem description</b>	<i>motor does not respond</i>		
<b>Description (returned) component</b>	<b>sort</b>	<b>Brand</b>	<b>type</b>
<b>Problem description</b>			
<b>Description (returned) component</b>	<b>sort</b>	<b>Brand</b>	<b>type</b>
<b>Problem description</b>			
<b>Your details</b>			
<b>Company name</b>	<i>Smit</i>		
<b>Address</b>	<i>Londonstreet 1, London</i>		
<b>Telephone</b>			
<b>Reference</b>	<i>Mr. Johnson</i>		
<b>Your order number</b>	<i>530002004</i>		
<b>Job number</b>	<i>-</i>		
<b>Project number</b>	<i>14 (Canal flats)</i>		

table 12 Return form example

\* These details can be found on the boiler type plate; the type plate is stuck to the bottom of the boiler.

fig. 59 Exploded view Remeha Avanta 18v  
59970EVGBW7H010

Break down parts kit		
Part No	Description	Position
S100006	Heat exchanger	2001
S62741	Burner	2003
S62743	Electrode ignition/ionisation	2004
S59118	Glass inspection set	2005
S100015	Siphon assembly	2021
S58733	Sensor temperature (2 pcs)	2023
S100011	Fan assembly	3001
S58685	Gas combination block	3005
S100068	Control board	4001
S59128	Display print board	4002
S100012	Transformer ignition	4003
S43561	Fuse glass 2 amp slow (10pcs)	4006

table 13 Break down parts kit

6 EC DECLARATION

EC – DECLARATION OF CONFORMITY


Manufacturer : Remeha B.V.  
Address : Kanaal Zuid 110  
Town, Country : Postbus 32, NL-7300 AA Apeldoorn

- hereby declares that the appliance(s): Remeha Avanta 18v

comply / complies with the specifications of the following EEC directives:

EEG Directive:	90/396/EEG	applied standards:
		(pr)EN 297(1994), 483(1999), 625(1995), 677(1998)
	73/23/EEG	(pr)EN 50165(1997), 60335-1(1994)
	92/42/EEG	
	89/336/EEG	EN 50165(1997), 55014-1(2000), 55014-2(1997) EN 61000-3-2(2000), 61000-3-3(1995)
	97/23/EG	(Art.3, sub 3)

Apeldoorn, July 2005

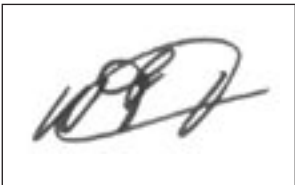

W.F. Tijhuis  
Approval Manager

## 7 REGULATIONS

---

### 7.1 EC regulations

The boiler meets the requirements of the EC regulations at the following directives:

- 90/396/EEC Gas appliances directive
- 92/42/EEC Efficiency directive
- 73/23/EEC Electrical low voltage directive
- 89/336/EEC EMC directive
- 97/23/EEC Pressure equipment directive (art. 3, sub. 3)

Classification type for evacuation of the combustion products; according EN 483

### 7.2 Remeha factory test

Before it leaves the factory, each Remeha Avanta 18v boiler is optimally adjusted and tested for:

- electrical safety;
- CO<sub>2</sub>- adjustment;
- hot water function
- water tightness;
- gas tightness;
- automation parameters.

### 7.3 Additional guidelines

In addition to the regulations and guidelines as mentioned in par. 7.1 the following guidelines in this documentation should also be observed.

It applies for all regulations and guidelines, mentioned in this Installation and Service manual, that any additions or new regulations and guidelines at the time of installation will also apply.

## 8 TECHNICAL SPECIFICATIONS AND WORKING PRINCIPLE

### 8.1 Technical data


Appliance type Remeha Avanta 18v		
<b>General</b>		
Boiler control		modulating or on/off
Nominal output <b>P<sub>n</sub></b> (80/60°C, CH)	kW	17.6
Nominal output <b>P<sub>n</sub></b> (50/30°C, CH)	kW	19.0
Nominal input <b>Q<sub>n</sub></b> Hi	kW	5.8 - 18.0
Nominal input <b>Q<sub>nw</sub></b> Hi	kW	18.0
Assembly dry weight	kg	20
Noise level at distance of 1m from the boiler (at full load)	dB(A)	< 44
<b>Gas and flue details</b>		
Classification due to discharging flue gases	-	B23, B33, C13, C33, C43, C53, C63, C83
Gas type permitted	-	II <sub>2H3p</sub> (natural gas and propane)
Gas inlet pressure natural gas	mbar	20 - 25
Gas consumption natural gas maximum	m <sub>n</sub> <sup>3</sup> /h	1.8
Gas flue rate	kg/h	31
Gas inlet pressure propane	mbar	37 - 50
Gas consumption propane maximum	m <sub>n</sub> <sup>3</sup> /h	0.7
NO <sub>x</sub> Class <sup>2)</sup>	-	5 <sup>1)</sup>
NO <sub>x</sub> annual emission (n = 1)	ppm	< 30
	mg/kWh	< 53
Residual fan duty (full load)	Pa	40
<b>CH side</b>		
Water capacity (heat exchanger and piping)	l	1.8
Minimum operating water pressure	bar	0.1
Maximum operating water pressure <b>PMS</b>	bar	3
Water temperature maximum	°C	98
Operating temperature maximum	°C	80
Water pressure loss $\Delta T = 11^\circ\text{C}$	mbar	440
<b>Electrical</b>		
Main supply	V/Hz	230 / 50
Power consumption <b>W</b> maximum	W	50
in stand-by status	W	< 3
Degree of protection	IP	X4D

table 14 Summary of technical data

<sup>1)</sup> Measured according EN 483 (Class 5 complies with a limited concentration of NO<sub>x</sub> < 70 mg/kWh)

<sup>2)</sup> This data applies for natural gas.



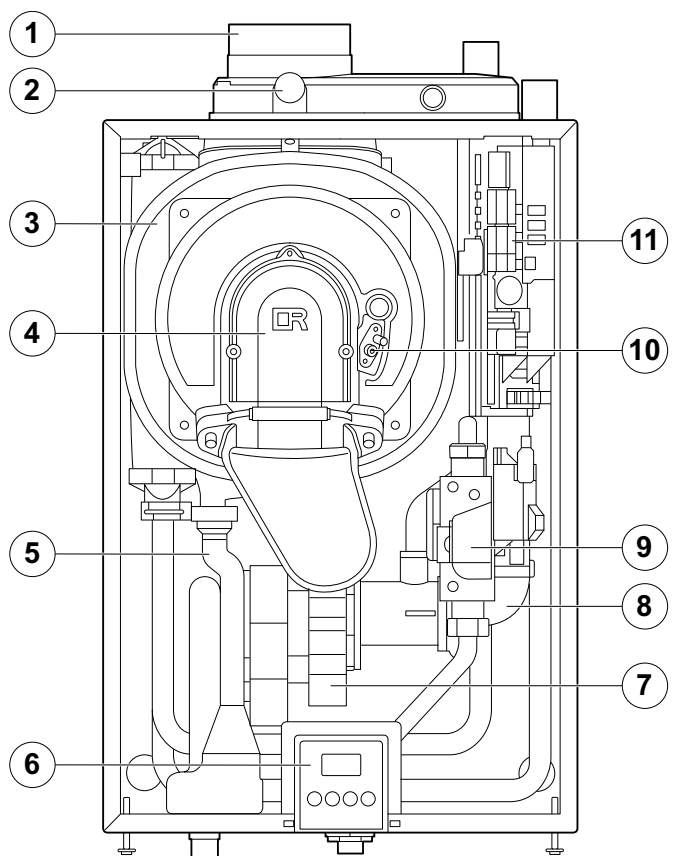

59970LTGBW7H045

## 8.2 The boiler components

1. Flue / Air inlet connection
2. Flue gas measuring point
3. Heat exchanger
4. Front plate heat exchanger
5. Syphon
6. Control panel
7. Fan
8. Air inlet tube
9. Gas valve multiblock / Ignition transformer
10. Ignition/ionization electrode
11. Control unit

## 8.3 Working principle

The Remeha Avanta 18v casing serves as a sealed air box, with air drawn in by the fan. On the outlet side of the fan is a venturi, into which a measured quantity of gas is injected based on the volume of air available. The fan speed control is dependent on the settings of the external control, the advanced boiler controller 'abc®' and the prevailing temperatures (measured by the temperature sensors).

This method of gas/air ratio control ensures that the gas quantity is precisely adjusted to the air quantity. Thus creating optimum combustion over the whole heat input range. The gas and air is mixed in the venturi and then passes into the specially designed pre-mix burner. After combustion, the hot flue gas is directed through a specially designed, high efficiency helicoil stainless steel heat exchanger with a large surface area, and transfers its heat to the system water circulating around the coils. In the condensing part of the exchanger the water vapour in the flue gas condense within it and the heat released during this process (the so-called latent or condensing heat) is also transferred to the system water. The condensate water so formed is discharged from the heat exchanger via a siphon.



In normal operation, the boiler's flue gas discharge will produce a visible white condensing "plume" and therefore care should be taken when choosing a location for the terminal.

### 8.3.1 Regulating

The Remeha Avanta 18v is a fully modulating boiler and can be regulated using one or more of the following methods;

1. Open Therm – 2 wire interface compatible with the Remeha Celcia 15 room compensator and the Remeha Celcia 20 outside weather compensator or with any other proprietor's OpenTherm® controls.
2. Open Therm thermostat in combination with an external time clock.
3. On/Off room thermostat – volt free (on the X9 terminal strip).
4. On/Off room thermostat – 230 V (on the X2 terminal strip).
5. 230 V Switching time clock – compatible with the Remeha two channel time clock or with any other appropriate time clock. For further details see *par.* 2.8.

### 8.3.2 Advanced boiler control ('abc'-control)

An intelligent advanced boiler control ('abc') continuously monitors the boiler conditions and ensures a very reliable supply of heat. This control system is adept at dealing with negative influences from the system such as flow reduction, airflow problems and alike. In the event of such influences, the boiler will not go to "lock-out" failure mode, but will in the first instance modulate back, and if necessary, depending on the nature of the circumstances, will temporarily switch off (shut-down or control stop), and then after a short while simply try again.



Provided that the situation is not actually hazardous, the Remeha Avanta 18v will always try to supply heat. The 'abc'- control prevents unnecessary additional call outs.

### 8.3.3 Regulating the water temperature

The Remeha Avanta 18v is fitted with an electronic temperature regulator with flow and return temperature sensors. The flow temperature can be set to between 20 and 75°C, see 2.10.8 (factory setting 75°C). The boiler modulates its output up and down to match the flow set point from internal or external control. When the boiler is at its minimum output and the flow temperature still continues to rise, once the flow set point is exceeded by 5°C the boiler will shut down on a controlled stop (code  $\boxed{8}$ ).

### 8.3.4 Low flow / water protection

The Remeha Avanta 18v has a low-water protection based on temperature readings. By modulating down as soon as there is a risk of an insufficient water flow, the boiler will keep working for as long as possible. An insufficient water flow, however caused, - indicated by a flow/return  $\Delta t \geq 22^\circ\text{C}$  or a rate of rise in the flow temperature  $> 1^\circ\text{C}/\text{sec}$  - will be sensed by the 'abc' control which will shut the boiler down in a blocking mode with the display showing (code  $\boxed{9}$ ) for 10 minutes and before re starting.

If there is no water in the boiler or if the pump is not running, it will go to lock out (code  $\boxed{E7}$ ) and require manual re-set.

### 8.3.5 High Limit temperature protection

If the flow temperature exceeds 98°C the high limit temperature protection device switches off the boiler in a lock out mode with the display showing (code  $\boxed{E1}$ ). This mode will require a manual re-set.

When the fault is corrected, the boiler can be restarted by pressing the **reset**-key on the control panel and holding for 3 seconds.

## 9 EFFICIENCY DATA AND GAS EFFICIENCY LABELS

---

### 9.1 Annual efficiency

108.7 % in relation to Hi at a load of 30% and a return temperature of 30°C.

### 9.2 Water-side efficiency

98 % in relation to Hi at full load and an average water temperature of 70°C (80/60°C).

94.3 % in relation to Hi at full load and an average water temperature of 40°C (50/30°C).



SEDBUK 'A'



© Copyright

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions furnished by us remain our property and may not be multiplied without our prior consent in writing.

62997-0506




**Broag Ltd.**

Remeha House  
Molly Millars Lane  
RG41 2QP WOKINGHAM, Berks.  
Tel: +44 118 9783434  
Fax: +44 118 9786977  
Internet: uk.remeha.com  
E-mail: boilers@broag-remeha.com

# Suggested Schematics with Control and Power Wiring details


**Remeha**  
AVANTA PLUS

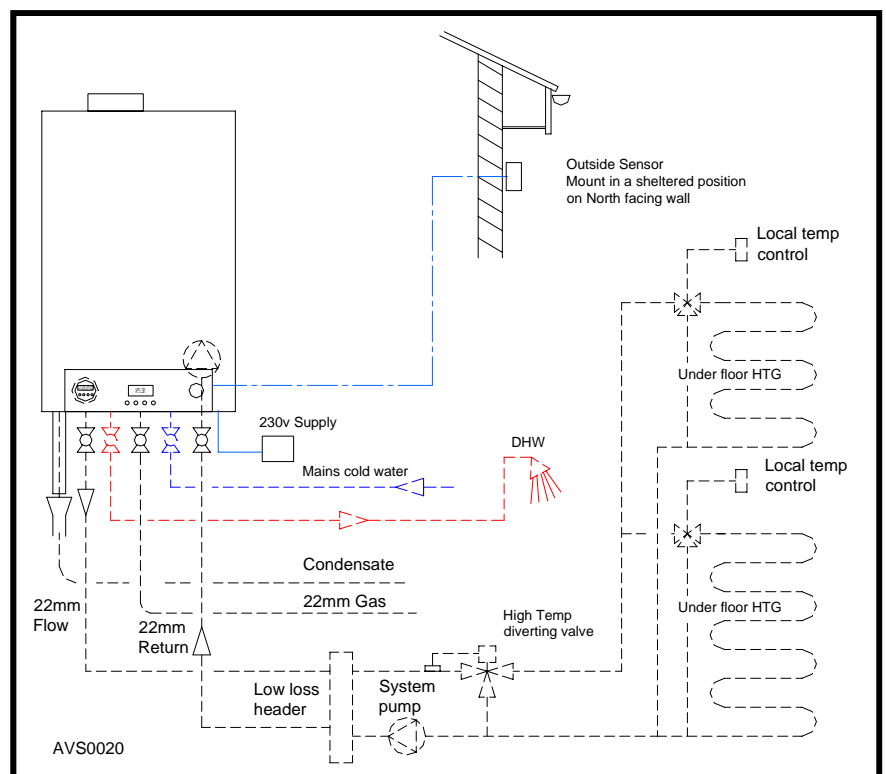


## AVANTA PLUS System Options

### ON / Off Control (Internal modulating)

	5
1 Typical "Y" plan - Heating and DHW using 230v controls	4
2 Typical "W" plan - Heating and Priority DHW using 230v controls	5
3 Typical "S" plan - Heating and DHW using 230v controls	6
4 Internal time clock - Heating and Priority DHW using Celcia 10 and 3 way diverting valve kit	11


 <b>Weather Compensation Control (Direct modulating using 'OpenTherm®')</b>	
5 Simple weather compensated Heating with Priority DHW	7
6 Simple weather compensated Heating with room thermostat override (230v) and Priority DHW	8
7 Simple weather compensated Heating with room thermostat override (Celcia 10) and Priority DHW	9
8 Time / Weather compensated Heating with Priority DHW (Celcia 20 -Digital clock)	12


 <b>Room Compensation Control (Direct modulating using 'OpenTherm®')</b>	
9 Simple room compensated Heating using the Celcia 15 and Priority DHW	10
10 Time / Room compensated Heating with Priority DHW (Celcia 20 - Digital clock)	13

## AVANTA PLUS Combi Options


### ON / Off Control (Internal modulating)

11 Timed heating with constant DHW using external time clock and room thermostat (230v)	17
12 Time heating with constant DHW using internal time clock (230v) and room thermostat (Celcia 10)	18

 <b>Weather Compensation Control (Direct modulating using 'OpenTherm®')</b>	
13 External time clock with simple weather compensated Heating and constant DHW	14
14 Internal time clock with simple weather compensated Heating and constant DHW	15
15 Time / Weather compensated Heating with Priority DHW (Celcia 20 -Digital clock)	19


 <b>Room Compensation Control (Direct modulating using 'OpenTherm®')</b>	
16 External time clock with simple room compensated Heating using the Celcia 15 and constant DHW	16
17 Internal time clock with simple room compensated Heating using the Celcia 15 and constant DHW	20
18 Time / Room compensated Heating using the Celcia 20 (Digital clock) and constant DHW	21

## AVANTA PLUS Underfloor Heating Options (Combi & System)

 <b>Weather Compensation Control (Direct modulating using 'OpenTherm®')</b>	
19 System boiler - Internal time clock with simple weather compensated Heating and priority DHW	
20 Combi boiler - Internal time clock with simple weather compensated Heating and constant DHW	

## AVANTA 18v "Open Vented" Options (System only)

Typical "Y" / "W" / "S" plan - Heating and DHW using 230v controls	24-26
--	-------

 Simple weather compensated Heating with Priority DHW (Direct modulation using OpenTherm®)	
--	--

### IMPORTANT NOTE:

The layouts illustrated in this brochure are for guidance only and do not constitute a full system design. All Mechanical and Electrical equipment must be installed in accordance with the instructions supplied, by a suitably qualified Engineer and to the current regulations.

## Controls for the AVANTA PLUS and AVANTA 18v Boilers

The **AVANTA** series are fully condensing boilers using gas / air ratio controls to provide full modulation and can be operated in the following modes:

All boilers require a permanent 230v single phase 3 amp fused power supply plus controls as below:

**NOTE: The boiler is phase / neutral sensitive when used with external 230v controls**

**ON / OFF Control** - fixed flow temperature where the boiler modulates it's output to match a fixed flow set point using simple 230v switching controls

- Single or Two channel time clock (internal only available on the 24s / 28c / 35c and 39c)
- Room thermostat
- Cylinder thermostat
- Diverting / mixing or isolating valves

**MODULATING Control** - flow temperature is directly controlled by the outside weather or inside room compensator to provide comfort conditions at all times using "OpenTherm®" controls:

- Outside sensor
- DHW sensor or cylinder thermostat
- Room compensator
- Digital time/weather or room compensator
- Mechanical time/ analogue weather or room compensator

=====

### Controls available from Broag as optional extras

- S62432 Internally mounted two channel digital time clock kit (not for the Avanta 18v)
- S62432c Internally mounted single channel digital time clock (for the Combi series only)
- 50153 Outside sensor
- S43946 DHW sensor
- TBA DHW strap on thermostat
- TBA DHW three way diverting valve and sensor kit
- S59475 Room thermostat - Celcia 10
- S59161 Room compensator - Celcia 15
- 58222 Externally mounted Digital Time / Weather compensator - Celcia 20
- TG001 Externally mounted Analog Time / Weather compensator - Theben
- DA001 Externally mounted two channel 24 hour time clock (230v switching)
- DA002 Externally mounted two channel 7 day time clock (230v switching)
- TBA Externally mounted wireless room thermostat set

 
### Typical controls by others

- External mounted simple two channel time clock providing, 230v switched supplies to time control heating and domestic hot water eg. typical Honeywell ST699 or similar
- Cylinder thermostat eg. typical Honeywell L641 or similar
- Room thermostat eg. typical Honeywell T6360 or similar
- HTG and DHW zone valves c/w a single end switch (closes on valve fully open) eg. Honeywell V4043H or similar
- Wiring centre
- 'Y' : 'W' : 'S' Plan—complete kits
- Other manufacturer's compatible 'OpenTherm®' time and temperature controls

When using the **AVANTA PLUS** Combi boiler, DHW is always set for constant operation (not timed) but can if required be changed to allow for time restriction using a two channel time clock

If required the **AVANTA** series can report a common alarm or boiler run condition to an external control panel or BMS by using the connections on terminal block X7

Terminal block X7





Terminals 1 and 2 - **Common alarm**

Terminals 1 and 3 - **Boiler run**

These are both - volt free (max capacity 230v 1 amp ) and are open contacts which close on common alarm or boiler run respectively

# AVANTA PLUS System Option 1



Typical "Y" plan Heating and DHW using 230v controls

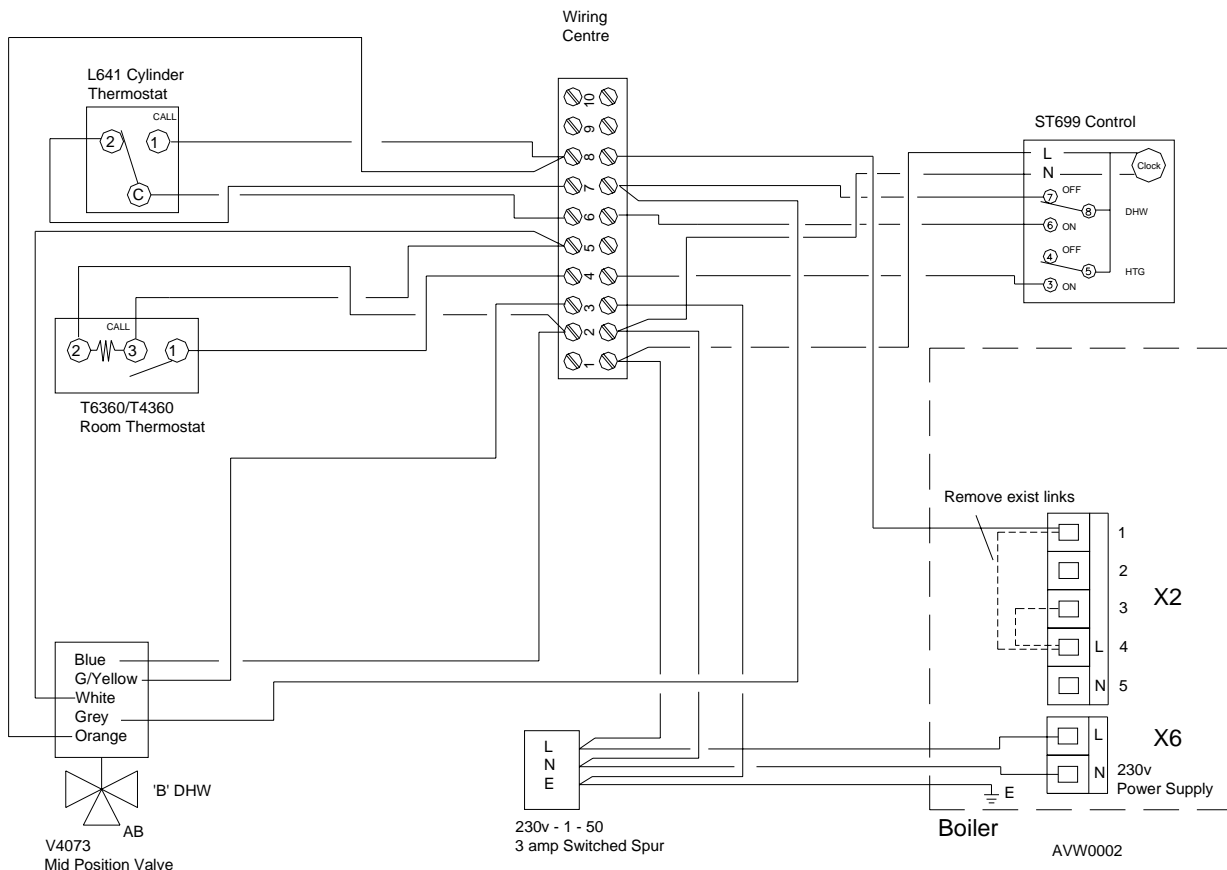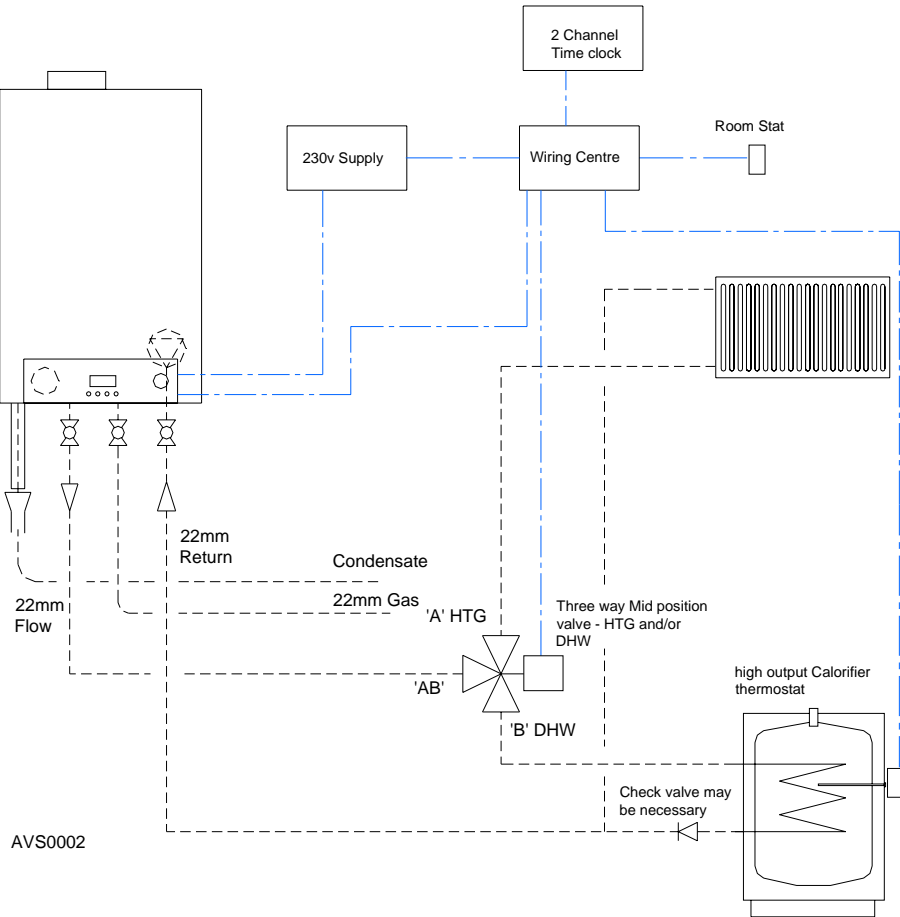





# AVANTA PLUS System Option 2

Typical "W" plan Heating and Priority DHW using 230v controls

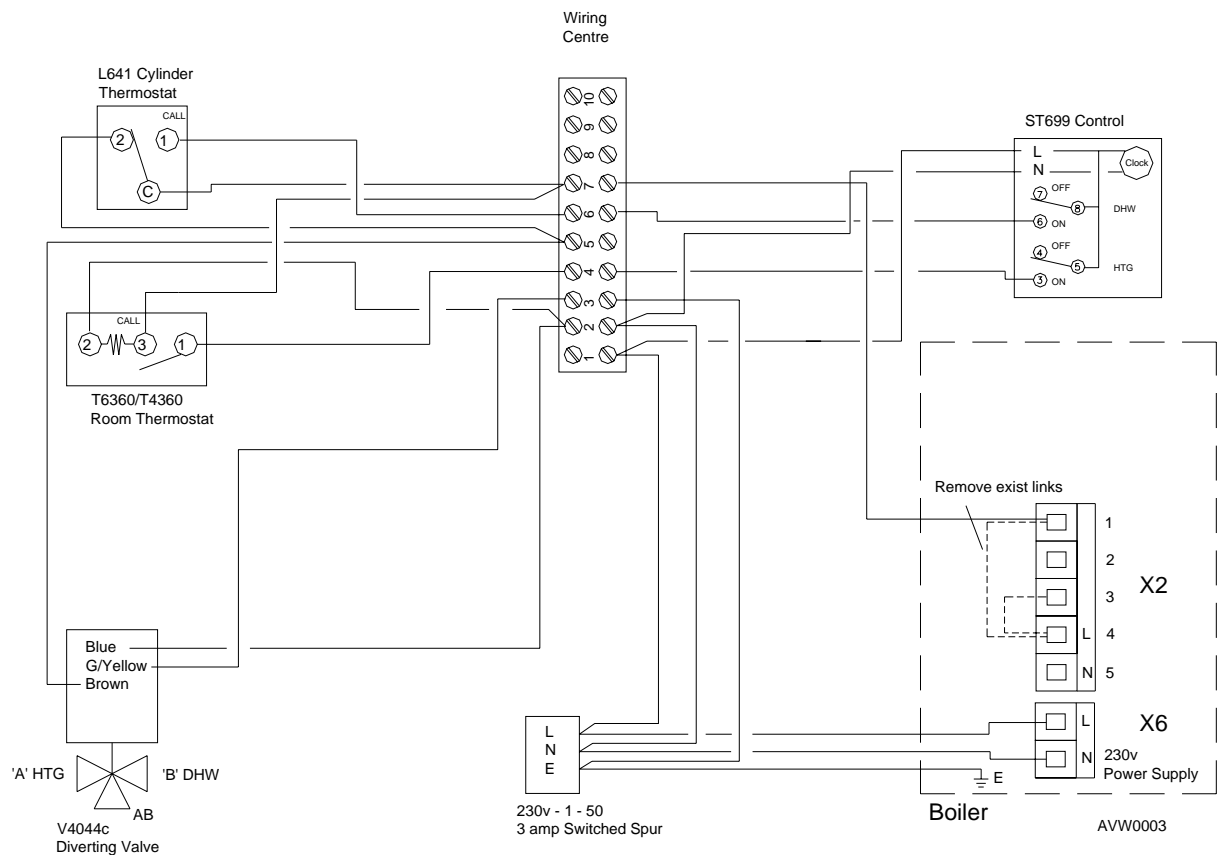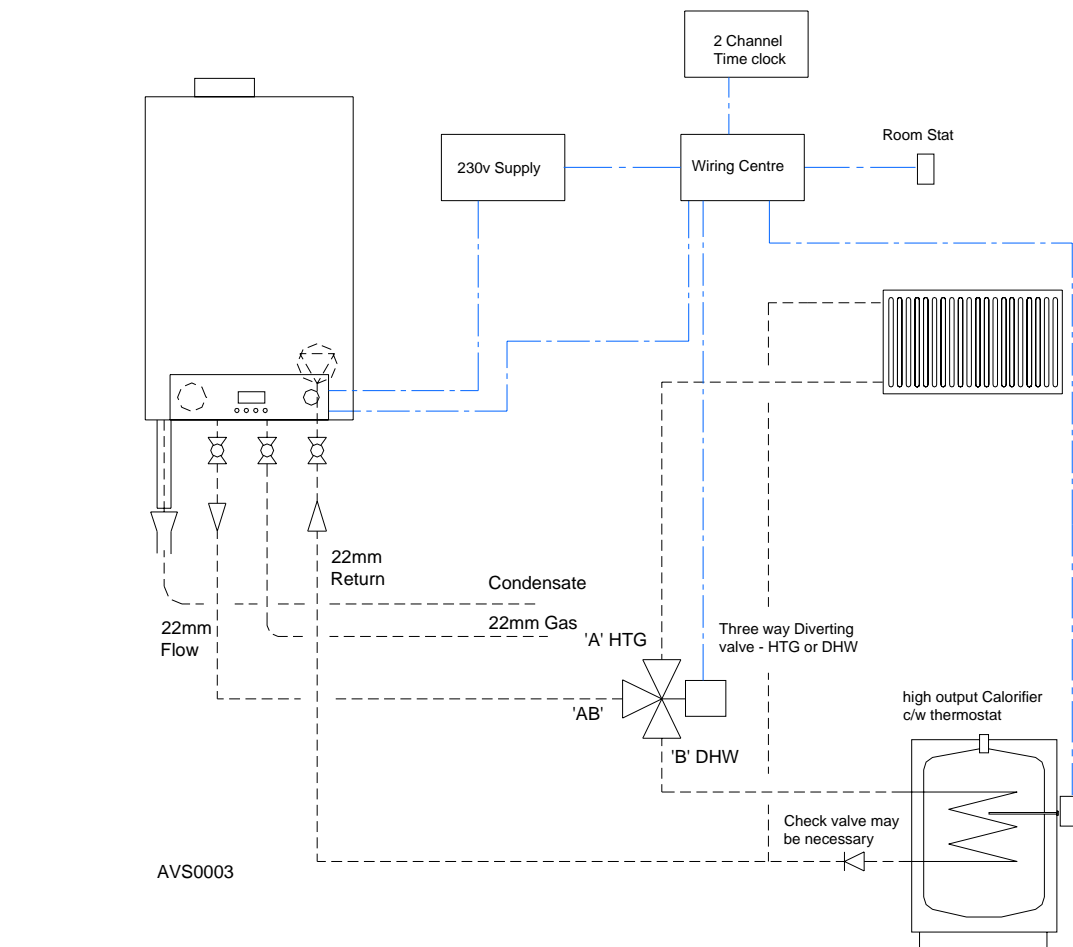


# AVANTA PLUS System Option 3

Typical "S" plan Heating and DHW using 230v controls

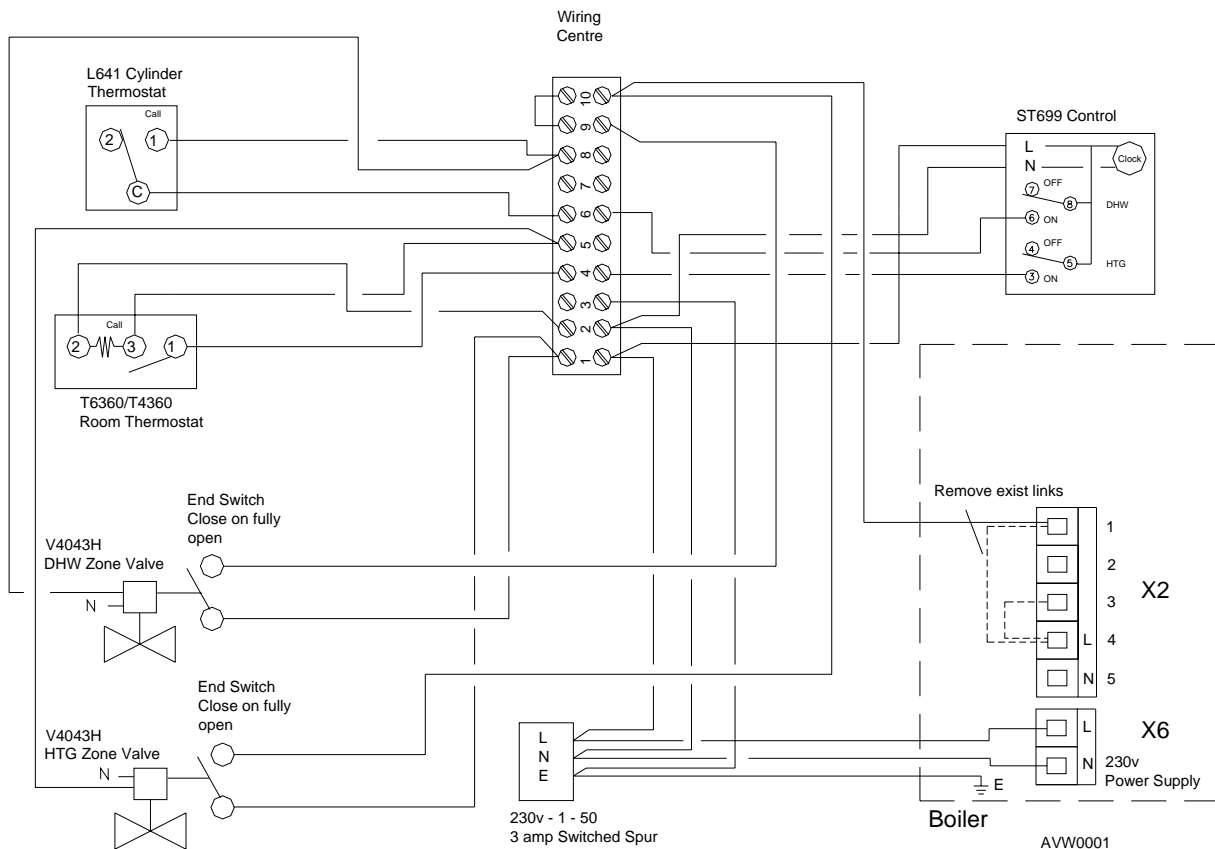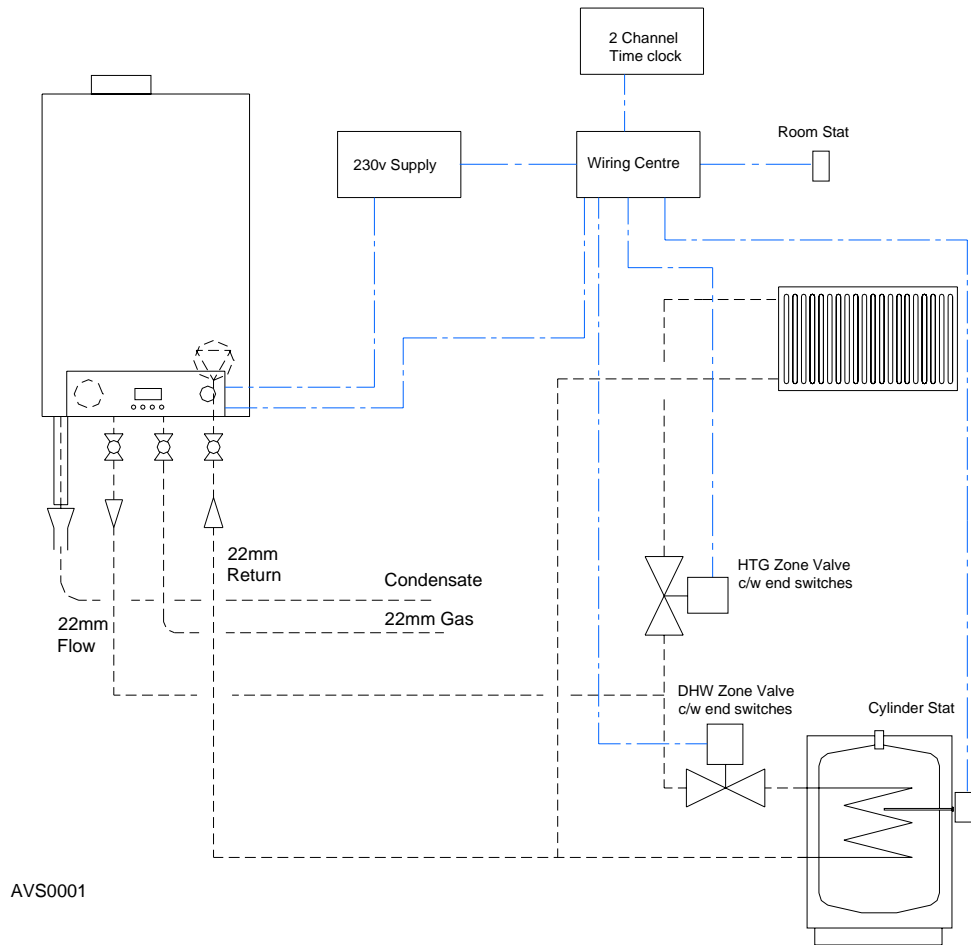

# AVANTA PLUS System Option 4

Internal time clock - Heating and Priority DHW using Celcia 10 and 3 way diverting valve kit

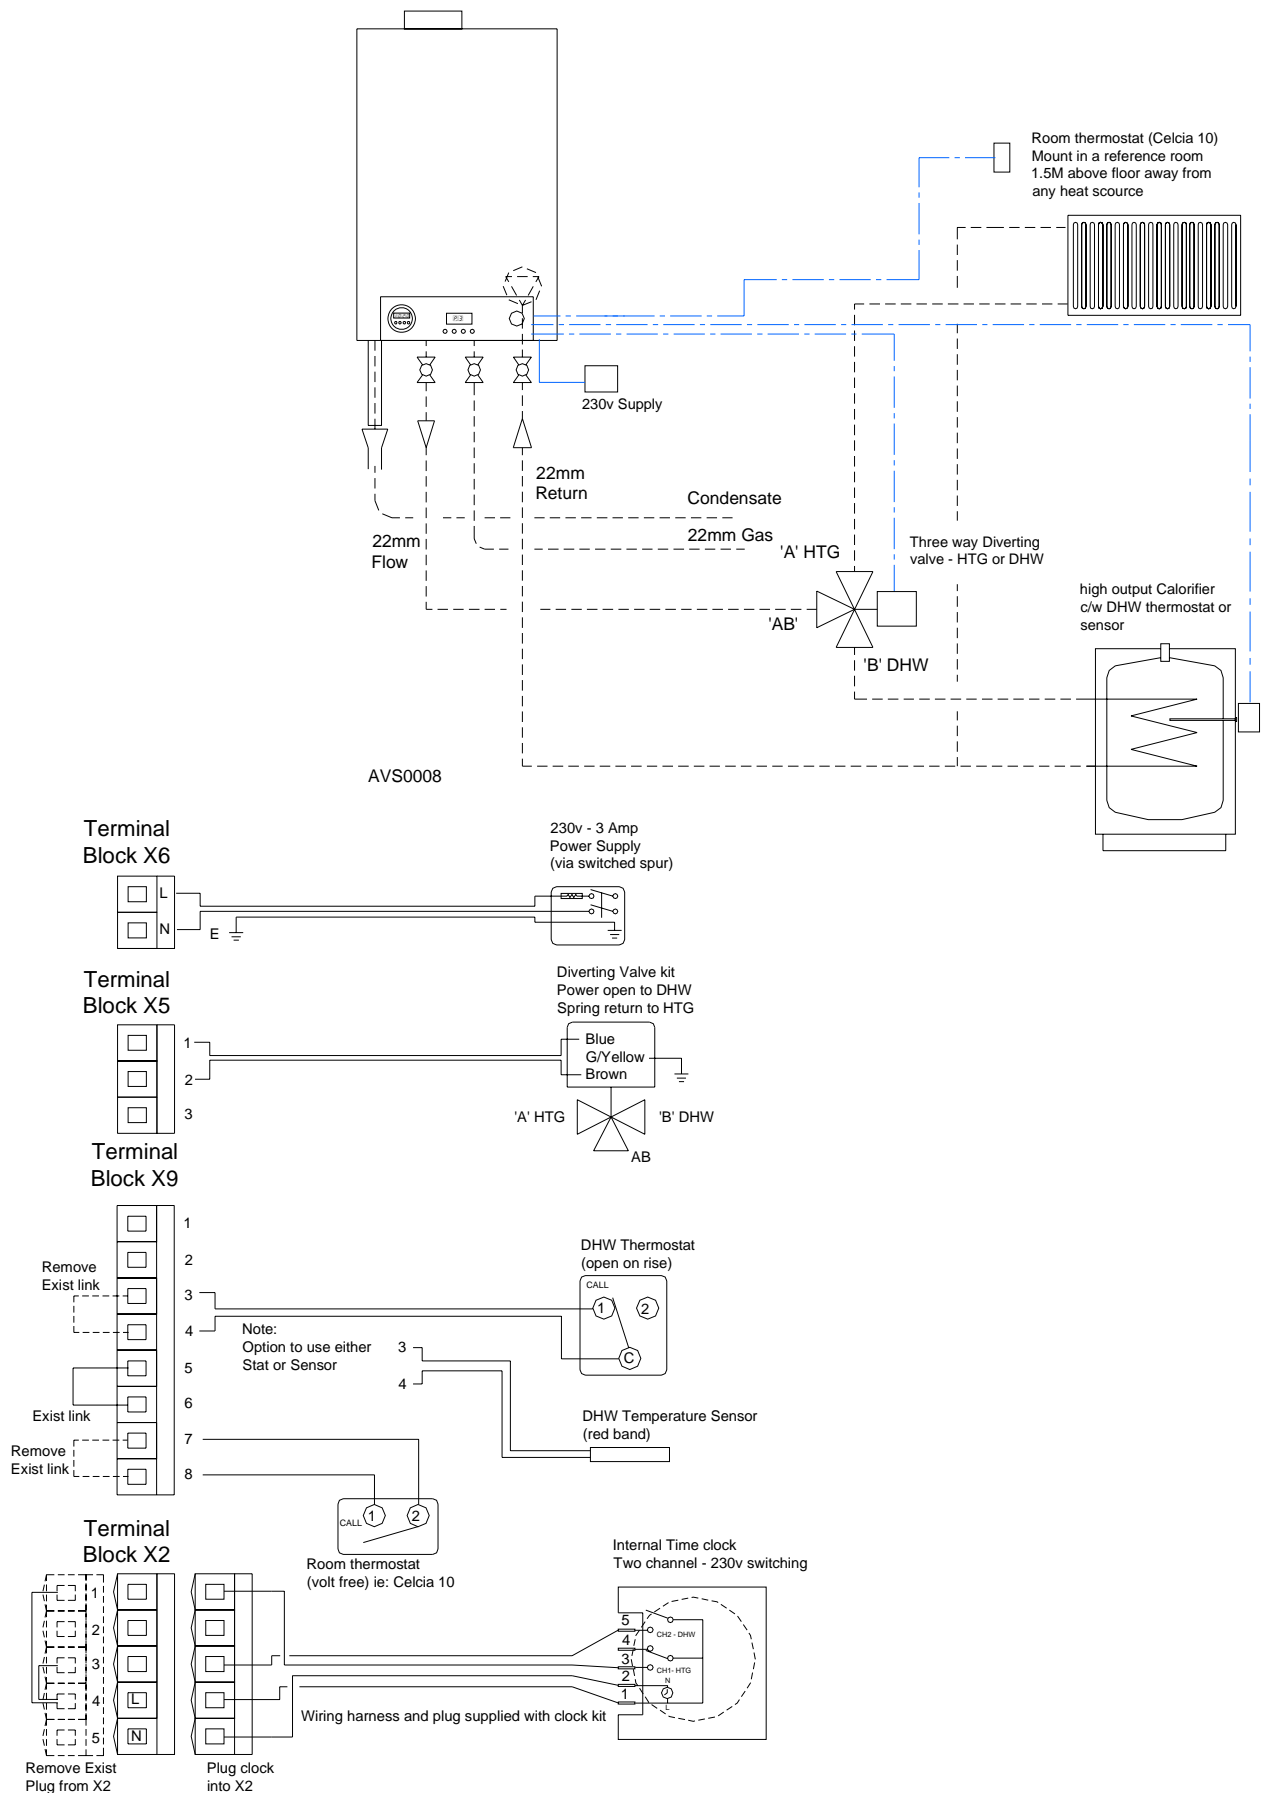


AVW0008

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS System Option 5

## Simple weather compensated Heating with Priority DHW

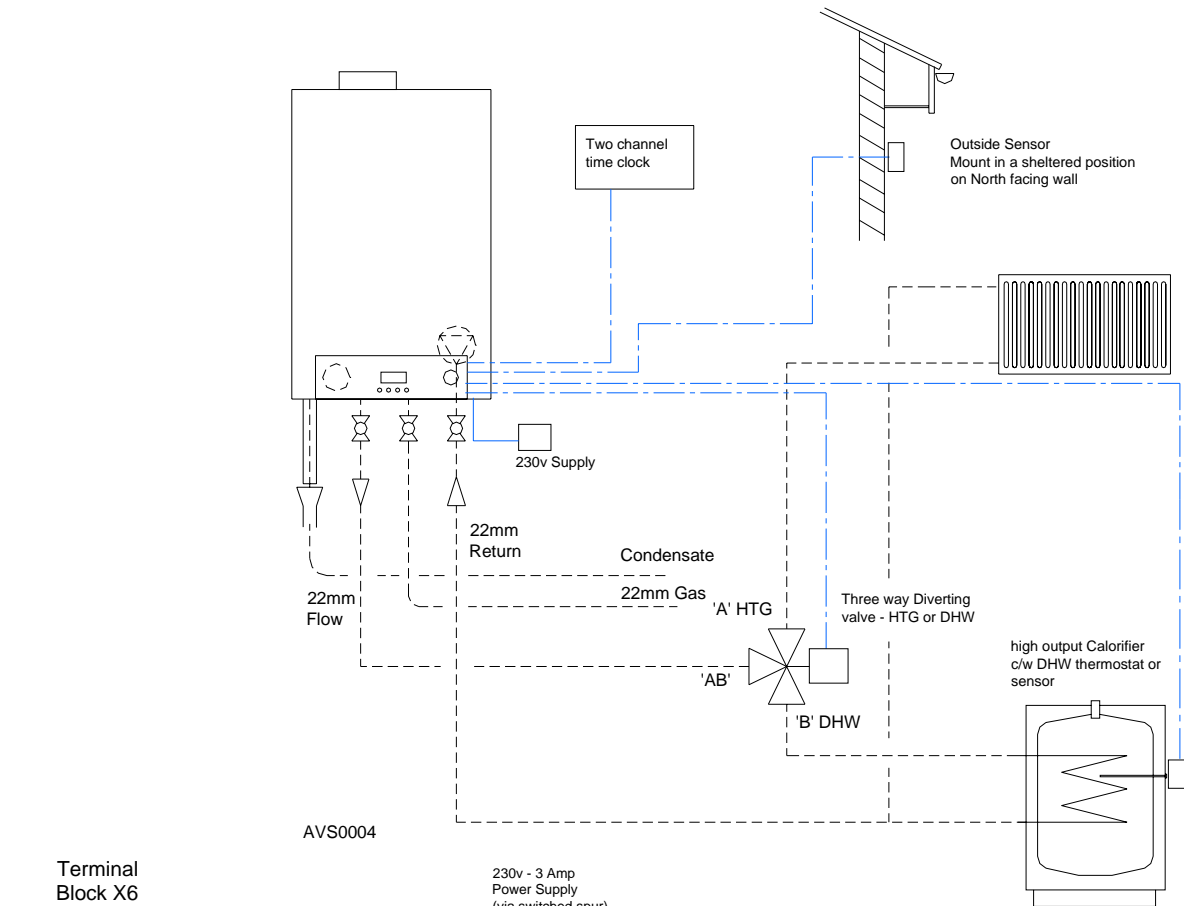


Terminal Block X6



Terminal Block X5



Terminal Block X9

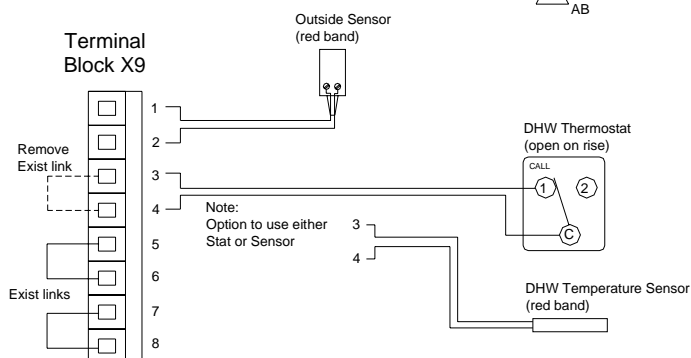

Terminal Block X2




AVW0004

NOTE: Terminal blocks are not in line as shown - diagrammatic only

# AVANTA PLUS System Option 6

Simple weather compensated Heating with room thermostat override (230v) and Priority DHW

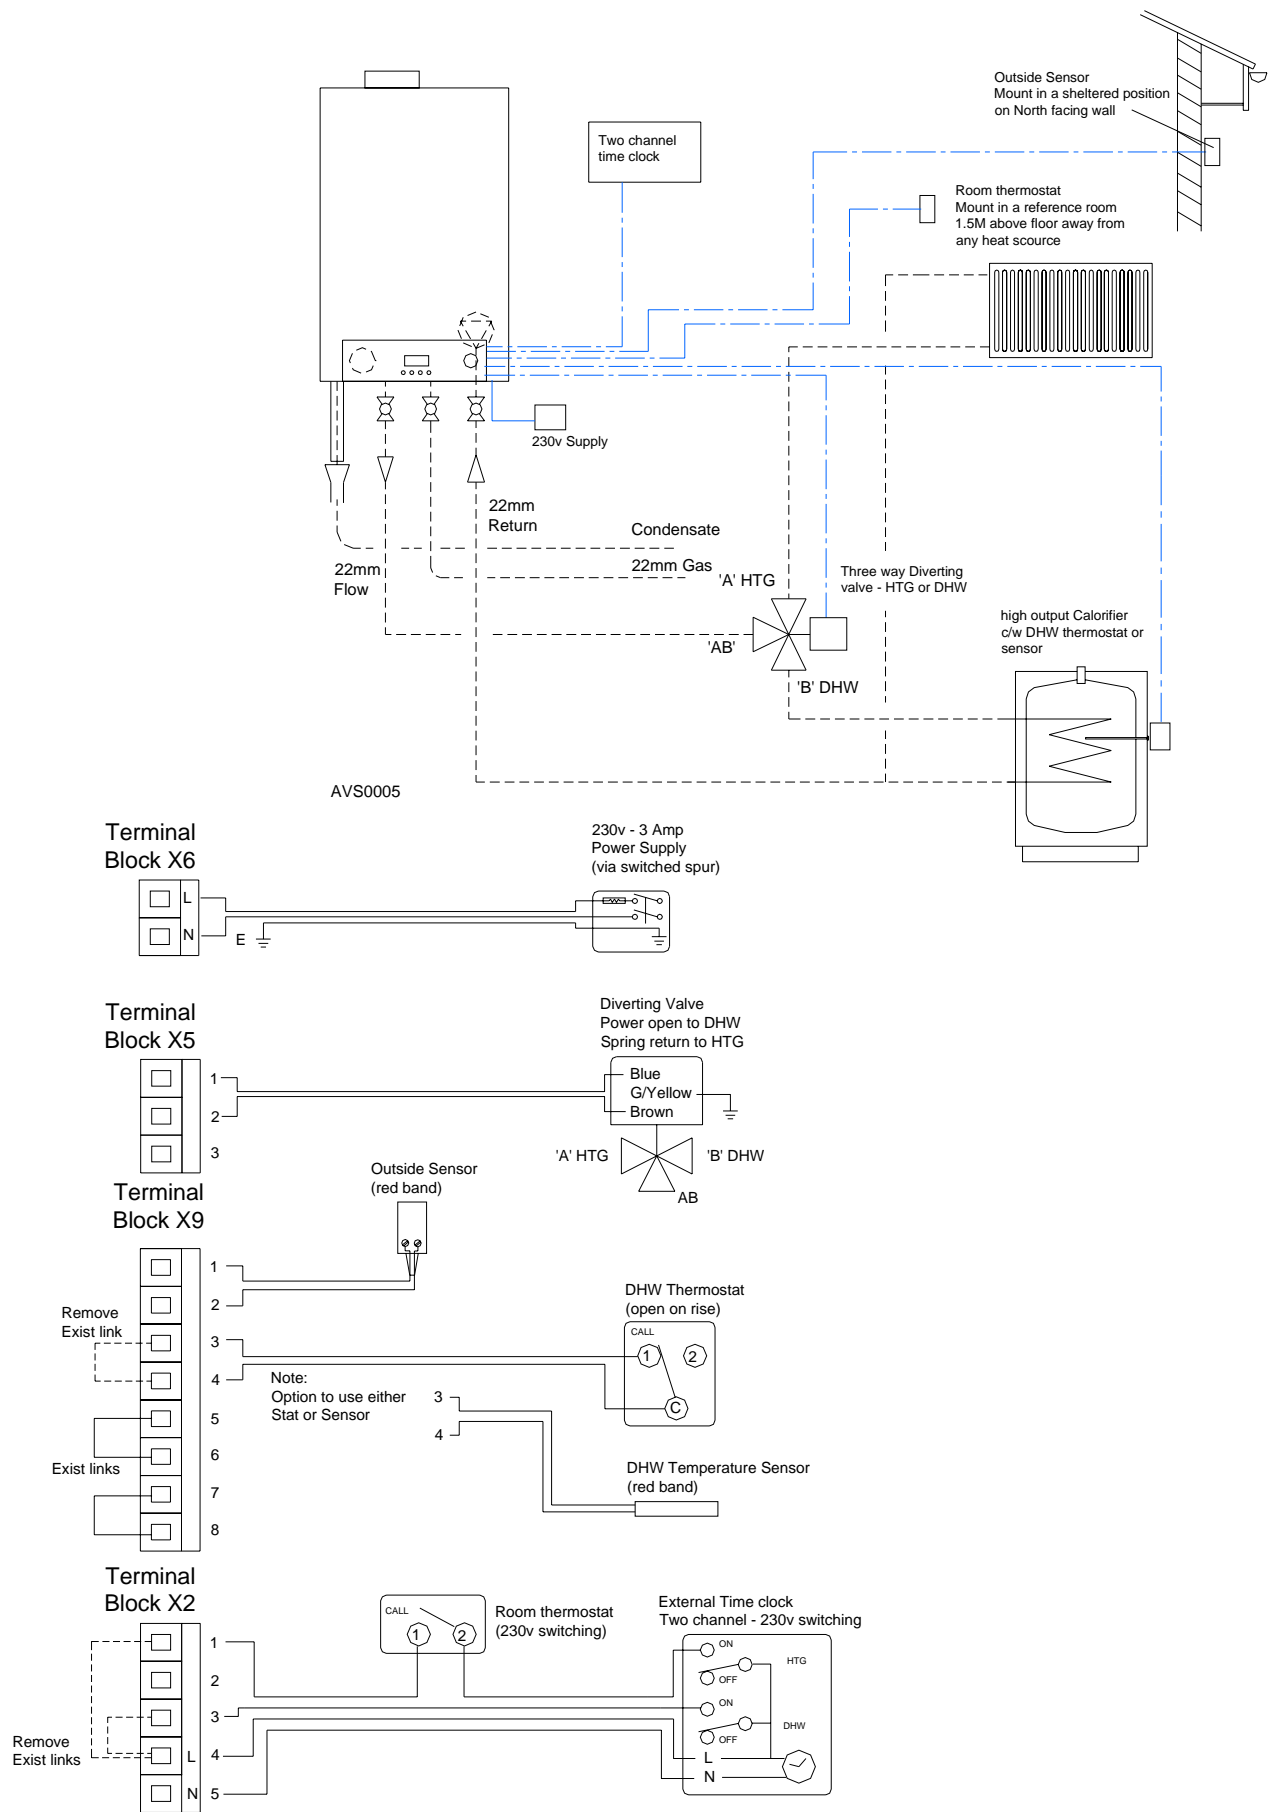


AVW0005

NOTE: Terminal blocks are not in line as shown - diagrammatic only

# AVANTA PLUS System Option 7

Simple weather compensated Heating with room thermostat override (Celcia 10) and Priority DHW

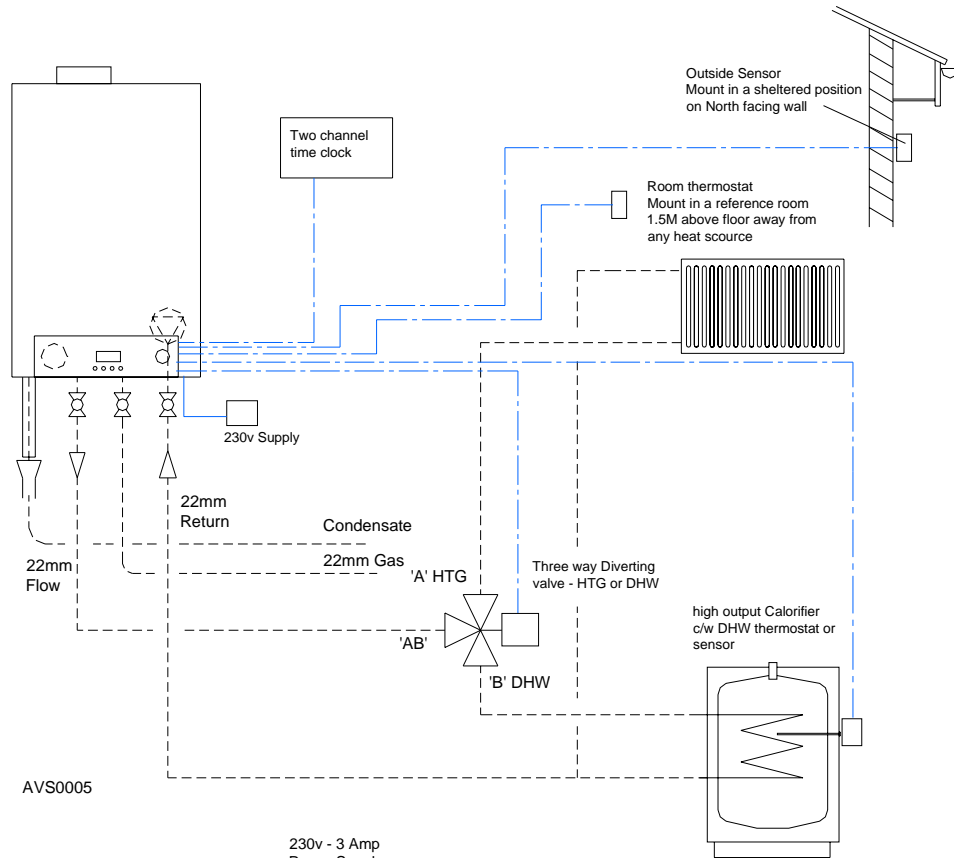


Terminal Block X6




230v - 3 Amp Power Supply (via switched spur)

 
Terminal Block X5




Diverting Valve  
Power open to DHW  
Spring return to HTG

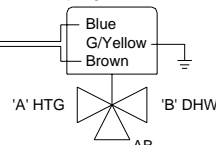

Terminal Block X9

 

Outside Sensor (red band)

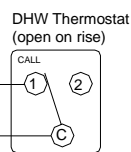


DHW Temperature Sensor (red band)

Note:  
Option to use either Stat or Sensor

Room thermostat (volt free) ie: Celcia 10

External Time clock  
Two channel - 230v switching

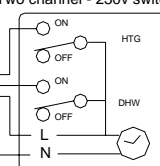


AVW0006

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS System Option 8

Time / Weather compensated Heating with Priority DHW (Celcia 20 - Digital clock)

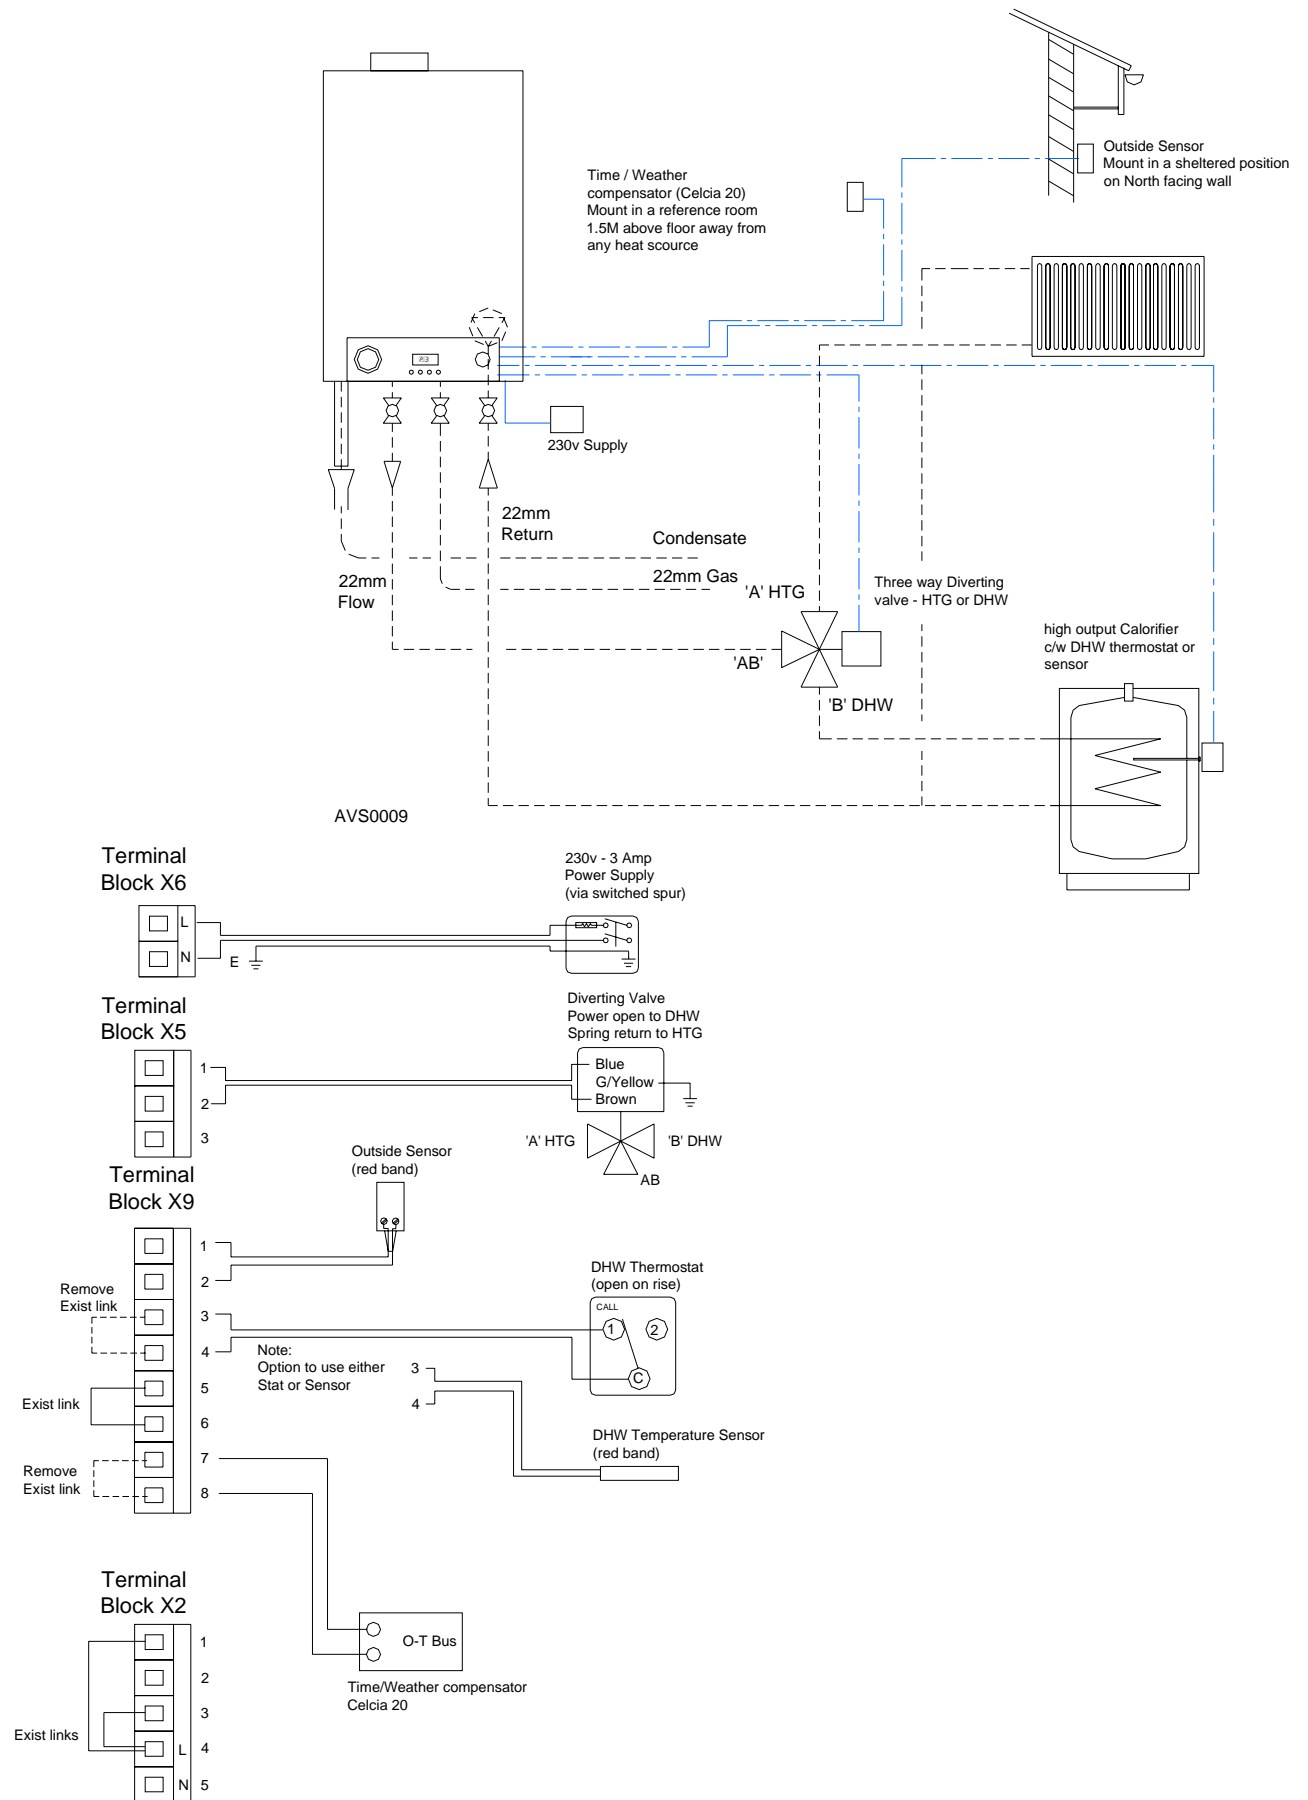


AVW0009


NOTE: Terminal blocks are not in line as shown - diagrammatic only

# AVANTA PLUS System Option 9

Simple room compensated Heating using the Celcia 15 and Priority DHW

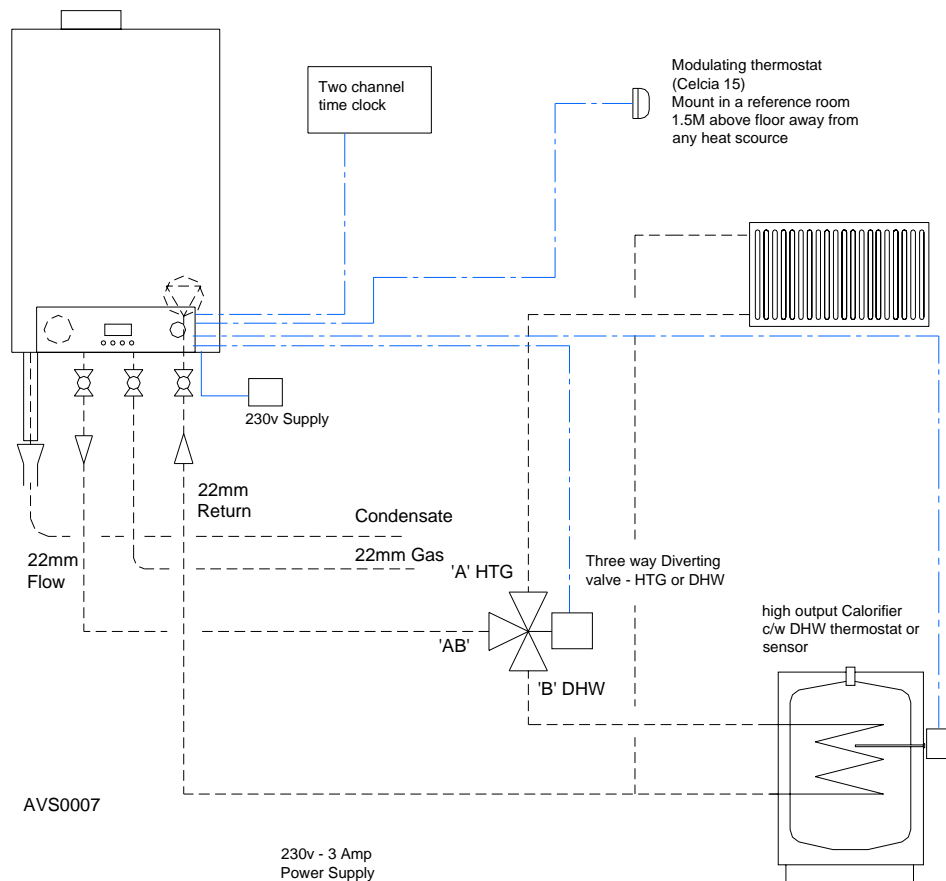


Terminal Block X6

 


Terminal Block X5



Terminal Block X9

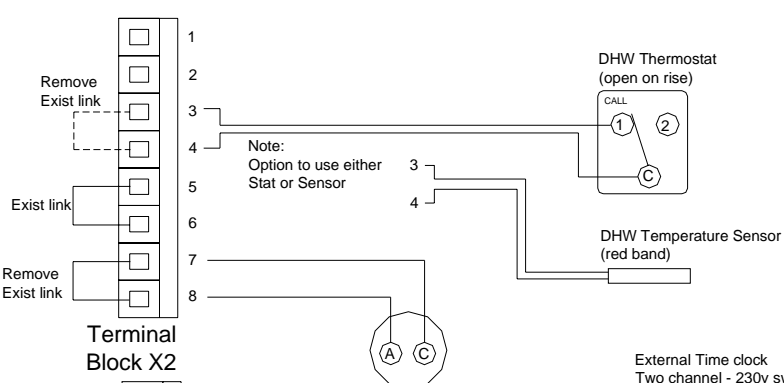

Terminal Block X2

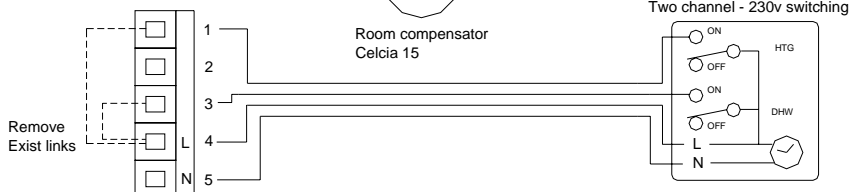

## NOTE:

With a 230v switching time clock a frost thermostat, if required, must be connected in parallel with the time clock on terminal strip X2 connectors 1 and 4 (frost stat contacts to close on temperature fall)


AVW0007

NOTE: Terminal blocks are not in line as shown - diagrammatic only



# AVANTA PLUS System Option 10

Time / Room compensated Heating with Priority DHW (Celcia 20 - Digital clock)

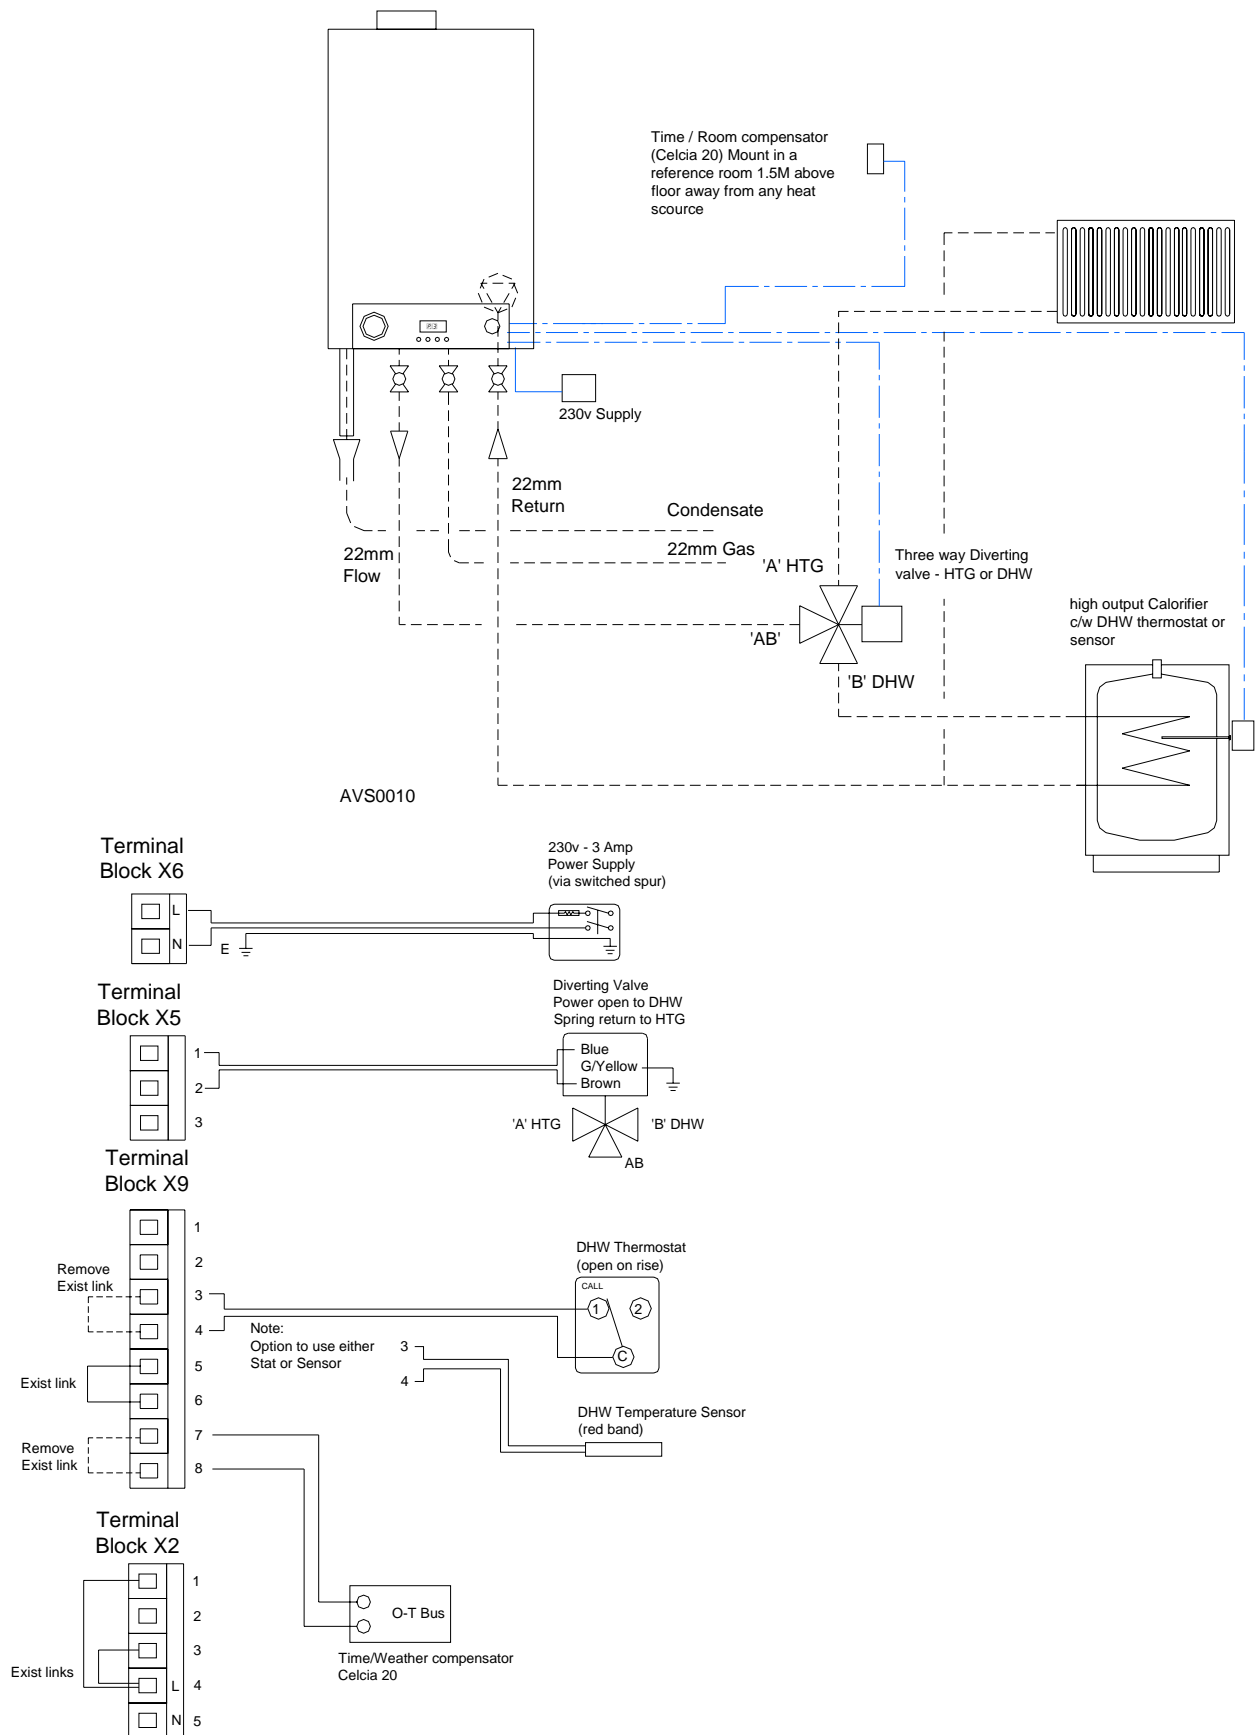


AVW0010


NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS Combi Option 11


Timed heating with constant DHW using external time clock and room thermostat (230v)

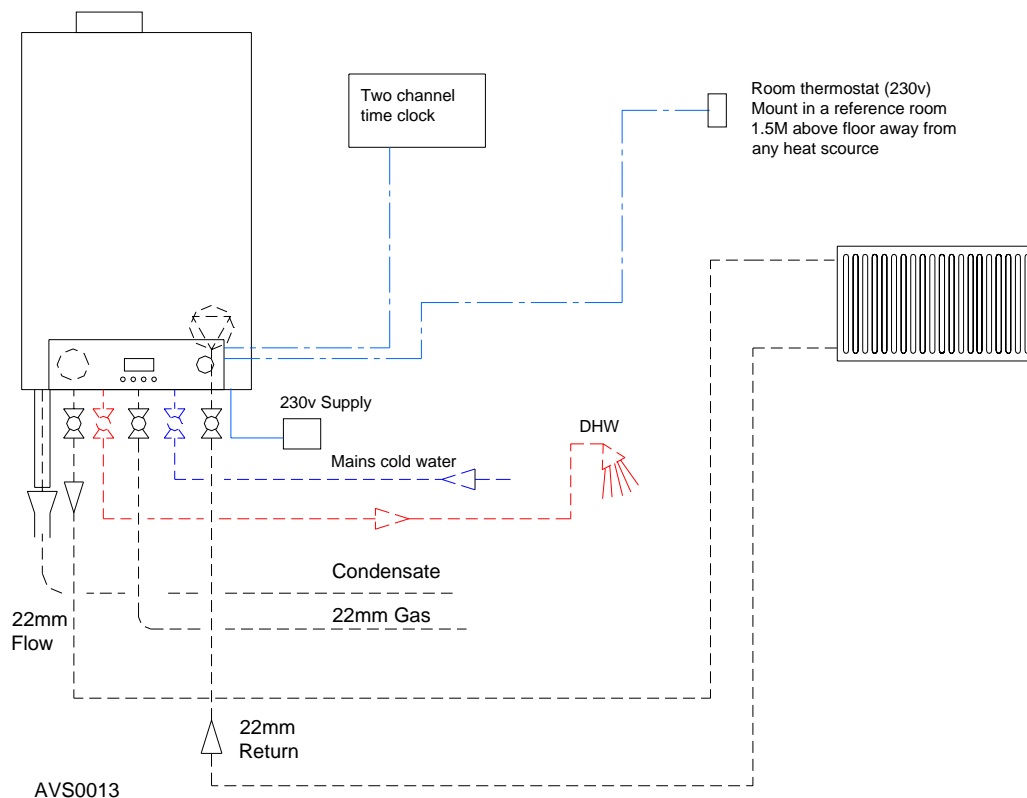


Terminal Block X6

 


Terminal Block X5

 

Terminal Block X9

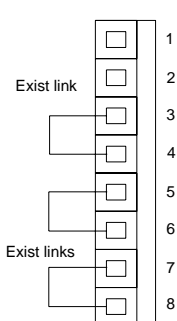

Terminal Block X2

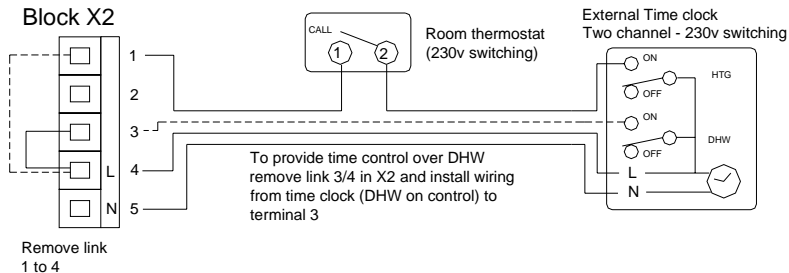

## NOTE:


With a 230v switching time clock a frost thermostat, if required, must be connected in parallel with the time clock on terminal strip X2 connectors 1 and 4 (frost stat contacts to close on temperature fall)

AVW0013


NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS Combi Option 12


Timed heating with constant DHW using internal time clock (230v) and room thermostat (Celcia 10)

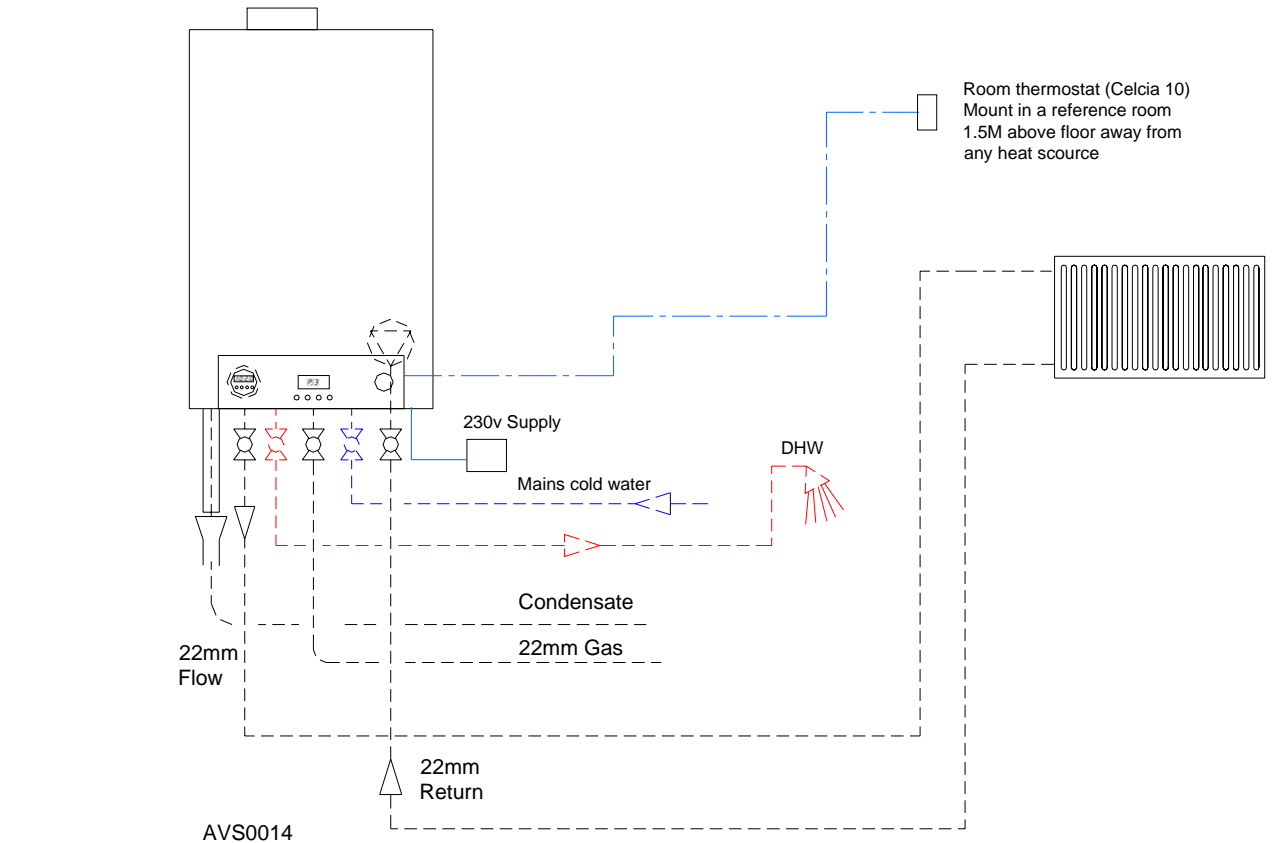


Terminal Block X6

 


Terminal Block X5

 

Terminal Block X9

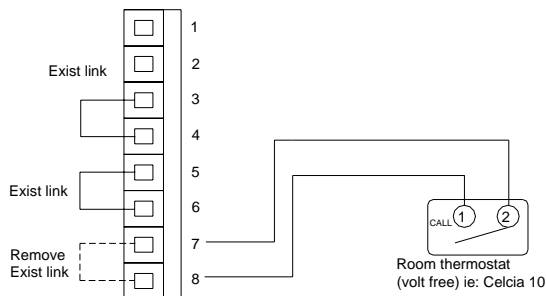

Terminal Block X2

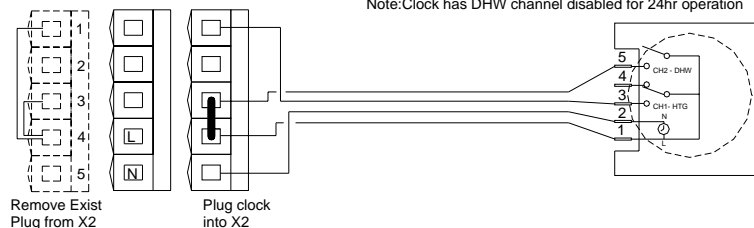


## NOTE:

With a 230v switching time clock a frost thermostat, if required, must be connected in parallel with the time clock on terminal strip X2 connectors 1 and 4 (frost stat contacts to close on temperature fall)

# AVANTA PLUS Combi Option 13

External time clock with simple weather compensated Heating and constant DHW

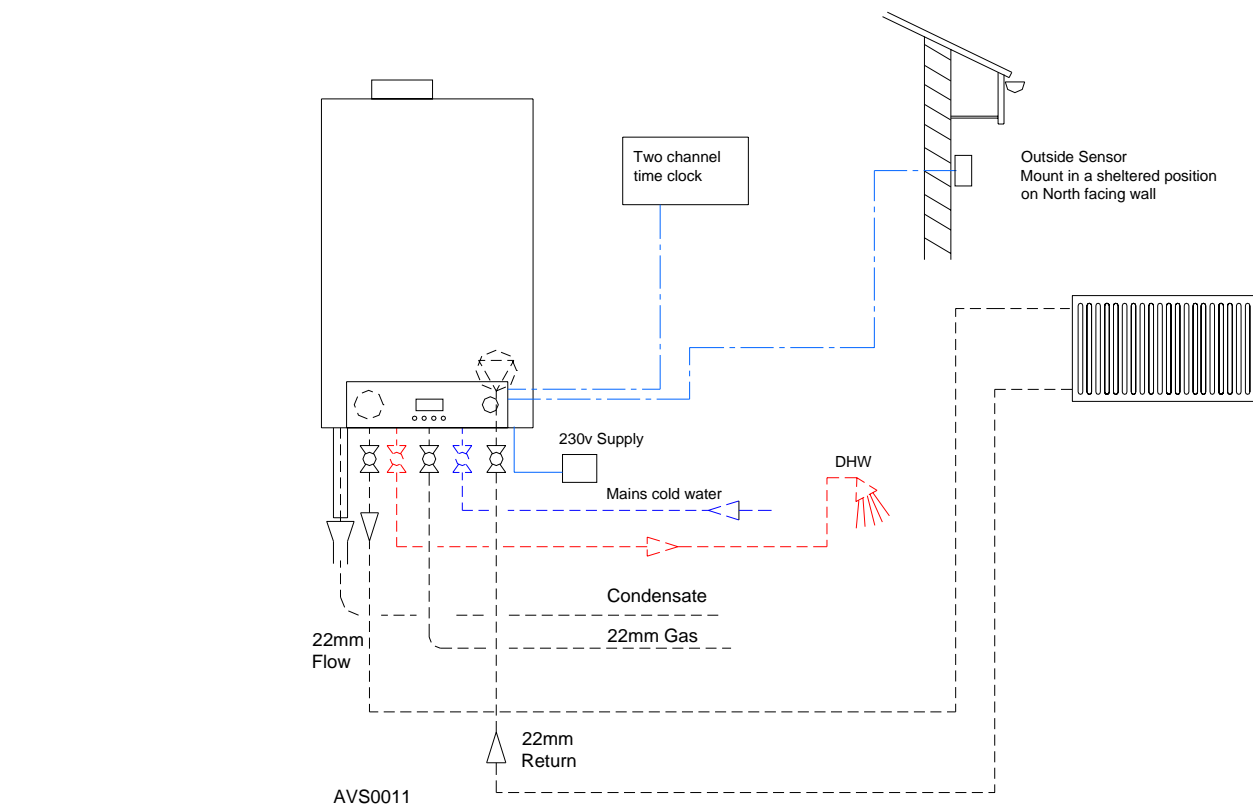


Terminal Block X6



Terminal Block X5




Terminal Block X9

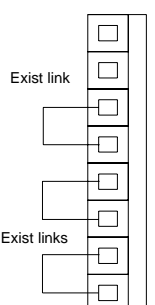

Outside Sensor (red band)

Terminal Block X2

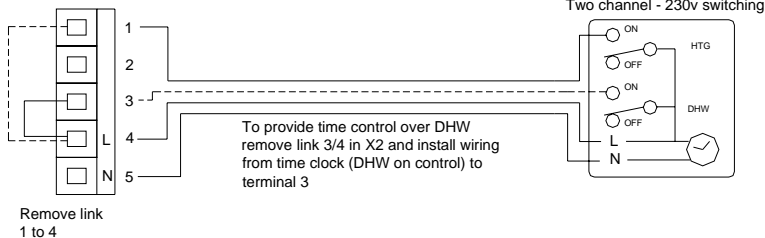


AVW0011

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS Combi Option 14

Internal time clock with simple weather compensated Heating and constant DHW

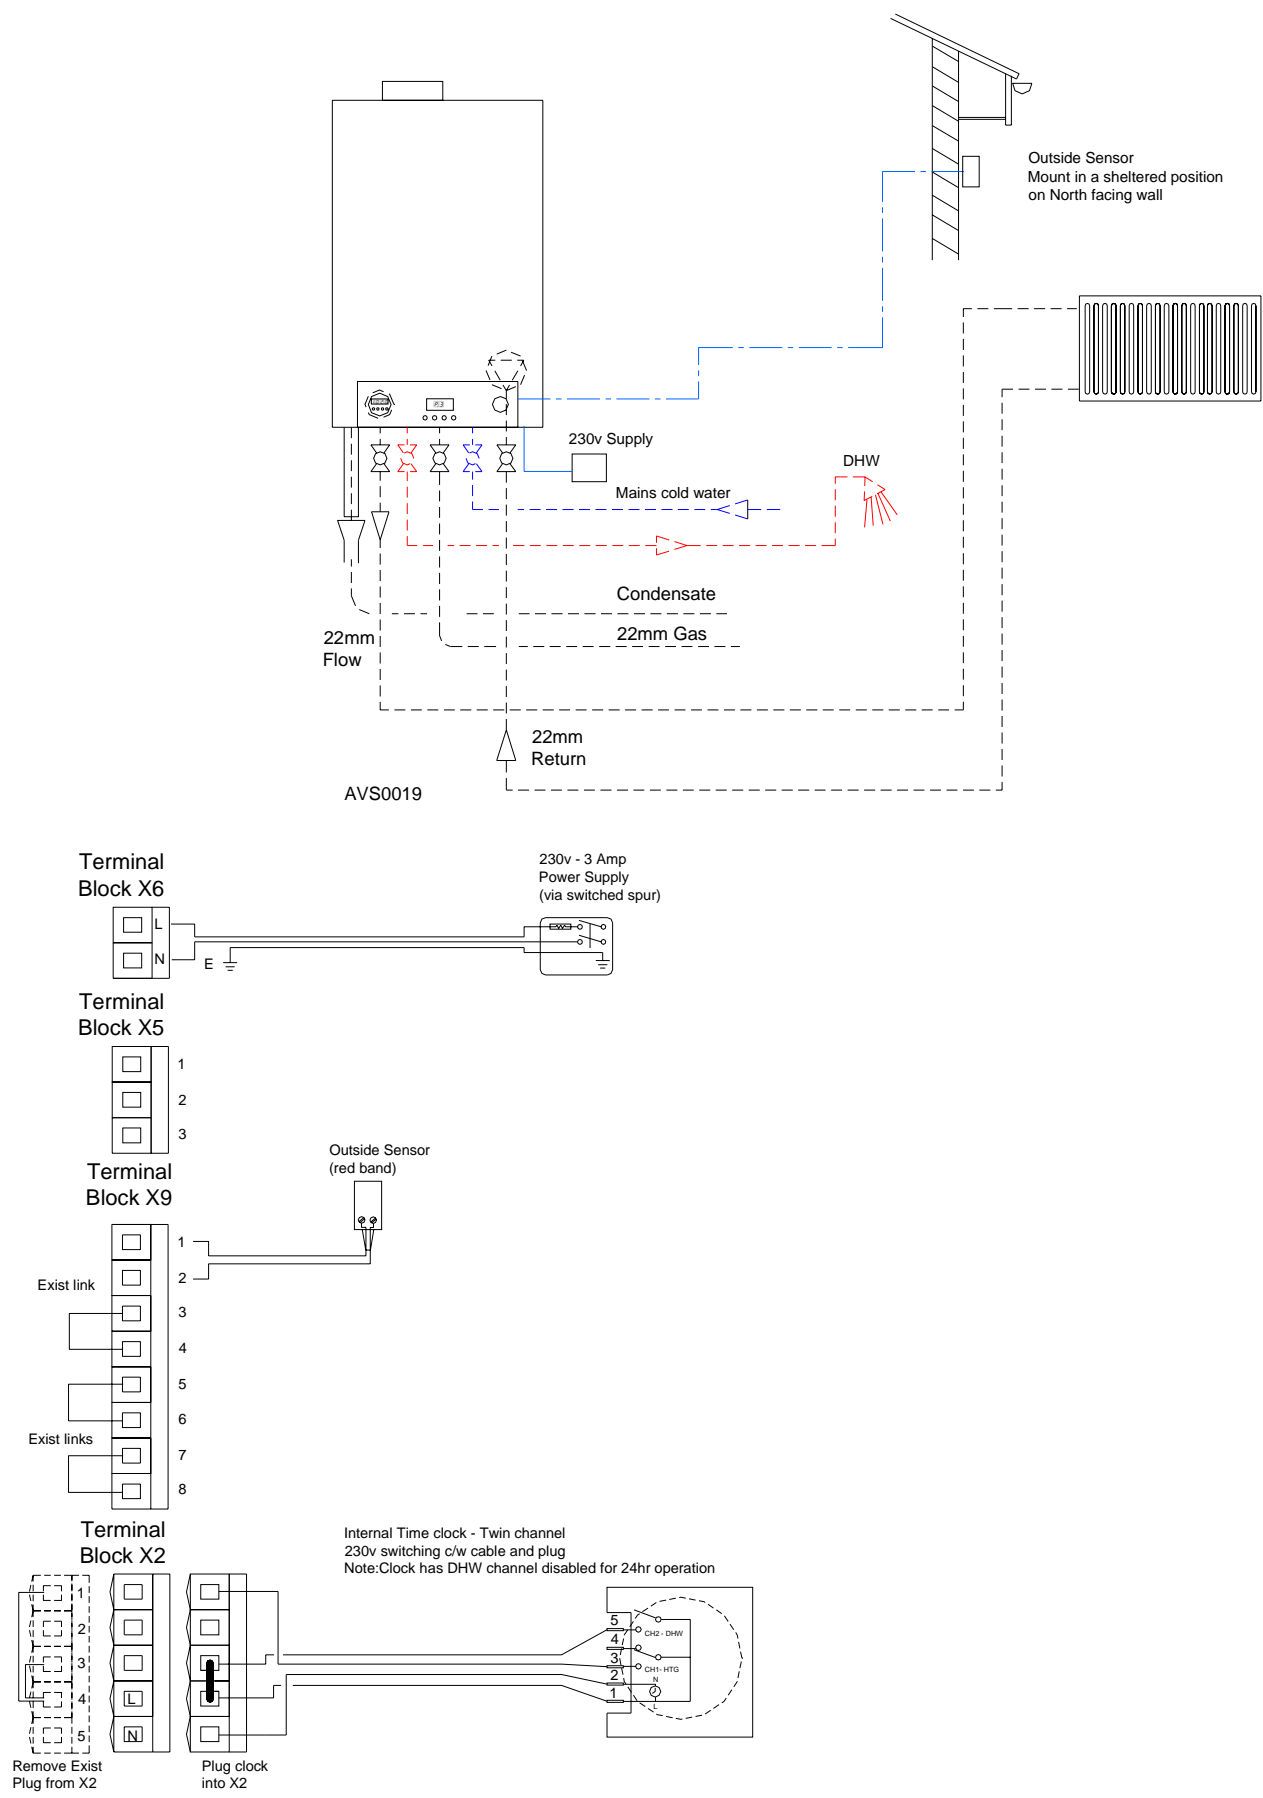


AVW0019

NOTE: Terminal blocks are not in line as shown - diagrammatic only

# AVANTA PLUS Combi Option 15

Time / Room compensated Heating using the Celcia 20 (Digital clock) and constant DHW

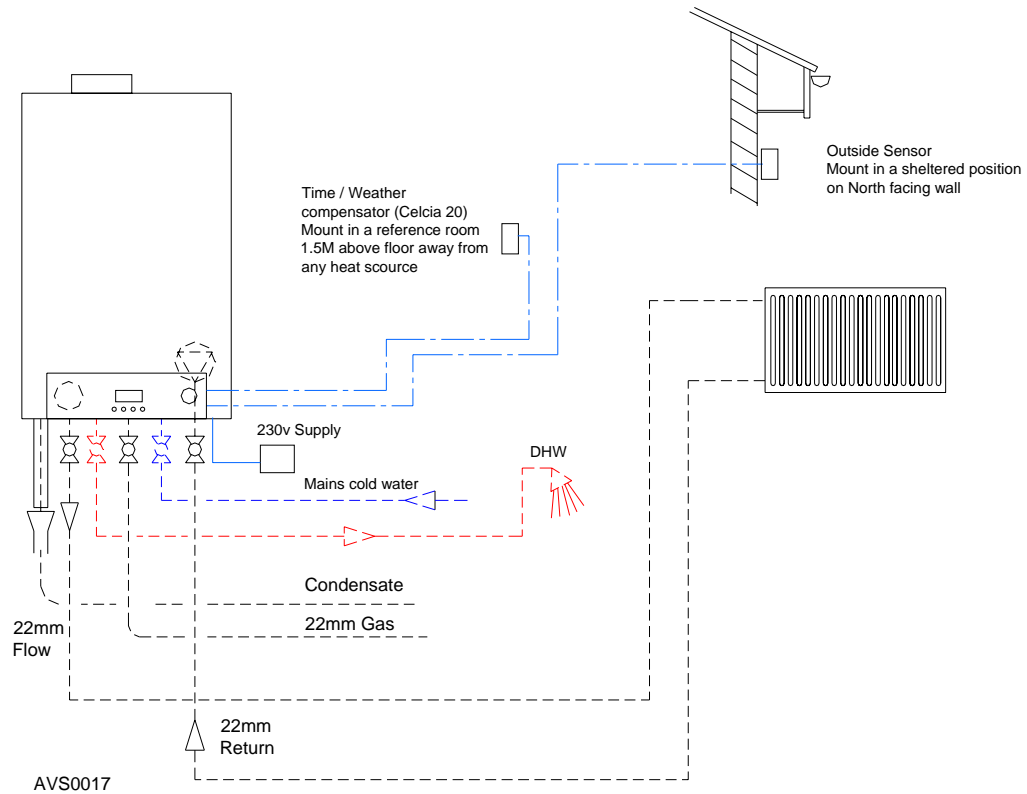


Terminal Block X6




Terminal Block X5



Terminal Block X9

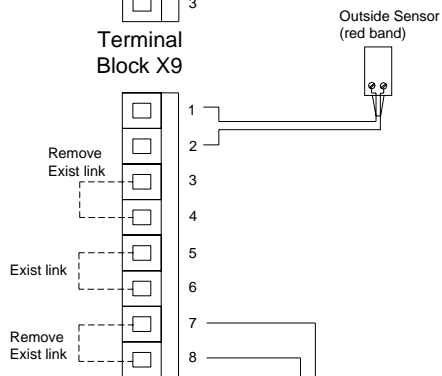

Terminal Block X2

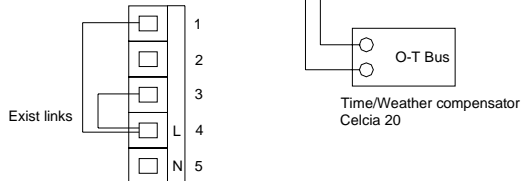


AVW0017

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS Combi Option 16


External time clock with simple room compensated Heating using the Celcia 15 and constant DHW

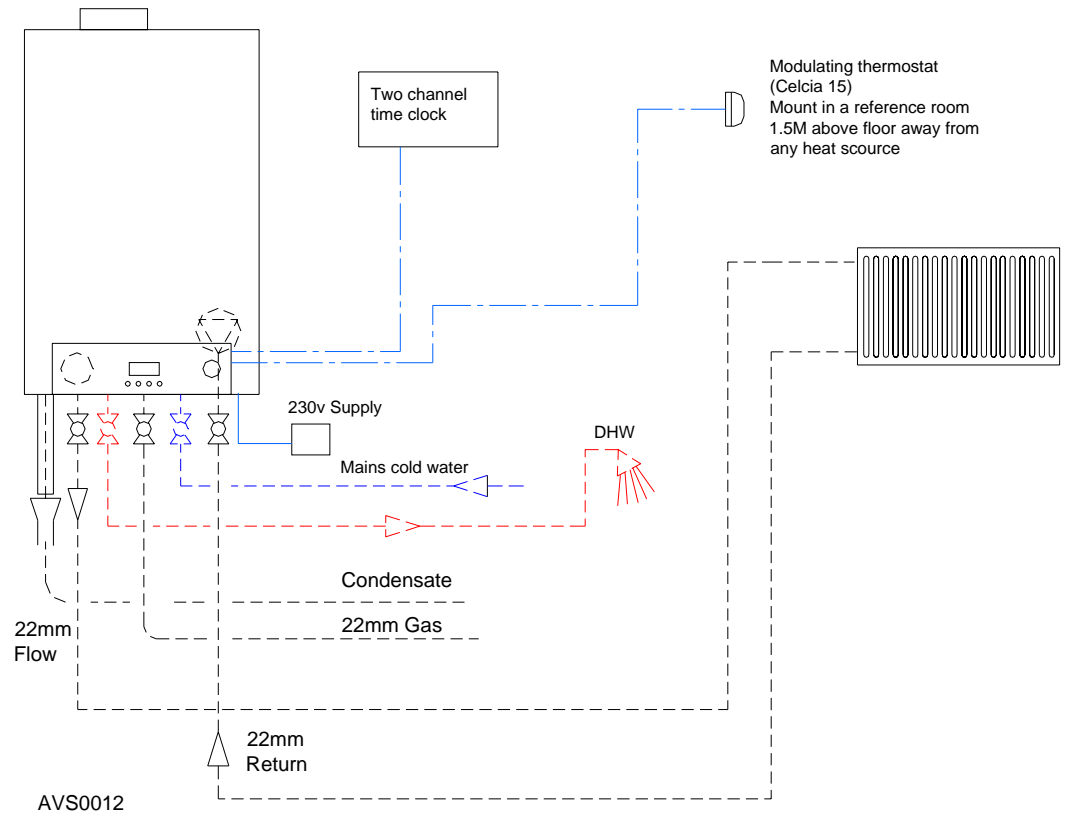


Terminal Block X6



 
Terminal Block X5



Terminal Block X9

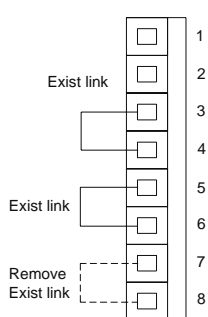

Terminal Block X2

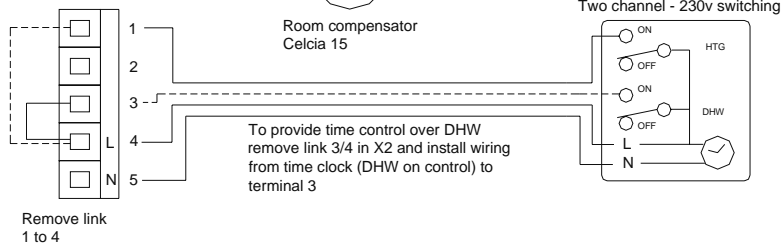

AVW0012


NOTE: Terminal blocks are not in line as shown - diagramatic only

## OTE:

With a 230v switching time clock a frost thermostat, if required, must be connected in parallel with the time clock on terminal strip X2 connectors 1 and 4 (frost stat contacts to close on temperature fall)

# AVANTA PLUS Combi Option 17


Internal time clock with simple room compensated Heating using the Celcia 15 and constant DHW

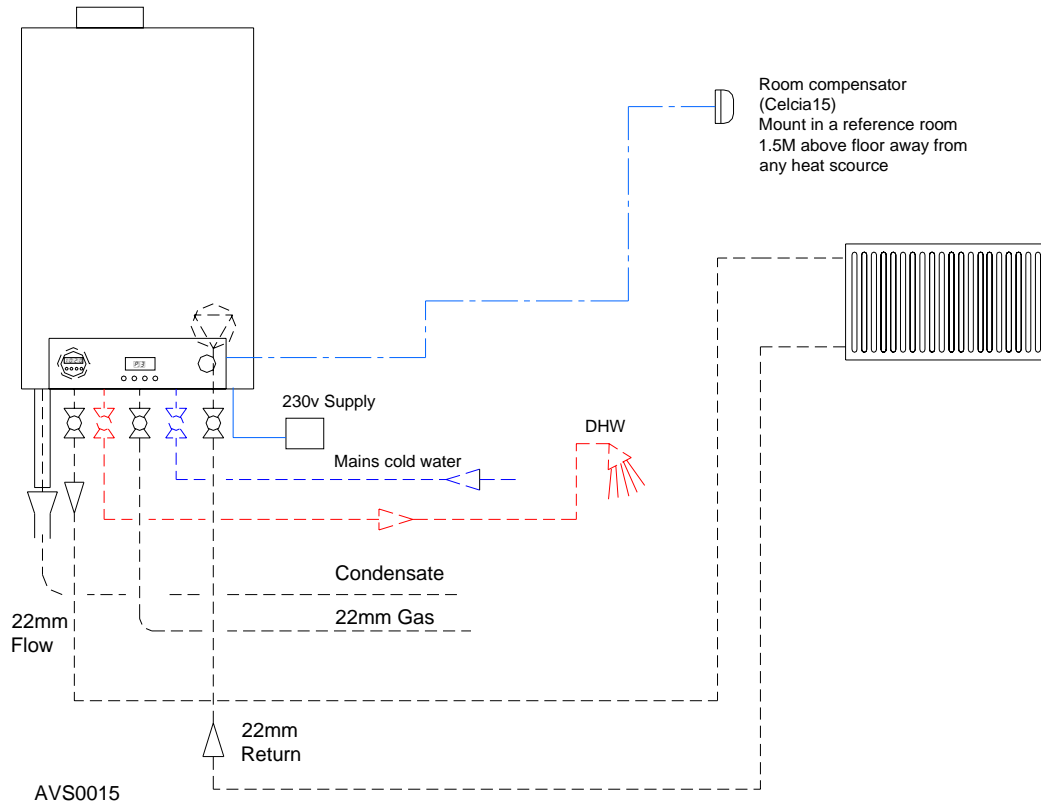


Terminal Block X6



 
Terminal Block X5



Terminal Block X9

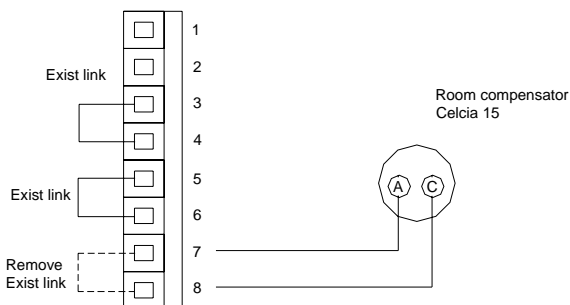

Terminal Block X2

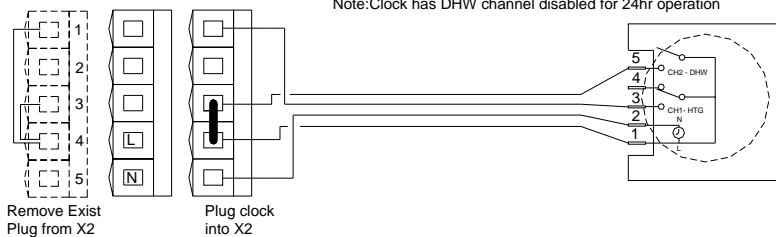


## OTE:

With a 230v switching time clock a frost thermostat, if required, must be connected in parallel with the time clock on terminal strip X2 connectors 1 and 4 (frost stat contacts to close on temperature fall)



# AVANTA PLUS Combi Option 18

Time / Room compensated Heating with Priority DHW (Celcia 20 - Digital clock)

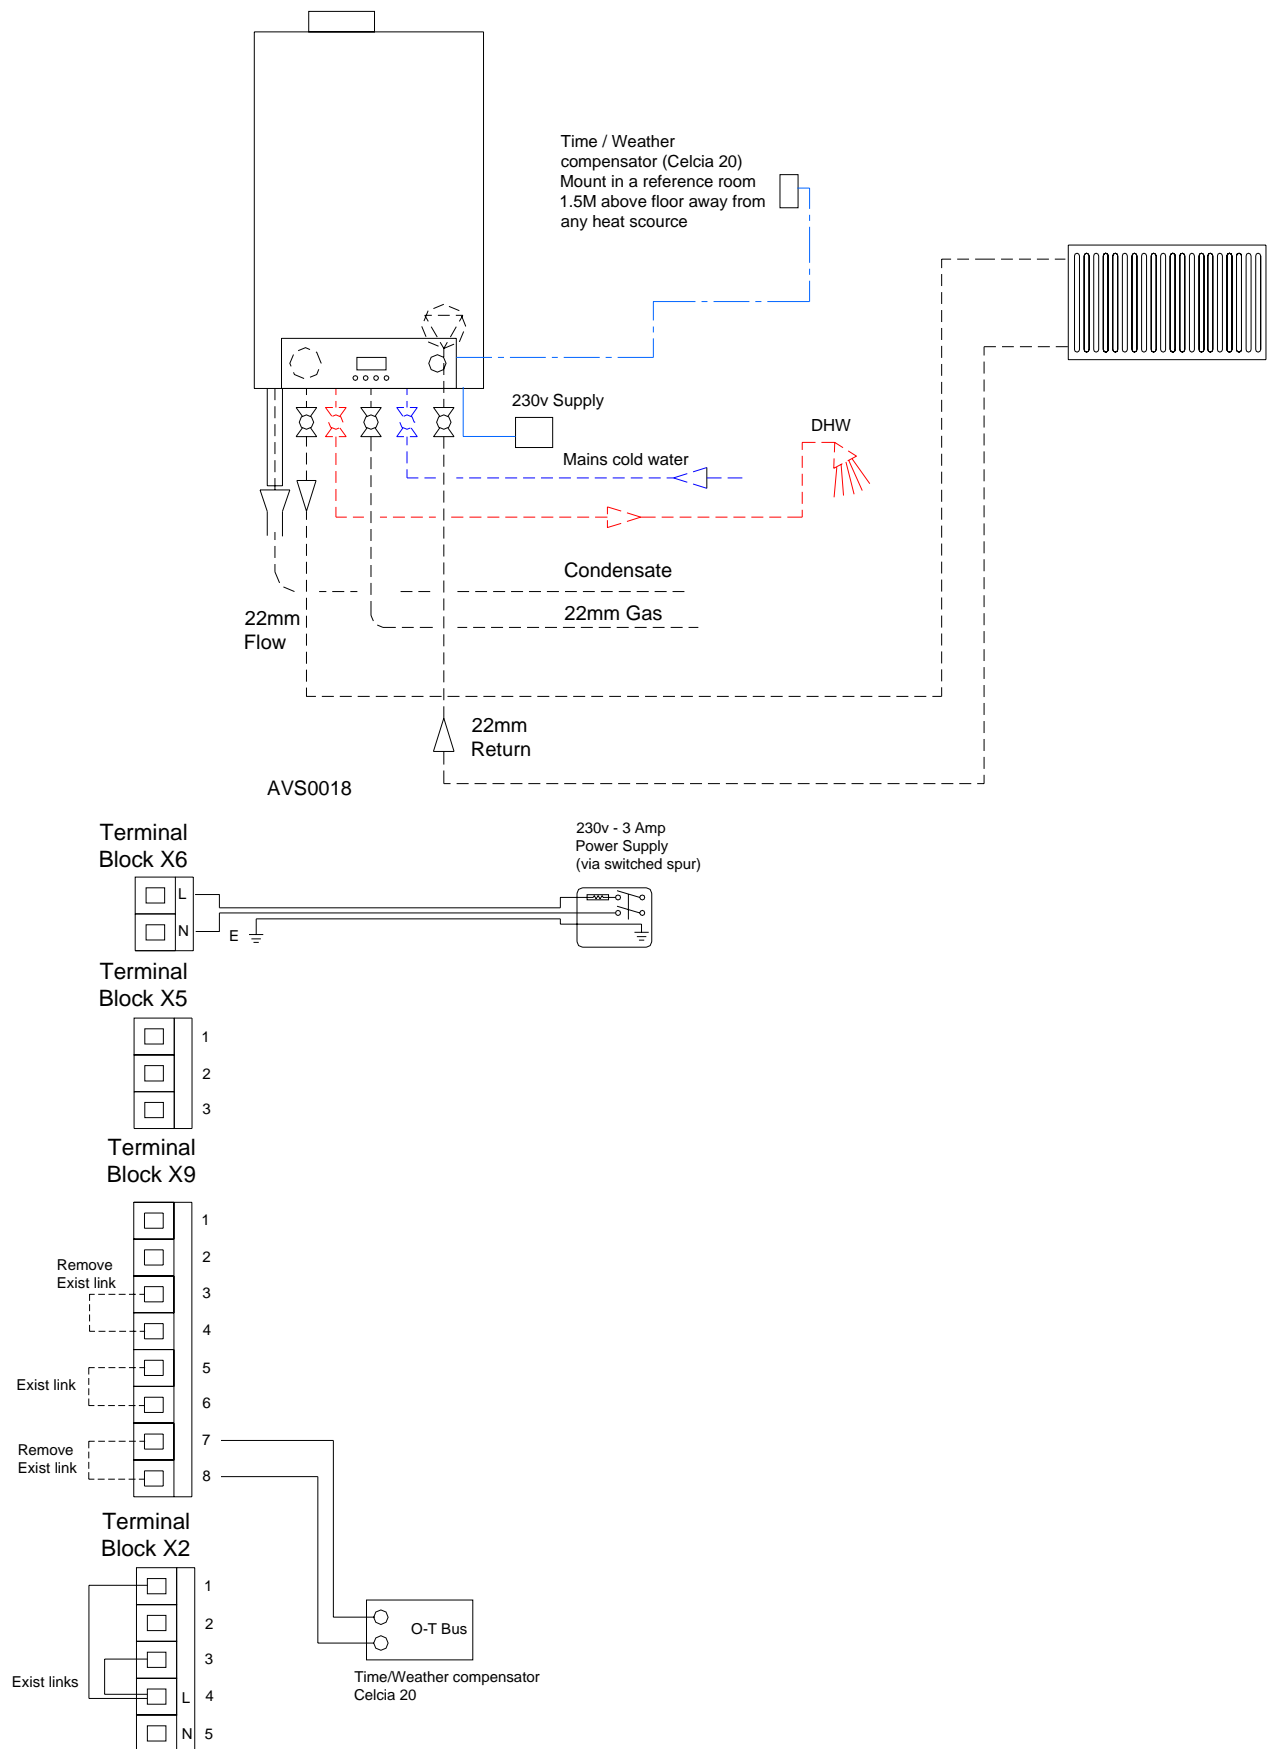


AVW0018

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA PLUS System Option 19

System boiler - Internal time clock with simple weather compensated UF Heating and priority DHW

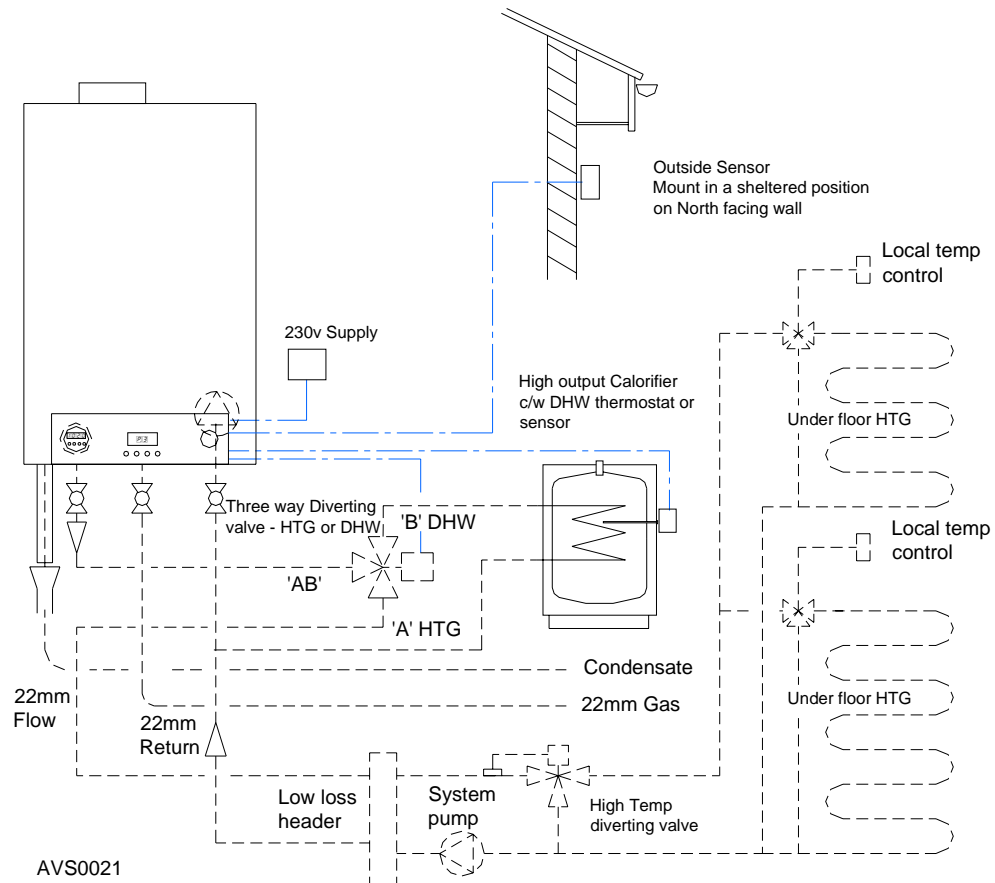


Terminal Block X6




230v - 3 Amp Power Supply (via switched spur)

 Terminal Block X5




Diverting Valve Power open to DHW Spring return to HTG

 Terminal Block X9



Outside Sensor (red band)

 


DHW Thermostat (open on rise)

Note: Option to use either Stat or Sensor

DHW Temperature Sensor (red band)

 Terminal Block X2




Internal Time clock Two channel - 230v switching c/w cable and plug

Remove Exist Plug from X2

Plug clock into X2





**NOTE:**  
High temperature protection and local temperature controls for the under floor heating system not supplied by Broag

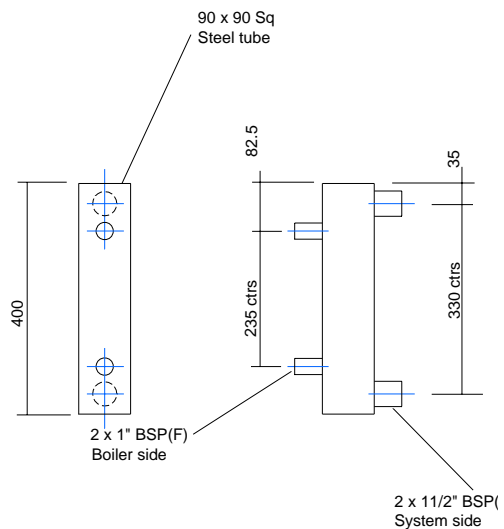


**Suggested design of a low loss header**  
Broag part No : GL001

# AVANTA PLUS Combi Option 20

Combi boiler - Internal time clock with simple weather compensated UF Heating and constant DHW

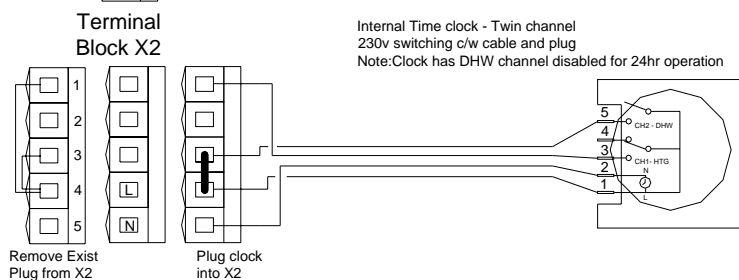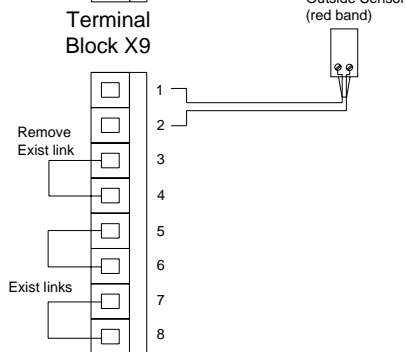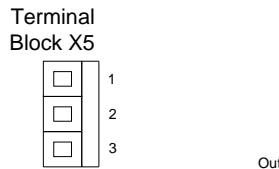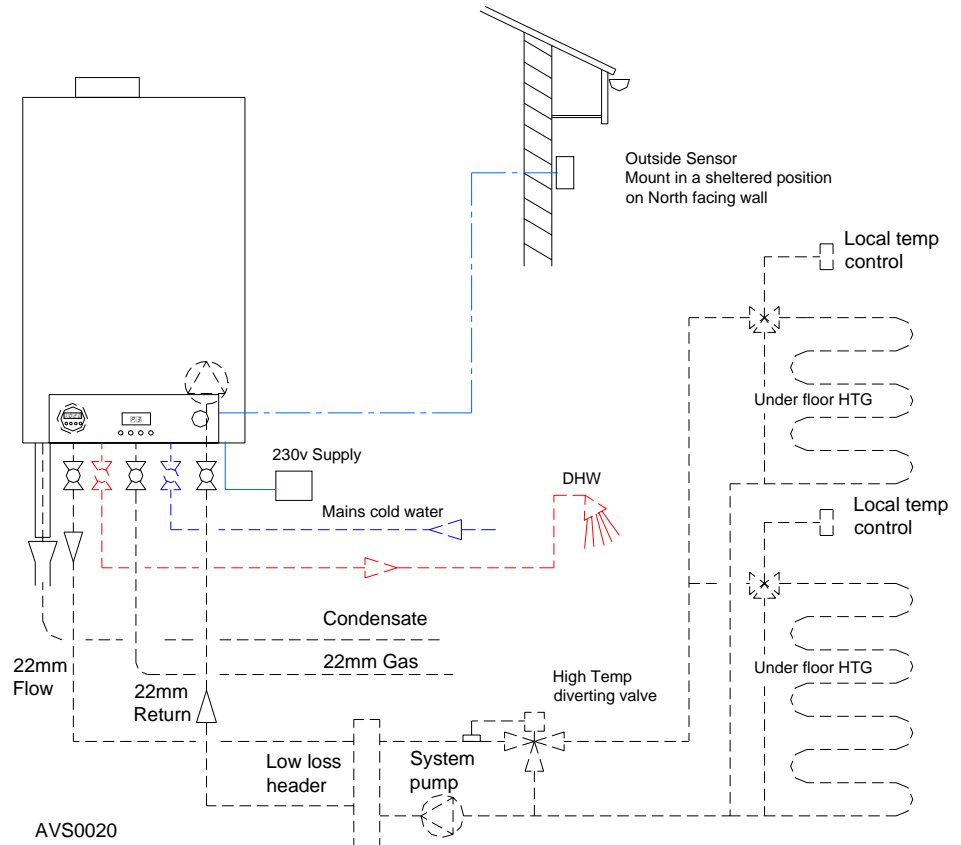



**NOTE:**  
High temperature protection and local temperature controls for the under floor heating system not supplied by Broag

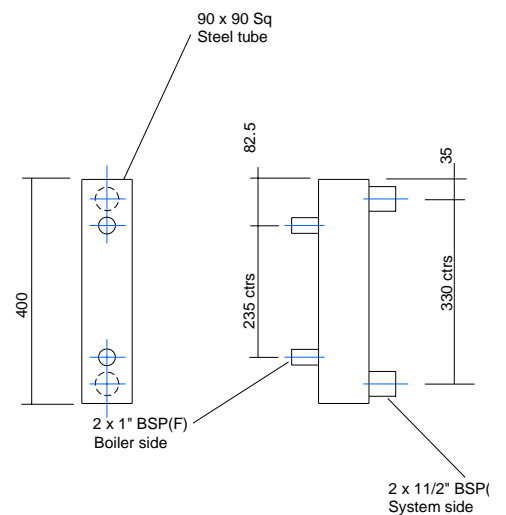

Suggested design of a low loss header  
Broag part No : GL001


# AVANTA 18v System Only - Option 1

Typical "Y" plan Heating and DHW using 230v controls

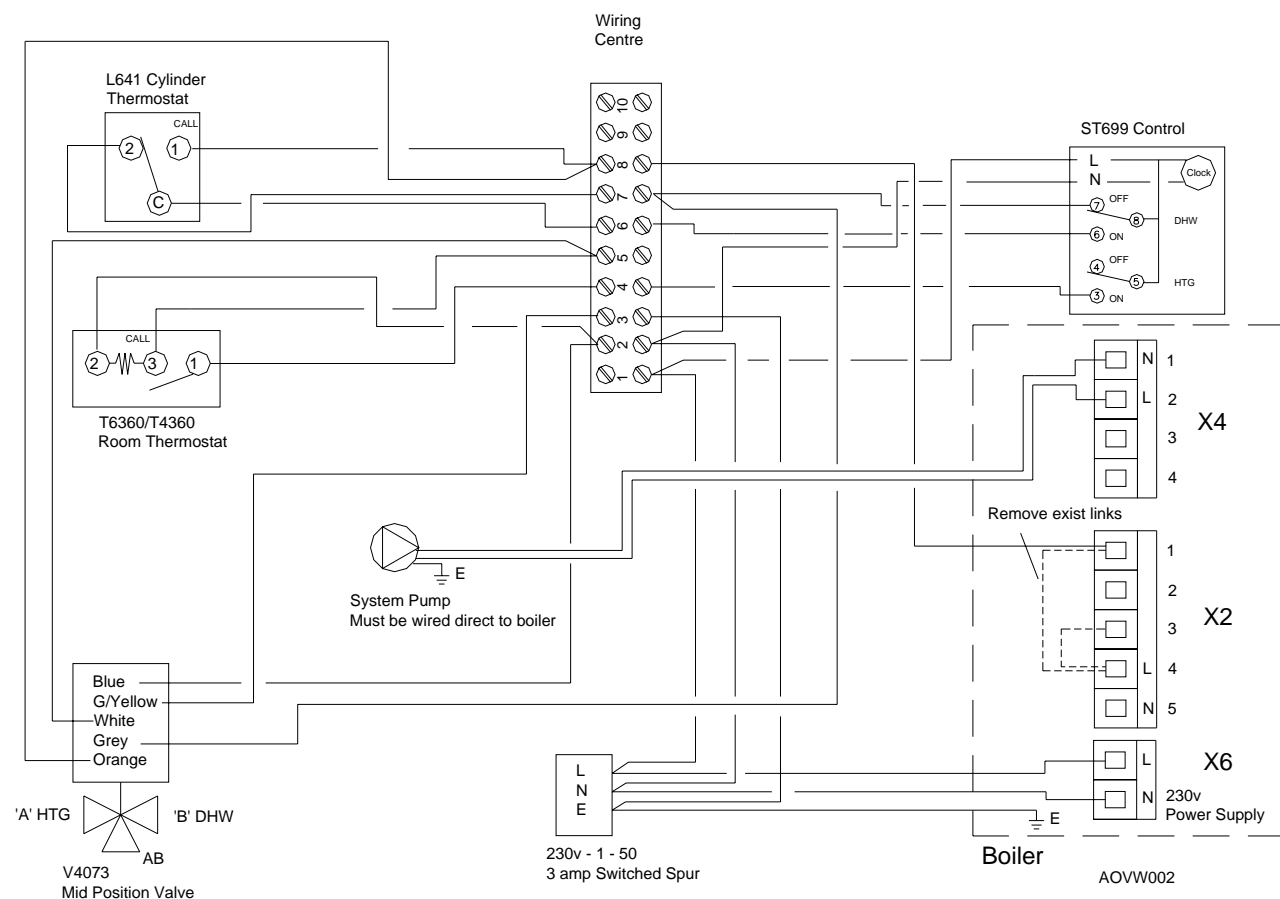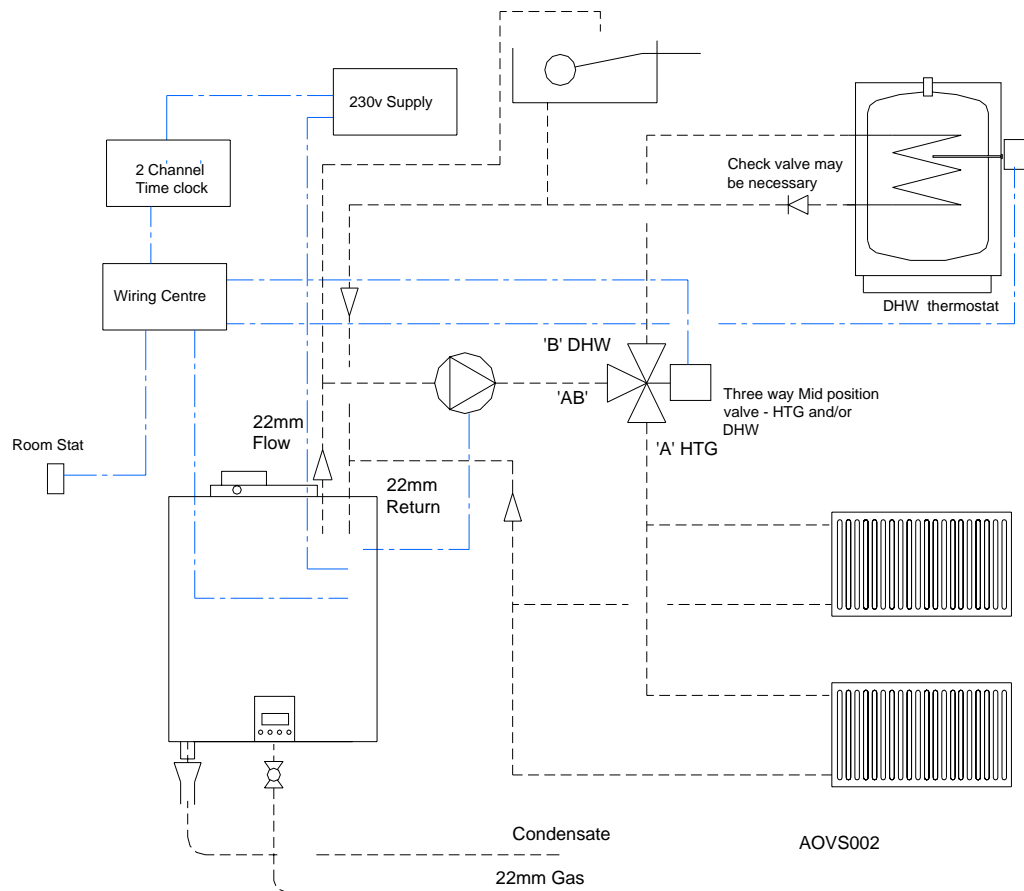



# AVANTA 18v System Only - Option 2

Typical "W" plan Heating and Priority DHW using 230v controls

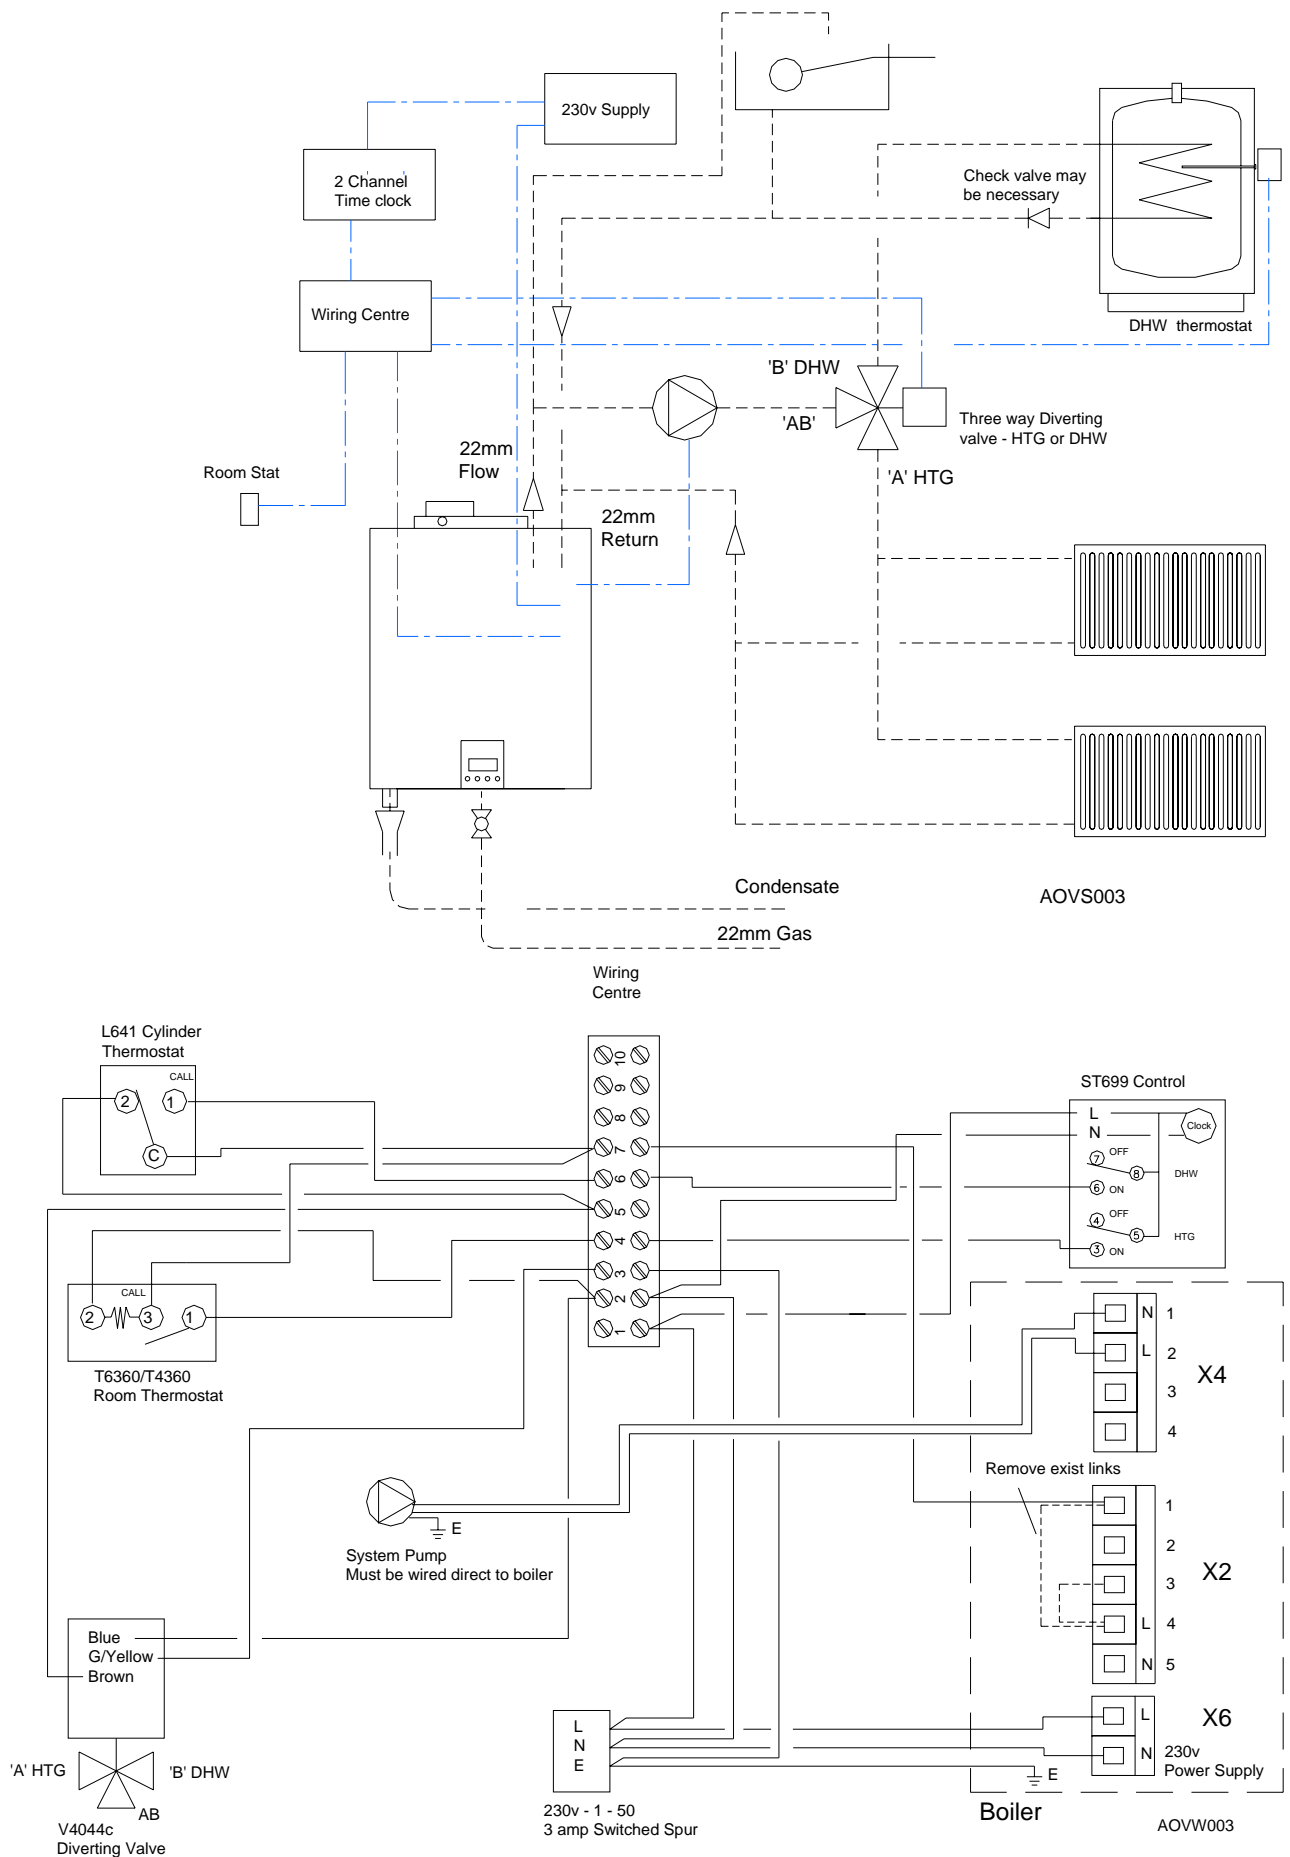



# AVANTA 18v System Only - Option 3

Typical "S" plan Heating and DHW using 230v controls

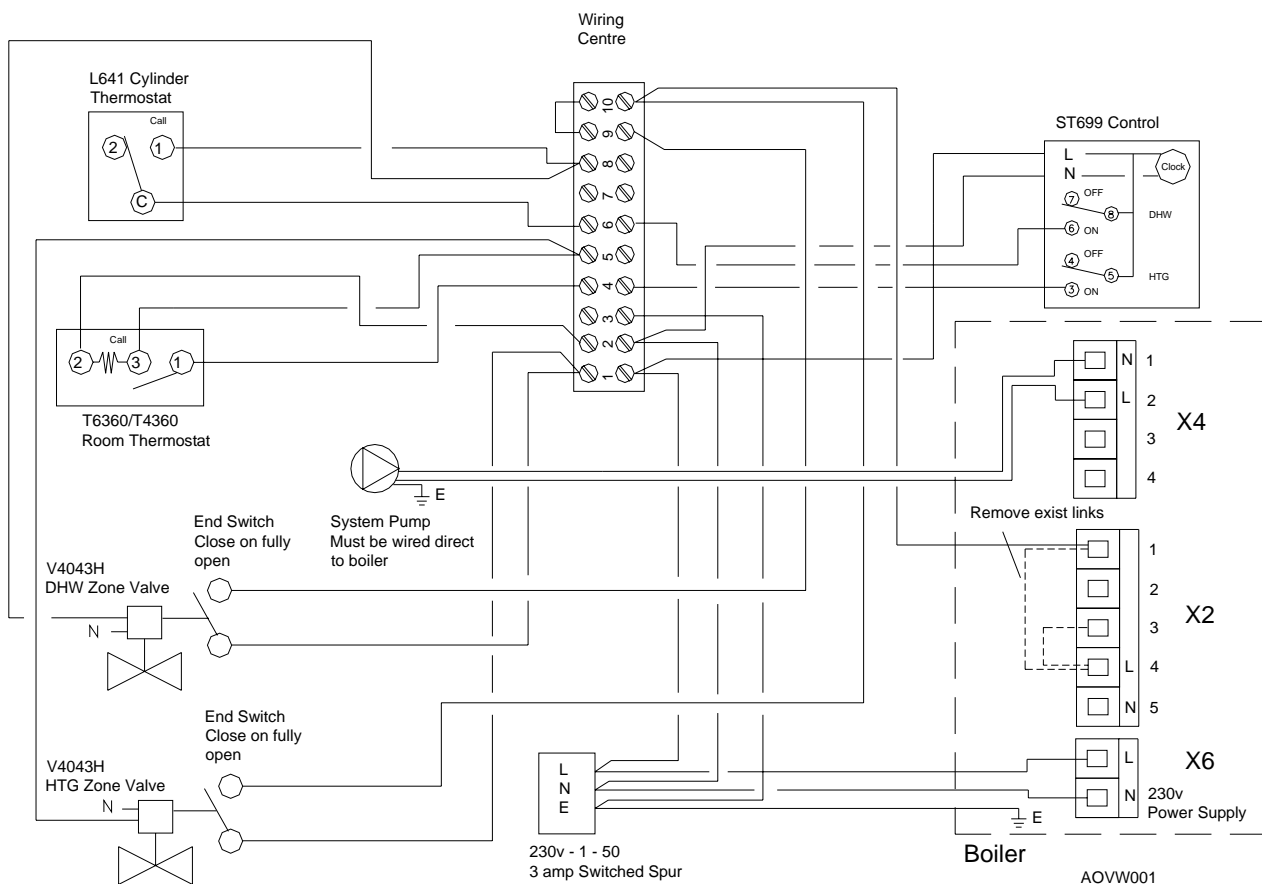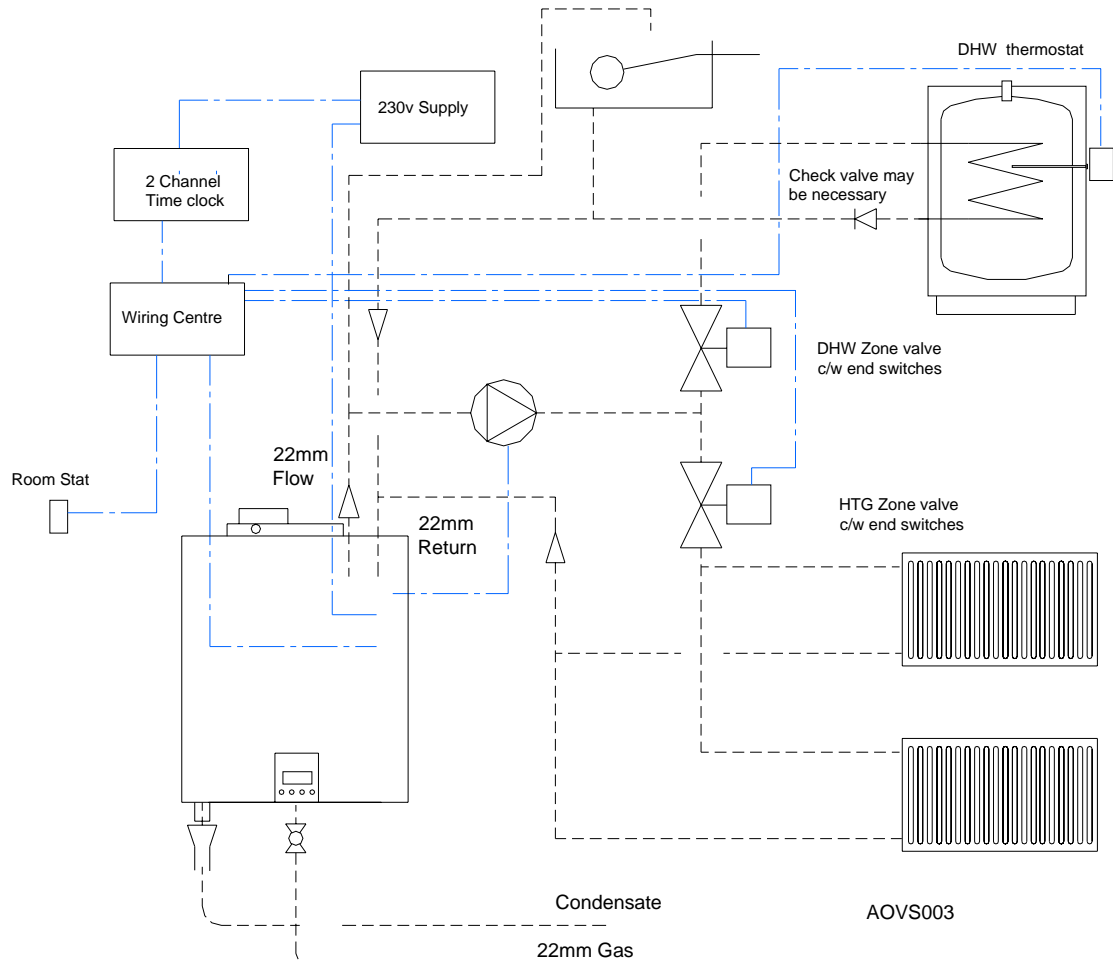

# AVANTA 18v System Only Option 4

Simple weather compensated Heating with Priority DHW

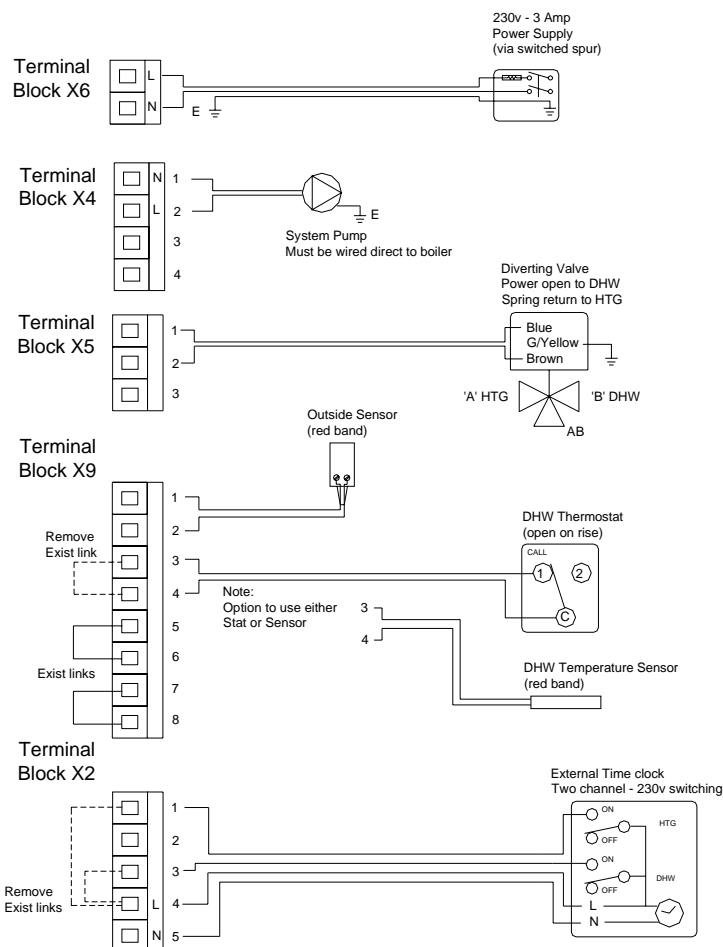
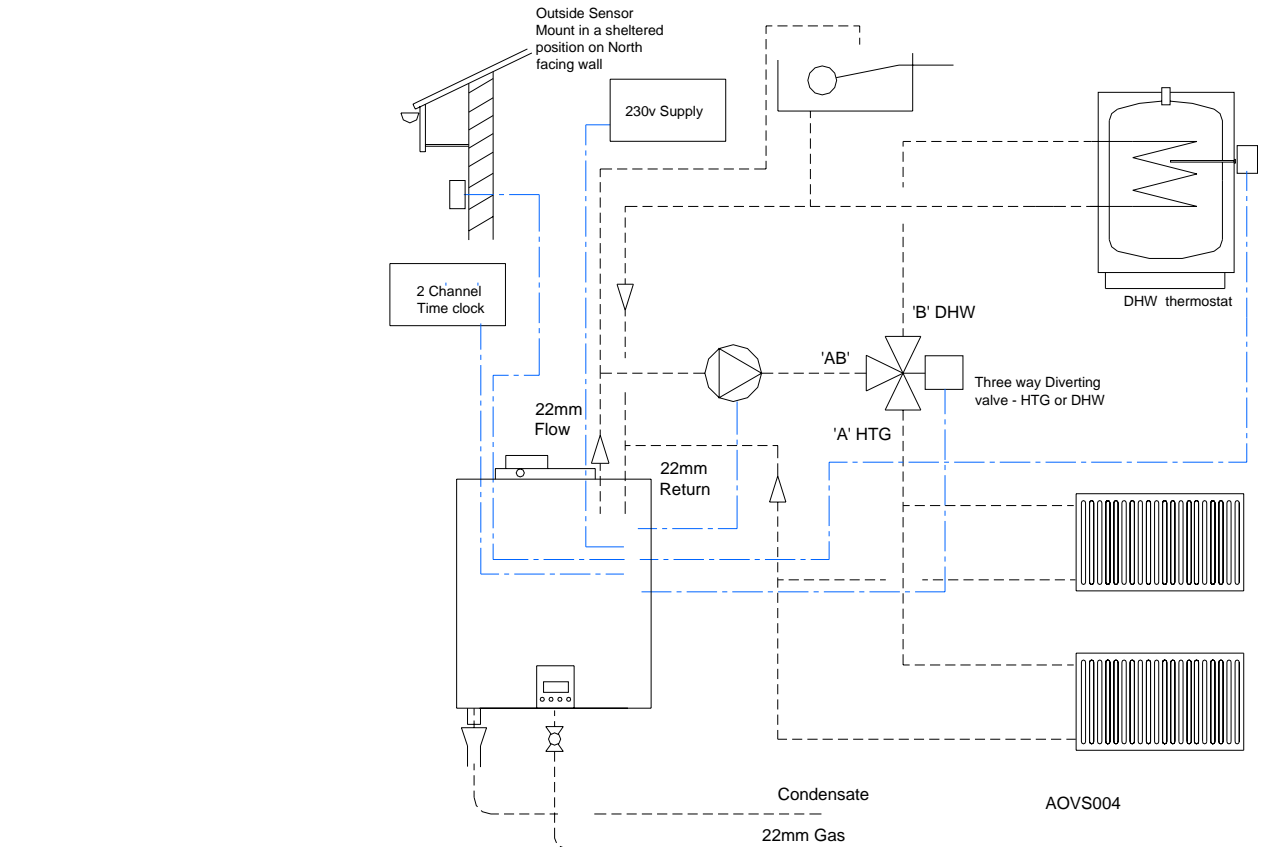


AOVW004

NOTE: Terminal blocks are not in line as shown - diagramatic only

# AVANTA 18V System Only Option 5

Simple weather compensated Heating with 230v room thermostat override and Priority DHW

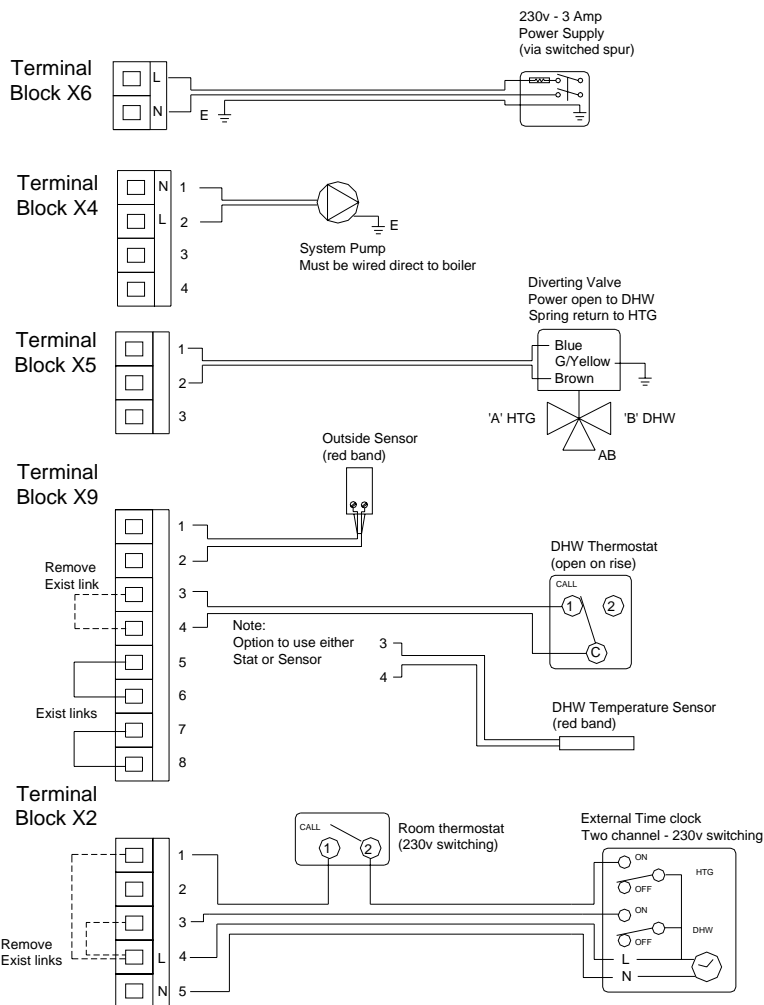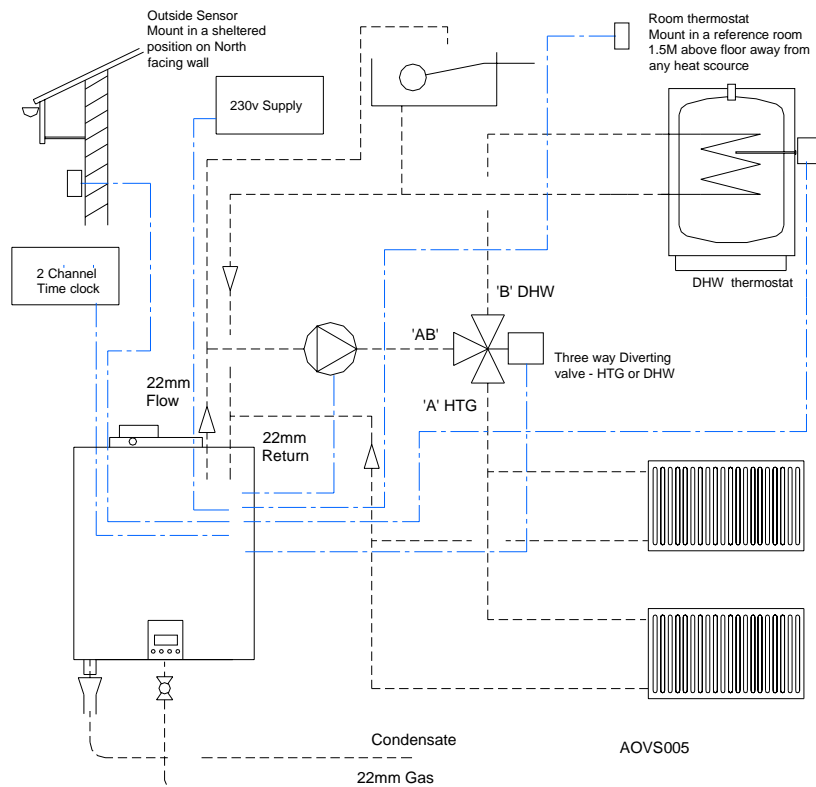


AOVW005

NOTE: Terminal blocks are not in line as shown - diagrammatic only



# AVANTA 18v System Only Option 6

Simple weather compensated Heating with volt free room thermostat override and Priority DHW

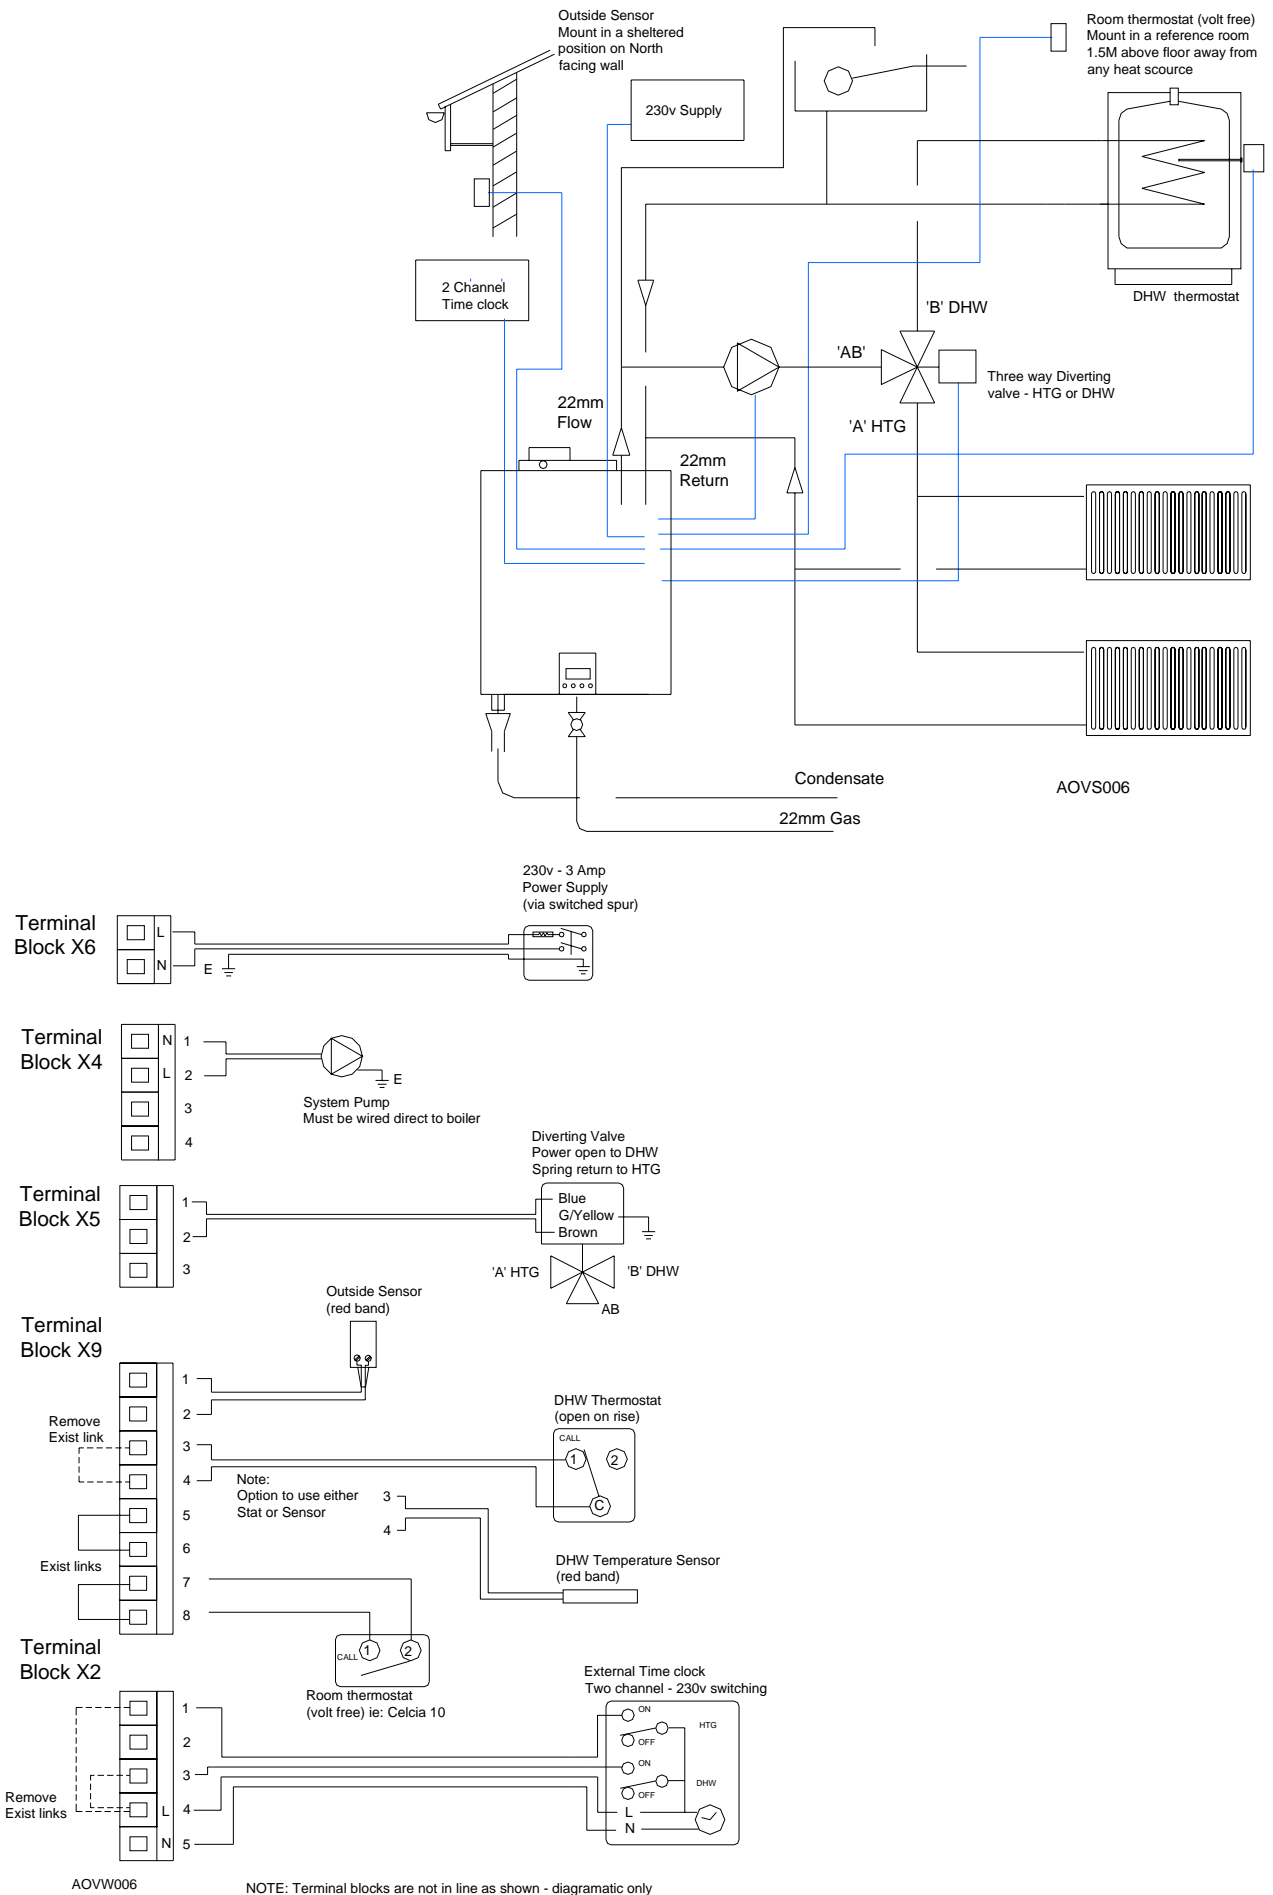





**Remeha**  
AVANTA PLUS



Head Office  
Broag Ltd  
Remeha House  
Molly Millars Lane  
Wokingham  
Berkshire RG41 2QP  
Tel : 0118 978 3434  
Fax : 0118 978 6977  
e Mail : [boilers@broag-remeha.com](mailto:boilers@broag-remeha.com)  
Web Site : [www.avantaplus.com](http://www.avantaplus.com)  
[www.uk.remeha.com](http://www.uk.remeha.com)

The schematics in this brochure are for guidance only and do not constitute a design  
The content in this brochure is based on the latest information available at date of  
publication and may be subject to revisions.

We reserve the right to continuous development in both design and manufacture,  
therefore any changes to the technology or equipment employed may not be retrospective  
nor may we be obliged to adjust earlier supplies accordingly

File location: G:\Marketing\Publisher\Literature\Avanta plus\Issue 5 - Schematics Booklet

**Art No : 113046**

