



ELECTRONIC IGNITION - AUTOMATIC MODULATING BOILER

FANNED COMBI RSF 82E - RSF 82ET

WITHOUT TIMER
RSF 82E G.C. N° 47 581 18
NATURAL GAS (G 20)

British Gas

Tested, certified and
service listed




Listed by The United Kingdom Water
Fitting Byelaws Scheme

CE 0087



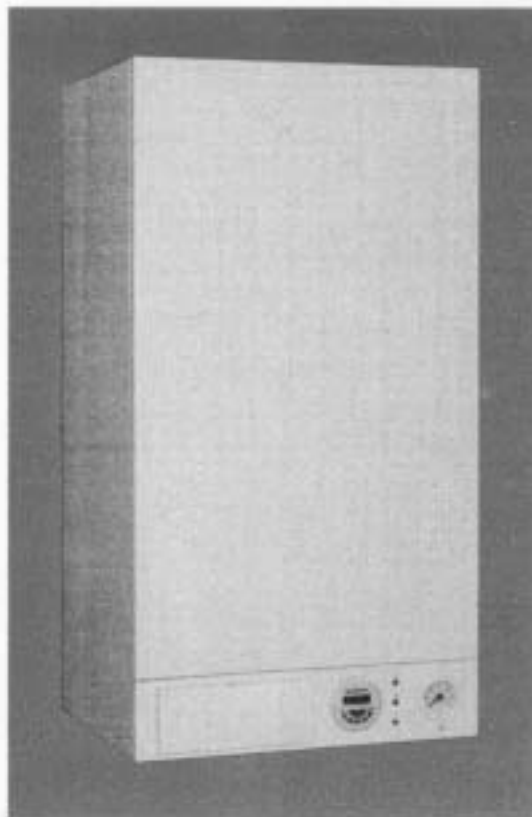WITH TIMER
RSF 82ET G.C. N° 47 581 04
NATURAL GAS (G 20)



INSTALLATION AND SERVICING INSTRUCTIONS TO BE LEFT WITH USER



*The code of practice for the installation,
commissioning & servicing of central heating systems*

**Technical and illustrative data are not binding and can be modified without prior notice.
The descriptions and illustrations in the present booklet are for guideline purposes only.**

RAVENHEAT MANUFACTURING LTD., CHARTISTS WAY, MORLEY, LEEDS, LS27 9ET. - TELEPHONE (0113) 252 7007

ELECTRONIC IGNITION - AUTOMATIC MODULATING BOILER.

FOR CENTRAL HEATING AND DOMESTIC HOT WATER

This new high efficient turbo-modulating boiler is designed to meet domestic hot water and central heating requirements at super high efficiency, unheard of only a few years ago.

POSITION

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed, there is no contact between combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Indeed, our depression/combustion front cover has been designed to fit achieving maximum air tight seal using screw down fasteners at 15 cm. This should not hinder service of the appliance, but does ensure maximum efficiency and safety - something which Ravenheat take great pride in.

Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. Technical sales and commercial service are available throughout the UK. This product is guaranteed by Ravenheat Manufacturing, Chartist Way, Morley, LEEDS, LS27 9ET. Telephone No 0113 2527007.

BASIC COMPONENTS - (See figure 1)

Guarantee is a full 12 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

MAJOR COMPONENTS

Gas valve with flame modulator.

Variable head pump suitable for any type of central heating system.

Main burner with flame stabiliser designed to operate under all thermal conditions.

Double parallel heat exchanger which, for domestic hot water uses, the "countercurrent" system, offering high thermal exchange and durability.

High reliability diverter valve with ethylene propylene diaphragm permitting primary fluid circulation in the boiler during D.H.W. supply. This gives maximum heat exchange, improved efficiency and exceptionally silent operation.

Built in frost protection.

Printed circuit board designed to connect to room stat and/or timer/frost stat.

Aesthetically pleasing panels and controls.

On/Off ball valves for shutting off gas central heating and domestic hot water circuits.

Safety relief valve (for safety discharge).

Programmable 7 day module with digital display (optional model).

All front panel controls not often used have been hidden. This achieves simplicity of operation with easy to clean panels.

COSHH - CONTROL OF SUBSTANCES HARMFUL TO HEALTH

IMPORTANT

This appliance contains materials that are indicated below.

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling, where applicable, the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

WARNING When installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts,

GENERAL INFORMATION:

GLUES AND SEALANTS - exercise caution - if these are still in liquid form.

INSULATION PADS, CERAMIC FIBRE - may be harmful if inhaled, may be irritating to skin, eyes, nose and throat.

When handling keep dust generation to a minimum, avoid inhaling and contact with skin or eyes.

When disposing of the product keep dust generation to a minimum and ensure that parts are securely wrapped.

When servicing avoid inhalation by using a vacuum cleaner or in conjunction with other tools,


After handling wash hands and other exposed parts.

RAVENHEAT use only high quality material for production of this product, in an effort to protect the environment components should be re-cycled.

TABLE OF CONTENTS

SECTIONS:		PAGE:
1	INTRODUCTION	6
2	DESIGN PRINCIPLES AND OPERATING SEQUENCE	6
3	TECHNICAL DATA	8-9-10
4	GENERAL REQUIREMENTS	11
5	INSTALLATION	16
6	COMMISSIONING	25
7	SERVICING INSTRUCTIONS	30
8	FAULT FINDING	43
9	ELECTRICAL SYSTEM DIAGRAM	45
10	EXPLODED PARTS DIAGRAM	47
11'	LIST OF SPARE PARTS	48

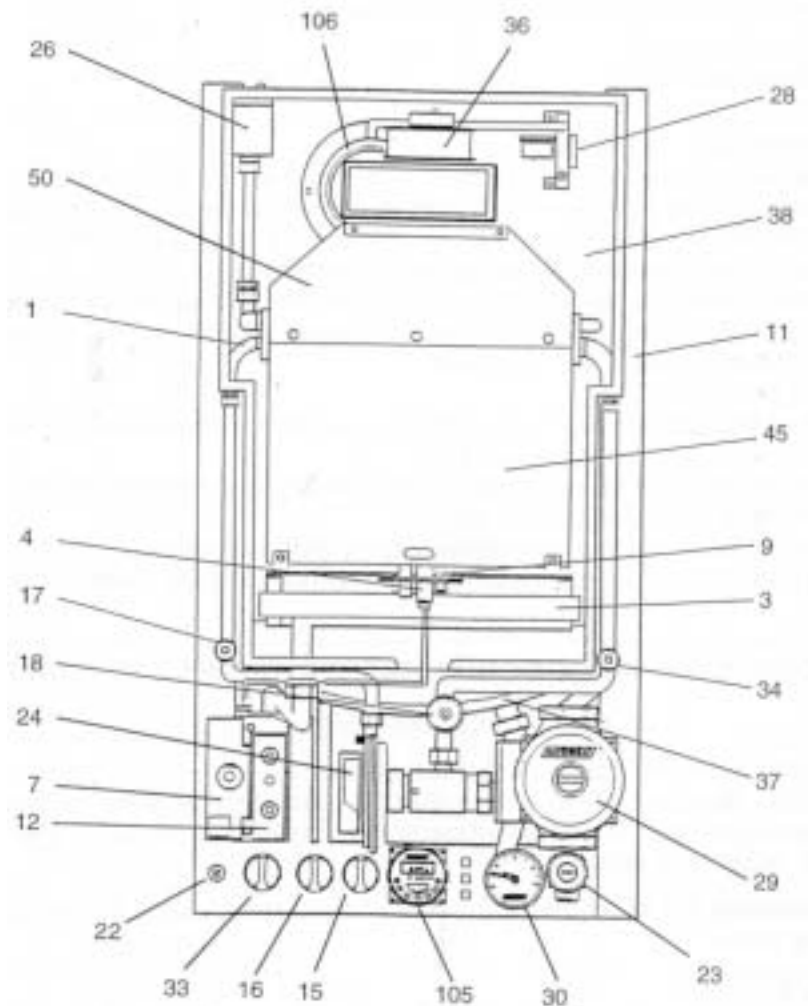GENERAL LAYOUT



KEY

1 - Heat exchanger	17 - DHW sensor	33 - Main switch
3 - Burner	18 -Water pressure switch (heating circuit)	34 - C.H. Sensor
4 - Pilot burner	22 - Overheat cut off thermostat	36 - Fan
7 - Ignition board	23 - Safety relief systems	37 - Expansion tank
9 - Ignition electrode	24 -Three way valve	38 - Sealed chamber
11 - Frame	26 - Auto air vent valve	45 - Combustion chamber
12 - Modulating gas valve	28 -Air pressure switch	50 - Flue gas exhaust hood
15 - Heating control	29 - Circulation pump	105 - Timer
16 - Hot water control	30 -Water pressure gauge	106 -Air restriction ring

OPERATING SCHEME

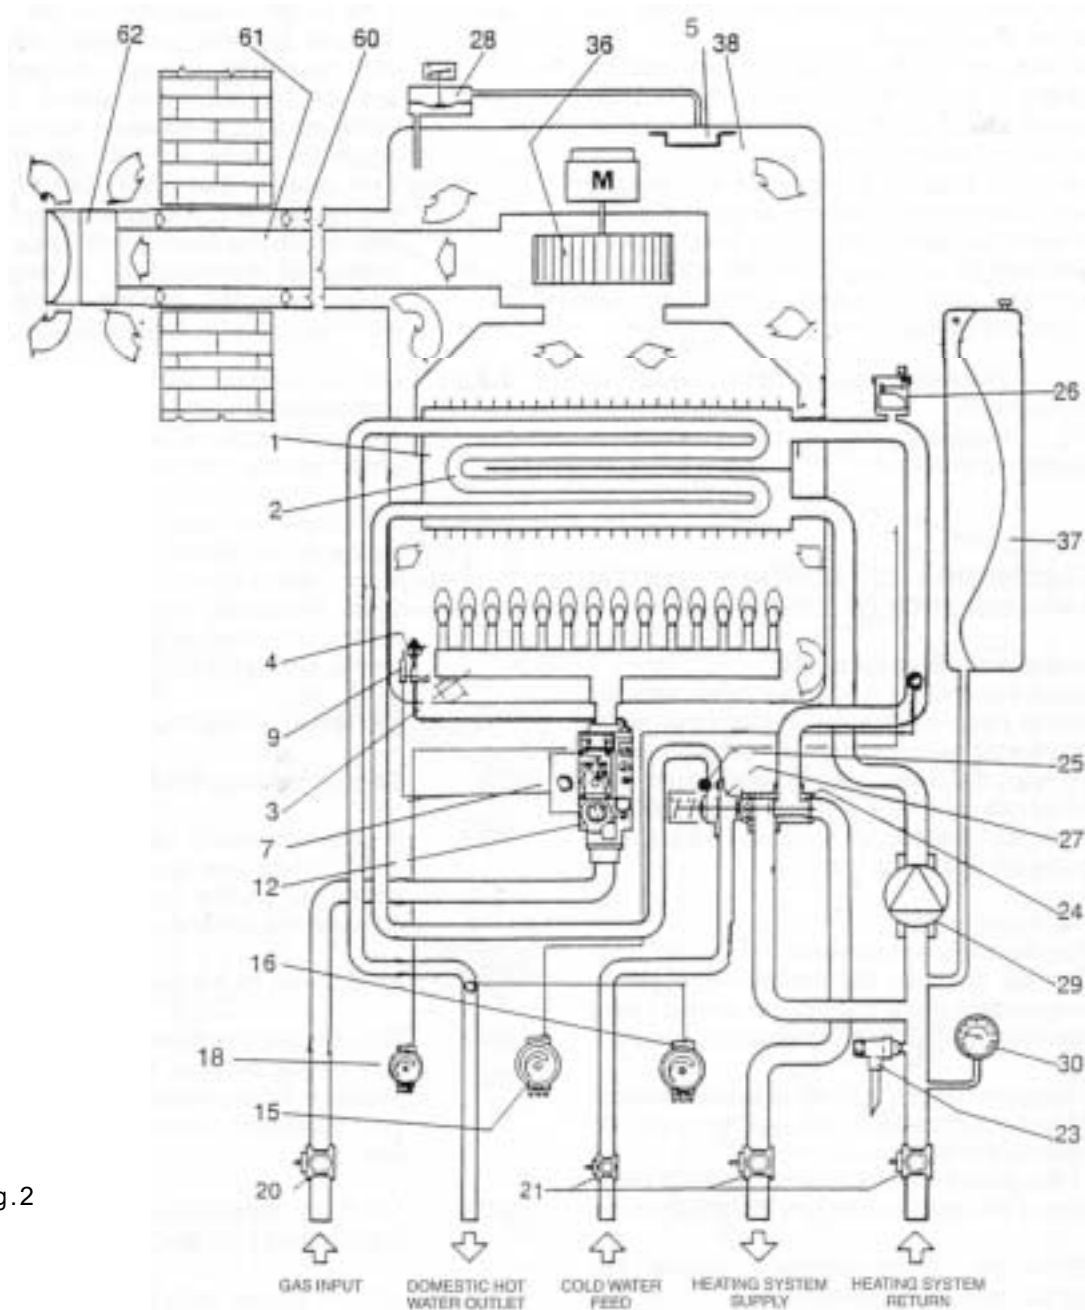


Fig.2

KEY

- | | | |
|-------------------------------------|---|---------------------------|
| 1 - Heat exchanger | 16 - Hot water control | 28 - Air pressure switch |
| 2 - Heat exchanger for D.H.W. water | 18 - Overheat cut-off thermostat | 29 - Circulating pump |
| 3 - Burner | 20 - Gas service cock | 30 - Water pressure gauge |
| 4 - Pilot burner | 21 - Compression ball valves | 36 - Fan |
| 5 - Air restriction ring | 23 - Safety relief system | 37 - Expansion tank |
| 7 - Electronic ignition | 24 - Three way valve | 38 - Sealed chamber |
| 9 - Ignition electrode | 25 - Flow regulator | 60 - Air intake duct |
| 12 - Modulating gas valve | 26 - Auto air vent valve | 61 - Flue duct |
| 15 - Heating control | 27 - D.H.W. Pressure switch giving priority | 62 - Terminal |

SECTION 1 INTRODUCTION

- 1.1 The Ravenheat boiler is for the use of central and domestic hot water combined in one unit.
It is fitted with an automatic domestic hot water priority valve.
A (winter/summer) selector switch is fitted to the left hand side of control panel. With the only (summer) position being for domestic hot water.
position being for central heating with domestic hot water priority. The boiler is equipped with a front cover which can be removed for servicing. The data badge with technical data is placed on the lower left hand side of the frame.
- 1.2 Fig. 1 Illustrates the general layout of components.
Fig. 2 Illustrates the operating principles described in section 2.

SECTION 2

2.1 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION

2.2 Domestic hot water mode

When the appliance is in rest mode with the mains neon switch on. Switch the summer/winter switch in the position, making sure the heating circuit is charged with water (above 1 bar). When the domestic hot water tap is turned on, the boiler will function in the following sequence:

- 2.2.1 The pump starts.
The control board sensors.
The fan operates via the pressure switch and sends a signal back to the ignition board that the fan is running at maximum speed.
- 2.2.2 The spark ignition system is powered which in turn commences the spark igniter to operate and light the burner.
At this point the ignition board opens the first step of the gas valve to light the pilot/burner.
- 2.2.3 When the electrode/sensor senses the signal from the pilot/burner, it opens the second stage of the gas valve via the ignition board on minimum power. Upon the second valve opening the spark igniter stops.
- 2.2.4 From the minimum gas rate setting the boiler increases to the maximum permissible pressure over a period of 3 to 4 seconds and will remain at its maximum required power until its maximum regulated temperature.
- 2.2.5 When the domestic hot water tap is closed the diverter valve goes back into rest mode, the main burner is shut down along with the pilot/burner. The pump and fan are also

switched off, the pressure switch returning to its rest mode.

2.2.6 Central heating mode

- 2.2.7 If the switch is positioned on with a demand for heat to supply radiators, etc. With heating circuit fully charged so as to operate the low water sensor device the boiler will start in the same way as domestic hot water mode but with slightly differing time delay in that it will start on minimum and remain at this level for about 1 minute, after which the flame will lift to its maximum setting as governed by a potentiometer range rates the heating circuit between maximum and minimum power.

- 2.2.8 On the control panel are mounted two potentiometers (thermostats) these control the temperature. One is for domestic hot water and the other for heating.

- 2.2.9 The boiler is fitted with an anti-cycling device on the control board. This delays the boiler from re-firing over a 2.5 minute period when in heating mode. The domestic hot water will always take priority and is unaffected by the anti-cycling device.


GENERAL FUNCTION

2.3 Central Heating Mode

- 2.3.1 A potentiometer is installed on the electric circuit board this permits regulation of the boiler to partial heating requirements, between the factory setting.
- 2.3.2 Air is drawn by the fan for combustion.
- 2.3.3 The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air, through the inlet duct.
- 2.3.4 The boiler water temperature is automatically controlled by a built in thermostat. .
- 2.3.5 Interior space temperature is set by the room thermostat to be installed in the heating system. The boiler already carries connection terminals for this thermostat, as well as for a timeclock. The burner will continue to operate until it is stopped by the timer or one of the thermostats.
- 2.3.6 When the internal C.H. temperature sensor intervene the main burner shuts down. The fan stops but the pump continues to operate.
- 2.3.7 When the room thermostats intervene the main burner shuts down. The fan stops and the pump turns off.


2.4 Domestic hot water mode


2.4.1 The heat exchanger in the D.H.W. circuit is built into the main heat exchanger, and domestic water is heated by converting the water in the central heating circuit. The transference of heat is very high because the two fluids move in a counter direction flow to each other.

2.4.2 Switch 33 in the  (winter) position. When a hot water tap is turned on a diaphragm diverter valve excludes the central heating circuit the boiler automatically modulates to maintain the domestic hot water at a constant temperature. Water temperature can be regulated using the D.H.W. thermostat located on the front control panel.

2.4.3 When domestic hot water is being drawn the main burner and pump perform as they do during central heating except that the burner is commanded by the D.H.W. thermostat.

2.4.4 When D.H.W. is no longer called for the boiler automatically returns to the central heating mode.

2.4.5 Switch 33 in the  (summer) position. The boiler functions like an automatic gas hot water heater. When D.H.W. is no longer required the main burner, fan and pump immediately turn off.

This also takes place when switch 33 is on  (winter) if there is no demand for heat to the central heating system or until the room thermostat/time clock demands for heat to the central heating circuit.

3.1 SAFETY DEVICE

In both central heating and domestic hot water mode safe operating is ensured by:

- A differential pressure switch which shuts off the main burner if the fan stops or the flue or combustion air intake duct is obstructed.


3.1.2 An overheat cut off thermostat set slightly higher than the high limit thermostat acts to turn off the burner to resetable "lockout" (Fig. 50 item 3).

3.1.3 A safety valve fitted on the central heating circuit set at 43 psi (3 bar).

3.2.1 A heating circuit (low water) pressure switch is set at 0.4 bar.


OVERALL DIMENSION

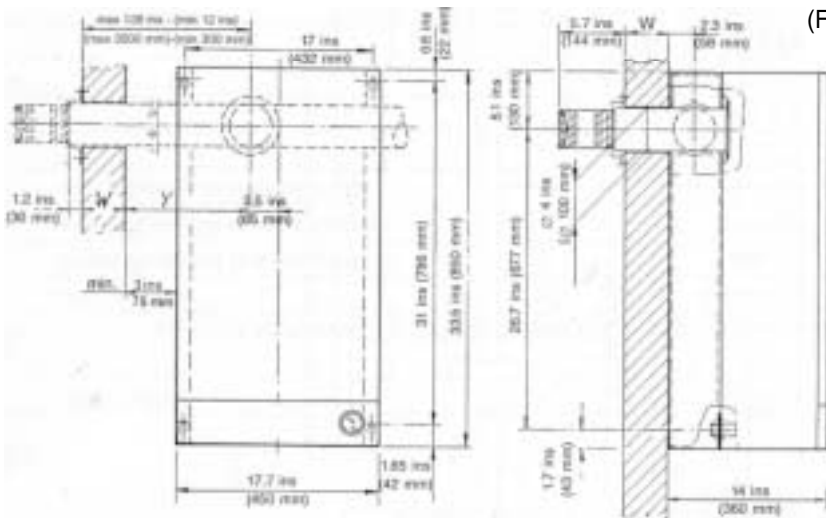Fig. 3




AVAILABLE PUMP HEAD

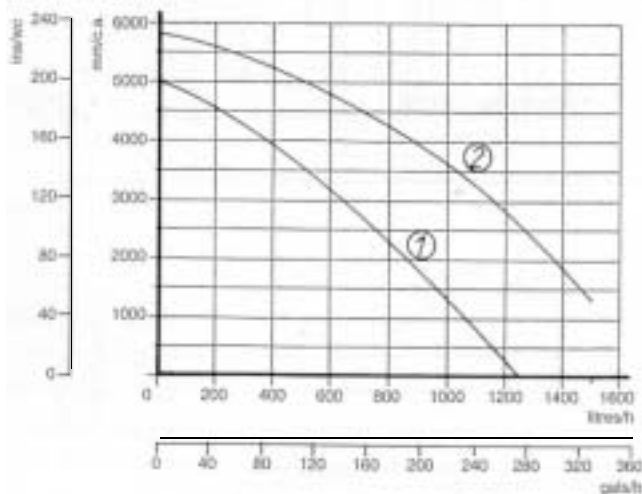Fig. 4



PRESSURE DROP ACROSS APPLIANCE

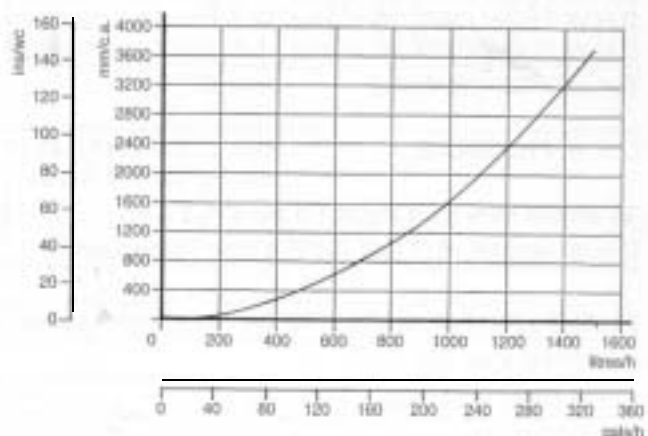Fig. 5



SECTION 3 TECHNICAL DATA
TABLE 1
NATURAL GAS (G 20) I_{2H}

HEAT INPUT NET NOMINAL	max mid min	26.1 kW 18.9 kW 13.0 kW	(89,100 Btu/h) (64,500 Btu/h) (44,400 Btu/h)
HEAT OUTPUT NOMINAL	max mid min	23.6 kW 16.6 kW 10.3 kW	(80,500 Btu/h) (56,700 Btu/h) (35,200 Btu/h)
GAS RATE AFTER 10 minutes	max mid min	2.6 m ³ /h 2.1 m ³ /h 1.3 m ³ /h	(91.8 ft ³ /h) (74.1 ft ³ /h) (45.9 ft ³ /h)
INLET PRESSURE	20 mbar	(8.0 in wg.)	
BURNER PRESSURE	ma* mid min	8.1 mbar 4.1 mbar 1.5 mbar	(3.2 in wg.) (1.6 in wg.) (0.6 in wg.)
GAS CONTROL VALVE	SIT	837 TANDEM	
MAIN BURNER	POLIDORO MOD/NP		
MAIN BURNER INJECTORS	N. 13X1.35		
PILOT BURNER	POLIDORO PA525F		
PILOT INJECTOR	0.27x2 HOLES		
ELECTRICAL SUPPLY		230V-50HZ	
POWER CONSUMPTION		160W	
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE RATING	315 mA - 2A - 4A (20mm to BS4265)		
DRY WEIGHT	48 kg (106 Lbs)		
WATER CONTENT D.H.W.	0.5 Lts. (0.9 pints)		
WATER CONTENT C.H.	3.0 Lts. (5.3 pints)		
GAS SUPPLY CONNECTION RC 112"			
FLOW CONNECTION C.H.	22 mm	compression isolating valve	
RETURN CONNECTION C.H.	22 mm	compression isolating valve	
INLET CONNECTION D.H.W.	15mm	compression isolating valve	
OUTLET CONNECTION D.H.W.	15mm	copper pipe	
MAXIMUM PERMISSIBLE COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL			
110 LITRES			
SAFETY DISCHARGE PIPE	15mm	copper pipe	
SEALED WATER SYSTEM C.H. SYSTEM			
MAX PRESSURE 2.5 bar (35.6 p.s.i.)			
MINIMUM WORKING PRESSURE 0.5 bar, (7.35 p.s.i.)			
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE 0.5 bar (7.35 p.s.i.)			
CENTRAL HEATING OPERATING TEMPERATURE MAX 85 °C			
MIN 45 °C			
DESIGN FLOW RATE 1013 l/h (223 gals) 20 °C RISE			
MINIMUM FLOW RATE C.H./503 Lts/h (111 gals/h)			
D.H.W. FLOW RATE 30 °C rise 11.3 l/min (2.5 gals/min)			
D.H.W. FLOW RATE 35 °C rise 9.7 l/min (2.1 gals/min)			
D.H.W. FLOW RATE 40 °C rise 8.5 l/min (1.9 gals/min) 10 °C inlet temperature			
D.H.W. TEMPERATURE	max 65 °C min 35 °C		
D.H.W. PRESSURE	max 10 bar (147 p.s.i.) min 0.8 bar (11.8 p.s.i.)		
To obtain 95% heat input 1.0 bar (14.5 psi.)			
D.H.W. MINIMUM FLOW RATE 3 l/m (0.66 gals/min)			
FLUE OUTLET NOM. DIA. 100 mm specially supplied with boilers			
DESTINATION: GB			
FLUE TYPE - C 12 - C 32			
CATEGORY I _{2H}		NOX 2	

SECTION 4 GENERAL REQUIREMENTS

4.0 SAFETY

Gas Safely (Installation and USE) Regulations, 1994, and amendments 1996.

It is law that all gas appliances are installed and serviced by a Corgi registered installer (identified by ⚡) in accordance with the above regulations. Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation.

The installation of the boiler MUST also be in accordance with the latest I.E.E (BS 7671) Wiring Regulations, local building regulations, bye-laws of the local water authority, the building regulations and the Building standards (Scotland) and any relevant requirements of the local authority.

4.1 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the British Standards concerning installation requirement. If you need advice on any points your Ravenheat Technical Services Office would be pleased to help. It is recommended that tools suitable for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mms.

CODES OF PRACTICE/Fief: Documents

Detailed recommendations are contained in the following British Standard Codes of Practice:

BS. 6891	Low pressure installation pipes.
BS. 6798	Installation of gas fired hot water boilers of rated input not exceeding 60 kW.
BS. 5449	Forced circulation hot water systems.
BS. 5546	Installation of gas hot water supplies domestic purposes (2nd Family Gases).
BS. 5440:1	Flues (for gas appliances of rated input not exceeding 60 kW).
BS. 5440:2	Ventilation (for gas appliances of rated input not exceeding 60 kW).

Health & Safety Document No. 635

The Electricity at Work Regulations, 1989.

The manufacturer's notes must NOT be taken, in any way, as overriding statutory obligations.

IMPORTANT. These appliances are CE certificated for safety and performance. It is, therefore, important that no external control devices e.g. flue dampers, economisers etc., are directly connected to this appliance unless covered by these Installation and Servicing Instructions or as otherwise recommended by Ravenheat in writing. If in doubt please enquire.

Any direct connection of a control device not approved by Ravenheat could invalidate the certification and the normal appliance warranty. It could also infringe the Gas Safety regulations and the above regulations.

NOTE: The Ravenheat boiler has been tested and examined by BG Technology Certification Services and is certified to comply with the relevant requirements of ES 5258 Part 1 1986 BS 6332 Part 1 1983 and the relevant BGK3.G. 1 agreements, also tests based on BS 5286 Part 1, If in doubt on any point please consult Ravenheat Manufacturing Ltd.

4.2 LOCATION OF BOILER

4.2.1

Siting of Ravenheat RSF 82E Combi Boiler must be as follows. The position of installation should be within the building, unless otherwise protected by suitable enclosure.

Adequate space for installation, servicing and air circulation around boiler must be allowed for.

The Ravenheat RSF 82E Combi Boiler must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment.

The appliance may be installed on a combustible wall subject to the requirements of the Local Authority and Building Regulations.

4.3 CLEARANCES AROUND THE APPLIANCE

4.3.1

The following minimum free spaces, required for installation inspection and servicing, must be left around the boiler

18 inches (450 mm) in front

5 inches (120 mm) above

6 inches (150 mm) below

3 inches (75 mm) on each side

1 inch (25 mm) in front when installed in a cupboard.

4.4 IMPORTANT NOTICE

4.4.1

If the combination boiler is to be fitted in a timber framed building it should be fitted in accordance with the British Gas Publication Guide for Gas installations in Timber Frame Housing Reference DM2. If in doubt advice must be sought from the local gas supplier. The combination boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower.

Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control utilising mains electricity should be so situated that it cannot be touched by a person using a bath or shower.

A compartment used to enclose the combination boiler MUST be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly. Samples of the RSF 82E combination boiler have been examined by B.G. Technology Notified Body, and is certified to comply with the essential requirements of the Gas Appliance Directive 90/396/EEC, the Low Voltage Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility Directive 89/336/EEC and are therefore permitted to carry the CE Mark.

The appliance has been tested and approved by the WRc as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.

4.5 GAS SUPPLY

- 4.5.1** A gas meter is connected to the service pipe by the Local Gas Supplier or a contractor. An existing meter should be checked preferably by the gas Region to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891. Pipework from the meter to the boiler must be of adequate size (22 mm) min. To within at least 3 metre of the boiler (15 mm) min. can then be used for remaining pipe work to the appliance. A smaller size than the boiler inlet gas connection should not be used. The complete installation must be tested for soundness as described in the above Code.
- N.B. if the gas supply for the boiler serves other appliances ensure an adequate supply is available both to the boiler and the other appliances when they are in use at the same time.

4.6 FLUE SYSTEM

- 4.6.1** The terminal should be located where dispersal of combustion products is not impeded and with due regard for the damage or discoloration that might occur to building products in the vicinity (see fig. 6).
- The terminal must not be located in a place where it is likely to cause a nuisance.
- The terminal must not be closer than 25 mm. (1 in) to any combustible material. For protection of combustibles, refer to BS 5440.1.
- Where a flue terminal 'is installed less than 1000 mm. from a plastic. or painted gutter: or 500 mm from painted eaves, an aluminium shield 1000 mm. long, should be fitted to the underside of the gutter or painted surface.
- Plumbing will occur at the terminal so, where possible, terminal positions which could cause a nuisance should be avoided.
- The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

IMPORTANT NOTICE: if a left or right side flue is required, then a 90 Degree Bend will be needed. (Not supplied as standard). Available on order. If the flue terminates less than 2 M. above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.

Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

Available on request from:

RAVENHEAT Manufacturing Ltd
Chartists Way
Morley, Leeds, West Yorkshire
ENGLAND LS27 9ET - U.K.
Tel. 0113 252 7007

IMPORTANT: The following notes are intended for general guidance.


The boiler **MUST** be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation opening are specified in Fig. 6.

Note positions: Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1.

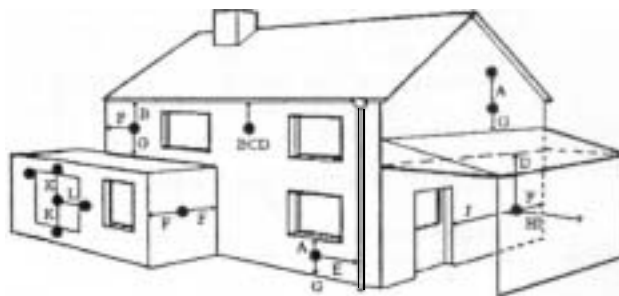Fig. 6



Terminal position for fan assisted boiler
(minimum distance)

	mm
A - Directly below an open window or other opening (e.g. air brick)	300
B - Below gutters, soil pipes or drain pipes	25
C - Below eaves	25
D - Below balconies or car port roof	25
E - From vertical drain pipes and soil pipes	25
F - From internal or external corners	25
G - Above ground or below balcony level	300
H - From a surface facing a terminal	600
I - From a terminal facing a terminal	1200
J - From an opening in the car port (e.g. door window) into dwelling.	1200
K - Vertically from a terminal on the same wall	1500
L - Horizontally from a terminal on the same wall	300
M - Horizontally from a vertical terminal to a wall	300

NOTE: The flue must be terminated in a place not likely to cause a nuisance.

- 4.6.2 A concentric vertical flue kit is available, for flueing applications up to a maximum height of 4.5 metres.
For further details see vertical flue installation instructions and page 21.

4.7 AIR SUPPLY

- 4.7.1 The following notes are intended for general guidance.
The roomsealed fan flued boiler does not require a permanent air vent for combustion air supply;
Where installed in a cupboard or compartment ventilation is not required.

4.8 WATER CIRCULATION (central heating)

- 4.8.1 Detailed recommendations are given in BS 6798 5449.1.1977 (for smallbore and microbore central heating systems). The following notes are given for general guidance.


4.8.2 Pipework

Copper tubing to BS 2871 1.1.1971 is recommended for water pipes. Jointing should be either with capillary soldered or with compression fittings.

Where possible pipes should have a gradient to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliance heat exchanger is not a natural collecting point for air except where providing useful heat, pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

- 4.8.3 The water through the appliance heat exchanger circuit must exceed the min. 2.38 gals/min. (650 lt/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut off either manually or by automatic controls. **Therefore a by-pass must be fitted to the system (15 mm min.) (Fig. 6A).** If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the safety thermostat to trip.

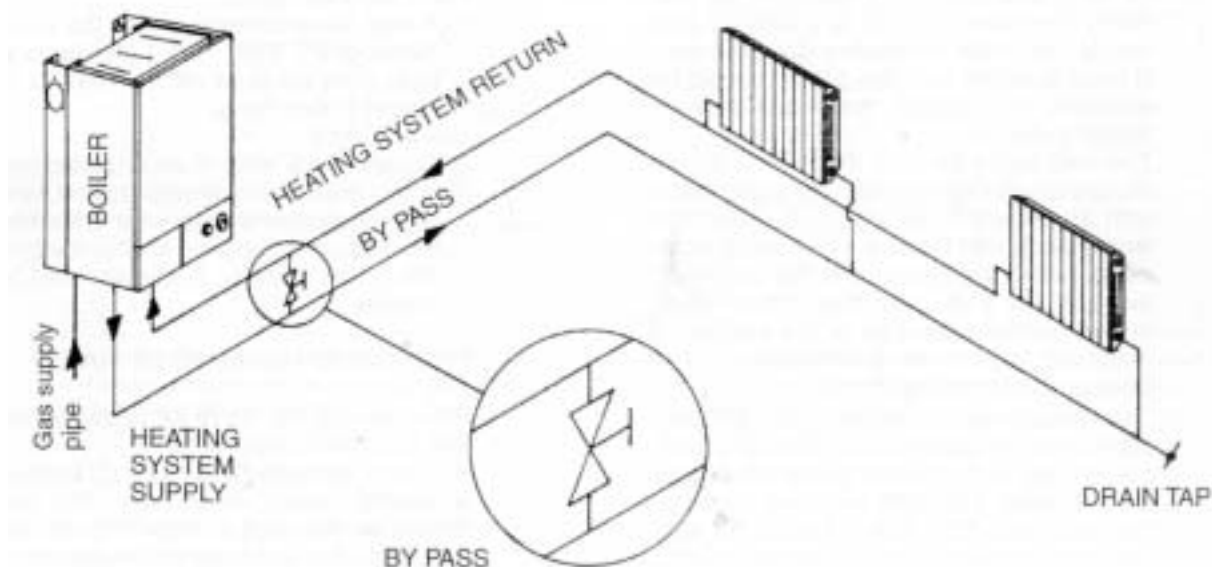Fig. 6A




4.8.4 Draining tap

These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2870 1980.

4.8.5 Air release points

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete fitting of the system.

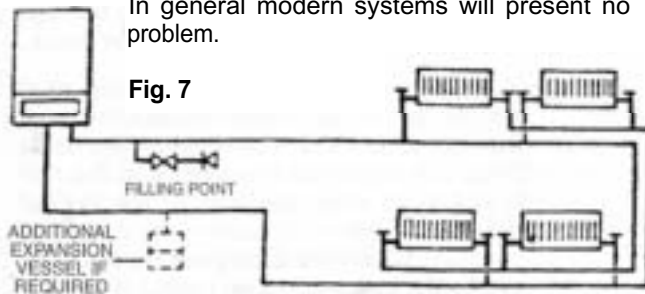- 4.8.6 The appliance has an integral sealed expansion vessel to accommodate the increase of water volume when the system is heated. It can accept up to 1.5 gal (7 lts) of expansion water. If the appliance is connected to a system with an unusually high water content, calculate the total expansion and add additional sealed expansion capacity as appropriate (Fig. 7). In general modern systems will present no problem.



4.8.7 Mains water feed: central heating

There must be no direct connection to the mains water supply, even through a non-return valve, without the approval of the Local Water Authority.

4.8.8 Permissible methods of filling

Cistern method (Fig. 8).

The system may be filled by one of the following methods. Through a cistern used for no other purpose, via a ball valve permanently connected directly to a service pipe and/or cold water distributing pipe. The static head available from the cistern should be adequate to provide the initial system design pressure.

The cold feed pipe from the cistern should include a non-return valve, and a stop-valve with an automatic air vent connected between them, with the stop valve being located, between the cistern and the automatic air vent. The stop valve may remain open during normal operation of the system, if automatic water make-up is required.

Booster pump method (Fig. 8).

The system may be filled through a self contained unit comprising of a cistern pressure booster pump if required and if necessary an automatic pressure reducing valve or flow restrictor. The cistern should be supplied through a temporary connection from a service pipe or cold water distributing pipe. The unit may remain permanently connect-

ed to the heating system to provide limited automatic water make up.

Mains topping up method (Fig.9).

Here the temporary connection is supplied from a service pipe, or distributing pipe, which also supplies other draw-off points at a lower level.

Fig. 8


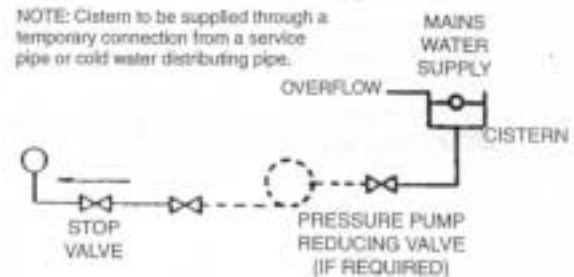


Fig. 9

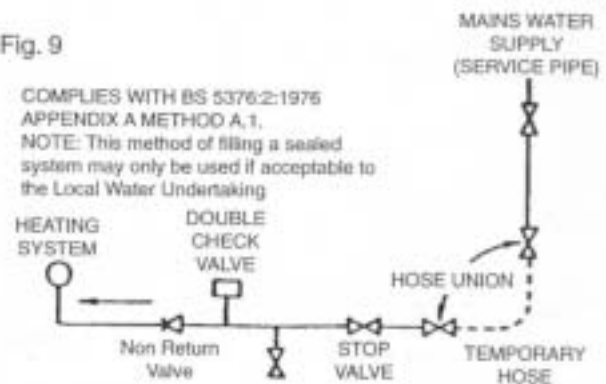COMPLIES WITH BS 5376:2:1976
APPENDIX A METHOD A.1.
NOTE: This method of filling a sealed system may only be used if acceptable to the Local Water Undertaking



A combined double check valve shall be installed upstream of the draw-off point, through a temporary hose connection from a tap supplied from the mains, where the mains pressure is excessive a pressure reducing valve shall be used to make filling easier. The following fittings shall form a permanent part of the system and shall be fitted in the order stated.

- A stop valve complying with the requirements of BS 1010 Part 2 (the temporary hose from the draw off tap shall be connected to this fitting).
- A test clock.
- Double check valve of an accepted type.
- A non return valve of an accepted type.

We recommend use of a Ravenheat Filling Loop designed for this method of filling the system. Available from your supplier.

PROVISIONS FOR MAKE UP WATER

(Fig. 7)

Provision can be made for replacing water loss from the system either.

- from a manually filled made up bottle with a readily visible water level. The bottle should be mounted at least 150 mm (6 in) above the highest point of the system and be connected through a non return valve to the return side of the heating system.

SIZING OF ADDITIONAL EXPANSION VESSELS: TABLE 3

Deduct from the value given in the table the 7 litre vessel supplied.

Safety valve setting (bar)	3.0								
Vessel charge pressure (bar)	0.5				1.0			1.5	
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0
Total water content Of system	EXPANSION VESSEL VOLUME (LITRES)								
Litres									
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8
100	6.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2
500	41.6	70.1	125.9	275.5	54.5	95.0	206.0	78.0	165.5
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331

Note: This pressure can be increased up to 1.5 bar to suit high static head situations, see item 10, other appliance components in the SERVICING INSTRUCTIONS.

B) Where fitting a make up vessel would be difficult re pressurisation of the system can be done. See section on FILLING.

If the capacity of the central heating system should exceed 110 litres, **an additional vessel may be installed if required on the return to the combination boiler from the heating system (Fig. 7). Guidance on vessel sizing is given in (Table 3).**

Reference should be made to British Gas Publications <<Material and Installation Specifications for Domestic Central Heating and Hot Water>>. Draining taps should be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

4.8.9 Installation to an existing central heating system

The combination boiler is designed to operate on a sealed system only. Therefore if the existing system is of the open water type it will have to be modified to comply with BS 5376 Part 2.

Before installing a new combination boiler to an existing system flush out the

old system with a recommended descaling agent.

Also check pipework and renew any corroded pipework or fittings. Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

4.8.10 Hard water areas

If the area of installation is recognized as a hard water, it is recommended that a suitable water treatment device is installed in the mains.

The water hardness can be determined by using the standard test paper or by referring to local water authority.

4.9 DOMESTIC WATER

4.9.1 The domestic hot water must be in accordance with the relevant recommendations of BS 5546. Copper tubing to BS 2871. 1 is recommended for water carrying pipework and **MUST** be used for pipework carrying potable water.

The Ravenheat boiler is supplied for connection to a 230 V - 50 Hz single phase supply. **The supply must be fused at 3 A.**

NOTE: The method of connection to the electricity supply **MUST** facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and adjacent to the appliance except, where the appliance is installed in a bathroom, this **MUST** be sited outside the bathroom.

SECTION 5 INSTALLATION

5.1 WARNING

- 5.1.1** It is MOST IMPORTANT that this appliance is installed in a VERTICAL POSITION, with the flue air duct passing through the wall in a HORIZONTAL PLANE. A minor deviation from the horizontal is acceptable, provided that this results in a downward slope of the flue/air duct away from the combination boiler.

5.2 DELIVERY

- 5.2.1 The appliance will arrive on site in two cartons:**

Boiler carton containing (Fig. 10-I 1):

- a) boiler fully assembled
- b) installation instructions and user instructions
- c) white paper template
- d) terminal cover plate (Fig. 12)
- e) - 4 coach bolts and wall plugs
- screws and dowels

Polythene bag containing:

- a) 2-22 mm compression ball valves (heating)
- b) 1-15 mm compression ball valve (with drain screw for domestic cold water inlet)
- c) 1-1/2" BSP Union gas cock
- d) - 2 15 mm flanged copper tails complete with 1/2" brass nuts and washers
- 2 22 mm flanged copper tails complete with 3/4" brass nuts and washers

Fig. 10


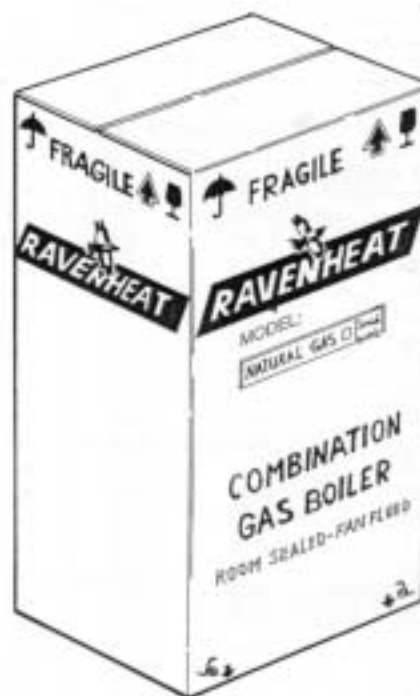



Fig. 11

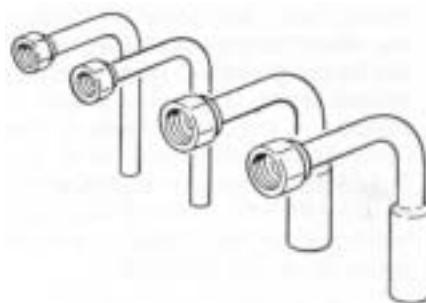

FLUE BOX CONTAINING (Fig. 12):
Standard Flue Assembly

Fig. 12

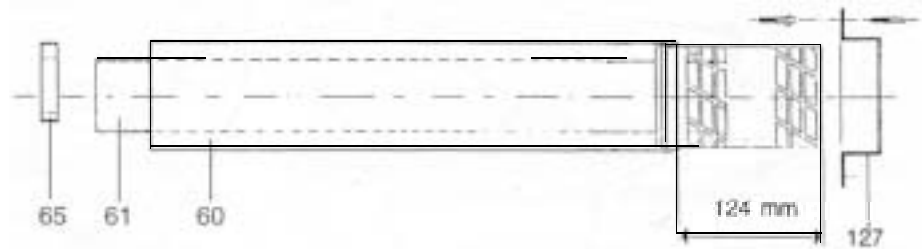
- 60 - Air intake duct
- 61 - Flue exhaust duct
- 62 - Terminal
- 65 -Pipe centering spring
- 127 -Terminal Cover Plate
(Contained in the carton Fig. 10)



OPTIONAL EXTRAS:
Flue bend carton containing: (Fig. 13)

Fig. 13

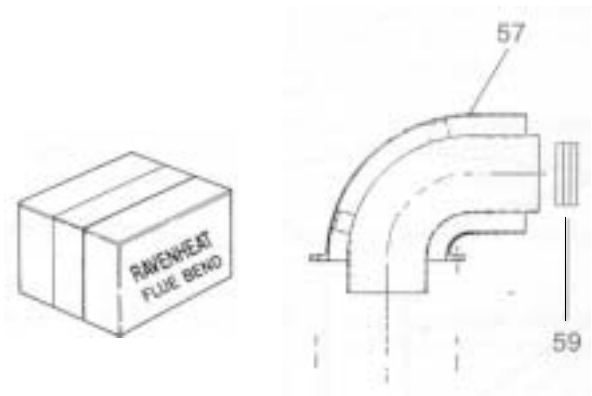- 57 Flue bend supplied as an extra cost only when requested
- 59 Rubber seal 0 60




FLUE EXTENSION BOX CONTAINING (Fig. 14):
1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications

Fig. 14

- 59 Rubber seal 0 60
- 63 -Air intake duct extension
- 64 - Flue exhaust duct extension
- 65 - Pipe centering spring

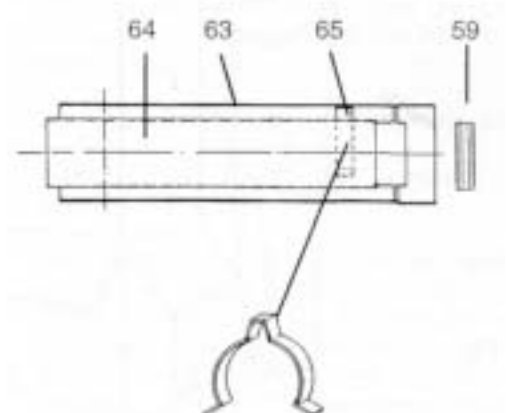WARNING:
Maximum allowable flue length 3.5 m horizontal or 4.5 m vertical (Fig. 3) or page 21.
maximum No. 3x800 mm vertical No. 4x800 mm.
Flue duct extension used with standard flue



5.3 UNPACKING

Fig. 15

- 1) Open the top of the carton

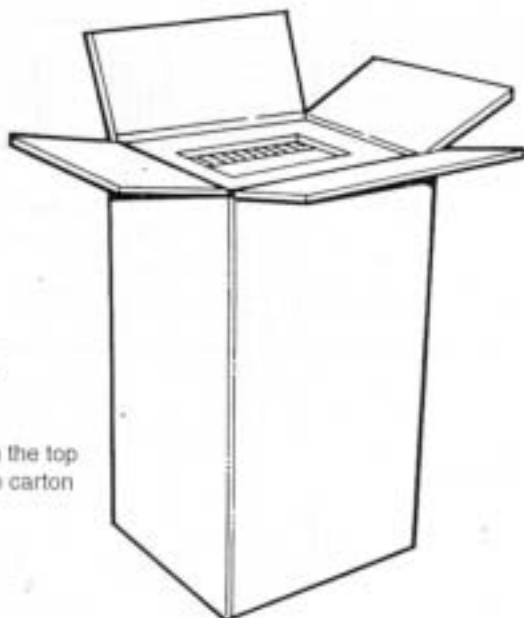


Fig. 16

- 2) Rest the carton on the floor (keeping the flaps open)

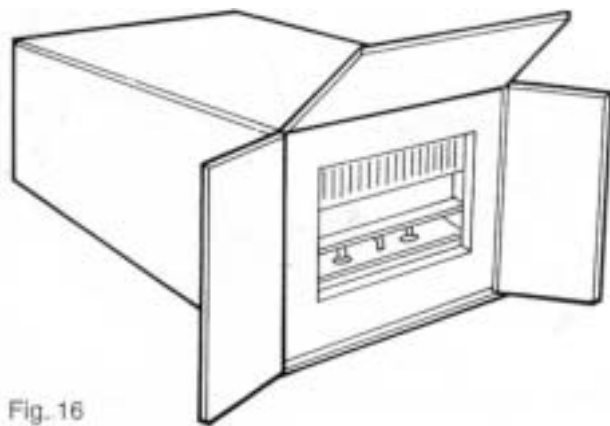


Fig. 17

- 3) Turn the carton over, with the boiler inside and then pull the carton


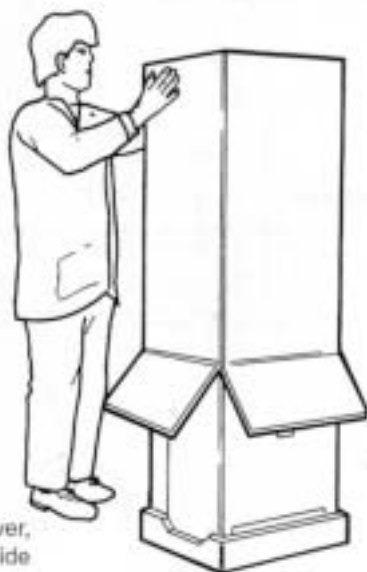


Fig. 18

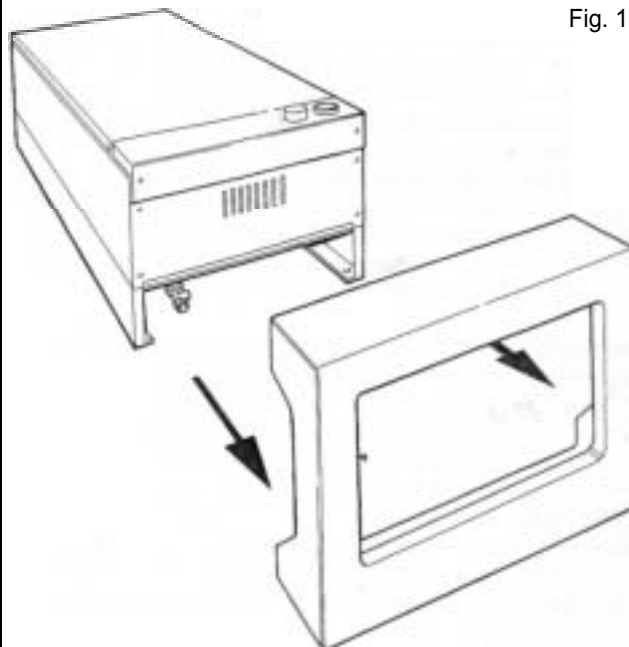

- 4) Rest the boiler on the floor and remove the polystyrene guards

Fig. 19


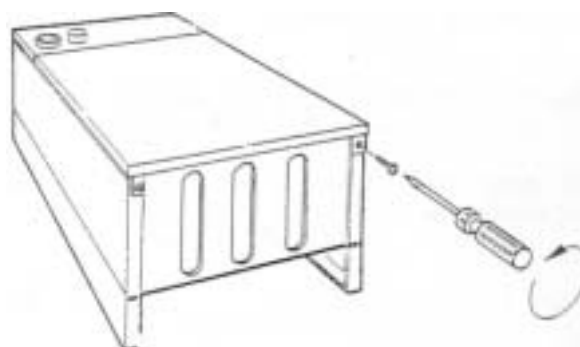


Fig. 20

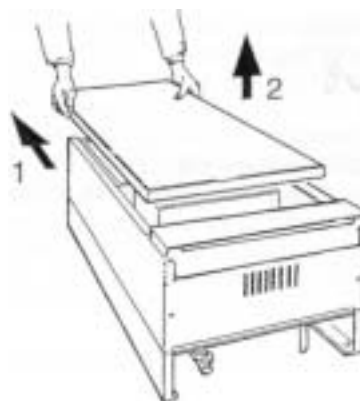

5.4 POSITIONING OF THE BOILER

- 5.4.1 - **Remove the 2 screws that** secure the upper part of the front panel of the casing (Fig. 19).
- Carefully slide the front panel a few millimetres up towards the top of the appliance until it is free from its slot, and then lift off (Fig. 20).

- 5.4.2 Unscrew the 2 screws that fasten the lower grating on the casing and remove it from the sides of the casing (Fig. 22).

- 5.4.3 Push down the 2 plastic clips that fasten the instrument panel (Fig. 23).

- 5.4.4 Lower the instrument panel down by rotating it on its own hinges (Fig. 25).

- 5.4.5 Unscrew the 2 screws that fasten the two side panels (Fig. 21).
Remove the two sides of the casing by slightly lifting them and carefully sliding towards the top of the appliance, to release them from their upper suspension hooks (Fig. 26-27).

- 5.4.6 Make sure the casing and screws are put to one side in a safe place.

5.5 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET

- 5.5.1 Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical.
- Mark the four boiler fastening holes on the wall as well as the centre of the flue duct.
 - Detach the template from the wall.
 - Use a 10 mm. dia drill to make the 4 boiler securing holes. Insert the plastic expansion plugs.
 - Cut or core drill a 105 mm. dia hole for inserting the flue duct.
 - Screw in the two upper coach bolts leaving them about 10 mm. out from the wall to enable the boiler to be located on the wall.

Fig. 22

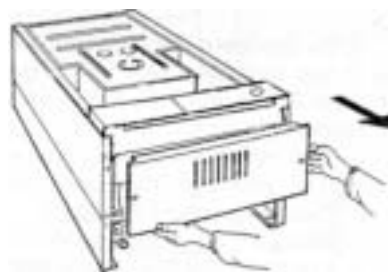


Fig. 23



Fig. 25



Fig. 26

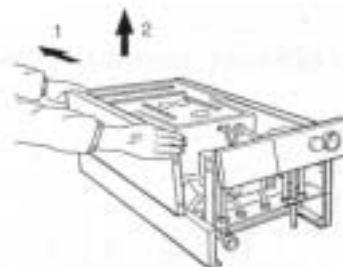


Fig. 27

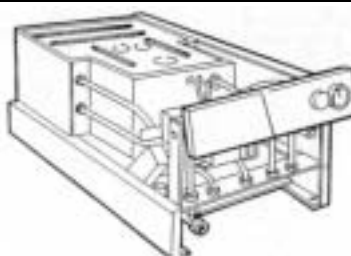


Fig. 21


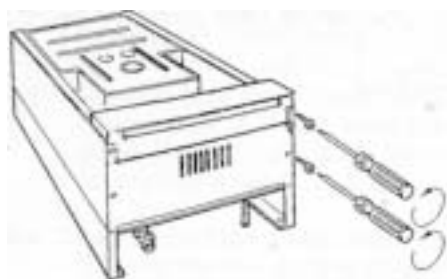


Fig. 28-29

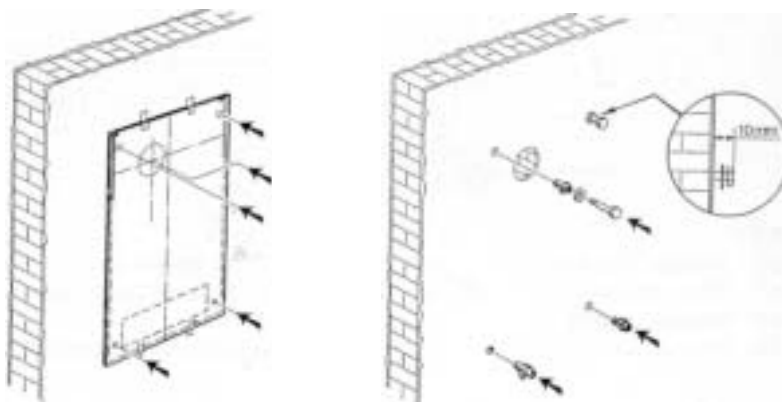

5.5.3 If the standard duct furnished with the boiler is too long (the wall to go through is less than 680 mm. thick) it can be shortened as follows:

- Remove the centering spring 65, turn the flue terminal clockwise and push to disengage inner flue duct.
- Measure the thickness W of the wall.
- Cut the outer flue duct at right angles to a length equal to $W + 98$ mm.

- Cut the inner flue duct (60 mm) at right angles to a length equal to $W + 201$ mm. Insert from cut end. Reassemble the two tubes turn the flue terminal anti clockwise to lock together. Insert centering spring 65. Must be de-burred.

Fig. 30



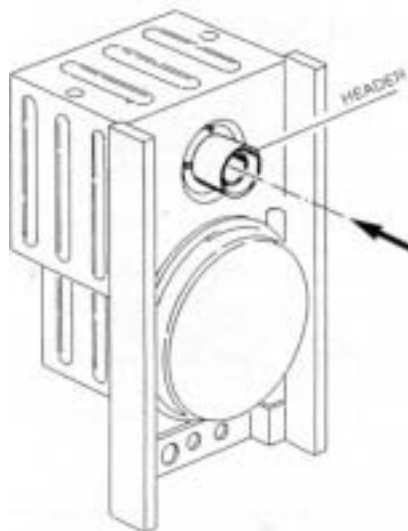


Fig. 32

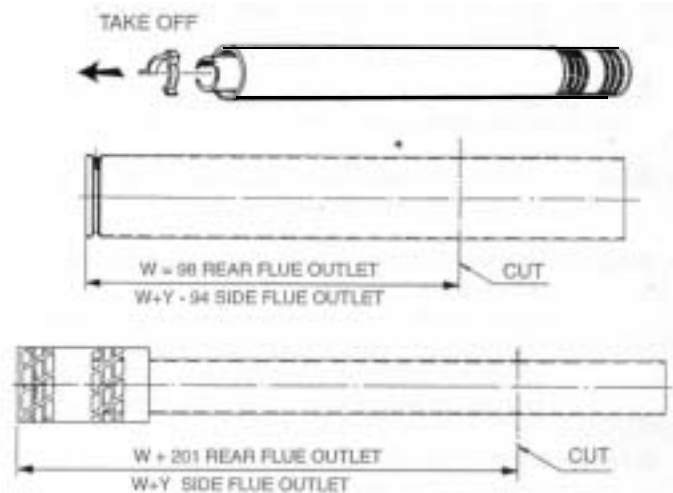

INTAKE AND EXHAUST TERMINAL COMPONENTS

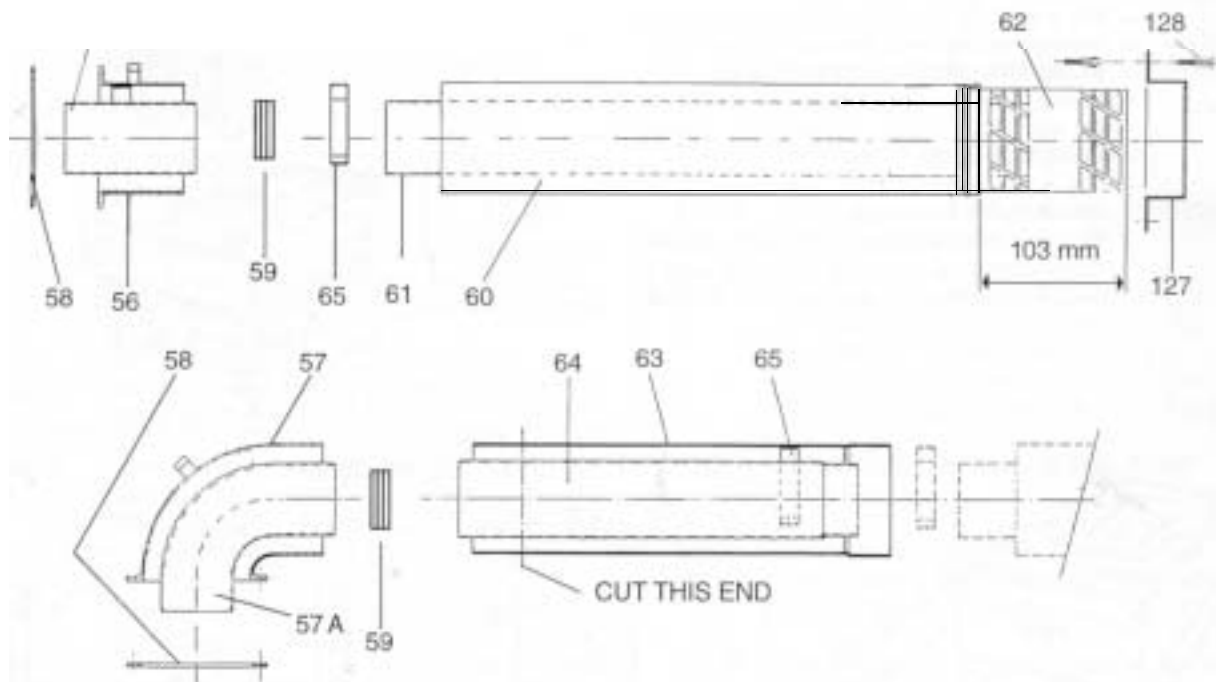Fig. 31



KEY

56 - Straight header
57 - Elbow header
58 - Header gasket
59 - Rubber seal 0 60

60 - STD air intake duct
61 - STD flue exhaust duct
62 - Terminal
63 - Air intake duct extension

64 - Flue exhaust duct extension
65 - Pipe centering spring
127 - Terminal cover plate
128 - Screw

- 5.5.4 insert the flue assembly into the wall, being careful to make sure that the outer air duct comes flush to the inner surface of the wall.
- 5.5.5 Lift the boiler on to the wall (Fig. 34), locating onto the top coach bolts. Fit the two lower coach bolts and tighten all four securing bolts.
- 5.5.6 Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube 61 into its header 56A (Fig. 31-35).

5.5.8 Fit terminal cover plate if required.

5.5.9 Extension kits are available on order for flue extension of up to 3.5 metres total length (Fig. 31).

Fig. 35

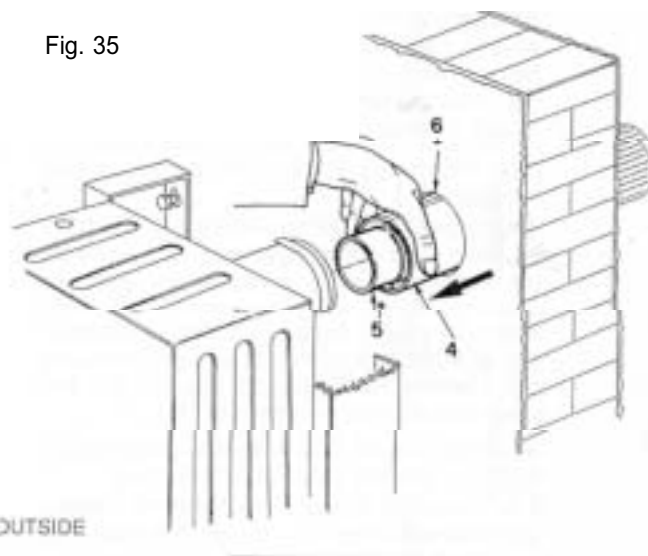


Fig. 33

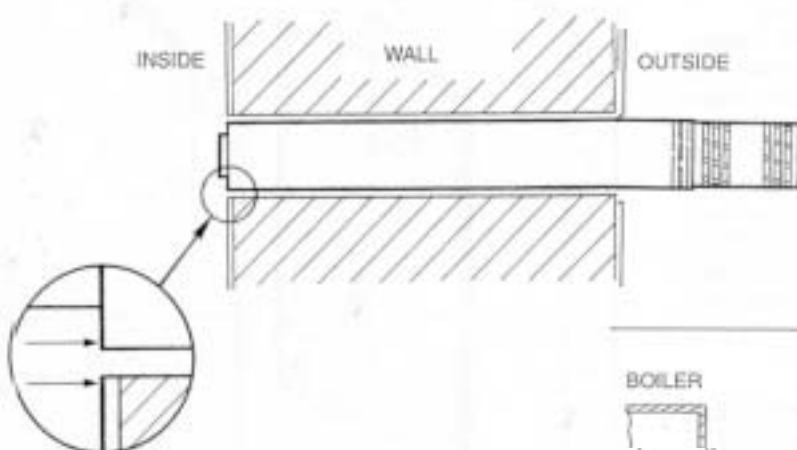


Fig. 36

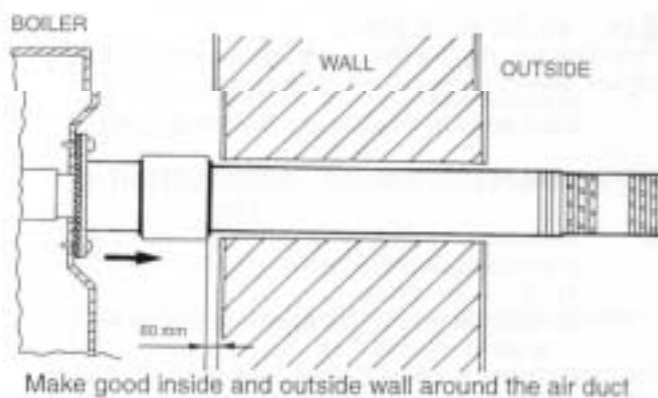


Fig. 34


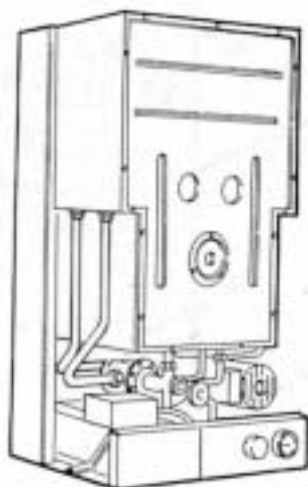


Fig. 37

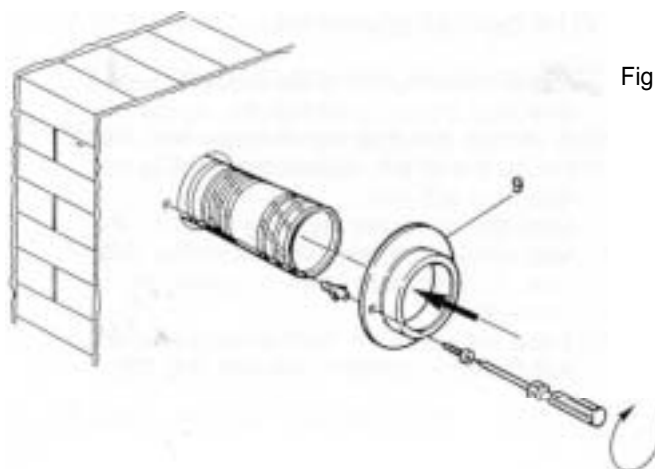

- 5.5.10 Each extension length extends the pipe by approximately 1000 mm long up to a maximum of three extensions.

Pipeline length can be established using the instructions in section 5.5 for rear flue outlets and section 5.7 for side flue outlets.

Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal. Extensions must be joined together, with the standard terminal pipe, inserted in each other as far as they can go.

If an extension must be shortened, this must be done from the straight end, and not from the tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output pipe fits into the boiler header until it stops (Fig. 31).

All joints must be sealed with a rubber collar, fastened with the pipe straps supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

NOTE: a suitable support bracket is available from Ravenheat Manufacturing and should be used to support flue length at least every 1.8 metre preferably at each joint this bracket should be secured to wall and flue duct.

5.5.11 INLINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurement should be taken from the outer edge of the flue and bend (Fig. 398).

5.6 COMPLETING BOILER INSTALLATION

- 5.6.1 Reassemble the outer casing (sect 5.4) proceeding in this order

- 1) Fit the two sides.
- 2) Refit the instrument panel in reverse order as in (sect. 5.4.4).
- 3) Refit the lower grating (sect. 5.4).

5.7 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 38-39)

- 5.7.1 -Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than 305 mm.
- Mark the four boiler securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.
- Trace the centre of the flue duct hole 60 mm. from the corner of the wall (Fig. 38).

- Measure the distance Y between the centre of flue duct hole to the corner. Detach the template from wall.
- Use a dia. 10 mm. drill to make the 4 holes for securing the boiler. Insert the plastic expansion plugs. Core drill a 100 mm dia. hole in the side wall for inserting the flue duct.
- Screw in the two upper coach bolts leaving them about 10 mm. out from the wall in order to enable the boiler to be located.

Fig. 38

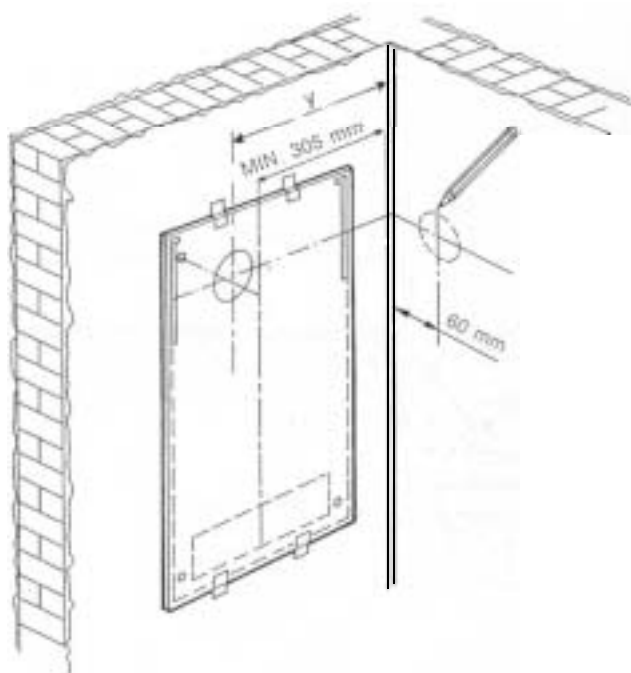


Fig. 39


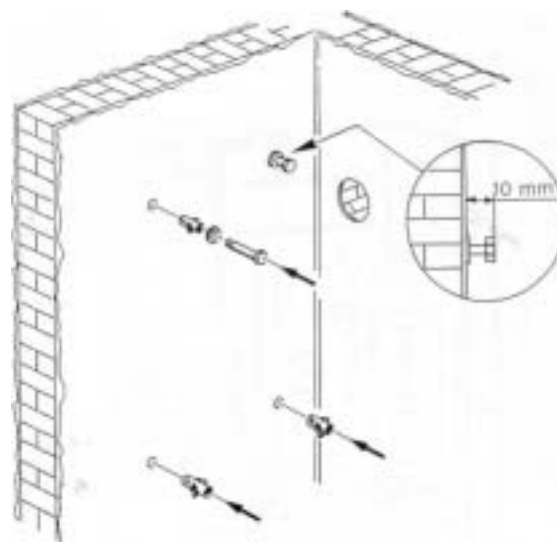


Fig. 398

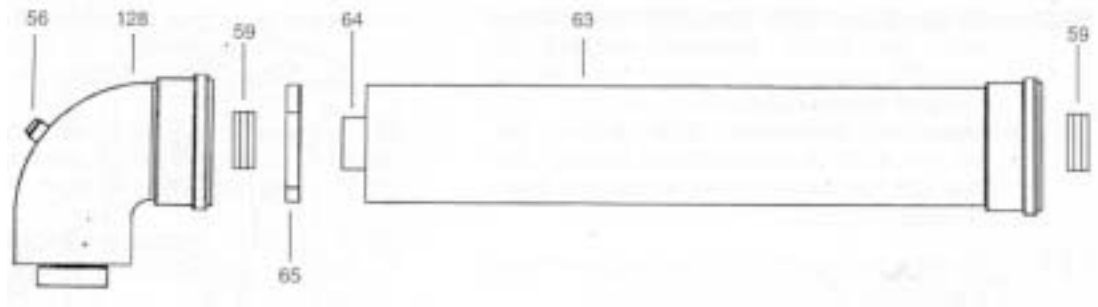


KEY

56 - Sample point (if required)
57 - Elbow Header
59 - Rubber seal 0 60


63 -Air intake duct extension
64 - Flue Exhaust duct extension
65 - Pipe centering spring
128 - In Line Bend (45° and/or 90°)

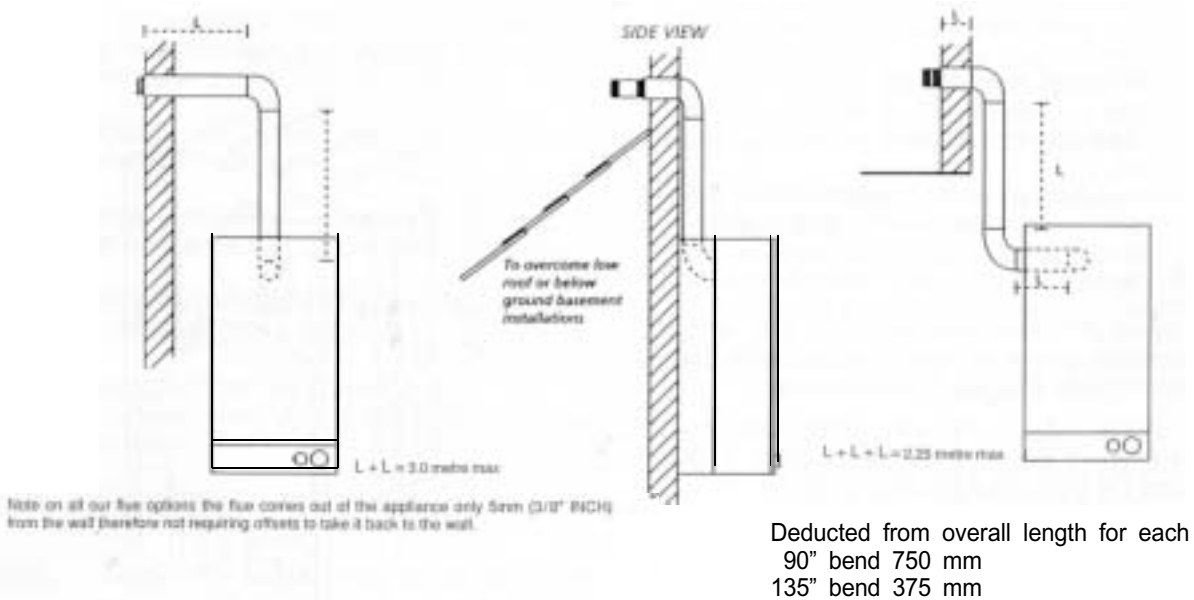USING AN INLINE 135° OR 90° BEND & VERTICAL FLUE SECTION



VERTICAL FLUE OPTIONS

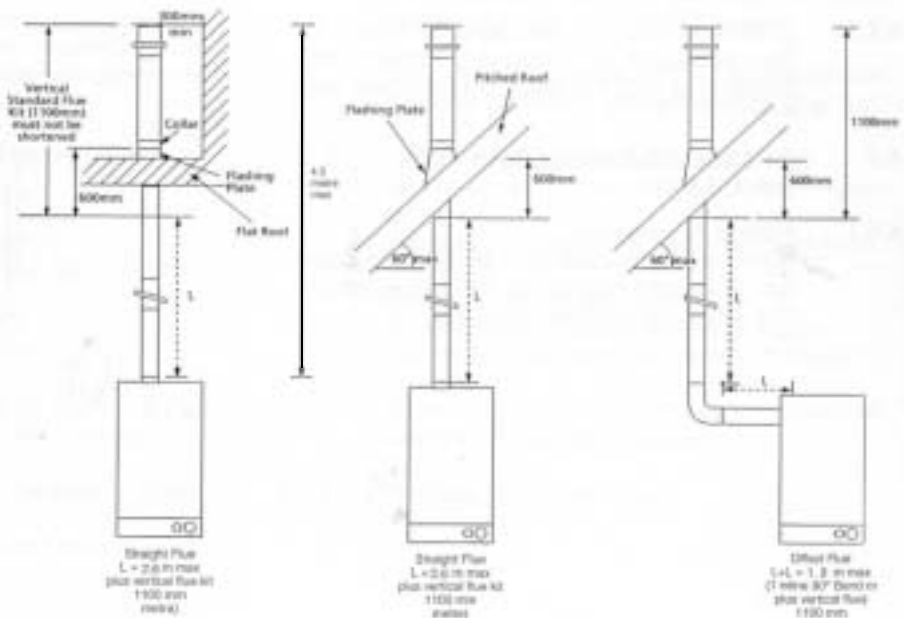The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 90° flue bend.



- 5.7.2 Detach the straight header and replace it with the elbow header (supplied on request), positioning the elbow towards the required direction (Fig. 40).

Important: make sure that the elbow's dia. 60 mm. duct is inserted into the fan and that the rubber seal and orifice are been correctly fitted.

- 5.7.4 Remove left or right flue duct door cover as appropriate (Fig. 42).
- 5.7.5
- If the standard, duct furnished with the boiler is too long (position of the boiler from the wall to go through as illustrated in the drawing and wall thicknesses less than what was specified above) it can be shortened as follows: (Fig.31-32).
 - Remove the centering spring 65. turn the flue terminal clockwise and push to disengage inner flue duct.
 - Measure the thickness W of the wall.
 - Cut the outer air duct (100 mm. dia.) at right angles and to a length equal to $W+Y - 94$ mm. (Fig. 32).
 - Cut the inner flue duct (63 mm. dia.) at right angles and to a length equal to $W+Y$.
 - Reassemble the two tubes turn the flue terminal anti clockwise to lock together. Insert centering spring 65 must be deburred.
- 5.7.6 Insert the flue assembly into the wall, making sure it will not interfere with the boiler body (Fig. 43) when mounting.
- 5.7.7 Lift the boiler on the wall. Locate onto the top coach bolts. Fit the lower coach bolts and tighten all four securing bolts.
- 5.7.8 Working above the boiler pull the flue duct towards the elbow in order to engage tube 61 into its header 57A.
- 5.7.10 Fit terminal cover plate if required (Fig. 37).
- 5.7.11 Extension kits are available on order for flue extension of up to 3.5 metres total length (Fig. 31). For further details see sect 5.5.10.
- 5.8 **REASSEMBLE BOILER AS PER (sect. 5.6.1)**
- 5.6.1 **Fitting valves pack**
Remove plastic caps from boiler connection and fit flanged copper tail and valves as per Fig. 46 using washers provided.

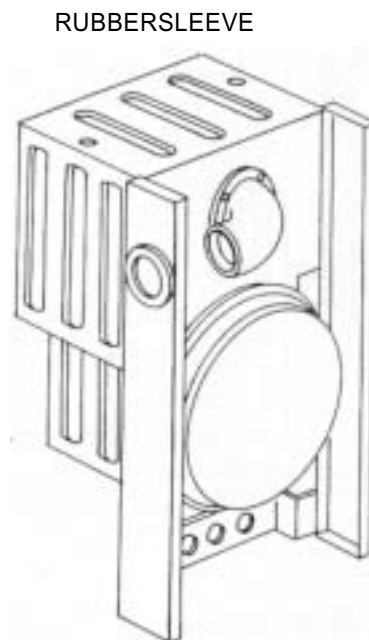
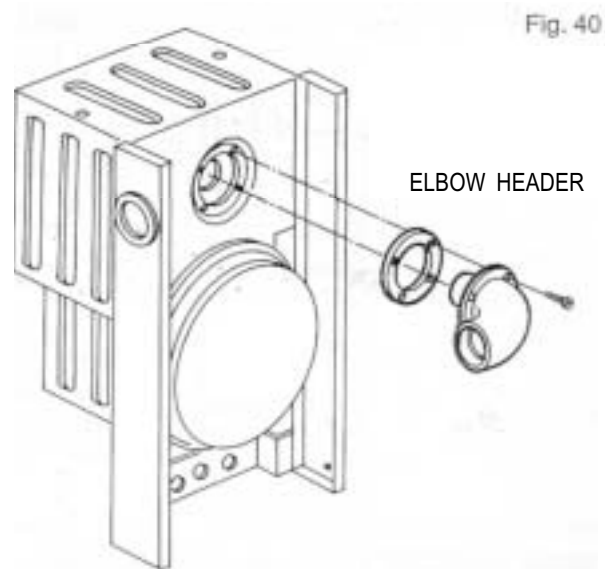


Fig. 42


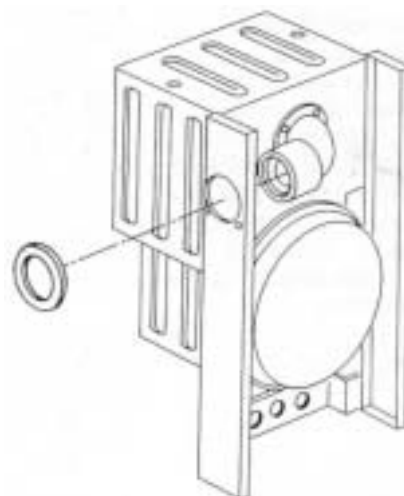


Fig. 43

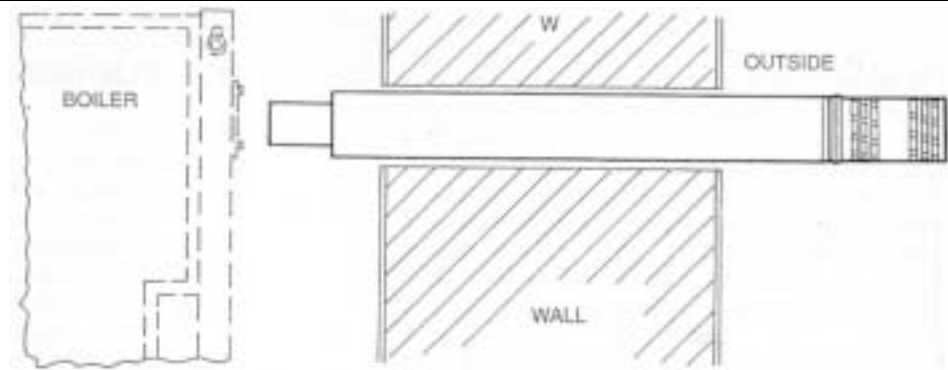

5.9 GAS CONNECTION (Fig. 46)

5.9.1 A minimum gas pressure of 20 mbar (6 in w.g.) must be available at the boiler inlet at full flow rate.

5.9.2 Fit gas service cock to the boiler via the union nut and connect gas pipe. Do not overtighten and use another spanner as a counter force to avoid straining internal connections. Important: Consult sect. 4.5.1

5.10 CENTRAL HEATING CONNECTION (Fig. 46)

5.10.1 Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.

- Connect the central heating return pipe to the isolating cock marked CHR.
- Connect the central heating flow pipe to the isolating cock marked CHF.
- Pipe dimension's and position are marked on template supplied and Fig. 49 A

5.11 DOMESTIC HOT WATER (Fig. 46)

5.11.1 The domestic hot water circuit does not need a safety valve but it is essential to ensure that the pressure of the cold water supply does not exceed 10 bar. If in doubt it is advisable to install a pressure reducing valve. The minimum pressure needed to operate the domestic hot water system is 0.5 bar

Fig. 44


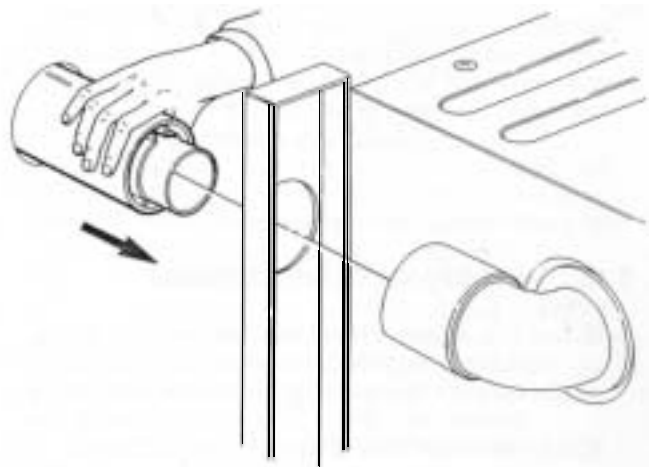



Fig. 45

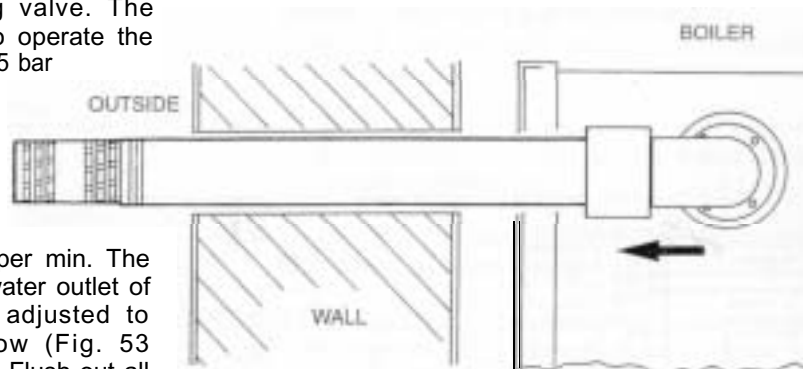

with a flow of approx 3 Lts per min. The regulator screw on the cold water outlet of the diverter valve may be adjusted to prevent excess volume flow (Fig. 53 COMMISSIONING SECTION). Flush out all foreign matter from the supply pipe before connecting to the appliance.

- Connect the 15 mm. cold water pipe to the stop cock to the appliance inlet marked DCW.
- Connect the 15 mm. hot water pipe with a suitable connection.

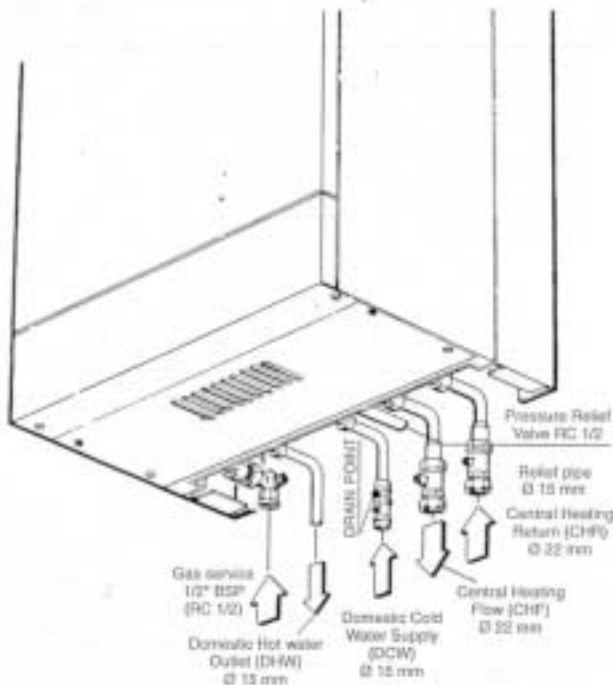Fig. 46



5.12 SAFETY VALVE DISCHARGE

- 5.12.1 The safety valve is located near the pump. It has a threaded outlet RC 1/2" (to 15 mm copper) to permit a discharge pipe to be connected. When connecting ensure the discharge pipe does not restrict access. The discharge should terminate facing downwards exterior to the building in a position where discharging (possibly boiling water & steam) will not create danger or nuisance, in easily visible position, and not to cause damage to electrical components or wiring. The discharge must not be over an entrance or a window or any other type of access.

5.13 ELECTRICAL CONNECTIONS

- 5.13.1 **IMPORTANT:** Electricity supply must be as specified in clause (sect. 4.10).

- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations. It is essential that all external controls must be volt free. Factory fitted internal wiring must not be disturbed when wiring external controls.
- To gain access to the electrical box remove the front panel of the case as described in clauses (sect. 5.4.1) and the instrument panel as described in clauses (sect. 5.4.3).
- The terminals are easily visible on the front of the electronic control board (Fig. 48).
- Heat resistant flexible cable is fitted between the isolator and the terminal block. It is a 3 core cable of 0.75 mm² (24x0.2 mm) to BS 6500. Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.

The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductors does not become taut before the earthing conductor.

Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

WARNING: If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from Ravenheat Manufacturing Ltd).

- 5.14 **PROGRAMMABLE TIMECLOCK**
Instructions for use Consult User's Guide.

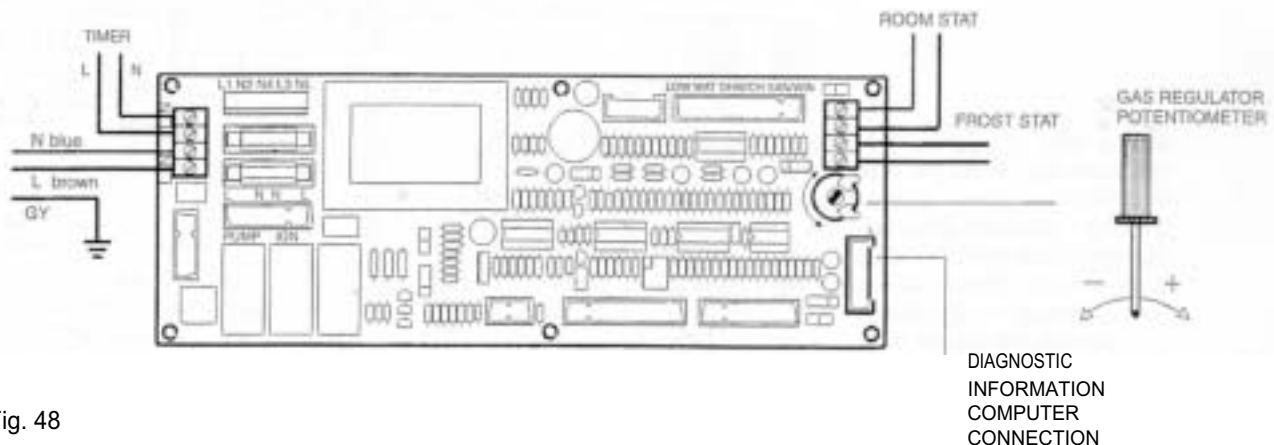


Fig. 48

SECTION 6 COMMISSIONING

6.1 Each boiler has been through a rigorous operational procedure at our factory and should not require any further adjustment. If in the unlikely event of the appliance not operating correctly, please turn to the Fault Finding and Logic Sequence charts.

6.2 GAS SUPPLY INSTALLATION

6.2.1 Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.

6.3 ELECTRICAL INSTALLATION

Preliminary electrical system checks to ensure electrical safety shall be carried out by a competent person (earth continuity, polarity, resistance to earth). Those checks are outlined in the <<Instructions for British Gas Multimeter>> Booklet. If a fault has occurred on the appliance the fault finding procedure should be followed as specified under the servicing section of this document.

6.4 INITIAL FILLING OF THE SYSTEM

Open central heating flow and return valves. Unscrew the cap on automatic air release valve one full turn (leave open permanently).
- Close all air release taps on the central heating system.

- Gradually open stopcock at the filling point connection to the central heating system until water is heard to flow.
- Starting with the lowest radiator open each air release tap in turn. Close it only when clear water, free of bubbles, flows out. In the same way release air from any high points in the pipework.
- Continue filling the system until at least 1.5 bar registers on gauge. Then turn off the filling points stopcock.
- Inspect the system for water soundness and remedy any leaks discovered.

6.5 SETTING THE SYSTEM DESIGN PRESSURE

The design pressure must be a min. 1 bar and max. 1.5 bar. These figures are read off the pressure gauge.

- The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to a max of 1.5 bar).
N.B.: The safety valve is set to lift at 3 bars (30 mt/42.5 psig).
- To lower the system pressure to the required value remove drain point (Fig. 93) or drain on the heating circuit.

6.6 FILLING THE HOT WATER SYSTEM

Close all hot water draw-off taps. Open the cold water inlet cock. Slowly open each draw-off tap until clear water is discharged.

Fig. 49



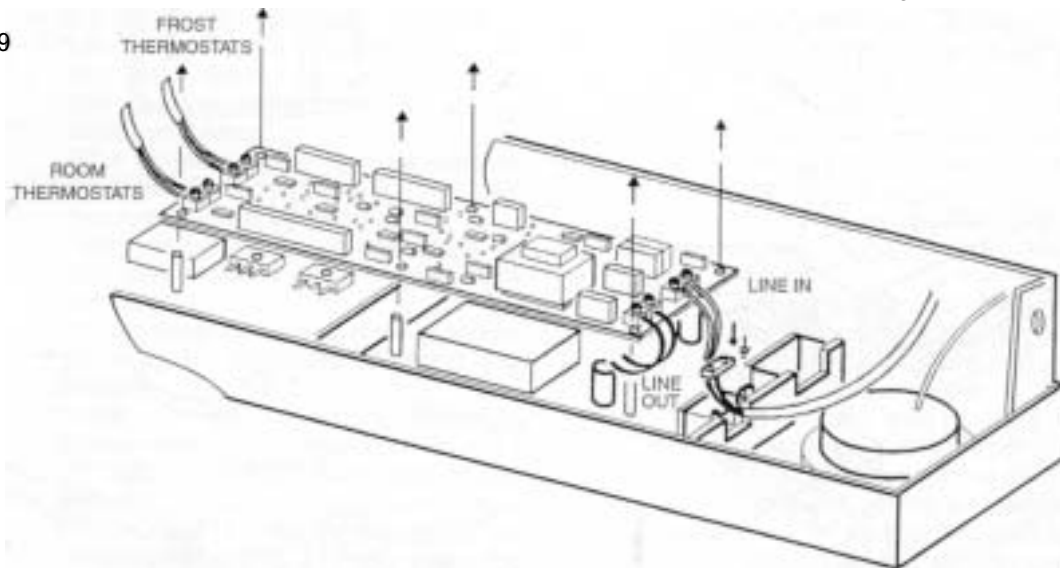


Fig. 49/A

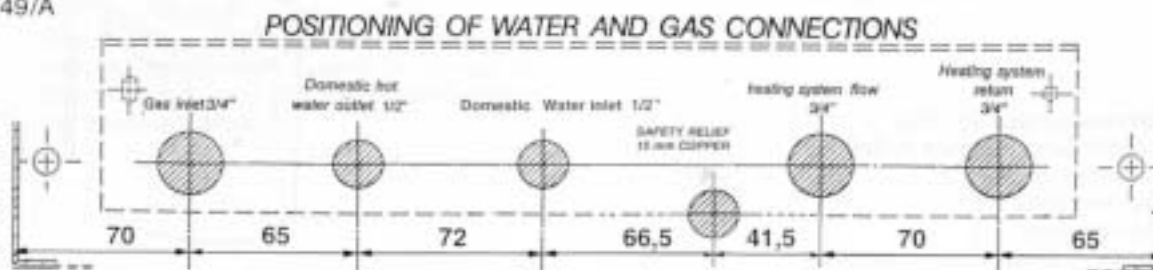


INSTRUMENT PANEL

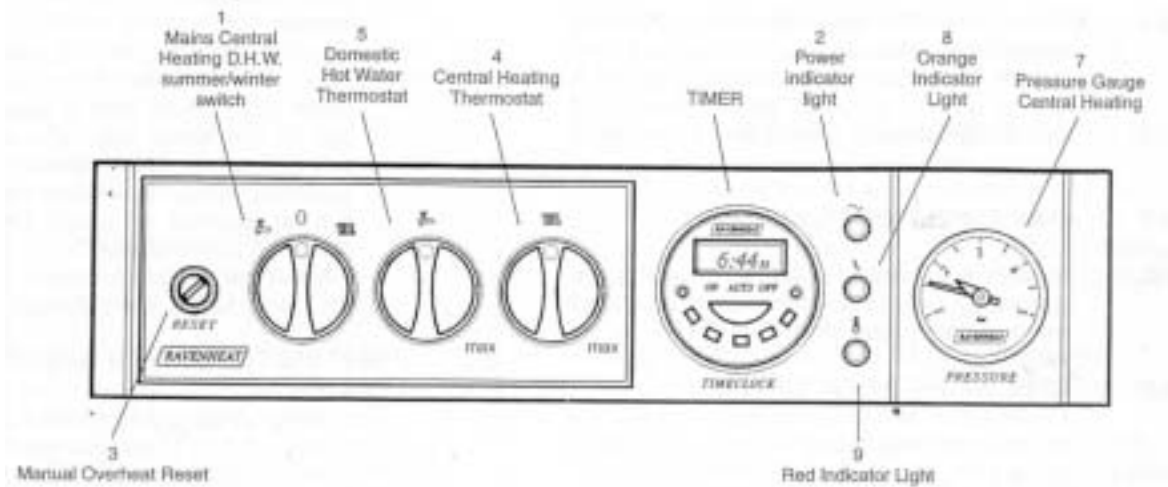Fig. 50



GAS VALVE

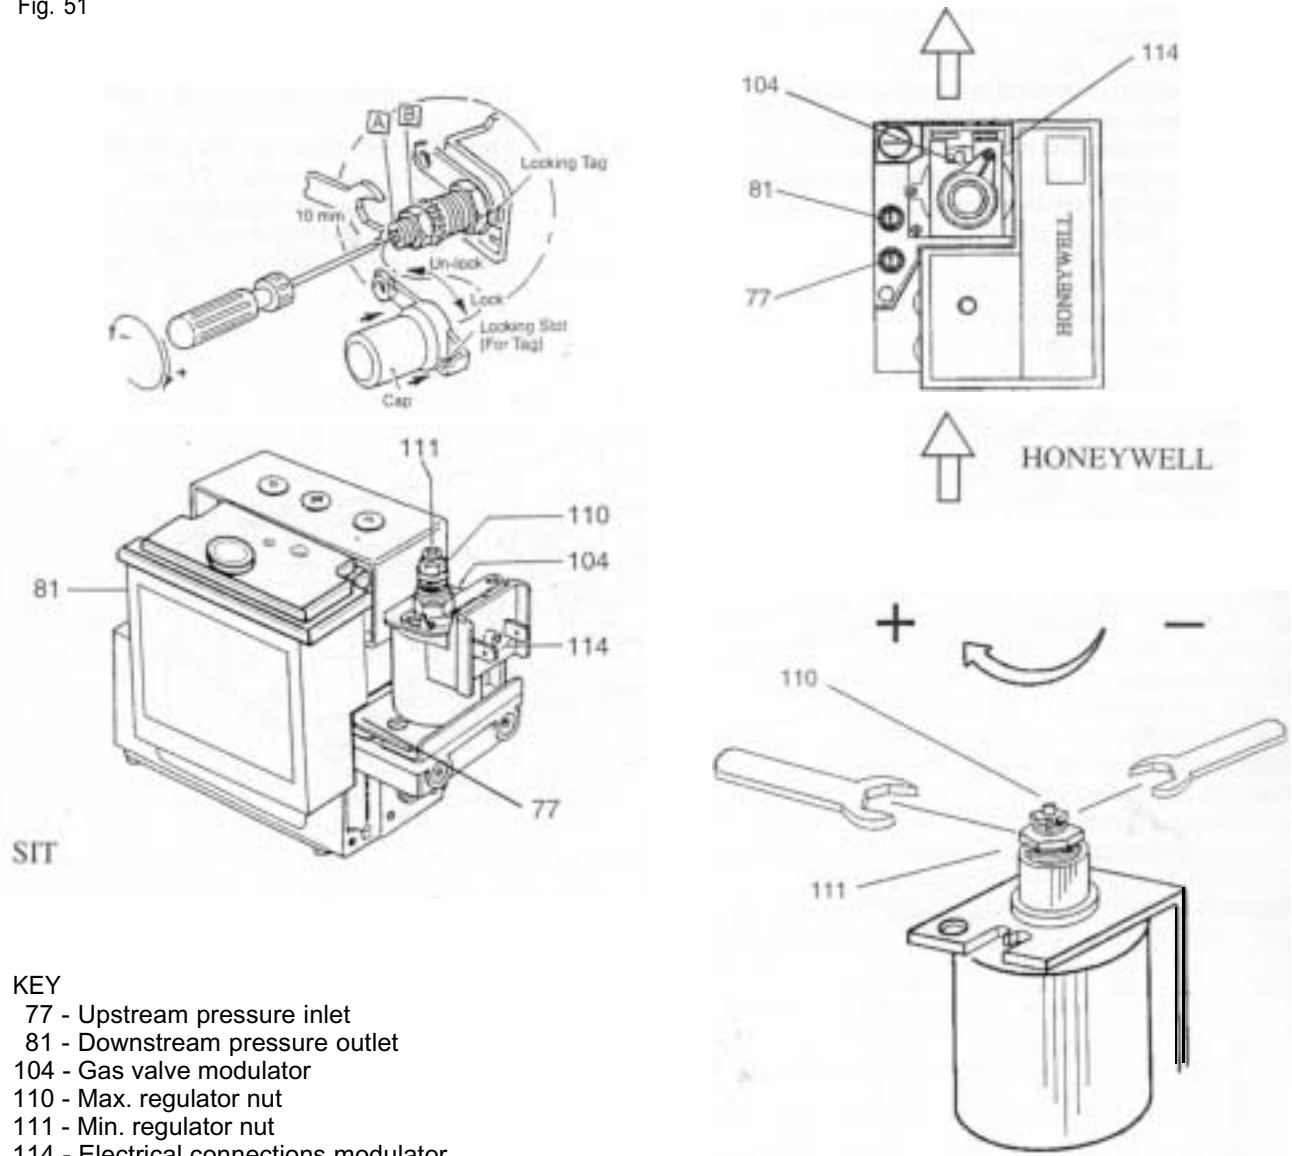Fig. 51



KEY

- 77 - Upstream pressure inlet
- 81 - Downstream pressure outlet
- 104 - Gas valve modulator
- 110 - Max. regulator nut
- 111 - Min. regulator nut
- 114 - Electrical connections modulator

- 6.7 **LIGHTING THE BOILER (Fig. 50)**
Before lighting the main burner make sure that the heating circuit flow and return valves are open and also that the cold water input cock is also open.
- If external controls are installed (e.g. timeclock and thermostat) make sure that they call for heat.
 - Turn summer/winter selector switch 1 to winter.
 - Turn control thermostat 4 up to its maximum setting.
 - Now the main burner should turn on. With leak detection fluid test for gas soundness of all gas components and joints.
 - See paragraph 6.14 for regulating the heating circuit thermostat. Check gas mains pressure (Fig. 52). Fit a gas pressure gauge on pressure inlet 77 (Fig. 51) on the gas valve, after releasing the seal screw. Check the gas mains pressure with boiler operating. Check with the Local Gas Supplier if the pressure differs significantly from 20 mbar.

- 6.9 **CHECK THE GAS PRESSURE AT THE BURNER**
Now check if the maximum gas pressure at the burner is equal to 8.1 ± 0.5 mbar (3.2 ± 0.2 in w.g.) for RSF 82E - RSF 82ET.

To do this proceed as follows:

- Turn off main switch 1 (Fig. 50)
- Set main switch on &
- Set control thermostat 5 at its maximum setting.
- Fit a pressure gauge, using a hose, to pressure test point 81, (Fig. 51), after first loosening its close-off screw.
- Open one or more hot water taps so that at least $10 \div 11.4$ litre of water flows per minute.
- The pressure indicated on the pressure gauge is the maximum operating gas pressure.
- Check if the minimum pressure corresponds to 1.5 mbar (0.6 in w.g.) RSF 82E - RSF 82ET as is set at the factory. Detach one of the wires going to modulator 104 (Fig. 51) and make the boiler operate just as' was done for checking the maximum pressure.

Observe the pilot flame which will light a second before main burner. It should be about 20 mm long (Fig. 528) and envelop the spark electrode tip.

- 6.10 **ADJUSTING MINIMUM AND MAXIMUM PRESSURE (Fig. 51) SIT-HONEYWELL GAS VALVE**
- Remove cap covering modulator to gas valve.
 - Detach one of the cables connected to the modulator 114.
 - With the boiler operating use a screw driver (HONEYWELL 9 mm spanner) to turn the nut 111 clockwise to increase pressure and anti-clockwise to decrease pressure.

- 6.11 **RECONNECT THE DETACHED CABLE**
Use a screw-driver to hold nut 111 firm (HONEYWELL 9 mm spanner) and use a 10 mm spanner (HONEYWELL 7 mm spanner) wrench to rotate the nut 110 clockwise to increase the pressure and counter-clock-wise to decrease it. After adjustment turn off D.H.W. Taps.

- 6.12 **SETTING CENTRAL HEATING GAS PRESSURE THE BOILER COMES SET AT MID POSITION RATING FOR USE ON C.H. (table1)**
When the boiler operates in the C.H. mode the gas pressure at the burner can be set between the min. and max. values. This permits capacity to be adjusted to suit system demand. If adjustment is required proceed as follows:
- Remove the front panel and the panel instrument as described in clauses (sect. 5.4.1 and sect 5.4.3). Unscrew the two screws holding the control box cover and lift off (Fig. 78).
 - Select winter switch position
 - Turn control thermostat 4 to maximum setting (Fig. 50).
 - Check all external controls are on and calling for heat ensure all D.H.W. taps' are off.
 - With boiler operating use a screwdriver to turn potentiometer (Fig. 48) clockwise to increase pressure and anti-clockwise to decrease pressure.
 - To obtain the desired heat value establish pressure as per (Fig. 52).
 - Replace the protective cover.
 - Once this pressure is established, mark it up on data badge with adhesive red label/arrow burner pressure setting so that this can be referred to and checked during future servicing.

RATIO BETWEEN BURNER PRESSURE AND OUTPUT

Fig. 52



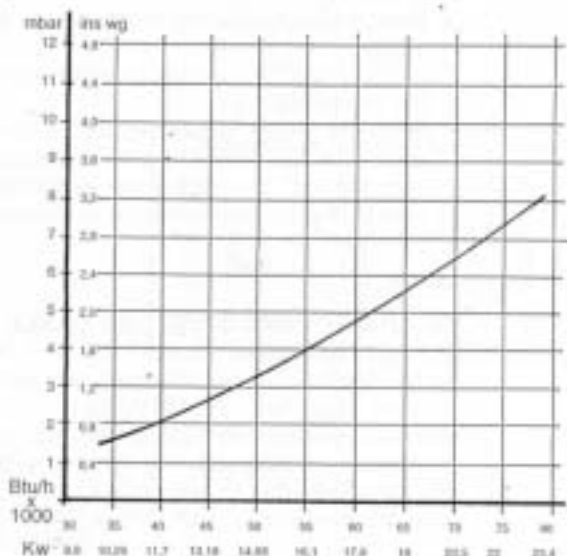


Fig. 52B

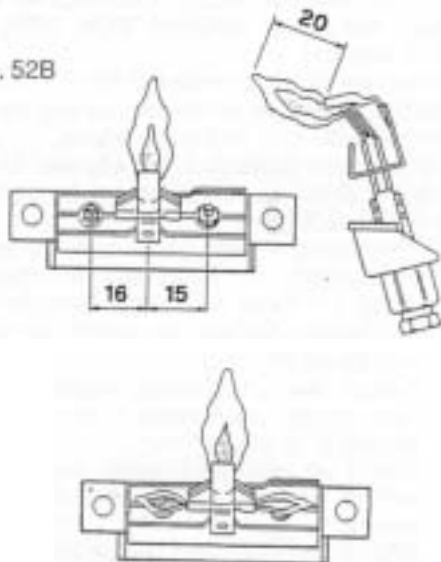

THREE WAY VALVE

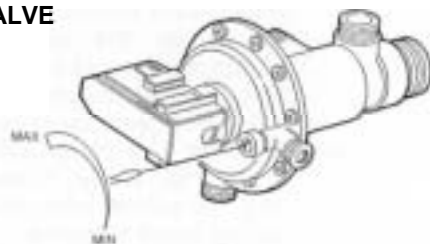Fig. 53



The code of practice for the installation, commissioning & servicing of central heating systems

Once the process of commissioning the boiler is complete, the commissioning engineer **MUST** complete his section in the Benchmark log book.

6.13 CHECKING THE FLUE SYSTEM

6.13.1 The flue system should be visually checked for soundness. Check all clamps and fixings are secure and tight.

6.14 CHECKING THE HEATING THERMOSTAT

6.14.1 Allow the system to warm up and then turn the C.H. thermostat to ensure the main burner modulates from "high" to "low" and "low" to "off" and vice versa (scale range covers approx. 45°C 85°C).

6.15 TESTING AND REGULATING THE DOMESTIC HOT WATER SYSTEM FLOW

6.15.1 Put the appliance in operation with the (summer/winter) switch in winter position.



- Open a domestic hot water tap (preferably the bath tap). Ensure cold water inlet stopcock is open and the D.H.W. thermostat 5 (Fig. 50) is set at maximum.
- If the burner does not light check that the water flow rate is above the min. required to operate the differential pressure 2.8 Lts./min. (0.61 gals/min).
- The temperature of the water will depend on the rate at which it flows. If, due to high water pressure, the flow rate is too high (and thus the temperature too low for practical use) the flow rate may be adjusted. It is better to set for the lowest acceptable temperature preferably at the bath tap since the user can gain higher temperatures at other restricted flow taps (Table 1).
- To adjust the flow rate refer to (Fig. 53) side view and locate the adjustment screw (Fig. 53). Turn the screw clockwise until the required temperature is reached.

N.B.: If the cold supply is subject to large fluctuations or is above the permitted max. water pressure, a suitable pressure/flow regulator should be fitted in the cold water supply to the appliance.

- Turn the appliance mode selector switch (Fig. 50) (1) to the summer position. Slowly close the draw off tap to reduce the flow rate to above the min. (approx. 2.8 litre/min - 0.61 gals/min.). Rotate the D.H.W. control thermostat to ensure it operates at its various setting.
- Close the draw-off tap still further. The burner should stop when the rate falls below about 2.8 litres/min (0.61 gals/min.).

6.16 HANDING OVER TO THE USER

6.16.1 After completion of installation and commissioning of the system, the installer should hand over to the Householder by taking the following actions:

- Hand the "User's Instructions" to the Householder and explain His/Her responsibilities under the "Gas Safety Regulations 1996 (as amended)".
- Explain and demonstrate the lighting and shutting down procedures.
- The operation of the boiler including the use and adjustment of ALL system controls which should be fully explained to the Householder. This then ensures the greatest possible fuel economy consistent with household requirements of both heating and hot water consumptions.
Advise the User of the precautions necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.
- Explain the function and the use of the boiler  only/  (Summer/Winter) and ON/OFF switches.
- Explain and demonstrate the function of time and temperature controls neon lights radiator valves etc. for the economic use of the system.
- If an optional time clock is fitted, then draw attention to the time clock User's Instructions and hand them to the Householder.
- Stress importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out AT LEAST ONCE A YEAR.

Fill in the Benchmark log book and leave completed with the customer.

SECTION 7 SERVICING INSTRUCTIONS



The code of practice for the installation, commissioning & servicing of central heating systems

Ravenheat are a member of the Benchmark initiative and fully supports the aims of the programme. Benchmark has been instructed to improve the standards of installation and commissioning of central heating systems in the UK and to encourage the regular servicing of all central heating systems to ensure safety and efficiency.

7.1 SERVICING

7.1.1 To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals. The frequency of cleaning will depend upon the par-

ticular installation conditions and usage but in general, once per year should be adequate.

WARNING

Before the start of any servicing or replacement of components always isolate electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.

Data badge position - lower left hand sub frame.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the outer case (sect. 5.4). Operate the appliance by turning the hot water services on to a high water flow, and observe the main burner.
- Check that the flame covers all the flame ports and is of a light blue colour. Yellow flames and excessive lifting of flames indicate poor combustion.
- **IMPORTANT:** After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried out along with functional checks in operation.

7.2 TO INSPECT AND CLEAN THE APPLIANCE

7.2.1 Before carrying out cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris.

7.2.2 Inspect the heat exchanger for any blockage. Deposits of any material should be brushed always using a soft brush.

NOTE: Do not use brushes with metallic bristles.

7.2.3 Examine internal pipe-work connections and automatic air vent for any water leaks. Rectify if necessary.


7.2.4 Examine the combustion chamber insulating material and renew if damaged (sect. 7.9).

7.2.5 Remove and examine the main burner injector and pilot injector clean or renew, as necessary (sec. 7.12 & 7.14).

7.2.6 Inspect the main burner and remove any deposit with a soft brush. Check the electrodes for damage or deterioration, clean or renew as necessary. Ensure that the spark gaps are correct to dimensions specified in sec. 7.15.

EXPLODED DIAGRAM OF BOILER BODY

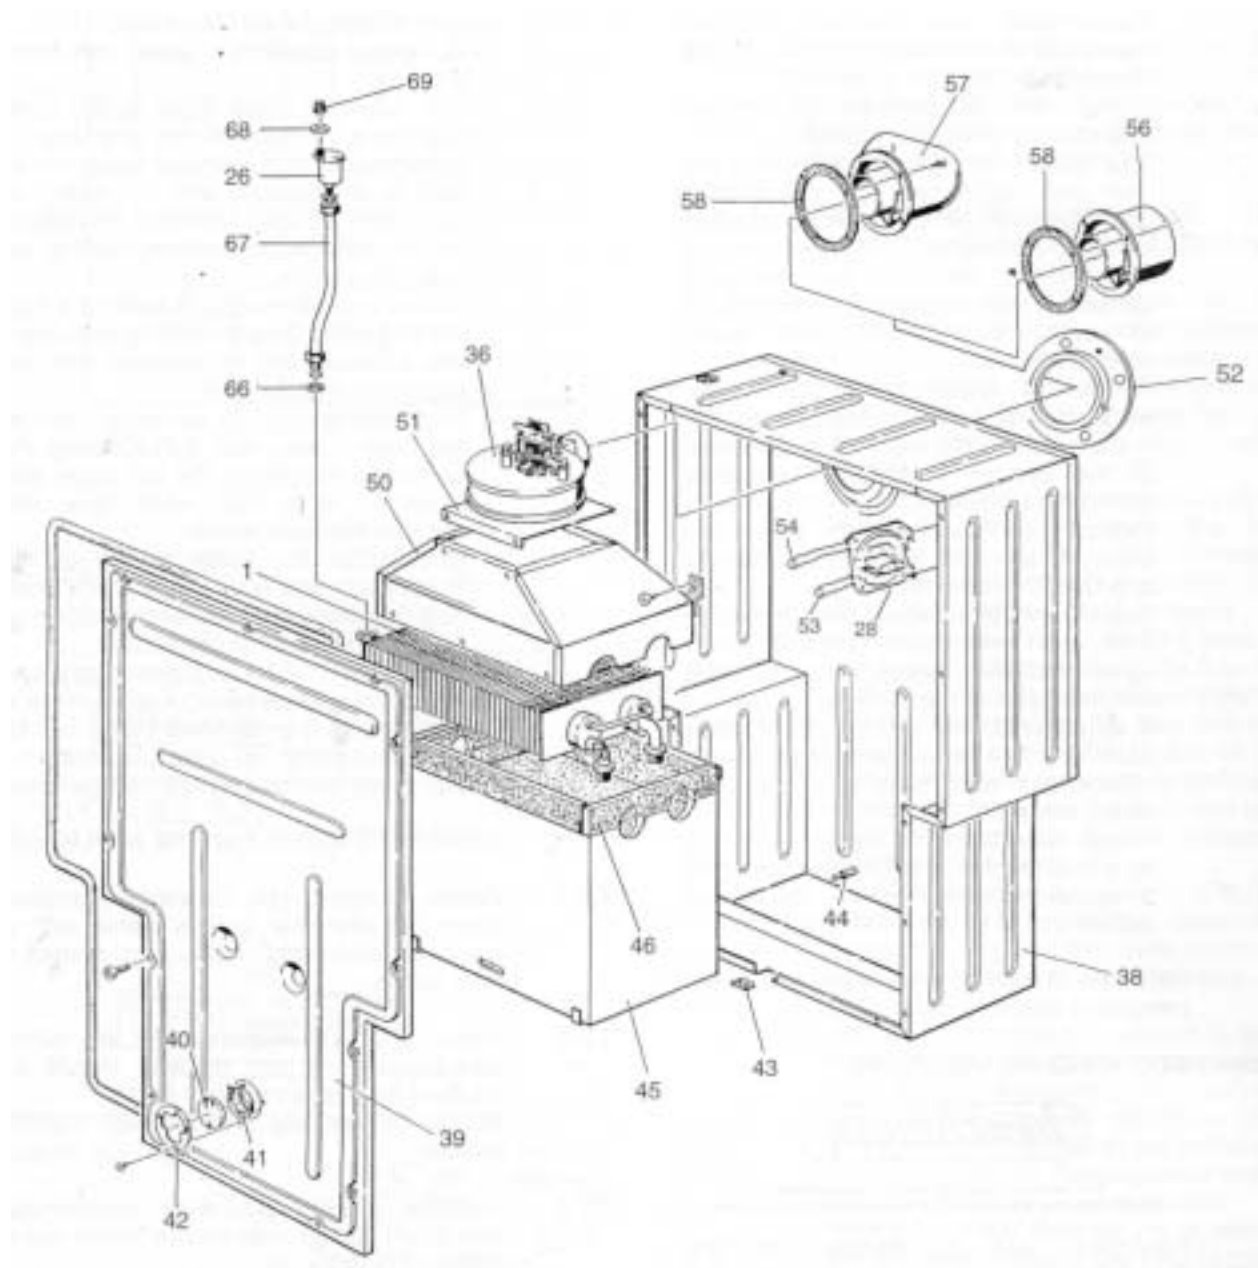Fig. 54



KEY

1 - Heat exchanger
 26 - Auto air vent valve
 28 - Pressure switch
 36 - Fan
 38 - Plenum chamber
 39 - Plenum chamber cover
 40 - Window

41 - Window seal
 42 - Window clamp ring
 43 - Thermocouple seal
 44 - Burner centering pin
 45 - Combustion chamber
 46 - Ceramic insulation
 50 - Flue gas exhaust hood
 51 - Fan fastening bracket
 52 - Air restriction ring

53 - Connection tube-
 54 - Connection tube +
 56 - Straight header
 57 - Elbow header
 58 Header gasket
 66 - Seal
 67 - Connection pipe
 68 - Seal
 69 Plug

7.2.8 Examine flue duct and flue hood and ensure that there is no obstruction. Examine the gasket at the entry into the flue duct.

7.2.9 It is essential that a good seal is made at the outlet to the fan, renew this gasket if there is any sign of damage or deterioration.

7.3 TO REMOVE/REPLACE THE FRONT PANEL OF THE CASING (Fig. 19 & 20)

7.3.1 Remove the 2 screws that secure the upper part of the front panel of the casing. Lift the front panel few millimeters to the top, until it is free from the slot and remove panel.

7.4 TO REMOVE/REPLACE THE COMBUSTION CHAMBER COVER

7.4.1 Remove the front casing panel (sect. 7.3).

7.4.2 Unscrew all the screws that fasten the cover to the chamber body and put them into a container so that they don't get lost.

7.4.3 Detach the cover, being careful not to damage the seal.

7.4.4 Reassemble in reverse order. Ensure good seal of cover when replacing.

7.6 TO REMOVE/REPLACE THE FAN ASSEMBLY (Fig. 58)

7.6.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).

7.6.2 Disconnect the electrical connections from the fan motor.

7.6.4 Support the fan and remove the two fixing screws and bracket from the front of the flue hood. Carefully withdraw it from the appliance. Place in a safe place until required. Reassemble in reverse order. Ensure wires are connected correctly (Fig. 94).

7.7 TO REMOVE/REPLACE THE FLUE HOOD (Fig. 60)

7.7.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).

7.7.2 Remove the fan (sect. 7.6).

7.7.3 Remove the three screws on the front that fasten hood to the combustion chamber.

7.7.4 Remove the two screws at the rear of hood.

7.7.5 Pull the flue hood upwards and then remove.

7.7.6 Replace in reverse order.

7.8 TO REMOVE THE HEAT EXCHANGER (Fig. 62-63-64)

7.8.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4). Remove the lower grating (sect. 5.4.2). Lower the instrument panel (sect. 5.4.3 & 4).

7.8.2 Remove the two sides of the casing by slightly lifting them and sliding them towards the top of the appliance, to release them from their upper suspension hooks.

7.8.3 Close the on/off valves for the heating and the hot water circuits. Drain the heating system from the drain point mounted on the system (Fig. 93) and drain the hot water from the lowest tap on its pipeline system and drain point on D.H.W. inlet cock (Fig. 46).

7.8.4 Remove the fan (sect. 7.6)

7.8.5 Remove the flue hood (sect. 7.7).

7.8.8 Remove the automatic air vent (Fig. 92)

7.8.9 Disconnect unions for the hot water and heating water pipelines (Fig. 62).

7.8.10 Unscrew the rings that fasten the heat exchanger to the combustion chamber.

7.8.11 Remove the two side insulation panels at top of heat exchanger (Fig. 63).

7.8.12 Pull the heat exchanger up until its connections come out from the combustion chamber and then remove it (Fig. 64).

7.8.13 Replace in reverse order. Ensure correct wire position (Fig. 94)

IMPORTANT: When replacing a heat exchanger new seals must be used.

7.9 TO REMOVE/REPLACE COMBUSTION CHAMBER INSULATION PANELS (Fig. 64).

7.9.1 Remove casing front panel (sect. 7.3). Remove combustion chamber front cover (sect. 7.4). Remove fan assembly and flue hood (sect. 7.6 & 7.7). Remove main burner (sect. 7.15). Remove top insulation pieces at sides. Remove 2 screws securing combustion chamber. To rear of boiler and lower chamber carefully remove all insulation panels.

7.9.2 Replace in reverse order.

7.10 TO REPLACE THE ELECTRODE
(Fig. 66)

Fig. 60

- 7.10.1 Remove front casing (sect. 7.3).
Remove combustion chamber front cover
(sect. 7.4).

Fig. 58

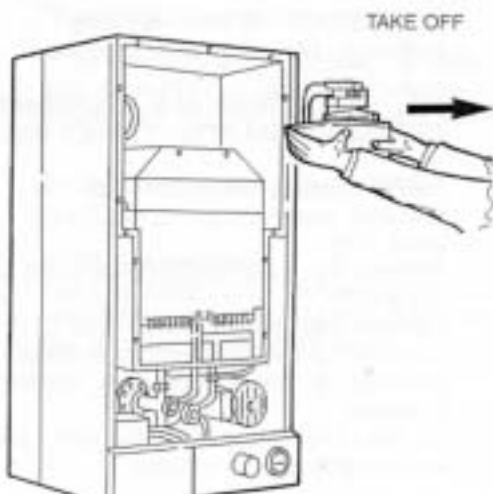
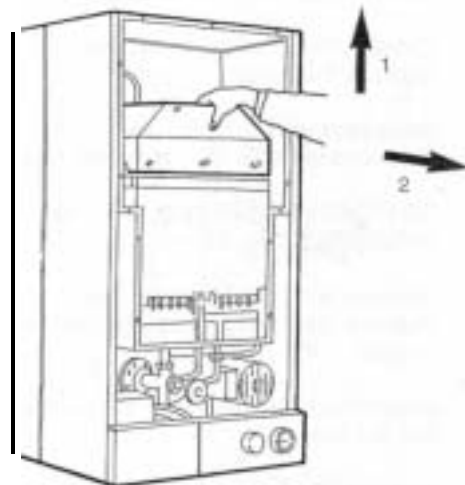
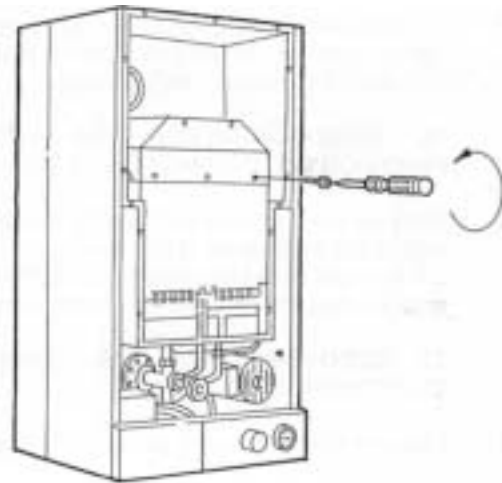
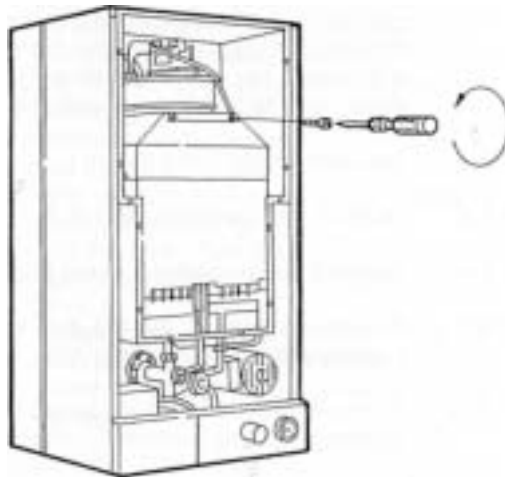


Fig. 62

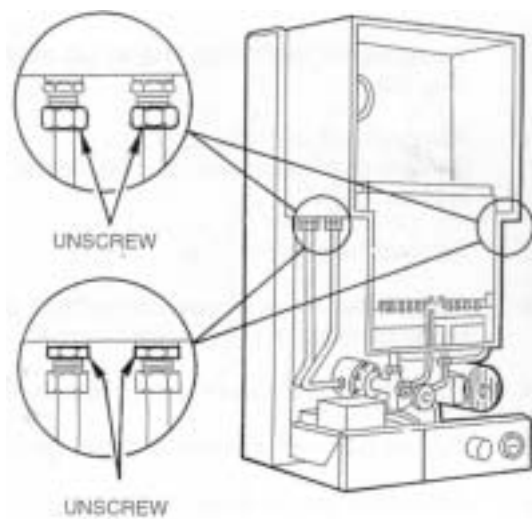


Fig. 63

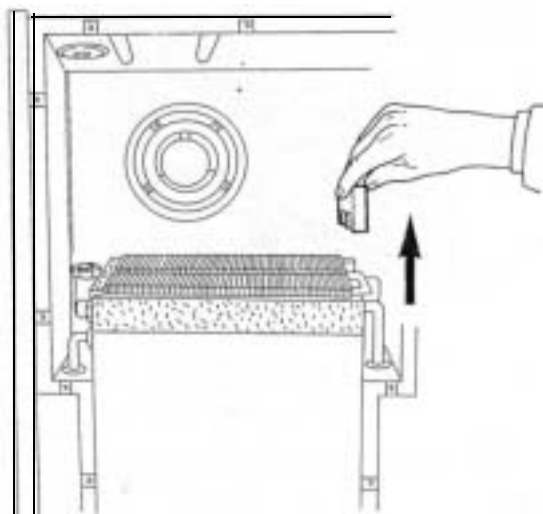


Fig. 64


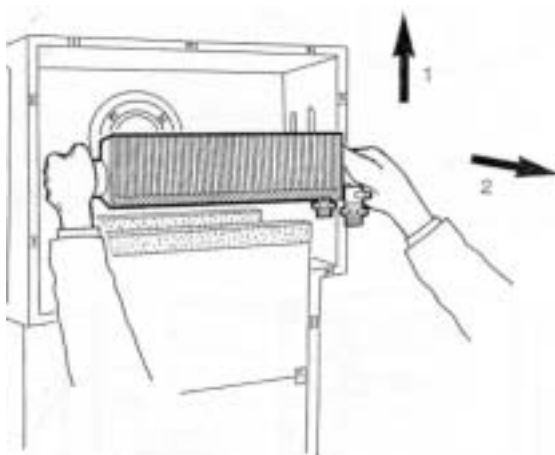


Fig. 66

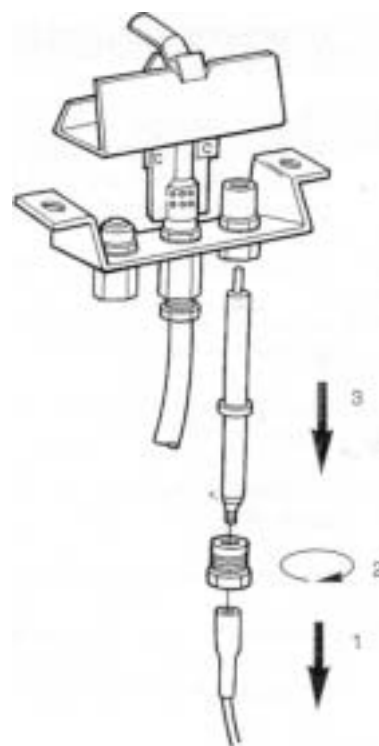

7.10.2 Detach the wire from electrode and then unscrew the nut that secures it to the pilot burner assembly and remove.

7.10.3 Replace with new electrode in reverse order.

7.12 TO REPLACETHE PILOT INJECTOR (Fig. 68)

7.12.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).
Remove the lower grating (sect. 54.2).

7.12.2 Release the fitting that secures pilot pipe at the gas valve.

7.12.3 Remove electrode (sect. 7.10)

7.12.4 Unscrew pilot connection from pilot burner.

7.12.5 Pull the aluminium tube downwards and the injector should come out by itself.

7.12.6 Replace in reverse order.

7.13 TO REPLACETHE PILOT BURNER

7.13.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).

7.13.2 Remove the electrode and pilot injector (sect. 7.10 and sect. 7.12).

7.13.4 Remove the two screws securing pilot burner to main burner (Fig. 69).

7.13.5 Replace in reverse order.

7.14 TO REMOVE REPLACE THE MAIN INJECTORS

- 7.14.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 4). Remove the pilot burner assembly as described in sect. 7.13.
- 7.14.2 Unscrew the union (Fig. 70).
- 7.14.3 Unscrew the 4 screws securing the injector manifold to the burner (Fig. 71).
- 7.14.4 Pull the manifold up and out from the combustion chamber (Fig. 72).
- 7.14.5 Unscrew and replace the injectors and their seals (Fig. 73).
- 7.14.6 Replace in reverse order.
- 7.14.7 Relocate the grommet, sealing the gas supply pipe to the casing taking care not to damage it. Replace if necessary.

Fig. 68

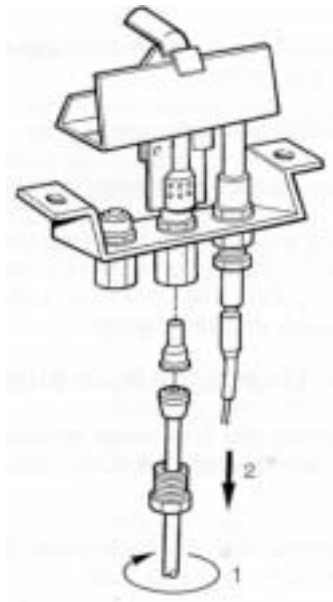


Fig. 69

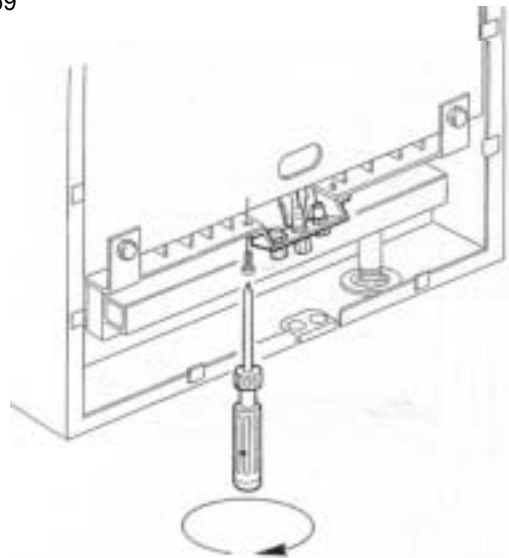


Fig. 70


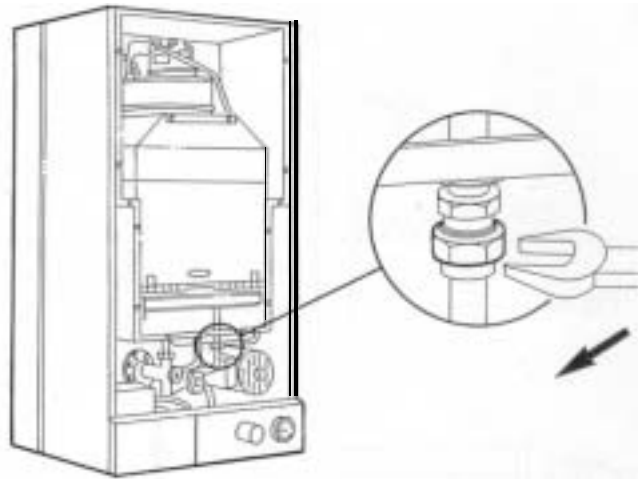


Fig. 71

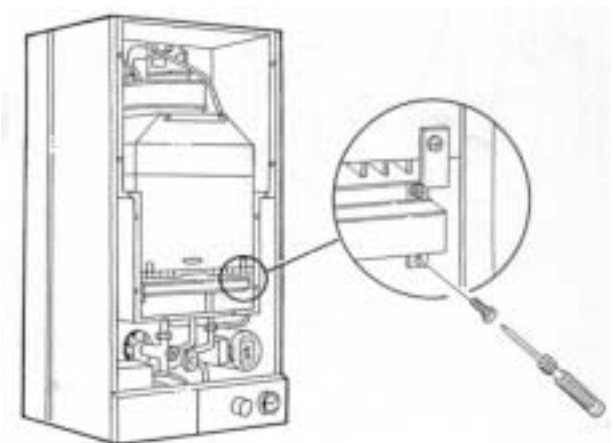

7.15 TO REMOVE/REPLACE THE MAIN BURNER

- 7.15.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).
- 7.15.2 Remove the pilot burner assembly as described in sect. 7.13.
- 7.15.4 Remove the injectors manifold as described in sect. 7.14.
- 7.15.5 Remove the two screws securing the main burner to the combustion chamber (Fig. 74).
- 7.15.6 Pull the burner forward and remove (Fig. 75).
- 7.15.7 Replace in reverse order.

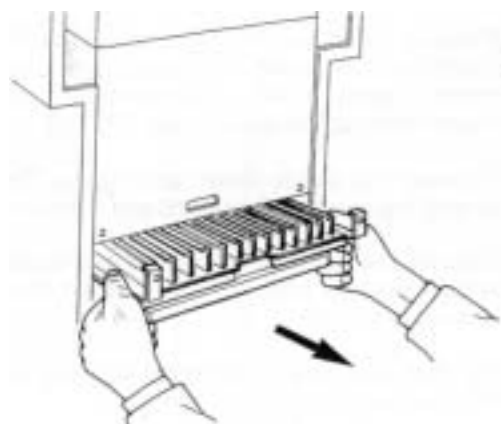
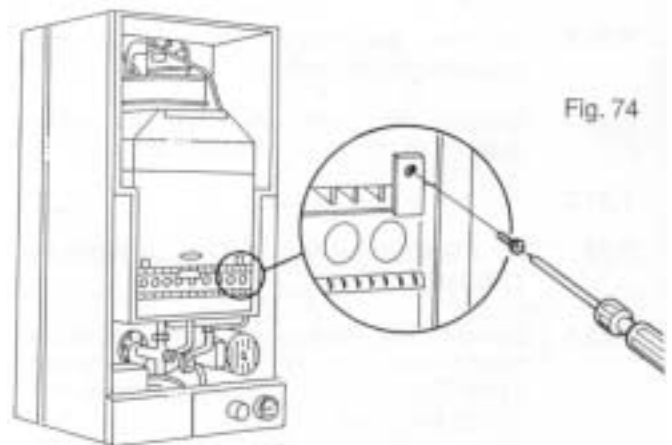
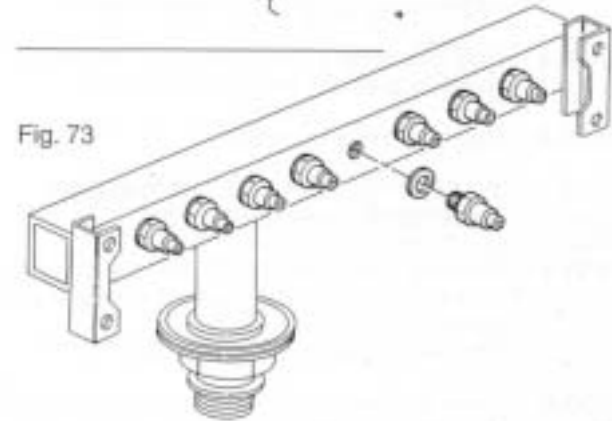
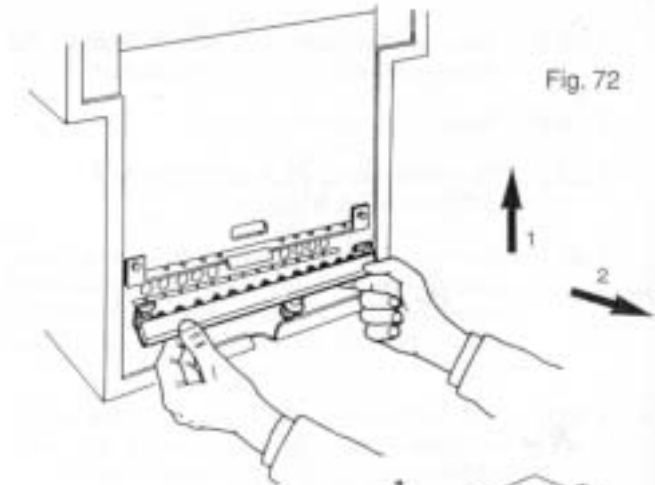
IMPORTANT: When refitting the burner make sure that the pins at the rear of the combustion chamber locate into the slots made on the rear of the burner.

7.16 TO REMOVE/REPLACE THE GAS VALVE (Fig. 51)

- 7.16.1 Remove front casing panel (sect. 7.3).
- 7.16.2 Push the 2 plastic clips that fasten the instrument panel (Fig. 23).
- 7.16.3 Lift the instrument panel to detach it from the sides, and lower it down by rotating it on its own hinges (Fig. 25).
- 7.16.4 Pull the 2 wires from the Modulator. Remove the electronic ignition board (7.32.213).
- 7.16.5 Remove the lower grating (sect. 5.4.2).
- 7.16.6 Unscrew the pilot burner tube connection.
- 7.16.7 Remove the eight screws (four per side) that connect the gas valve to the gas pipelines and then remove it from its seat.
- 7.16.8 Replace in reverse order, always using new seals.

7.19 TO REMOVE/REPLACE THE HEATING CONTROL AND DOMESTIC HOT WATER CONTROL

- 7.19.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (7.31.2/3).
- 7.19.2 Pull off the thermostat knob (Fig. 78). Remove the lock nut and remove the control board (PCB).
- 7.19.3 Detach the wires by unclipping the connector from the control board (Fig. 79).



- | | |
|--|---|
| <p>7.19.4 Unscrew the lock nut which fastens the potentiometer to the instrument panel (Fig. 78).</p> <p>7.19.5 Replace in reverse order</p> <p>7.20 TO REMOVE/REPLACE THE MAIN SWITCH (Fig. 82).</p> <p>7.20.1 Remove the front panel from the outer casing (sect. 7.3), lower the instrument panel (sect. 7.16.2 & 3), remove the control box cover (7.31.2/3) and remove the control knob.</p> <p>7.20.2 Detach the wires that connect to the switch - make sure that these wires are later reconnected to the same poles (Fig. 94).</p> <p>7.20.3 Pull the switch out from the instrument panel by pressing the clamp springs.</p> <p>7.20.4 Replace in reverse order</p> <p>7.21 TO REMOVE/REPLACE THE WATER PRESSURE GAUGE (Fig. 83).</p> <p>7.21.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3). remove the lower grating (sect. 5.4.2).</p> <p>7.21.2 Close the heating system on/off valves and drain the water from the drain point on the heating system (Fig. 93).</p> <p>7.21.3 Unscrew the fitting that secures the pressure gauge probe.</p> <p>7.21.4 Remove the gauge from the instrument panel by pressing its fastening springs.</p> <p>7.21.5 Replace in reverse order.</p> <p>7.22 TO REMOVE/REPLACE THE OVERHEAT THERMOSTAT</p> <p>7.22.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (7.31.2/3).</p> <p>7.22.2 Remove lower grill and right side of the casing (sect. 5.4.2 & 5).</p> <p>7.22.3 Remove the three wires that connect to the overheat thermostat - making sure that these wires will subsequently be reconnected to the same poles (Fig. 94).</p> <p>7.22.4 Unscrew the plastic cover and locknut that fastens the overheat thermostat and remove it.</p> <p>7.22.5 Remove the split pin and pull the thermostat sensor from its pocket complete with case sealing grommet.</p> <p>7.22.6 Remove case sealing grommet from the old thermostat and fit to new one.</p> | <p>7.22.7 Replace in reverse order.</p> <p>7.23 TO REMOVE/REPLACE THE ELECTRIC CONTROL BOARD (PCB)</p> <p>7.23.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 1.16.2 & 3).</p> <p>7.23.2 Unscrew the 2 screws holding the control box cover and remove. Disconnect mains cables and any other connections (room thermostat and frost thermostat if fitted).</p> <p>7.23.3 Detach the connectors from the board.</p> <p>7.23.4 Detach the PCB board from its base by unscrewing the six screws.</p> <p>7.23.5 Replace in reverse order (ensure all electrical connections are made correctly).</p> <p>7.23.6 Having replaced PCB recommission boiler on heating mode (sect. 6.15).</p> <p>7.24 TO REMOVE/REPLACE THE DIFFERENTIAL PRESSURE SWITCH (Fig. 87).</p> <p>7.24.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).</p> <p>7.24.2 Detach the wires that connect to the pressure switch, make sure that these wires are later reconnected to the same poles (Fig. 94).</p> <p>7.24.3 Unscrew the two screws that fasten the pressure switch to the back of combustion chamber.</p> <p>7.24.4 Remove the two silicone tubes.</p> <p>7.24.5 Ensure tubes are connected correctly (Fig. 87) avoiding kinks.</p> <p>7.24.6 Replace in reverse order ensuring that the - tapping is connected to the tube terminating inside the case and the + tapping is connected to the tube terminating at flue ring (Fig. 87 and 94).</p> <p>7.25 TO REMOVE/REPLACE THE PUMP (Fig. 88)</p> <p>7.25.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3).</p> <p>7.25.2 Remove lower grill right side of the casing (sect. 5.4.2 & 5), lower the electric box (sect. 7.16.2 & 3).</p> |
|--|---|

7.25.3 Close the on/off valves on the heating circuit and drain at drain point water from the boiler (Fig. 93).

7.25.4 Remove the terminal covers and detach the supply wires (Fig. 88).

7.25.5 Unscrew the two hexagonal nuts that fasten the pump to its pipes and remove the pump.

NOTE: It may be necessary to loosen the flow pipe at the heat exchanger to replace the pump gaskets.

7.25.6 Always use new seals when re-fitting new pump.

7.25.7 Replace in reverse order

Fig. 78

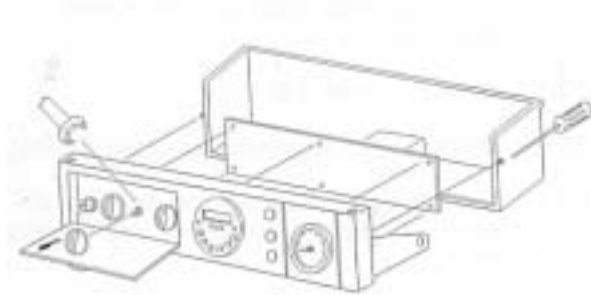


Fig. 79


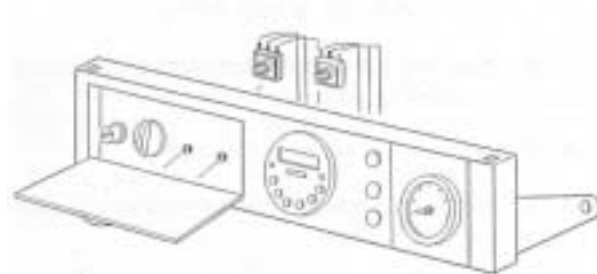


Fig. 82

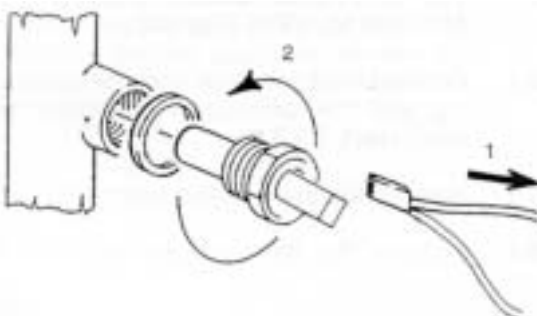

IMPORTANT:

7.25.8 Make sure that the arrow that indicates the direction of flow aims from the bottom upwards.

7.25.9 Replace wires and cover ensuring that connection wire br=L and bl=N.

7.25.10 Refill the heating system as described in the sect. 6.4 & 5 and check for leaks

7.26 TO REMOVE/REPLACE THE DIVERTER VALVE (Fig. 89)

7.26.1 Remove the front panel from the outer casing, lower the instrument panel (sect. 7.16.2 & 3).
Remove lower gratin; (sect. 5.42).

7.26.2 Close the on/off valves for the heating circuit and the hot water circuit. Drain the boiler at drain point (Fig. 93) and drain hot water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).

7.26.4 Unscrew the five nuts that connect the diverter valve and pull it out from boiler being careful not to damage the wires.

7.26.5 Pull off circlip securing microswitches to diverter valve.

7.26.6 If replacing microswitch assembly use a screw-driver to prise off the protective cover of the microswitches.

7.26.7 Detach the wires that are connected to this. Remember that they must subsequently be reconnected to the same terminals (Fig. 94).

7.26.8 Replace in reverse order. Always use new seals.

7.26.9 Fill the boiler as described in (sect. 6.4 & 5) and check for leaks.

7.27 TO REMOVE/REPLACE THE CENTRAL HEATING AND/OR HOT WATER CONTROL THERMISTOR

7.27.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.162).

7.27.2 Remove left/right side of casing (sect. 5.4).

7.27.3 Remove the wires that connect the thermistor (Fig. 81).

7.27.4 Close the on/off valves for the heating circuit and the hot water circuit. Drain the boiler at drain point (Fig. 93) and drain hot water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).

7.27.5 Undo the nut and withdraw the sensor (Fig. 81) from its pocket.

7.27.6 Replace in reverse order.

Fig. 62


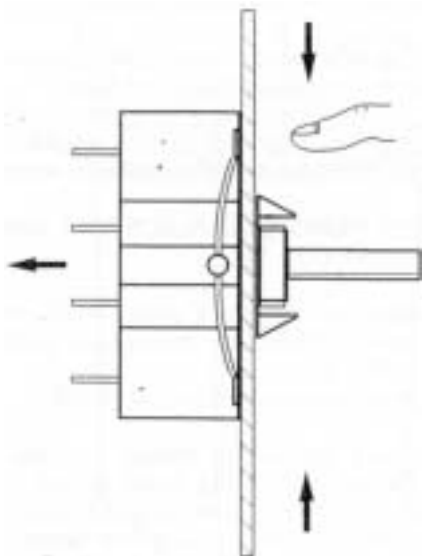
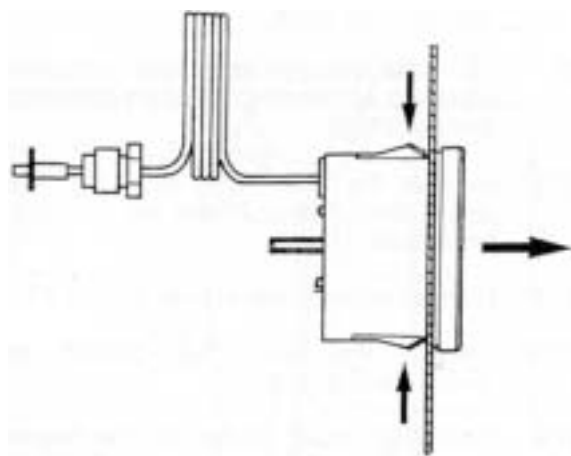


Fig. 83

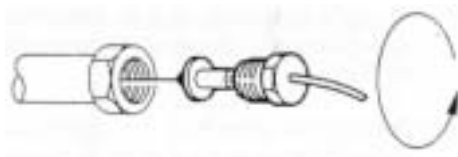

7.20 TO REMOVE/REPLACE THE CENTRAL HEATING EXPANSION VESSEL

In the unlikely event of failure of the central heating expansion vessel it is recommended a suitable expansion vessel be fitted external to the boiler. It should be positioned on the return pipe and as close to the boiler as possible (Fig. 7).

However, if it is necessary to replace the central heating expansion vessel the boiler must be removed from the wall as follows.

7.28.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (sect. 7.31.213). Remove the lower grating (sect. 54.2). Remove the two sides of the casing (sect. 5.4.5).

7.28.2 Close the on/off valve on the domestic cold water, central heating and gas supply.

7.28.3 Drain domestic water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).

7.28.4 Drain the boiler (Fig. 93).

7.28.5 Disconnect all pipework connected to boiler.

7.28.7 Disconnect mains cables and any other connections (room thermostat, programming clock).

7.28.8 Remove the duct proceeding in reverse order as described in (sect. 5.5 or 5.7).

7.28.9 Remove the 2 lower coach bolts and release 2 top coach bolts then remove boiler from the wall.

7.28.10 Unscrew the nut that connects the expansion vessel and remove it (Fig. 91).

7.28.11 Remove the screw supporting expansion vessel (Fig. 91).

7.28.12 Remove the expansion vessel.

7.28.13 Replace all the components in reverse order using new seals.

7.28.14 Fill the system as described in the sect. 6 and check for leaks.

7.29 TO REMOVE/REPLACE THE AIR AUTOMATIC VENT (Fig. 92)

7.29.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).

7.29.2 Remove the lower grating (sect. 5.4.2)

7.29.3 Remove the fan assembly and the flue

7.29.4 Close the on/off valves for the central heating circuit and drain the water from the boiler drain point (Fig. 93).

7.29.5 Unscrew and remove the plastic cap that protects the valve vent hole.

7.29.6 Disconnect the unions 1 and 2 (Fig. 92) slightly turn and remove pipe and auto air vent.

7.29.7 Replace in reverse order, using new seals.

7.29.8 Fill the system as described in the sect. 6.4 & 5 and check for leaks.

7.30 TO REMOVE/REPLACE THE PRESSURE RELIEF VALVE (Fig. 93)

7.30.1 Remove the front panel (sect. 7.3) and the lower grating (sect. 5.4.2) from the outer casing, lower the instrument panel (sect. 7.16.2 & 3). Remove right side of the casing (sect. 5.4.5).

7.30.2 Close the on/off valves for the heating system and drain the water from the drain point (Fig. 93).

7.30.3 Unscrew the screw from its body, clean or replace. Replace in reverse order.

7.30.4 Fill the system as described in the (sect. 6.4 & 6.5) and check for leaks.

7.31 TO REMOVE/REPLACE TIME CLOCK (Fig. 88/A)

7.31.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 and 3).

7.31.2 Remove control box cover (sect. 7.23.2).

7.31.3 Remove control board (sect. 7.23.2) from panel.

7.31.4 Remove two clips securing the timer,

7.31.5 Carefully remove the four wires connecting timer by pulling spade connectors from timer.

Fig. 87


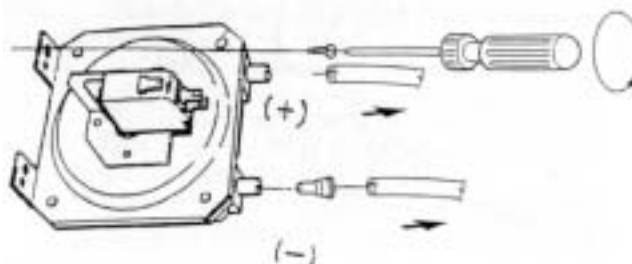


Fig. 88

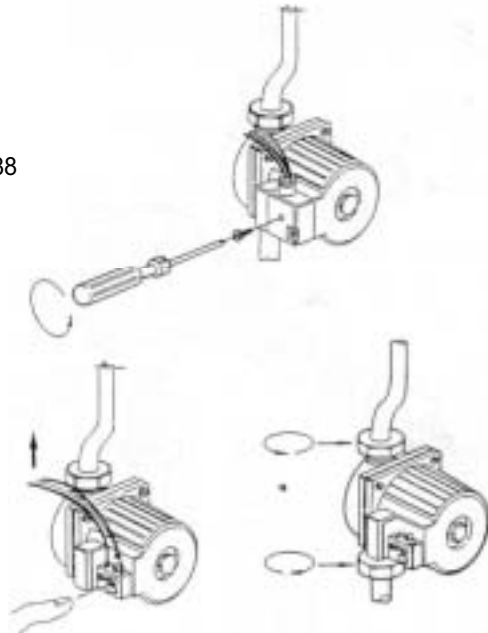

7.31.6 Replace in reverse order (ensure all electrical connections are made correctly) (Fig. 88/A).

7.32 TO REMOVE/REPLACE THE IGNITION BOARD

7.32.1 Remove front casing (sect. 7.3) lower the instrument panel (sect. 7.16.2 & 3).

7.32.2 Remove the screw from the ignition box cover.

7.32.3 Detach the ignition box from its base on the gas valve.

7.32.4 Remove the PCB cover and detach the connectors from the board.

7.32.5 Replace in reverse order (ensure all electrical connections are made correctly).

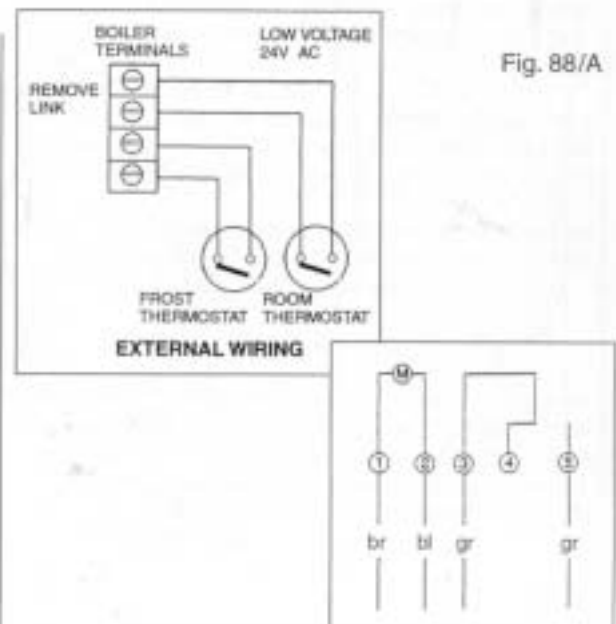


Fig. 89

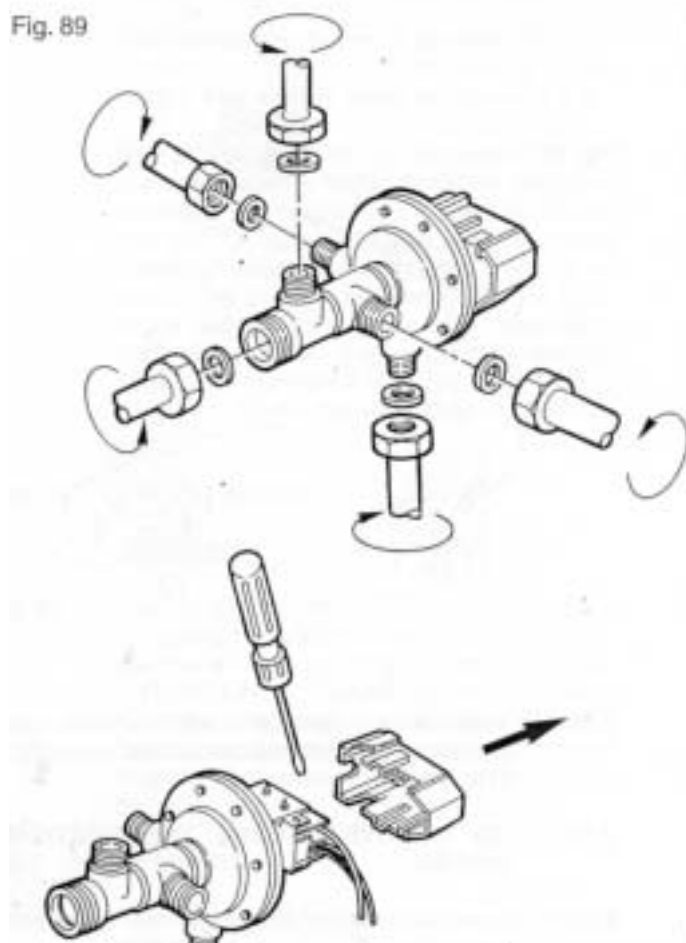


Fig. 92


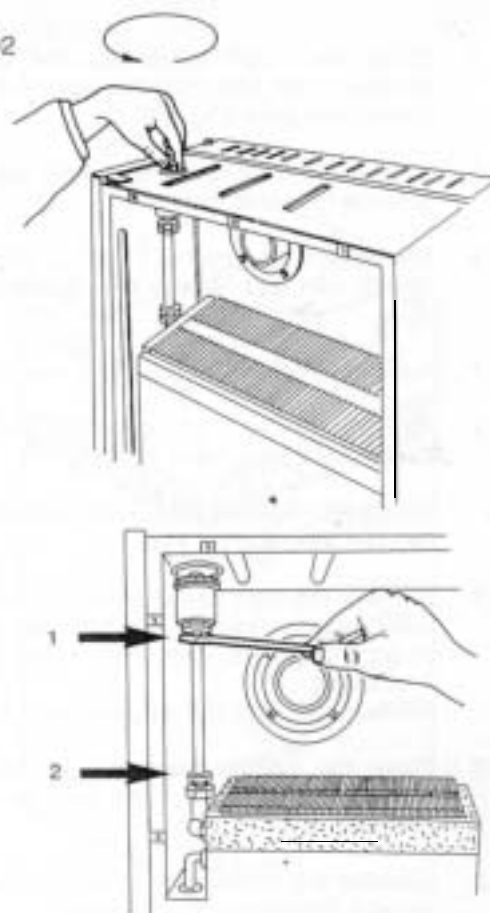
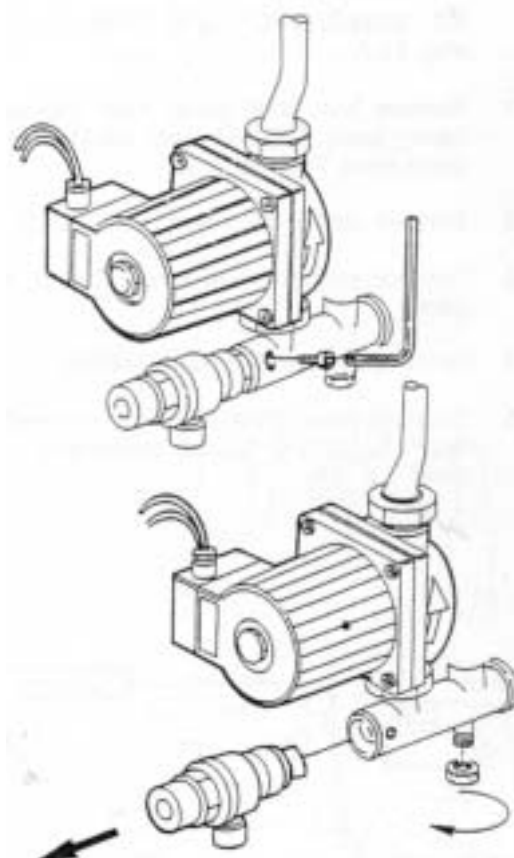


Fig. 93

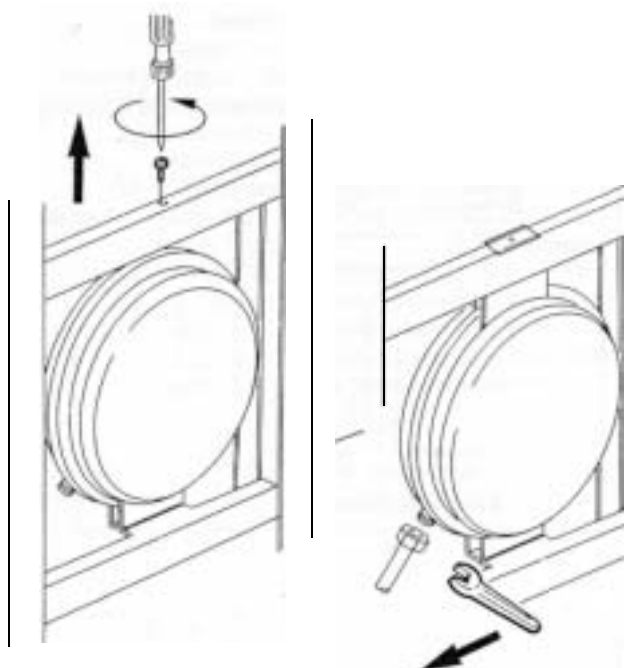Fig. 91



Section 8 FAULT FINDING CENTRAL HEATING

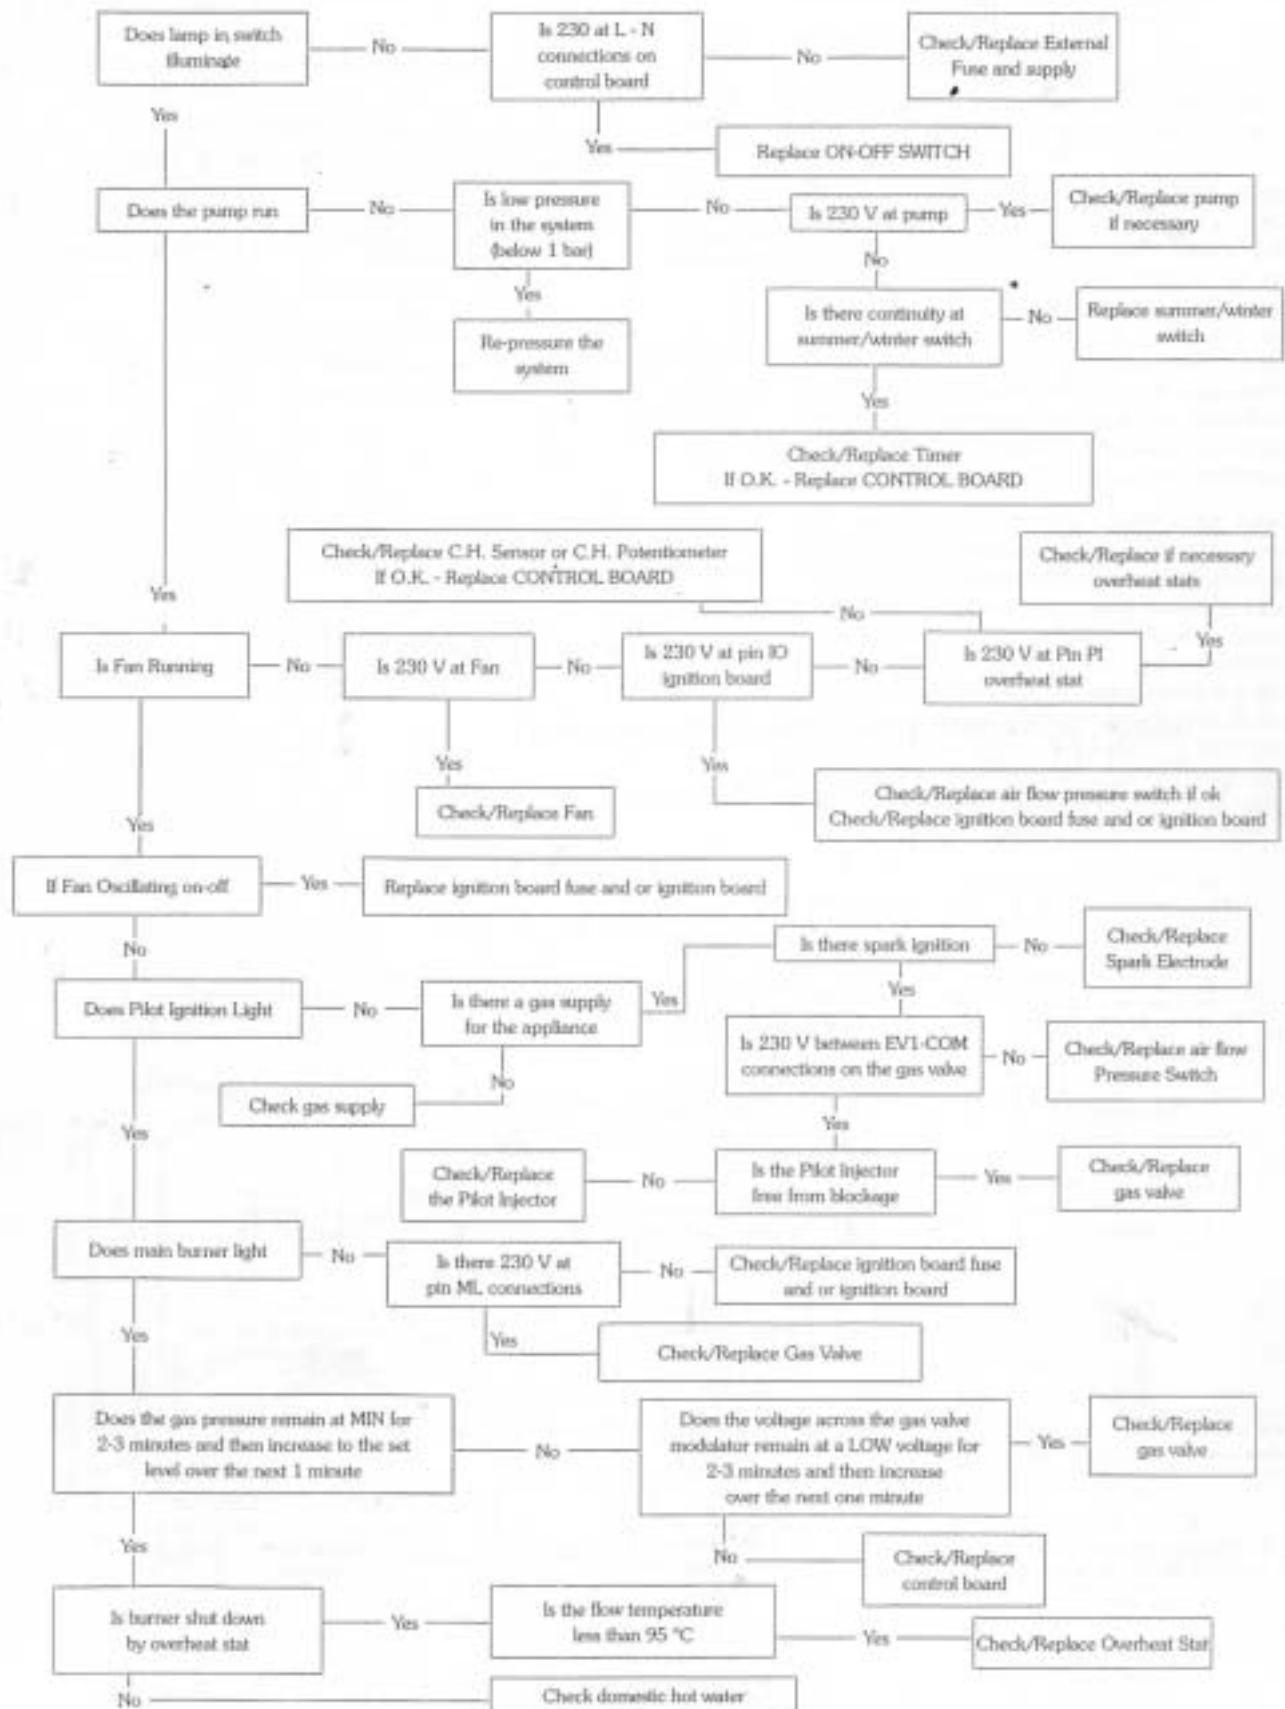
Switch on

Select "Winter"

Central Heating

Stat to maximum

Ensure external controls calling for heat (Room Stat/Time Clock/TRV)




FAULT FINDING DOMESTIC HOT WATER

Before continuing it may be necessary to see Central Heating Fault Finding.

Select only (Summer) Domestic Hot Water.

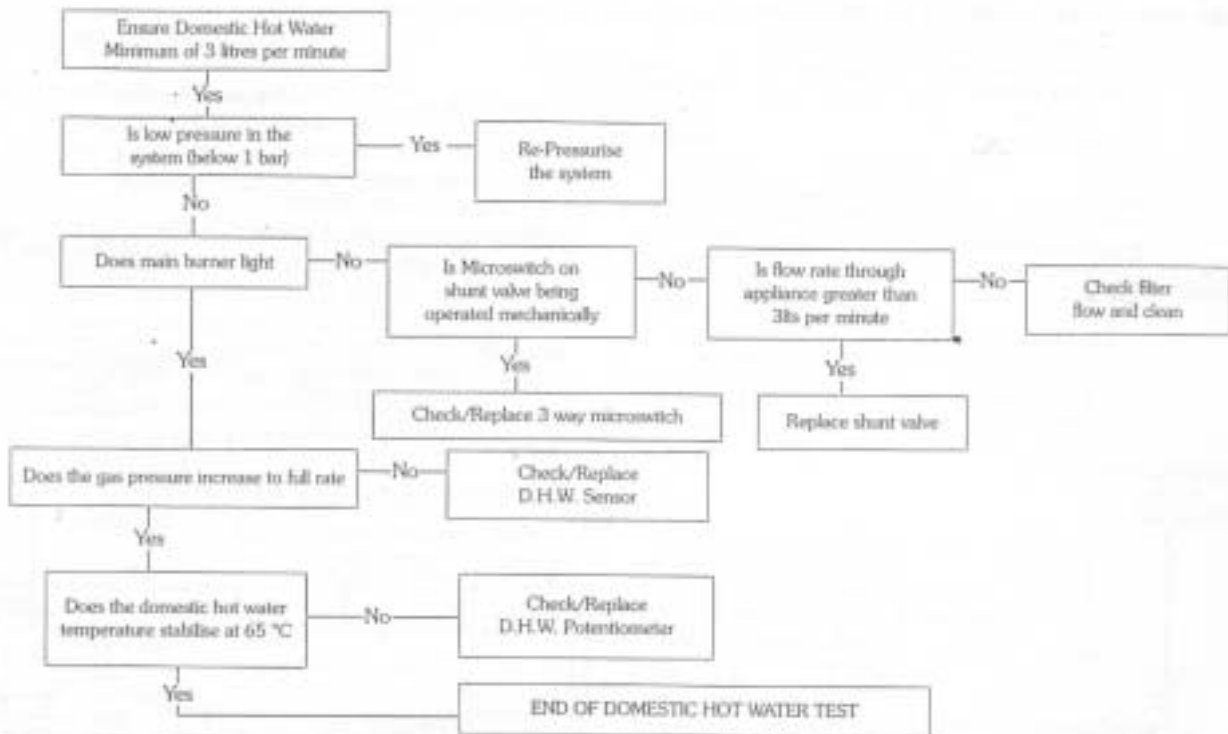Open Domestic hot tap close to appliance.



BOILER NOT OPERATIONAL ON TIMER (INTEGRAL)

Switch on/Select "Winter"/Central Heating

Stat to Maximum/Ensure External control calling for heat (Room Stat/TRV)





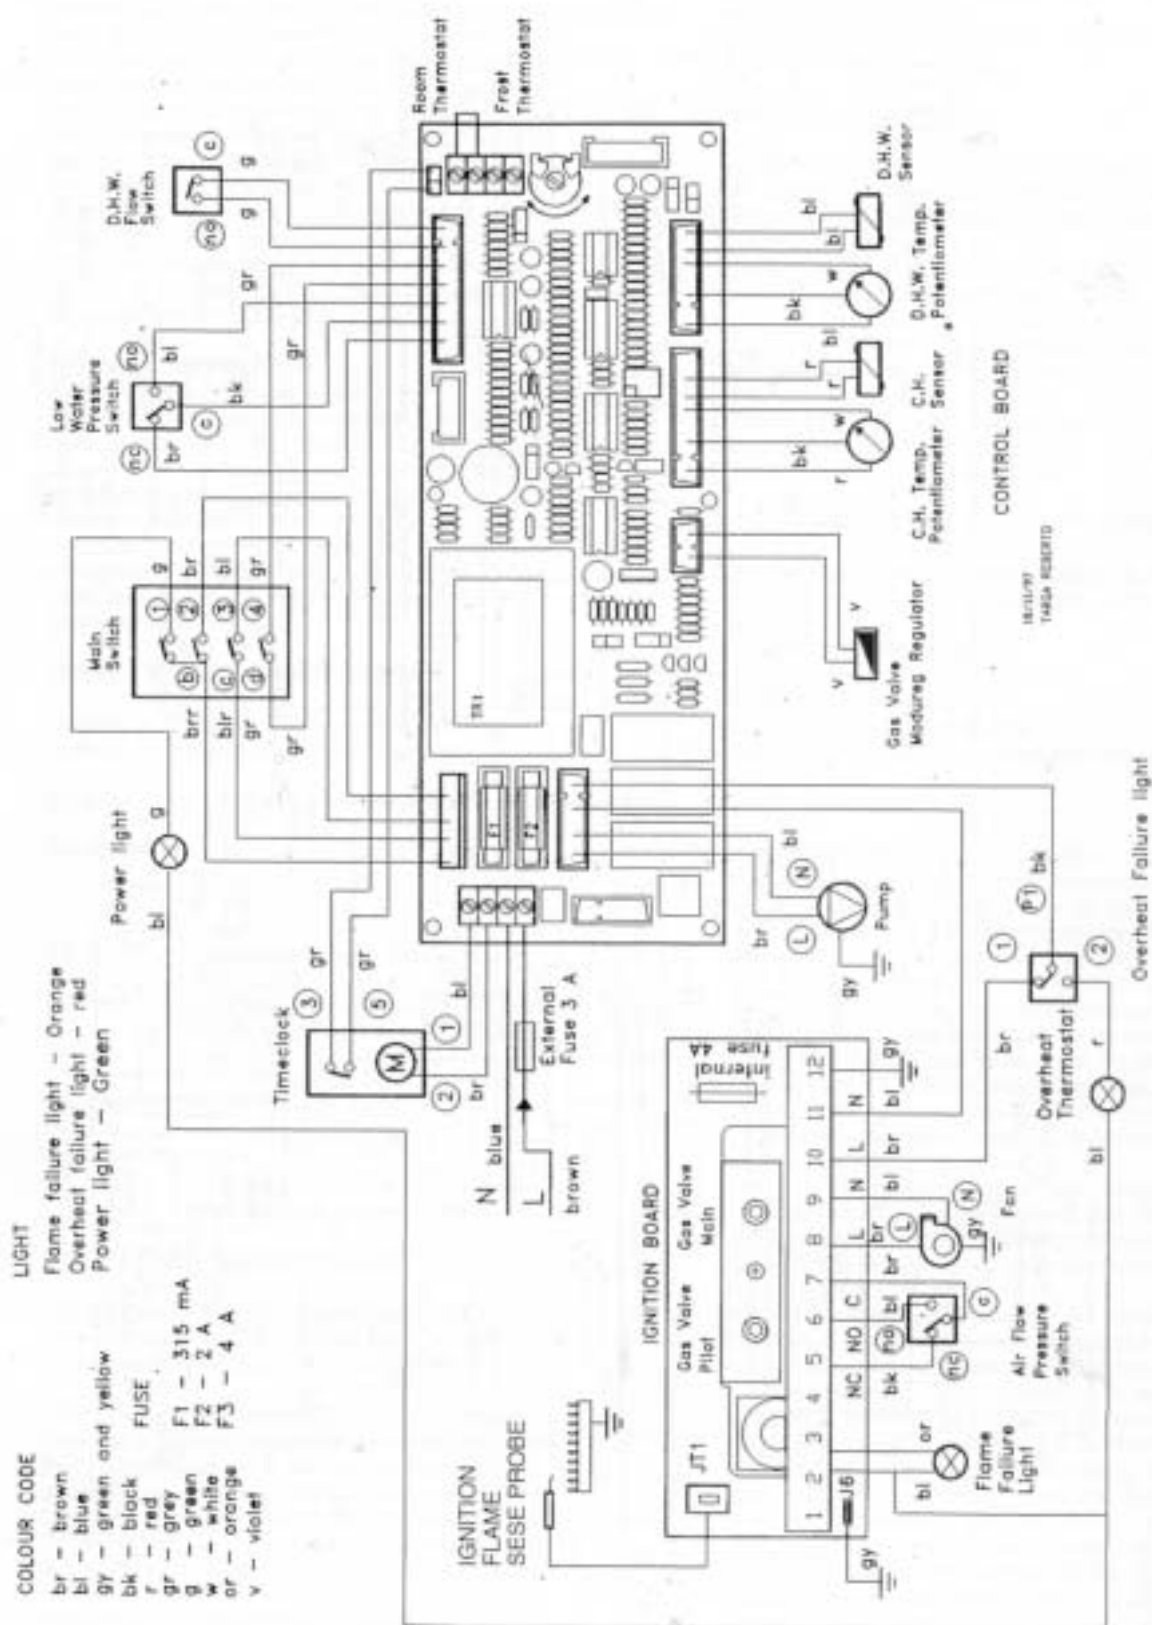


Fig. 95




FUNCTIONAL FLOW DIAGRAM
In D.H.W. mode

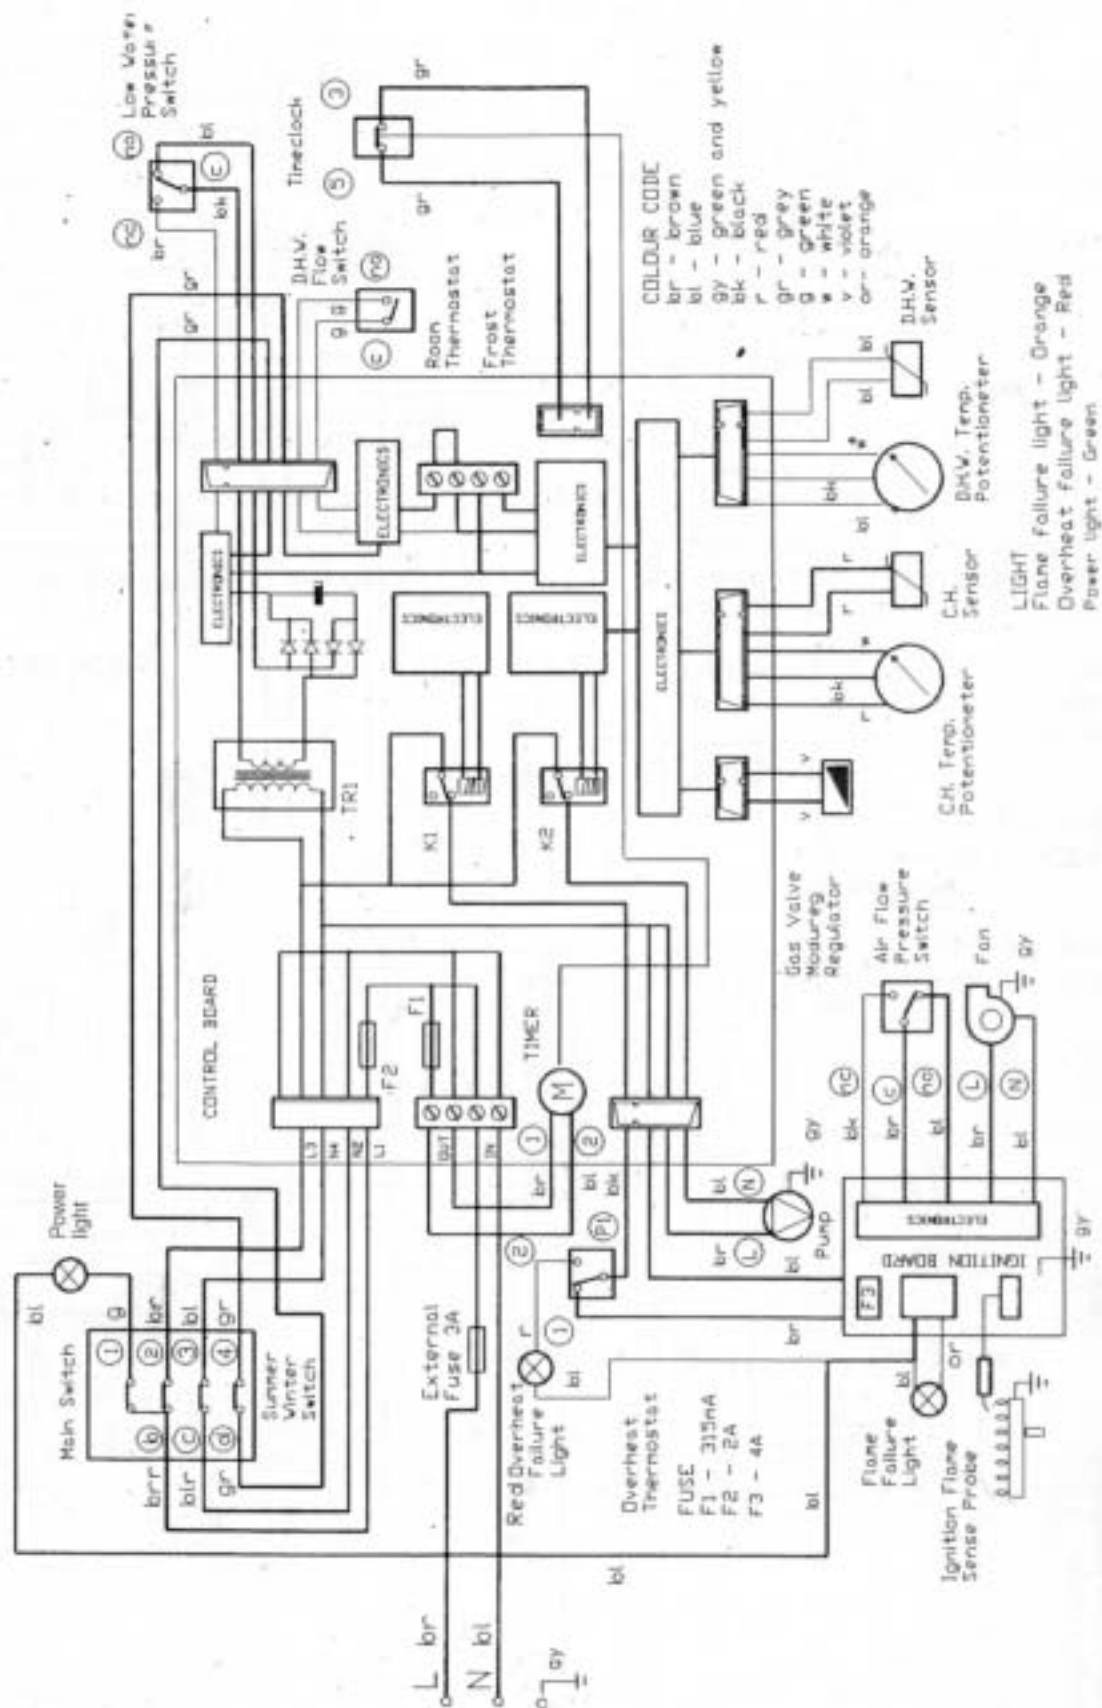
Fig. 98



FUNCTIONAL FLOW DIAGRAM
In central heating mode

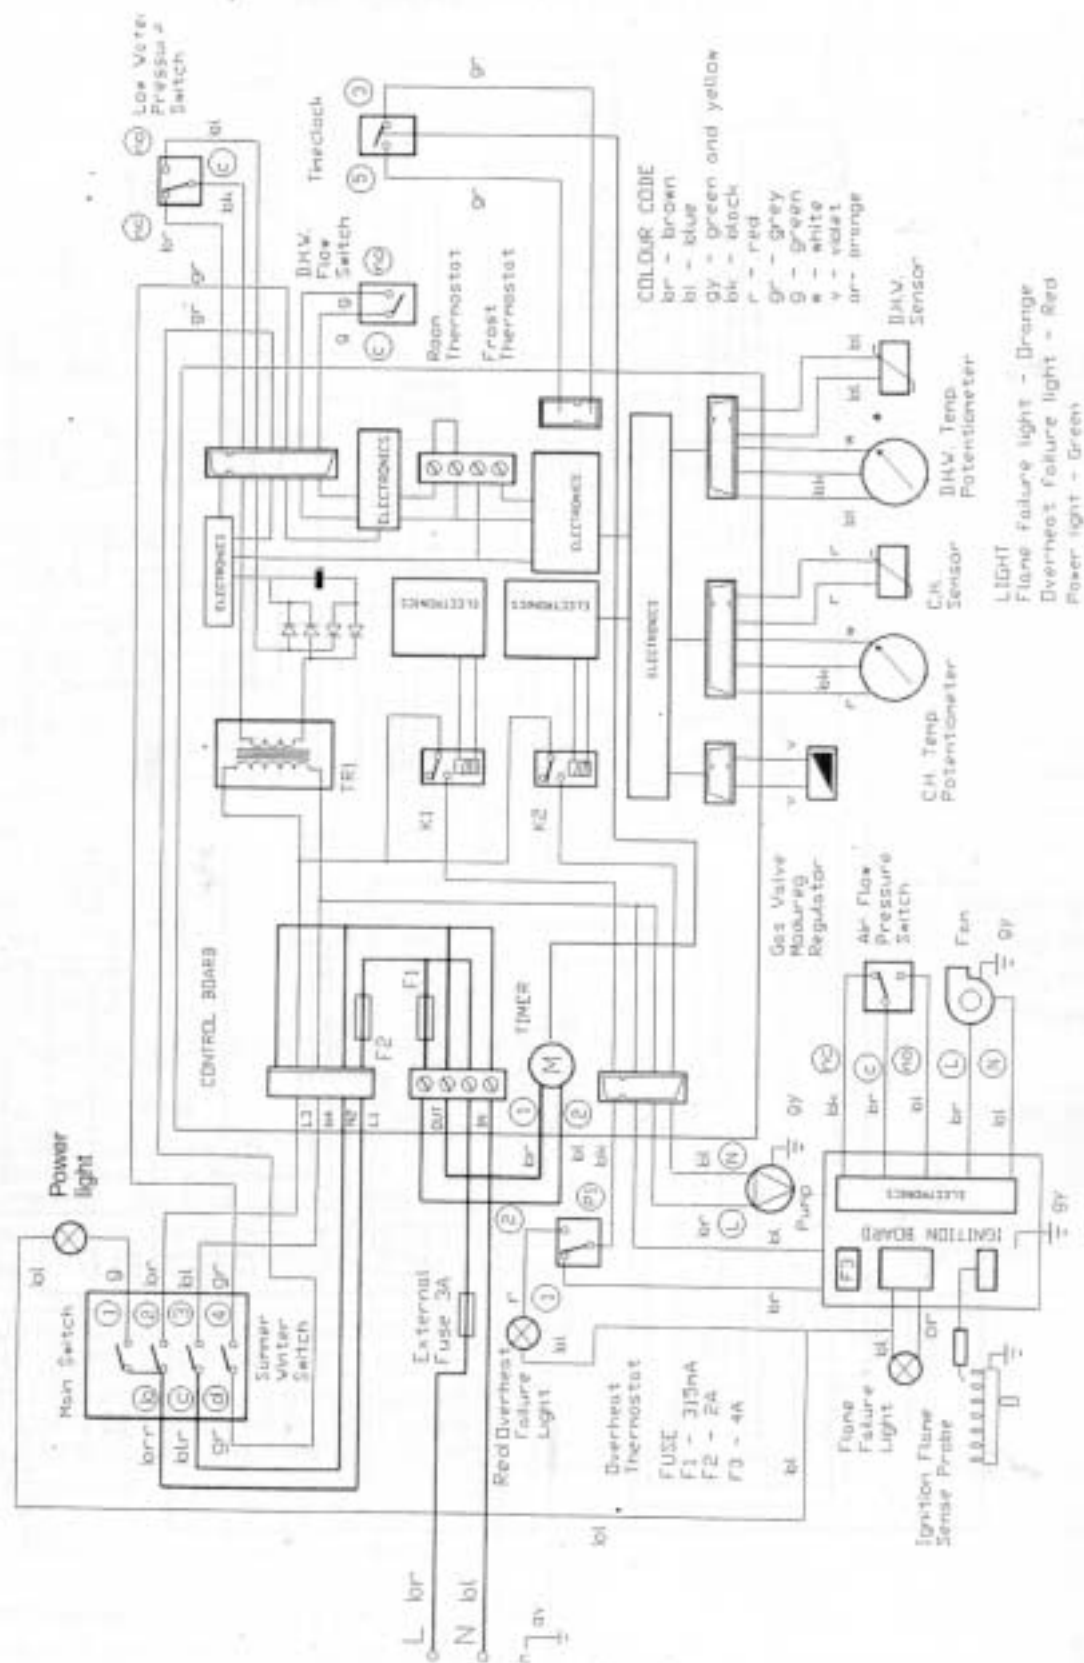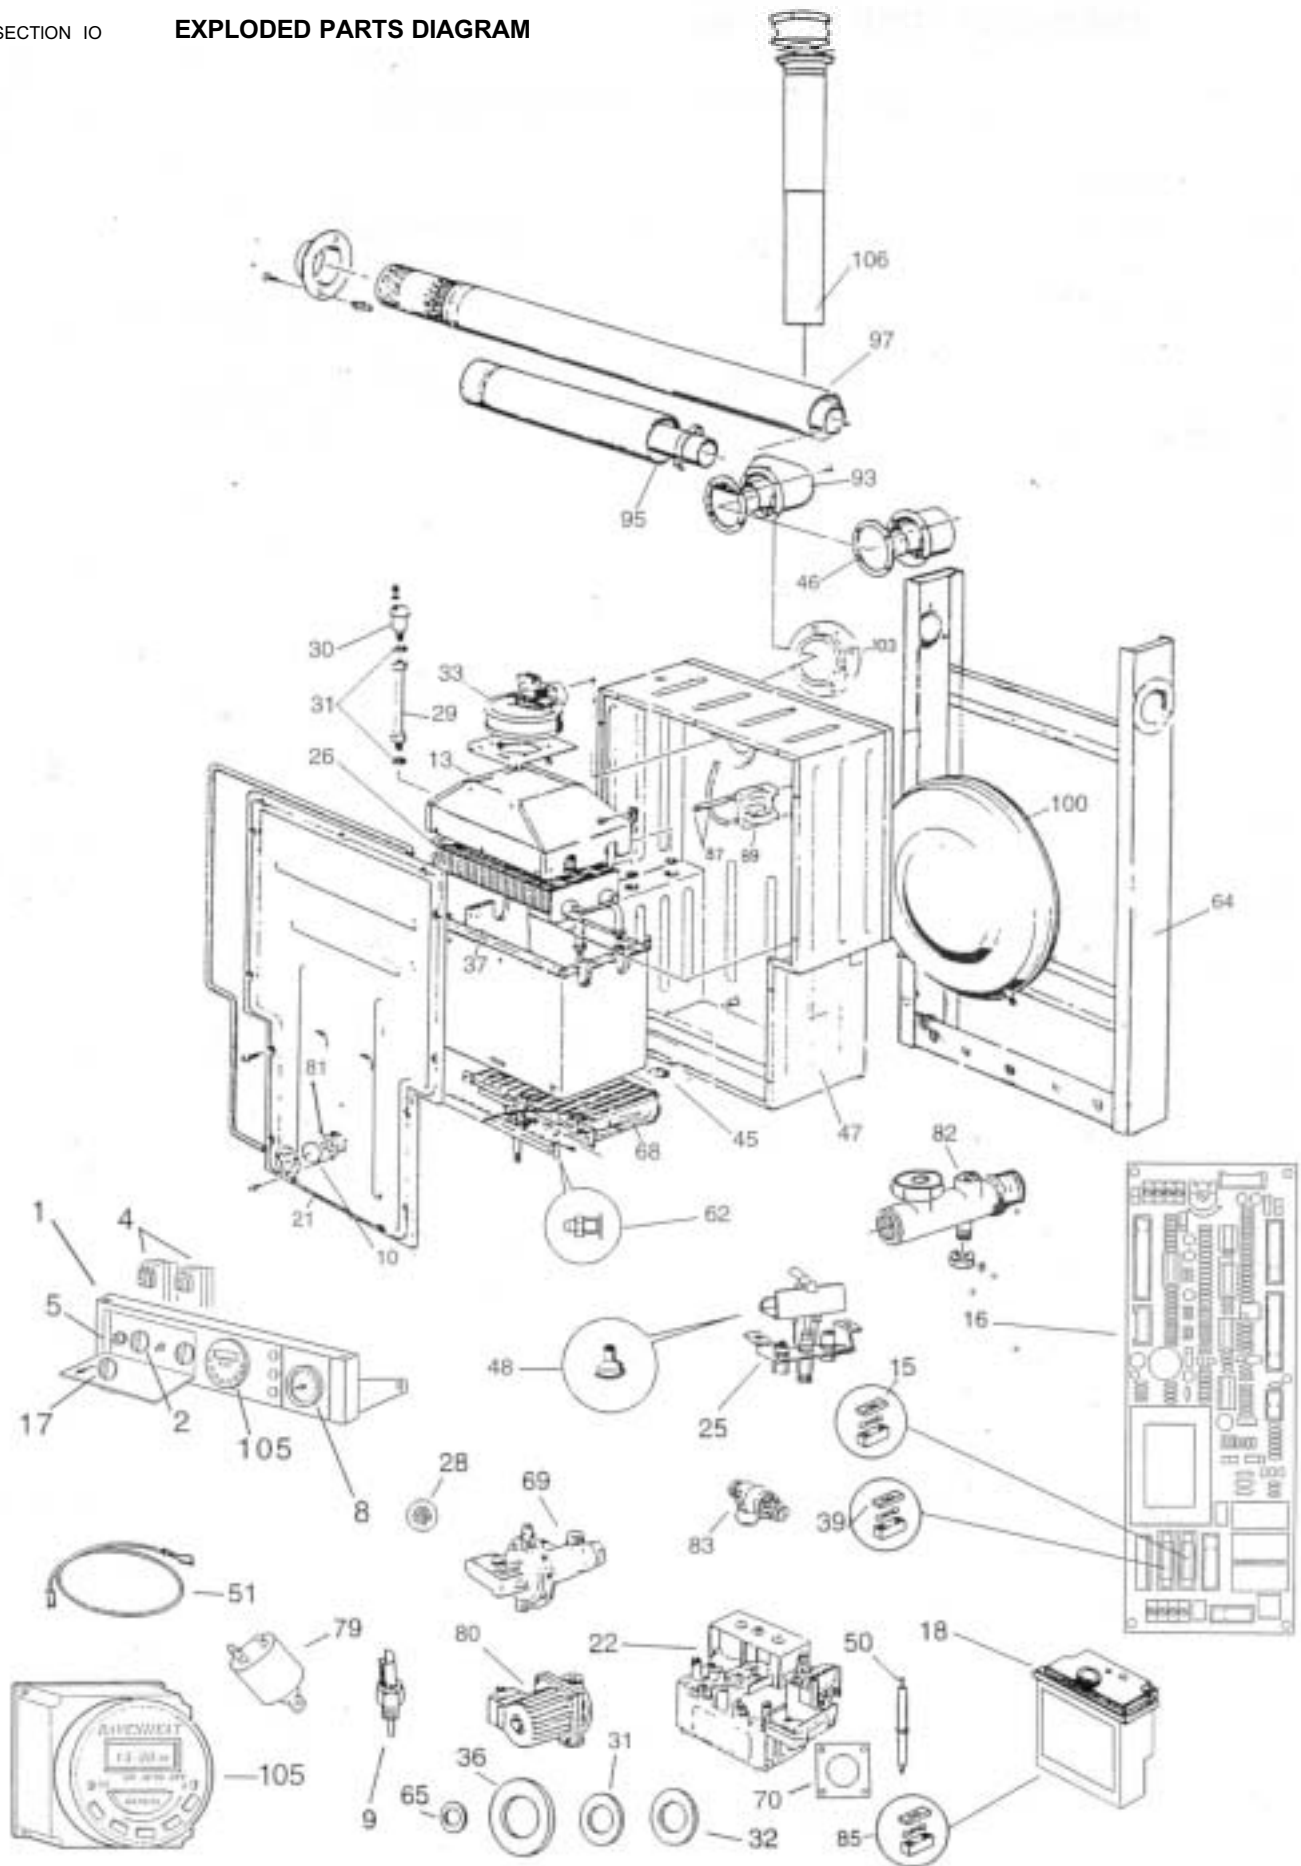
Fig. 99






RAVENHEAT RSF 82 E - RSF 82 ET FANNED COMBI BOILER

SHORT LIST OF SPARE PARTS

Pos.	Ravenheat Part. No.	G.C. Part. No.	Description
1	0014FR006005/0	E23-711	Instrument panel - TIMER MODEL
2	0012COM06005/0	E23-712	Main switch
4	0012P0T05005/0	E23-714	DHW / C.H. Potentiometer
5	0007TER03010/O	371267	Overheat thermostat
8	5027055 .	372842	Water gauge .
9	0007TER05005/0	E23-715	D.H.W. / C.H. Sensor
10	0014VETO1005/0	371268	Sight glass
13	0001 CAP05005/0	E23-717	Flue gas exhaust hood
15	5021103	372845	Fuse 315 mA
16	0012CIR05005/0	E24-627	Printed control board
17	0014MAN06015/0	E23-718	Knob
18	0012CIR05016/0	E24-628	Printed ignition board
18.1	0012GEN0501010		Honeywell printed ignition board
21	5003066	372849	Combustion chamber cover
22	0008VALO3005/0	173100	Gas valve
22.1	0008VALO5005/0		Honeywell gas valve
25	5012114	372894	Pilot burner
25.1	0003PIL05010/0		Pilot burner for Honeywell gas valve
26	0002SCA05010/O	E23-719	Heat exchanger
28	0014REGO1005/0	371271	Water flow regulator
29	5003655	372854	Connecting pipe to air purge
30	5015015	372888	Air purge valve
31	5018025	372851	Gasket 18.5 x 11.6 x 2
32	5018030	372867	Gasket 24x15x2
33	1012VEN01006/0		Fan 82 ET
36	5018046	378864	Gasket 30 x 22 x 2
37	5095025	372853	Insulation pads set
39	0012FUSO5015/0	E23-720	Internal fuse 2A
45	5023020	372855	Depression chamber pilot seal
46	0014GUA01020/0	371277	Flue gasket
47	0001CAM05010/0		Depression chamber
48	5012096	372856	Nozzle  0,27 for natural gas

Pos.	Ravenheat Part. No.	G.C. Part. No.	Description
50	5021050	372892	Ignition electrode
51	5 0 2 1 0 4 8	372857	Cable for electrode
62	5012210	372862	Nozzle  1,35 for natural gas
64	0001TEL05005/0		Frame
65	5018046	372864	Seal
68	0003BRU05015/0	372-866	Main burner
69	0008VALO3010/0	371298	3-way valve
70	0013GUA03035/0	371273	Seal 32 x 32 x 2 gas valve
79	0005PRE03010/0	371310	Low water pressure switch
80	5009080	372896	Circulation pump
81	0013GUAOIO45/0	371274	Gasket 48 x 42 x 1
82	5003283	372874	Brass manifold
83	0008VAL01017/0	E23-723	Safety relief valve (3 bar)
85	0012FUSO5020/0	E23-724	Internal fuse 4A
87	5021312	372875	Nylon tubes from pressure switch
89	0005PRE05015/0	E24-629	Pressure switch
93	5094110	372877	Elbow header
95	5094125	372878	Flue extension duct complete
97	5023016	372879	Flue duct and terminal complete
100	5009057	372880	Expansion tank
103	0001 DIA05005/0	E23-725	Air restriction ring dm 79
105	Tmb192	371258	Digital timer
106	5094130	371259	Vertical flue terminal complete
02	5012051	371257	Diaphragm for 3-way valve
05	5012052	372899	Microswitch for 3-way valve

This image shows a full page of blank graph paper. The grid consists of small, equal-sized squares formed by thin gray lines. There are approximately 20 columns and 20 rows visible on the page. The paper is otherwise completely empty, with no text or markings other than the grid itself.



Chartists Way, Morley, Leeds, LS27 9ET.

Telephone: (0113) 252 7007

Tfax: (0113) 238 0229

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.



USER'S GUIDE

HIGH EFFICIENT COMBINATION BOILER

RSF 82ET - RSF 82E
WITH OR WITHOUT BUILT IN TIMER

It is the law that all gas appliances are installed by a competent person, in accordance with the gas safety installation and use current regulations. To the current Gas Safety (Installation and Use) Regulations B.S.5440:2 - (2000).

All CORGI registered installers carry a CORGI I.D. card and have a registration number. Both should be recorded in your boiler log book. You can check your installer by calling CORGI direct on: 01256 732300.



Escape of gas

Should a gas leak be suspected, contact your gas supplier without delay.

Do NOT search for gas leaks with a naked flame.

WARNING: This appliance must be earthed.

Do not touch or tamper with this sealed unit or its components

1. INTRODUCTION

1.1 Please carefully read information given in the booklet to help you gain maximum control from your appliance with minimum trouble and cost.

1.1.1 Your Ravenheat Combination Boiler has been designed to supply your Central Heating and Domestic Hot Water directly from one unit.
When central Heating is operating, the circulation will be interrupted when domestic hot water is being drawn off. This will normally not affect the level of heating.

CLEARANCES AROUND THE BOILER

Above 120mm (5 inches)
Below 150mm (6 inches)
Front 450mm (18 inches)
Sides 75mm (3 inches)
25mm (1 inch) in front when installed in a cupboard.

1.2.1 Minimum clearances are required for safety and maintenance. Do not obstruct any purpose made ventilation opening if boiler has been fitted in a compartment.
Never hang clothes, etc., over the appliance.

1.3 USER CONTROLS

See Fig. 1

1.3.1 This appliance is designed to operate with the minimum of attention by the user. All controls are to be found on the control panel.


1.4 OPERATING SAFETY CHECKS TO PROTECT YOUR APPLIANCE

1.4.1 Before lighting the appliance check central heating system pressure (7) is not less than 1 bar gauge. If it is below this do not light but consult your installer about refilling your system as you may have a leak in the system.

1.4.2 An ORANGE warning light on the control panel (8) warns of a flame failure of the main burner. This can be reset manually by pressing mains boiler on/off switch (1).

1.4.3 A RED warning light on the control panel (9) warns of a high temperature lockout on the overheat thermostat. This could occur due to air or poor circulation in the boiler/heating circuit. This can be reset manually by removing grey cover (3) on control panel and pressing red reset button. Replace cap. If lockout should persist leave the appliance shut down and consult your installer/service engineer immediately.

Fig. 1|

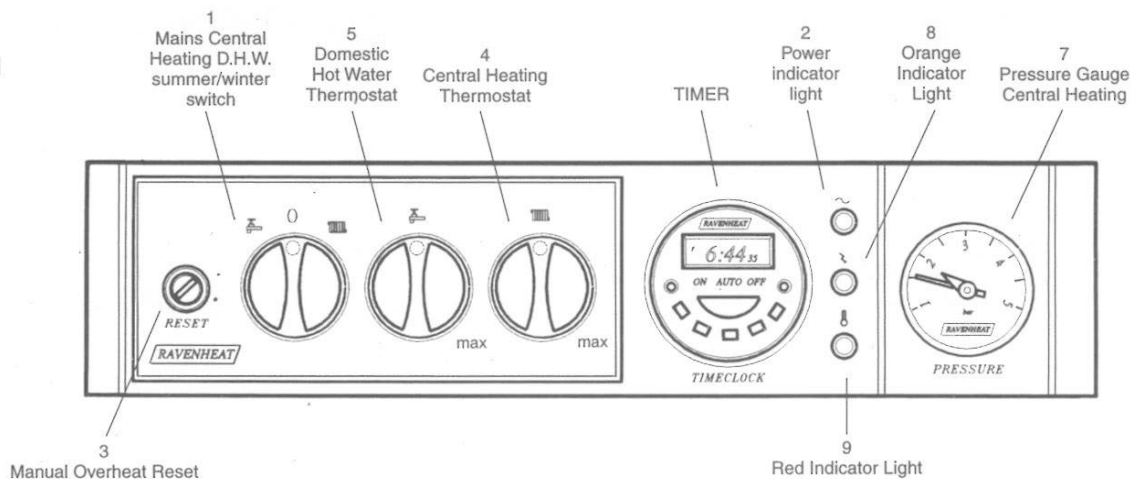

2. OPERATING DOMESTIC HOT WATER

- 2.0 Select only switch position (1).
- 2.1 Open hot water tap. After about 3 seconds main burner will always operate.
- 2.2 Temperature of domestic hot water can be varied by adjusting the water flow rate at the tap. Domestic thermostat (5) will control maximum temperature leaving the appliance. The knob can be set between minimum and maximum approximately 35 °C to 65 °C (49F to 95F). For maximum temperature of domestic hot water leave in maximum position.

3. OPERATING HEATING & HOT WATER

TO SET AND ADJUST BUILT-IN TIMER
MODEL SEE OPPOSITE PAGE 3.

- 3.0 Select switch (2) position.
- 3.1 Switch on time clock, adjust room stat and/or thermostatic radiator valves to high settings.
- 3.2 Main burner will operate. Temperature output of central heating can be adjusted by central heating thermostat (4). The knob can be set between minimum and maximum approximately 40 °C to 85 °C (1 40F to 1 85F). While the appliance is being used to provide domestic hot water, the central heating will not operate. When hot water is no longer required the appliance will automatically revert to central heating and should not noticeably affect the level of central heating. Adjust external controls to required settings.

NOTE: An anti-cycling device is fitted to the heating function. When the boiler reaches its set maximum temperature it will not operate on heating for about 3 minutes but the domestic hot water function will always operate on demand.

3.3 TO SHUT DOWN THE APPLIANCE

- 3.3.1 For short periods, switch to only and turn off all hot taps. For long periods switch of the on/off switch (1). If the appliance is to be shut down for long periods when there is a risk of freezing, then appliance should be drained. Similar refilling must be done by a competent person following approved procedures.

4. CLEANING OF APPLIANCE OUTER CASING

- 4.1 Use a clean damp cloth. Do not use any abrasive cleaners and with a dry cloth lightly polish to protect painted surfaces.

Control panel and fixtures can be wiped with damp cloth and dried. Spray polishes must not be used on control panel surfaces or switches. Care must be taken in preventing any liquids entering the appliance.

4.2 CARE OF YOUR APPLIANCE AND SYSTEM

- 4.2.1 Annual servicing of your appliance is required to maintain safety and efficiency of its operation. Therefore it is recommended that the appliance is serviced at least once a year and that the whole of the heating system be checked at the same time by a qualified installer. If it is known or suspected that a fault exists on the boiler then it MUST NOT be used until the fault has been corrected by a COMPETENT PERSON. It is essential that the instructions in this booklet are strictly followed for safe and economic operation of the boiler.


SERVICING SHOULD BE CARRIED OUT BY A
COMPETENT PERSON.

Ravenheat Manufacturing Ltd.,
Chartists Way, Morley, Leeds LS27 9ET.

PROGRAMMABLE TIME CLOCK INSTRUCTIONS FOR USE

Your Ravenheat boiler comes complete with (optional) digital programmer. The timeclock is supplied with a cover to prevent accidental loss of programme, or children tampering with preset programmes.

5. TO PROGRAMME TIME CLOCK

To access programming buttons remove clear cover. Press  reset key with a pencil before setting or reprogramming times.

5.1.1 TO SET TIME AND DAY OF THE WEEK:

5.1.1.1 SET DAY OF WEEK:

- Press clock button and hold in.
Press day button to desired day.
- Release both buttons.
The day of the week will be set.

5.1.1.2 SET HOUR:

- Press clock button and hold in.
Press hour button to desired time.
- Release both buttons.
The hour will be set.

5.1.1.3 SET MINUTE:

- Press clock button and hold in.
Press minute button to desired time.
- Release both buttons.
The minute will be set.

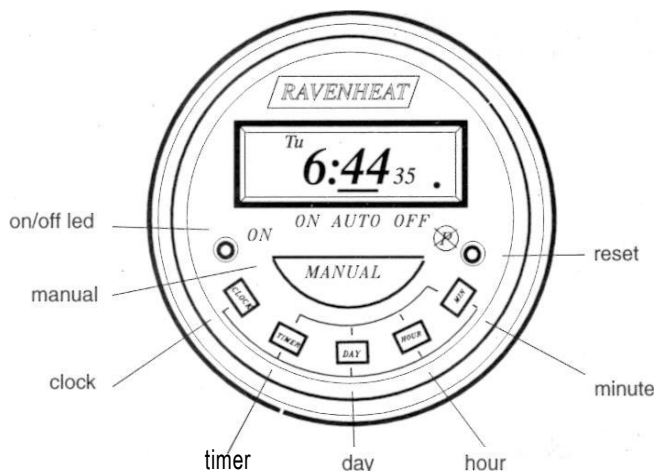
NOTE: When, setting time holding in the hour/minute button this will rapidly advance the display.

5.1.2 TO SET PROGRAMMES:

- 5.1.2.1 Press timer button and release to enter into programme mode.
- 5.1.2.2 Programme "1 ON" will show in lower left hand corner.
- 5.1.2.3 Press DAY key to select the programme period. There are 10 day settings for your choice.
(1) Mo to Su (2) Mo (3) Tu (4) We (5) Th (6) Fr (7) Sa (8) Su (9) Mo+Tu+We+Th+Fr (10) Sa+Su.

You now have a choice of 6 programmes.

- 5.1.2.4 Press hour button to set the required hour 'on'.
- 5.1.2.5 Press minute button to set minute.
- 5.1.2.6 After setting the programme press TIMER key again "1 OFF" will appear. Repeat procedure 5.1.2.3 through to 5.1.2.5 to set programme "1 OFF TIME".



For each programme days 'off' setting must be input the same as the 'on' setting.

- 5.1.2.7 After setting programme 1 ON/OFF TIME repeat step 2.1 to 2.7 to set programmes 2 through to 6 if required.

- 5.1.2.8 Your timer gives you up to 6 different ONE and 6 different OFF settings per programme period. Note you have a choice of 6 ON-6 OFF programmes max.

5.1.2.8.1 REVIEW YOUR PROGRAMMES:

- Press the TIMER key to advance display to each subsequent ON or OFF setting.
 - Check days and times displayed.
 - To make a change, follow instructions under "TO SET PROGRAMMES".
- Note on completion of programming operations press the clock button to show current time/day and replace the clear tamper proof cover.

5.1.2.8.2 MANUAL KEY

- Press MANUAL key to select ON / AUTO / OFF mode.
- ON mode is to turn on the timer, OFF mode is to turn off the timer.
- AUTO mode is to set the timer to programme mode. It will turn on or turn off according to the programmes you set.
- From ON to AUTO mode it will turn on until next OFF programme.
- From OFF to AUTO mode it will turn off until next ON programme.

5.1.2.8.3 LED INDICATOR

LED light is on when the boiler is operating in heating mode.

5.1.3 TO RESET TIMER:

Press reset button to reset the timer unit.

NOTE:

Once the reset button is pressed, the stored time and programme will be cleared to initial state.

N.B.: When the clock is either 'programmed' on, or is on constant, the red indicator will illuminate



Chartists Way, Morley, Leeds, LS27 9ET.

Telephone: (0113) 252 7007

Tfax: (0113) 238 0229

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.



ELECTRONIC IGNITION - AUTOMATIC MODULATING BOILER

FANNED COMBI RSF 84E - RSF 100E RSF 84ET - RSF 100ET

WITHOUTTIMER

RSF 84E G.C. N° 47 581 27A

RSF 100E G.C. N° 47 581 25A

NATURAL GAS (G 20) AND PROPANE (G 31)

British Gas

**Tested, certified and
service listed**



**Listed by The United Kingdom Water
Fitting Byelaws Scheme**

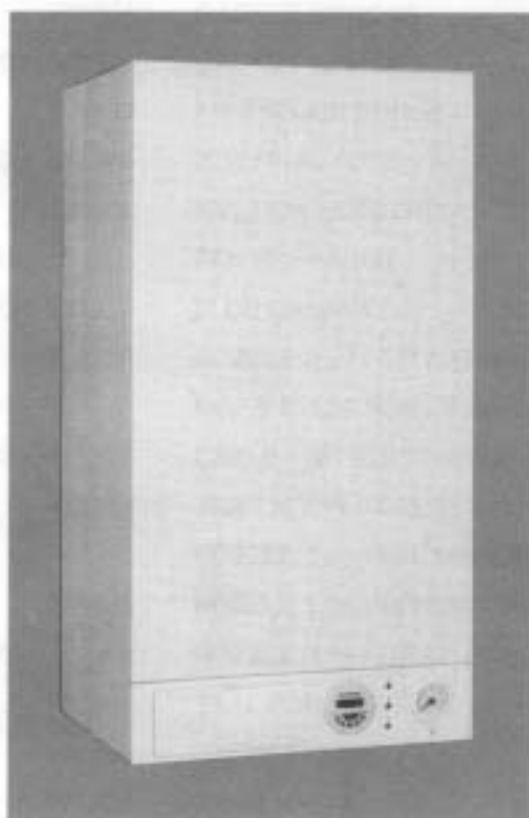


WITH TIMER

RSF 84ET G.C. N° 47 581 28A

RSF 100ET G.C. N° 47 581 26A

NATURAL GAS (G 20) AND PROPANE (G 31)



INSTALLATION AND SERVICING INSTRUCTIONS TO BE LEFT WITH USER



**Technical and illustrative data are not binding and can be modified without prior notice.
The descriptions and illustrations in the present booklet are for guideline purposes only.**

RAVENHEAT MANUFACTURING LTD., CHARTISTS WAY, MORLEY, LEEDS, LS27 9ET. - TELEPHONE (0113) 252 7007

ELECTRONIC IGNITION - AUTOMATIC MODULATING BOILER.

FOR CENTRAL HEATING AND DOMESTIC HOT WATER

This new high efficient turbo-modulating boiler is designed to meet domestic hot water and central heating requirements at super high efficiency, unheard of only a few years ago.

POSITION

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed, there is no contact between combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Indeed, our depression/combustion front cover has been designed to fit achieving maximum air tight seal using screw down fasteners at 15 cm. This should not hinder service of the appliance, but does ensure maximum efficiency and safety - something which Ravenheat take great pride in.

Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. Technical sales and commercial service are available throughout the UK. This product is guaranteed by Ravenheat Manufacturing, Chartist Way, Morley, LEEDS, LS27 9ET. Telephone No 0113 2527007.

BASIC COMPONENTS - (See figure 1)

Guarantee is a full 12 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

MAJOR COMPONENTS

Gas valve with flame modulator.

Variable head pump suitable for any type of central heating system.

Main burner with flame stabiliser designed to operate under all thermal conditions.

Double parallel heat exchanger which, for domestic hot water uses, the "countercurrent" system, offering high thermal exchange and durability.

High reliability diverter valve with ethylene propylene diaphragm permitting primary fluid circulation in the boiler during D.H.W. supply. This gives maximum heat exchange, improved efficiency and exceptionally silent operation.

Built in frost protection.

Printed circuit board designed to connect to room stat and/or timer/frost stat.

Aesthetically pleasing panels and controls.

On/Off ball valves for shutting off gas central heating and domestic hot water circuits.

Safety relief valve (for safety discharge).

Programmable 7 day module with digital display (optional model).

All front panel controls not often used have been hidden. This achieves simplicity of operation with easy to clean panels.

COSHH - CONTROL OF SUBSTANCES HARMFUL TO HEALTH

IMPORTANT

This appliance contains materials that are indicated below.

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling, where applicable, the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

WARNING When installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts.

GENERAL INFORMATION:

GLUES AND SEALANTS - exercise caution - if these are still in liquid form.

INSULATION PADS, CERAMIC FIBRE - may be harmful if inhaled, may be irritating to skin, eyes, nose and throat.

When handling keep dust generation to a minimum, avoid inhaling and contact with skin or eyes,

When disposing of the product keep dust generation to a minimum and ensure that parts are securely wrapped.

When servicing avoid inhalation by using a vacuum cleaner or in conjunction with other tools.


After handling wash hands and other exposed parts.

RAVENHEAT use only high quality material for production of this product, in an effort to protect the environment components should be re-cycled.

TABLE OF CONTENTS

SECTIONS:		P A G E
1	INTRODUCTION	6
2	DESIGN PRINCIPLES AND OPERATING SEQUENCE	6
3	TECHNICAL DATA	8
4	GENERAL REQUIREMENTS	12
5	INSTALLATION	17
6	COMMISSIONING	27
7	SERVICING INSTRUCTIONS	33
8	FAULT FINDING	44
9	ELECTRICAL SYSTEM DIAGRAM	46
10	INSTALLATION INSTRUCTIONS FOR TWIN FLUE	50
11.	EXPLODED PARTS DIAGRAM	53
12	LIST OF SPARE PARTS	54

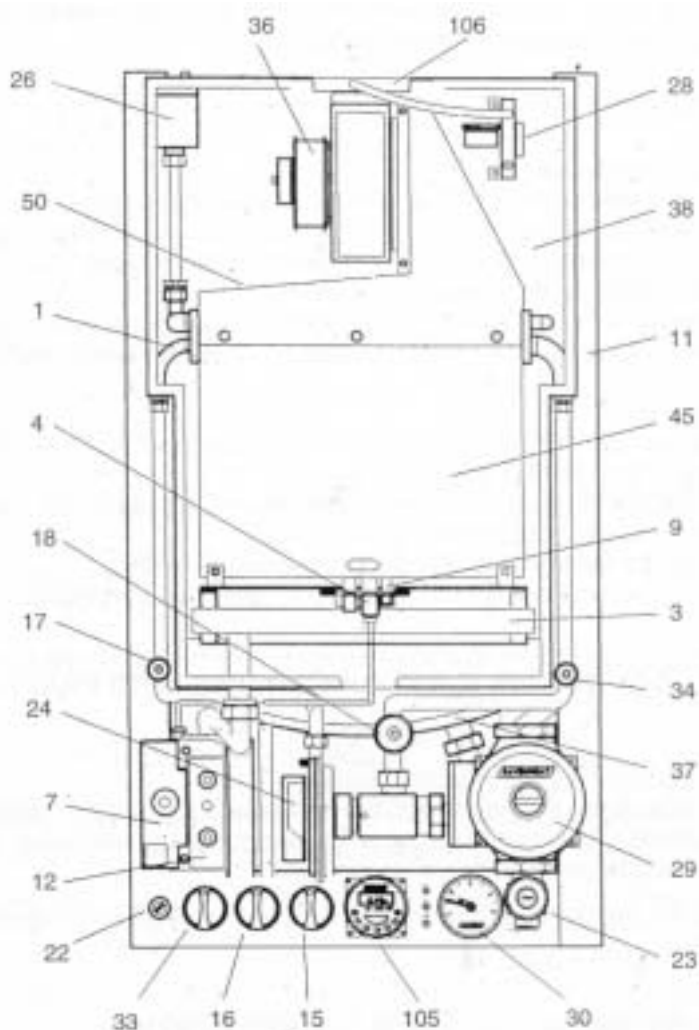GENERAL LAYOUT




KEY

- | | | |
|---------------------------|---|----------------------------|
| 1 - Heat exchanger | 17- D.H.W. sensor | 33 - Main switch |
| 3 - Burner | 18- Water pressure switch (heating circuit) | 34 - C.H. Sensor |
| 4 - Pilot burner | 22 - Overheat cut off thermostat | 36 - Fan |
| 7 - Ignition board | 23 - Safety relief systems | 37 - Expansion tank |
| 9 - Ignition electrode | 24 - Three way valve | 38 - Sealed chamber |
| 11 - Frame | 26 - Auto air vent valve | 45 - Combustion chamber |
| 12 - Modulating gas valve | 28 - Air pressure switch | 50 - Flue gas exhaust hood |
| 15 - Heating control | 29 - Circulation pump | 105 -Timer |
| 16 - Hot water control | 30 - Water pressure gauge | 106 - Air restriction ring |

OPERATING SCHEME



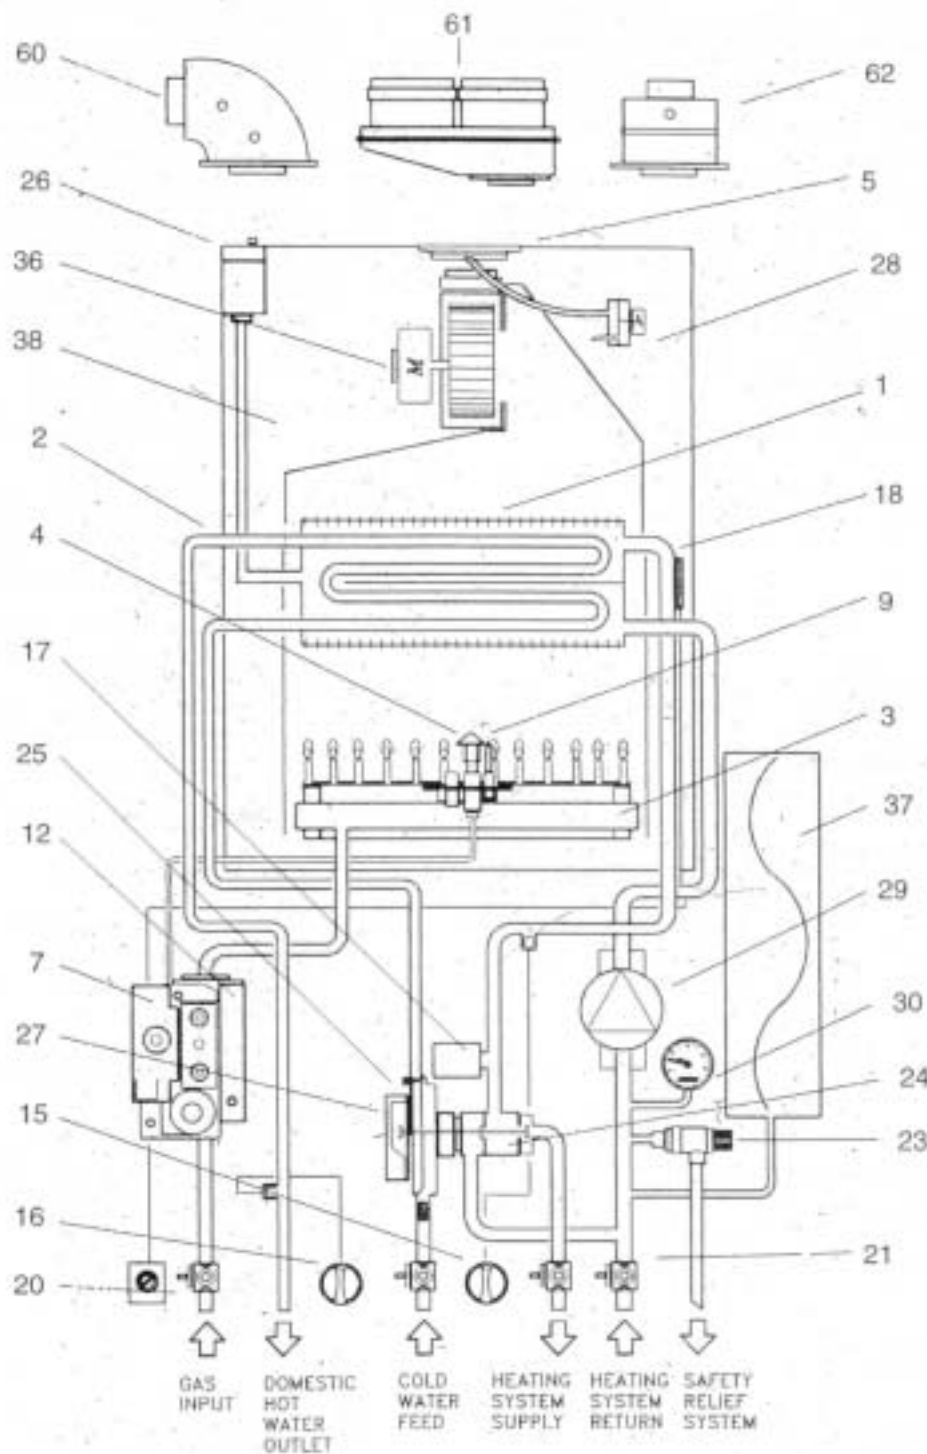

Fig. 2



KEY

- | | | |
|-------------------------------------|---|---------------------------|
| 1 - Heat exchanger | 17 - Low water pressure switch | 29 - Circulating pump |
| 2 - Heat exchanger for D.H.W. water | 18 - Overheat cut-off thermostat | 30 - Water pressure gauge |
| 3 - Burner | 20 - Gas service cock | 36 - Fan |
| 4 - Pilot burner | 21 - Compression ball valves | 37 - Expansion tank |
| 5 - Air restriction ring | 23 - Safety relief system | 38 - Sealed chamber |
| 7 - Electronic ignition | 24 - Three way valve | 60 - Elbow header |
| 9 - Ignition electrode | 25 - Flow regulator | 61 - Twin header |
| 12 - Modulating gas valve | 26 - Auto air vent valve | 62 - Straight header |
| 15 - Heating control | 27 - D.H.W. pressure switch giving priority | |
| 16 - Hot water control | 28 - Air pressure switch | |


SECTION 1 INTRODUCTION

- 1.1 The Ravenheat boiler is for the use of central and domestic hot water combined in one unit. It is fitted with an automatic domestic hot water priority valve. A   (winter/summer) selector switch is fitted to the left hand side of control panel. With the  only (summer) position being for domestic hot water.  position being for central heating with domestic hot water priority. The boiler is equipped with a front cover which can be removed for servicing. The data badge with technical data is placed on the lower left hand side of the frame.
- 1.2 Fig. 1 Illustrates the general layout of components.
Fig. 2 Illustrates the operating principles described in section 2.

SECTION 2

2.1 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION



2.2 Domestic hot water mode

When the appliance is in rest mode with the mains neon switch on. Switch the summer/winter switch in the  position, making sure the heating circuit is charged with water (above 1 bar). When the domestic hot water tap is turned on, the boiler will function in the following sequence:

- 2.2.1 The pump starts.
The control board sensors.
The fan operates via the pressure switch and sends a signal back to the ignition board that the fan is running at maximum speed.
- 2.2.2 The spark ignition system is powered which in turn commences the spark igniter to operate and light the burner.
At this point the ignition board opens the first step of the gas valve to light the pilot/burner.
- 2.2.3 When the electrode/sensor senses the signal of the pilot/burner, it opens the second stage of the gas valve via the ignition board on minimum power. Upon the second valve opening the spark igniter stops.
- 2.2.4 From the minimum gas rate setting the boiler increases to the maximum permissible pressure over a period of 3 to 4 seconds and will remain at its maximum required power until its maximum regulated temperature.
- 2.2.5 When the domestic hot water tap is closed the diverter valve goes back into rest mode, the main burner is shut down along with the pilot/burner. The pump and fan are also

switched off, the pressure switch returning to its rest mode.

2.2.6 Central heating mode

- 2.2.7 If the switch is positioned on   with a demand for heat to supply radiators, etc. With heating circuit fully charged so as to operate the low water sensor device the boiler will start in the same way as domestic hot water mode but with slightly differing time delay in that it will start on minimum and remain at this level for about 1 minute, after which the flame will lift to its maximum setting as governed by a potentiometer range rates the heating circuit between maximum and minimum power.

- 2.2.8 On the control panel are mounted two potentiometers (thermostats) these control the temperature. One is for domestic hot water and the other for heating.



- 2.2.9 The boiler is fitted with an anti-cycling device on the control board. This delays the boiler from re-firing over a 2.5 minute period when in heating mode. The domestic hot water will always take priority and is unaffected by the anti-cycling device.

GENERAL FUNCTION


2.3 Central Heating Mode

- 2.3.1 A potentiometer is installed on the electric circuit board permits regulation of the boiler to partial heating requirements, between the factory setting.
- 2.3.2 Air is drawn by the fan for combustion.
- 2.3.3 The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air, through the inlet duct.
- 2.3.4 The boiler water temperature is automatically controlled by a built in thermostat.
- 2.3.5 Interior space temperature is set by the room thermostat to be installed in the heating system. The boiler already carries connection terminals for this thermostat, as well as for a timeclock. The burner will continue to operate until it is stopped by the timer or one of the thermostats.
- 2.3.6 When the internal C.H. temperature sensor intervenes the main burner shuts down. The fan stops but the pump continues to operate.
- 2.3.7 When the room thermostats intervene the main burner shuts down. The fan stops and the pump turns off.

2.4 Domestic hot water mode

- 2.4.1 The heat exchanger in the D.H.W. circuit is built into the main heat exchanger, and domestic water is heated by converting the water in the central heating circuit. The transference of heat is very high because the two fluids-move in a counter direction flow to each other.
- 2.4.2 Switch 33 in the  (winter) position. When a hot water tap is turned on a diaphragm diverter valve excludes the central heating circuit, the boiler automatically modulates to maintain the domestic hot water at a constant temperature. Water temperature can be regulated using the D.H.W. thermostat located on the front control panel.
- 2.4.3 When domestic hot water is being drawn the main burner and pump perform as they do during central heating except that the burner is commanded by the D.H.W. thermostat.
- 2.4.4 When D.H.W. is no longer called for the boiler automatically returns to the central heating mode.
- 2.4.5 Switch 33 in the  (summer) position. The boiler functions like an automatic gas hot

water heater. When D.H.W. is no longer required the main burner fan and pump immediately turn off.

This also takes place when switch 33 is on  (winter) if there is no demand for heat to the central heating system or until the room thermostat/time clock demands for heat to the central heating circuit.

3.1 SAFETY DEVICE

In both central heating and domestic hot water mode safe operating is ensured by:

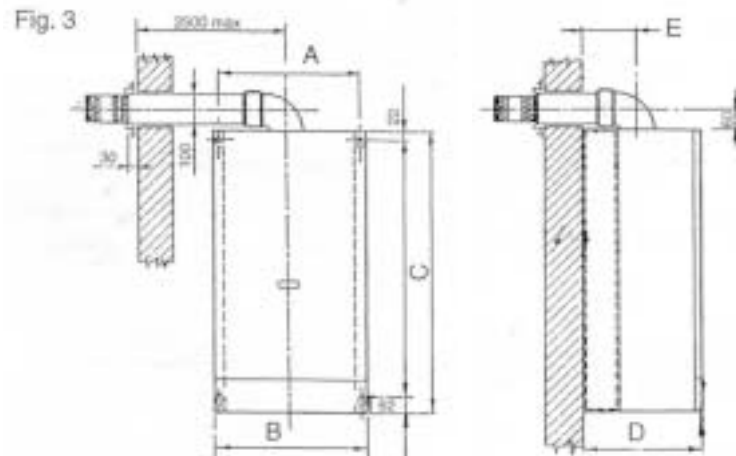
- A differential pressure switch which shuts off the main burner if the fan stops or the flue or combustion air intake duct is obstructed.

3.1.2 An overheat cut off thermostat set slightly higher than the high limit thermostat acts to turn off the burner to resetable "lockout" (Fig. 50) item 3.

3.1.3 A safety valve fitted on the central heating circuit set at 43 psi (3 bar).

3.2.1 A heating circuit (low water) pressure switch is set at 0.4 bar.


OVERALL DIMENSION



DIMENSIONS (mm)


RSF	84E (T)	100E (T)
A	422	472
B	450	500
C	850	900
D	360	360
E	200	200

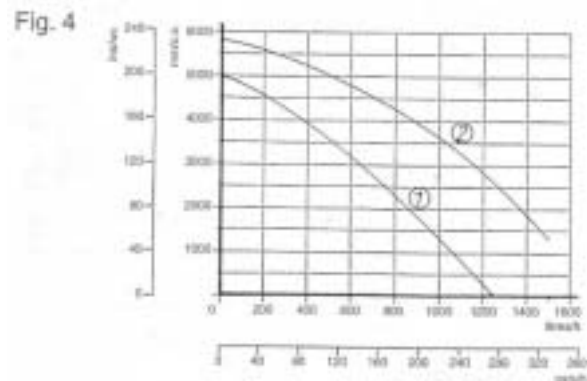AVAILABLE PUMP HEAD



PRESSUREDROP ACROSS APPLIANCE

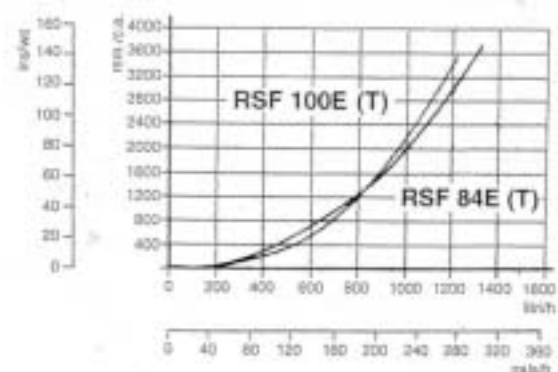Fig. 5



SECTION 3 TECHNICAL DATA
TABLE 1
RSF 84E(T) NATURAL GAS (G 20) I2H

HEAT INPUT NET	max	26.9 kW	(91,800 Btu/h)
NOMINAL	mid	20.0 kW	(68,250 Btu/h)
	min	14.6 kW	(49,800 Btu/h)
H E A T O U T P U T	max	24.58 kW	(83,880 Btu/h)
NOMINAL	mid	17.6 kW	(60,060 Btu/h)
	min	11.5 kW	(39,250 Btu/h)
GAS RATE	max	2.6 m ³ /h	(91 .8 ft ³ /h)
AFTER 10 minutes	mid	1.9 m ³ /h	(67.1 ft ³ /h)
	min	1.3 m ³ /h	(45.9 ft ³ /h)
INLET PRESSURE	20 mbar	(8.0 in w.g.)	
BURNER PRESSURE	max	8.1 mbar	(3.2 in w.g.)
	mid	4.0 mbar	(1.6 in wg.)
	min	1.5 mbar	(0.6 in w.g.)
GAS CONTROL VALVE	SIT	837 TANDEM	
MAIN BURNER	POLIDORO MOD/NP		
MAIN BURNER INJECTORS	N. 13X1.35		
PILOT BURNER	POLIDORO PA525F		
PILOT INJECTOR 0.27	(MARKING) 2 HOLES		
ELECTRICAL SUPPLY	230V-50HZ		
POWER CONSUMPTION	160W		
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE RATING	315mA - 2A - 4A (20mm to BS4265)		
DRY WEIGHT	48 kg (106 Lbs)		
WATER CONTENT D.H.W.	0.5 Lts. (0.9 pints)		
WATER CONTENT C.H.	3.0 Lts. (5.3 pints)		
GAS SUPPLY CONNECTION	15 mm compression isolating valve		
FLOW CONNECTION C.H.	22 mm compression isolating valve		
RETURN CONNECTION C.H.	22 mm compression isolating valve		
INLET CONNECTION D.H.W.	15 mm compression isolating valve		
OUTLET CONNECTION D.H.W.	15 mm compression		
MAXIMUM PERMISSIBLE COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRES			
SAFETY DISCHARGE PIPE	15 mm copper pipe		
SEALED WATER SYSTEM C.H. SYSTEM			
MAX PRESSURE 2.5 bar (35.6 p.s.i.)			
MINIMUM WORKING PRESSURE 0.5 bar (7.35 p.s.i.)			
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE 0.5 bar (7.35 p.s.i.)			
CENTRAL HEATING OPERATING TEMPERATURE MAX 85 °C MIN 45 °C			
DESIGN FLOW RATE 1057 l/h (236 gals) 20 °C RISE			
MINIMUM FLOW RATE C.H. 494 Lts/h (109 gals/h)			
D.H.W. FLOW RATE 30 °C rise 11.7 l/min (2.6 gals/min)			
D.H.W. FLOW RATE 35 °C rise 10.1 l/min (2.24 gals/min)			
D.H.W. FLOW RATE 40 °C rise 8.8 l/min (1.96 gals/min) 10 °C inlet temperature			
D.H.W. TEMPERATURE	max 65 °C		
	min 35 °C		
D.H.W. PRESSURE	max 10 bar (147 p.s.i.)		
	min 0.8 bar (11.8 psi.)		
To obtain 95% heat input 1.0 bar (14.5 p.s.i.)			
D.H.W. MINIMUM FLOW RATE 3 l/m (0.66 gals/min)			
FLUE OUTLET NOM. DIA. 100 mm specially supplied with boilers			
DESTINATION: AT - DK - FI - IE - IT - PT - ES - SE - CH - GB	Nominal Efficiency	91.4% NET	
FLUE TYPE - C12 - C32 - C52	Efficiency at 30% Load	88.1% NET	
CATEGORY I2H	NOX 2		

TECHNICAL DATA

TABLE 2 RSF IOOE(T) NATURAL GAS (G 20) I 2H

HEAT INPUT NET NOMINAL	max mid min	32.79 kW 22.79 kW 13.96 kW	(111,900 Btu/h) (77,700 Btu/h) (47,600 Btu/h)
HEAT OUTPUT NOMINAL	max mid min	29.66 kW 20.3 kW 11.2 kW	(101,221 Btu/h) (69,280 Btu/h) (38,220 Btu/h)
GAS RATE AFTER 10 minutes	max mid min	3.2 m³/h 2.3 m³/h 1.4 m³/h	(113 ft³/h) (81.2 ft³/h) (49.4 ft³/h)
INLET PRESSURE	20 mbar	(8.0 in wg.)	
BURNER PRESSURE	max mid min	12.5 mbar 5.0 mbar 1.4 mbar	(4.9 in w.g.) (1.96 in w.g.) (0.56 in w.g.)
GAS CONTROL VALVE	SIT	637 TANDEM	
MAIN BURNER	POLIDORO MOD/NP		
MAIN BURNER INJECTORS	N. 15X1.25		
PILOT BURNER	POLIDORO PA525F		
PILOT INJECTOR 0.27	(MARKING) 2 HOLES		
ELECTRICAL SUPPLY	230 V - 50HZ		
POWER CONSUMPTION	160W		
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE RATING	3 1 5 mA - 2 A - 4 A (20 mm to BS4265)		
DRY WEIGHT	53 kg (116.6 Lbs)		
WATER CONTENT D.H.W.	0.7 Lts. (1.2 pints)		
WATER CONTENT C.H.	3.5 Lts. (5.2 pints)		
GAS SUPPLY CONNECTION	15 mm compression isolating valve		
FLOW CONNECTION C.H.	22 mm compression isolating valve		
RETURN CONNECTION C.H.	22 mm compression isolating valve		
INLET CONNECTION D.H.W.	15 mm compression isolating valve		
OUTLET CONNECTION D.H.W.	15mm m compression		
MAXIMUM PERMISSIBLE COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRES			
SAFETY DISCHARGE PIPE	15 mm copper pipe		
SEALED WATER SYSTEM C.H. SYSTEM			
MAX PRESSURE 2.5 bar (35.6 p.s.i.)			
MINIMUM WORKING PRESSURE 0.5 bar (7.35p.s.i.)			
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE 0.5 bar (7.35 p.s.i.)			
CENTRAL HEATING OPERATING TEMPRATURE MAX 85 °C MIN 45 °C			
DESIGN FLOW RATE 1275 l/h (283 gals) 20 °C RISE MINIMUM FLOW RATE (106 gals/h)			
D.H.W. FLOW RATE 30 °C rise 14.2 l/min (3.16 gals/min)			
D.H.W. FLOW RATE 35 °C rise 12.2 l/min (2.7 galsimin)			
D.H.W. FLOW RATE 40 °C rise 10.6 l/min (2.4 gals/min) 10° C inlet temperature			
D.H.W TEMPERATURE	max 65 °C min 35 °C		
D.H.W. PRESSURE	max 10 bar (147 p.s.i.) min 0.8 bar (11.8 p.s.i.)		
To obtain 95% heat input 1.7 bar (24.7 p.s.i.)			
D.H.W. MINIMUM FLOW RATE 3 l/m (0.66 gals/min)			
FLUE OUTLET NOM. DIA. 100 m/m specially supplied with boilers			
DESTINATION: AT - DK - FI - IE - IT - PT - ES - SE - CH - GB		Nominal Efficiency	90.47% NET
FLUE TYPE - C12 - C32 C52		Efficiency at 30% Load	89.4% NET
CATEGORY I2H	NOX 2		

TECHNICAL DATA

TABLE 3

RSF 84E(T) PROPANE GAS (G 31) I 3P

HEAT INPUT NET	max	26.9 kW	(91,800 Btu/h)
NOMINAL	mid	20.0 kW	(68,200 Btu/h)
	min	13.5 kW	(46,000 Btu/h)
H E A T O U T P U T	max	24.58 kW	(83,880 Btu/h)
NOMINAL	mid	17.6 kW	(60,060 Btu/h)
	min	10.7 kW	(36,506 Btu/h)
GAS RATE	max	1.05 m ³ /h	(37,07 ft ³ /h)
AFTER 10 minutes	mid	0.82 m ³ /h	(28,95 ft ³ /h)
	min	0.52 m ³ /h	(18,36 ft ³ /h)
INLET PRESSURE	37 mbar	(14.85 in w.g.)	
BURNER PRESSURE	max	20.5 mbar	(8.23 in wg.)
	mid	14.8 mbar	(5.94 in w.g.)
	min	4.4 mbar	(1.77 in w.g.)
GAS CONTROL VALVE	SIT	837 TANDEM	
MAIN BURNER	POLIDORO MOD/NP		
MAIN BURNER INJECTORS	N. 13X0.85		
PILOT BURNER	POLIDORO PA525F		
PILOT INJECTOR 0.22	(MARKING) 1 HOLE		
ELECTRICAL SUPPLY	230V-50HZ		
POWER CONSUMPTION	160W		
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE RATING	315mA-2A-4A (20mmtoBS4265)		
DRY WEIGHT	48 kg (106 Lbs)		
WATER CONTENT D.H.W.	0.5 Lts. (0.9 pints)		
WATER CONTENT C.H.	3.0 Lts. (5.3 pints)		
GAS SUPPLY CONNECTION	15 mm compression isolating valve		
FLOW CONNECTION C.H.	22 mm compression isolating valve		
RETURN CONNECTION C.H.	22 mm compression isolating valve		
INLET CONNECTION D.H.W.	15 mm compression isolating valve		
OUTLET CONNECTION D.H.W.	15 mm compression		
MAXIMUM PERMISSIBLE COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL			
110 LITRES			
SAFETY DISCHARGE PIPE	15 mm copper pipe		
SEALED WATER SYSTEM C.H. SYSTEM			
MAX PRESSURE 2.5 bar (35.6 p.s.i.)			
MINIMUM WORKING PRESSURE 0.5 bar (7.35 p.s.i.)			
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE 0.5 bar (7.35 p.s.i.)			
CENTRAL HEATING OPERATING TEMPERATURE MAX 85 °C			
MIN 45 °C			
DESIGN FLOW RATE 1057 l/h (236 gals) 20 °C RISE			
MINIMUM FLOW RATE C.H. 494 Lts/h (109 gals/h)			
D.H.W. FLOW RATE 30 °C rise 11.7 l/min (2.6 gals/min)			
D.H.W. FLOW RATE 35 °C rise 10.1 l/min (2.24 gals/min)			
D.H.W. FLOW RATE 40 °C rise 8.8 l/min (1.96 gals/min) 10 °C inlet temperature			
D.H.W. TEMPERATURE	max 65 °C		
	min 35°C		
D.H.W. PRESSURE	max 10 bar (147 p.s.i.)		
	min 0.8 bar (11.8 p.s.i.)		
To obtain 95% heat input 1.0 bar (14.5 p.s.i.)			
D.H.W. MINIMUM FLOW RATE 3 l/m (0.66 galS/min)			
FLUE OUTLET NOM. DIA. 100 m/m specially supplied with boilers			
DESTINATION: BE - FR - IE - PT - ES - GB - CH	Nominal Efficiency	91.4% NET	
FLUE TYPE - C12 - C32 - C52	Efficiency at 30% Load	88.1% NET	
CATEGORY I3P	NOX 2		

TECHNICAL DATA

TABLE 4

RSF IOOE(T) PROPANE GAS (G 31) I 3P

HEAT INPUT NET	max	32.82 kW	(112,000 Btu/h)
NOMINAL	mid	21.39 kW	(73,000 Btu/h)
	min	14.00 kW	(47,800 Btu/h)
HEAT OUTPUT	max	29.66 kW	(101,221 Btu/h)
NOMINAL	mid	19.1 kW	(65,170 Btu/h)
	min	11.2 kW	(38,220 Btu/h)
GAS RATE	max	1.3 m ³ /h	(45.9 ft ³ /h)
AFTER 10 minutes	mid	0.8 m ³ /h	(28.2 ft ³ /h)
	min	0.6 m ³ /h	(21.2 ft ³ /h)
INLET PRESSURE	37 mbar	(14.85 in w.g.)	
BURNERPRESSURE	max	23.5 mbar	(9.43 in w.g.)
	mid	9.3 mbar	(3.73 in w.g.)
	min	3.7 mbar	(1.48 in w.g.)
GAS CONTROL VALVE	SIT	837 TANDEM	
MAIN BURNER	POLIDORO MOD/NP		
MAIN BURNER INJECTORS	N. 15X0.85		
PILOT BURNER	POLIDORO PA525F		
PILOT INJECTOR 0.22	(MARKING) 1 HOLE		
ELECTRICAL SUPPLY	230 V - 50 HZ		
POWER CONSUMPTION	160W		
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE RATING	315mA-2A-4A (20mmtoBS4265)		
DRY WEIGHT	53 kg (116.6 Lbs)		
WATER CONTENT D.H.W.	0.7 Lts. (1.2 pints)		
WATER CONTENT C.H.	3.5 Lts. (5.2 pints)		
GAS SUPPLY CONNECTION	15 mm compression isolating valve		
FLOW CONNECTION C.H.	22 mm compression isolating valve		
RETURN CONNECTION C.H.	22 mm compression isolating valve		
INLET CONNECTION D.H.W.	15 mm compression isolating valve		
OUTLET CONNECTION D.H.W.	15 mm compression		
MAXIMUM PERMISSIBLE COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL			
110 LITRES			
SAFETY DISCHARGE PIPE	15 mm copper pipe		
SEALED WATER SYSTEM C.H. SYSTEM			
MAX PRESSURE 2.5 bar (35.6 p.s.i.)			
MINIMUM WORKING PRESSURE 0.5 bar (7.35 p.s.i.)			
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE 0.5 bar (7.35 p.s.i.)			
CENTRAL HEATING OPERATING TEMPERATURE MAX 85 °C			
MIN 45 °C			
DESIGN FLOW RATE 1275 l/h (283 gals) 20 °C RISE			
MINIMUM FLOW RATE C.H. 481 Lts/h (106 gals/h)			
D.H.W. FLOW RATE 30 °C rise 14.2 l/min (3.16 gals/min)			
D.H.W. FLOW RATE 35 °C rise 12.2 l/min (2.7 gals/min)			
D.H.W. FLOW RATE 40 °C rise 10.6 l/min (2.4 gals/min) 10 °C inlet temperature			
D.H.W. TEMPERATURE	max 65 °C		
	min 35 °C		
D.H.W. PRESSURE	max 10 bar (147 p.s.i.)		
	min 0.8 bar (11.8 p.s.i.)		
To obtain 95% heat input 1.7 bar (24.7 p.s.i.)			
D.H.W. MINIMUM FLOW RATE 3 l/m (0.66 gals/min)			
FLUE OUTLET NOM. DIA. 100 m/m specially supplied with boilers			
DESTINATION: BE - FR - IE - PT - ES - GB - CH	Nominal Efficiency	90.47% NET	
FLUE TYPE C12 - C32 - C52	Efficiency at 30% Load	89.4% NET	
CATEGORY I 3P	NOX 2		

SECTION 4 GENERAL REQUIREMENTS

4.0 SAFETY

Gas Safety (Installation and Use) Regulations, 1994 and amended 2000.

It is law that all gas appliances are installed and serviced by a CORGI registered installer in accordance with the above regulations and these installation instructions. All CORGI registered installers carry a CORGI I.D. card and have a registration number. Both should be recorded in your boiler log book. You can check your installer by calling CORGI direct on: 01256 732300. Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation.

The installation of the boiler MUST be in accordance with the latest I.E.E. (BS 7671) Wiring Regulations, local building regulations, bye-laws of the local water authority, the building regulations and the Building Standards (Scotland) and any relevant requirements of the local authority.

4.1 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the British Standards concerning installation requirements. If you need advice on any points your Ravenheat Technical Services Office would be pleased to help. It is recommended that tools suitable for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mms.

CODES OF PRACTICE/Ref: Documents

Detailed recommendations are contained in the following British Standard Codes of Practice:

- | | |
|------------|---|
| BS. 6891 | Low pressure installation pipes |
| BS. 6798 | Installation of gas fired hot water boilers of rated input not exceeding 60 kW. |
| BS. 5449 | Forced circulation hot water systems. |
| BS. 5546 | Installation of gas hot water supplies domestic purposes (2nd Family Gases). |
| BS. 5440:1 | Flues (for gas appliances of rated input not exceeding 60 kW). |
| BS. 5440:2 | Ventilation (for gas appliances of rated input not exceeding 60 kW). |

Health & Safety Document No. 635

The Electricity at Work Regulations, 1989.

IMPORTANT. These appliances are CE certificated for safety and performance. It is, therefore, important that no external control devices e.g. flue dampers, economisers etc., are connected to this appliance unless covered by these directly Installation and Servicing Instructions or as otherwise recommended by Ravenheat in writing. If in doubt please enquire.

Any direct connection of a control device not approved by Ravenheat could invalidate the certification and the normal appliance warranty. It could also infringe the Gas Safety regulations and the above regulations.

NOTE: The Ravenheat combination boiler has been tested and examined by Bg Technology Certification Services and is certified to comply with PrEN 483 and BS EN 625.

Manufacturers instructions must NOT be taken in any way as overriding statutory obligations.

If in doubt on any point please consult Ravenheat Manufacturing Ltd.

4.2 LOCATION OF BOILER

4.2.1

Siting of Ravenheat RSF Combi Boiler must be as follows. The position of installation should be within the building, unless otherwise protected by suitable enclosure. Adequate space for installation, servicing and air circulation around boiler must be allowed for.

The Ravenheat RSF Combi Boiler must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment. The appliance may be installed on a combustible wall subject to the requirements of the Local Authority and Building Regulations.

4.3 CLEARANCES AROUND THE APPLIANCE

4.3.1

The following minimum free spaces, required for installation inspection and servicing, must be left around the boiler.

RSF 84E (T)	RSF 100E (T)
Above 125 mm	Above 150 mm
Below 100 mm	Below 100 mm
Front 450 mm	Front 450 mm
Side 75 mm	Side 5 mm
25 mm in front when installed in a cupboard	

4.4 IMPORTANT NOTICE

- 4.4.1 If the combination boiler is to be fitted in a timber framed building it should be fitted in accordance with the British Gas Publication Guide for Gas installations in Timber Frame Housing Reference IGE/UP/7/1998. If in doubt advice must be sought from the local gas supplier. The combination boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower.

Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control utilising mains electricity should be so situated that it cannot be touched by a person using a bath or shower.

A compartment used to enclose the combination boiler MUST be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly. Samples of the RSF 84E/84ET - RSF 100E/100ET combination boilers have been examined by B.G.Technology Notified Body, and are certified to comply with the essential requirements of the Gas Appliance Directive 90/396/EEC, the Low Voltage Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility Directive 89/336/EEC and are therefore permitted to carry the CE Mark.

The appliance has been tested and approved by the WRc as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.

4.5 GAS SUPPLY

- 4.5.1 A gas meter is connected to the service pipe by the Local Gas Supplier or a contractor. An existing meter should be checked preferably by the gas Region to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891. Pipework from the meter to the boiler must be of adequate size (22 mm) min. To within at least 3 metre Of the boiler (15 mm) min. can then be used for remaining pipe work to the appliance. A smaller size than the boiler inlet gas connection should not be used. The complete installation must be tested for soundness as described in the above Code.
N.B. if the gas supply for the boiler serves other appliances ensure an adequate sup-

ply is available both to the boiler and the other appliances when they are in use at the same time.

4.6 FLUE SYSTEM

- 4.6.1 The terminal should be located where dispersal of combustion products is not impeded, and with due regard for the damage or discolouration that might occur to building products in the vicinity (see fig. 6).

The terminal must not be located in a place where it is likely to cause a nuisance.

The terminal must not be closer than 25 mm. (1 in) to any combustible material. For protection of combustibles, refer to BS 5440.1.

Where a flue terminal is installed less than 1000 mm. from a plastic, or painted gutter; or 500 mm from painted eaves, an aluminium shield 1000 mm. long, should be fitted to the underside of the gutter or painted surface.

The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

IMPORTANT NOTICE: if the flue terminates less than 2 M. above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.

Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

Available on request from:
RAVENHEAT Manufacturing Ltd
Chartists Way
Morley, Leeds, West Yorkshire
ENGLAND LS27 9ET - U.K.
Tel. 0113 252 7007

IMPORTANT: The following notes are intended for general guidance.

The boiler **MUST** be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation opening are specified in Fig. 6.

Note positions: Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1.

Fig. 6



Terminal position for fan assisted boiler
(minimum distance)

	mm
A - Directly below an open window or other opening (e.g. air brick)	300
B - Below gutters, soil pipes or drain pipes	25
C - Below eaves	25
D - Below balconies or car port roof	25
E - From vertical drain pipes and soil pipes	25
F - From internal or external corners	25
G - Above ground or below balcony level	300
H - From a surface facing a terminal	600
I - From a terminal facing a terminal	1200
J - From an opening in the car port (e.g. door window) into dwelling.	1200
K - Vertically from a terminal on the same wall	1500
L - Horizontally from a terminal on the same wall	300
M - Horizontally from a vertical terminal to a wall	300

NOTE: The flue must be terminated in a place not likely to cause a nuisance.

FLUE ALTERNATIVES

4.6.2 A concentric vertical flue kit is available for flueing applications up to a maximum height of 4 metres **vertically**. For further details see vertical flue installation instructions (sect. 5.7.12).

4.6.3 A twin flue system is also available. For further details see twin flue installation instruction (sect. 10).

4.7 AIR SUPPLY

4.7.1 The following notes are intended for general guidance.

The room sealed fan flued boiler does not require a permanent air vent for combustion air supply.

Where installed in a cupboard or compartment ventilation is not required.

4.8 WATER CIRCULATION (central heating)

4.8.1 Detailed recommendation are given in BS 6798:1987/5449:1990 (for smallbore and microbore central heating systems). The following notes are given for general guidance.

4.8.2 Pipework

Copper tubing to BS 2871 1.1.1971 is recommended for water pipes. Jointing should be either with capillary soldered or with compression fittings.

Where possible pipes should have a gradient to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliance heat exchanger is not a natural collecting point for air except where providing useful heat, pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

4.8.3 The water through the appliance heat exchanger circuit must exceed the min. 2.38 gals/min. (650 lt/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut off either manually or by automatic controls. **Therefore a by-pass must be fitted to the system (15 mm min.) (Fig. 6A).**

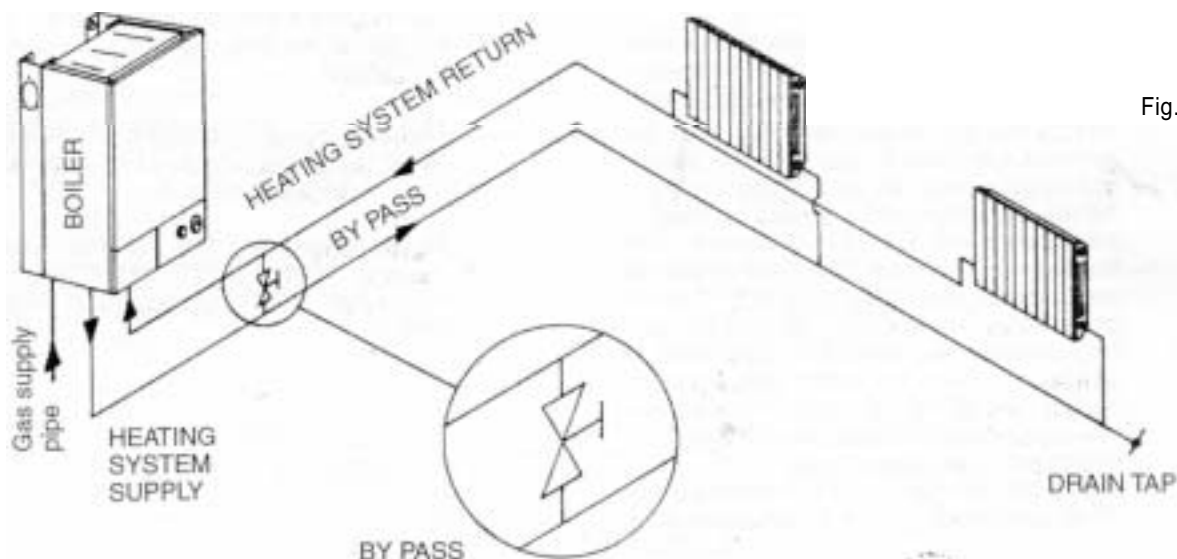


Fig. 6A

If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the overheat cut off to lockout.

4.8.4 Draining tap


These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2870 1980.

4.8.5 Air release points

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete fitting of the system.

- 4.8.6 The appliance has an integral sealed expansion vessel to accommodate the increase of water volume when the system is heated. It can accept up to 1.5 gal (7 lts) of expansion water. If the appliance is connected to a system with an unusually high water content, calculate the total expansion and add additional sealed expansion capacity as appropriate (Fig. 7).
In general modern systems will present no problem.

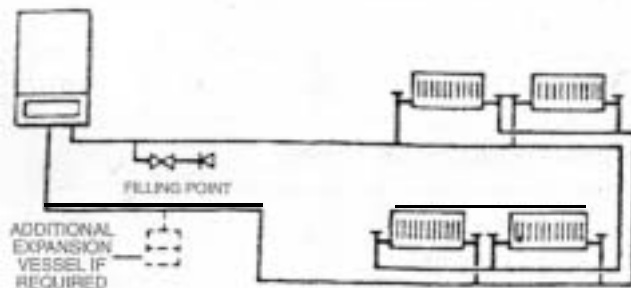Fig. 7



4.8.7 Mains water feed: central heating

There must be no direct connection to the mains water supply, even through a non-return valve, without the approval of the Local Water Authority.

4.8.8 Permissible methods of filling

Cistern method (Fig. 8).

The system may be filled by one of the following methods. Through a cistern used for no other purpose, via a ball valve permanently connected directly to a service pipe and/or cold water distributing pipe. The static head available from the cistern should be adequate to provide the initial system design pressure.

The cold feed pipe from the cistern should include a non-return valve, and a stop-valve with an automatic air vent connected between them, with the stop valve being

located, between the cistern and the automatic air vent. The stop valve may remain open during normal operation of the system, if automatic water make-up is required.

Booster pump method (Fig. 8).

The system may be filled through a self contained unit comprising of a cistern pressure booster pump if required and if necessary an automatic pressure reducing valve or flow restrictor. The cistern should be supplied through a temporary connection from a service pipe or cold water distributing pipe. The unit may remain permanently connected to the heating system to provide limited automatic water make up.

Mains topping up method (Fig. 9).

Here the temporary connection is supplied from a service pipe, or distributing pipe, which also supplies other draw-off points at a lower level.

A combined double check valve shall be installed upstream of the draw-off point, through a temporary hose connection from a tap supplied from the mains, where the mains pressure is excessive a pressure reducing valve shall be used to make filling easier. The following fittings shall form a permanent part of the system and shall be fitted in the order stated.

Fig. 8


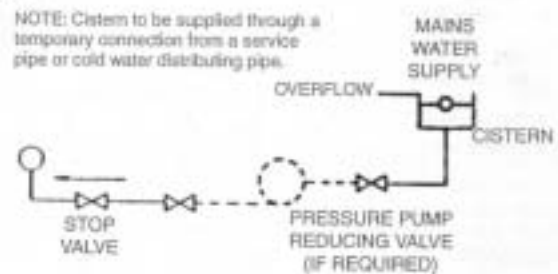


Fig. 9

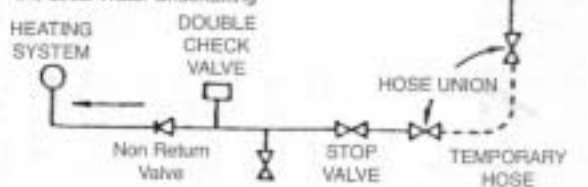COMPLIES WITH BS 5376:2:1976
APPENDIX A METHOD A.1.
NOTE: This method of filling a sealed system may only be used if acceptable to the Local Water Undertaking



- A stop valve complying with the requirements of BS 1010 Part 2 (the temporary hose from the draw off tap shall be connected to this fitting).
- A test clock.
- Double check valve of an accepted type.
- A non return valve of an accepted type.

We recommend use of a Ravenheat Filling Loop designed for this method of filling the system. Available from your supplier.

PROVISIONS FOR MAKE UP WATER (Fig. 7)

Provision can be made for replacing water loss from the system either.

A) from a manually filled make up bottle with a readily visible water level. The bottle should be mounted at least 150 mm (6 in) above the highest point of the system and be connected through a non return valve to the return side of the heating system.

B) Where fitting a make up vessel would be difficult re pressurisation of the system can be done. See section on FILLING.

If the capacity of the central heating system should exceed 110 litres, **an additional vessel may be installed if required on the return to the combination boiler from the heating system (Fig. 7). Guidance on vessel sizing is given in (Table 5).**

Reference should be made to British Gas Publications << Material and Installation Specifications for Domestic Central Heating and Hot Water >>. Draining taps should

be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

4.8.9 Installation to an existing central heating system

The combination boiler is designed to operate on a sealed system only. Therefore if the existing system is of the open water type it will have to be modified to comply with BS 5376 Part 2.

Before installing a new combination boiler to an existing system flush out the old system with a recommended descaling agent.

Also check pipework and renew any corroded pipework or fittings, Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

4.8.10 Hard water areas

If the area of installation is recognized as a hard water, it is recommended that a suitable water treatment device is installed in the mains.

The water hardness can be determined by using the standard test paper or by referring to local water authority.

SIZING OF ADDITIONAL EXPANSION VESSELS:TABLE 5

Safety valve setting (bar)	3.0								
Vessel charge pressure (bar)	0.5				1.0				
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0
Total water content Of System	EXPANSION VESSEL VOLUME (LITRES)								
Litres									
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8
100	8.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2
500	41.6	70.0	125.9	275.6	54.5	95.0	206.0	78.0	165.5
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331

Note: This pressure can be increased up to 1.5 bar to suit high static head situations, see item 10, other appliance components in the SERVICING INSTRUCTIONS.

4.9 DOMESTIC WATER

- 4.9.1 The domestic hot water must be in accordance with the relevant recommendations of BS 5546. Copper tubing to BS 2871.1 is recommended for water carrying pipework and **MUST** be used for pipework carrying potable water..

4.10 ELECTRICAL SUPPLY

Warning: this appliance must be earthed

- 4.10.1 External wiring to the appliance must be carried out by a competent person and be in accordance with the current I.E.E. Regulations and local regulations which apply. The Ravenheat boiler is supplied for connection to a 230 V - 50 Hz single phase supply. The supply **must be fused at 3 A**.

NOTE: The method of connection to the electricity supply **MUST** facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and adjacent to the appliance except, where the appliance is installed in a bathroom, this **MUST** be sited outside the bathroom.

SECTION 5 INSTALLATION

5.1 WARNING

- 5.1.1 It is **MOST IMPORTANT** that this appliance is installed in a **VERTICAL POSITION**, with the flue air duct passing through the wall in a **HORIZONTAL PLANE**. A minor deviation from the horizontal is acceptable, provided that this results in a downward slope of the flue/air duct away from the combination boiler.

Flue box containing (Fig. 12):
Standard Flue Assembly

- 57 - Flue bend assembly
- 59 - Rubber seal 0 60
- 60 - Air intake duct
- 61 - Flue exhaust duct
- 62 - Terminal
- 65 - Pipe centering spring
- 66 - Flue sample point

5.2 DELIVERY

5.2.1 The appliance will arrive on site in three cartons:

Boiler carton containing:

- a) boiler fully assembled
- b) installation instructions and user instructions
- c) white paper template
- d) terminal cover plate (Fig. 12 item 127)
- g) - 4 coach bolts and wall plugs
- screws and dowels
- h) header gasket (Fig. 12 item 56)

Valve pack carton containing:

- a) 2-22 mm compression ball valves (heating)
- b) 1-1 5 mm compression ball valve (with drain screw for domestic cold water inlet)
- c) 1-1/2" BSP Union gas cock
- d) Polythene bag containing
 - 2 15 mm flanged copper tails complete with 1/2" brass nuts and washers
 - 2 22 mm flanged copper tails complete with 3/4" brass nuts and washers

Fig. 10


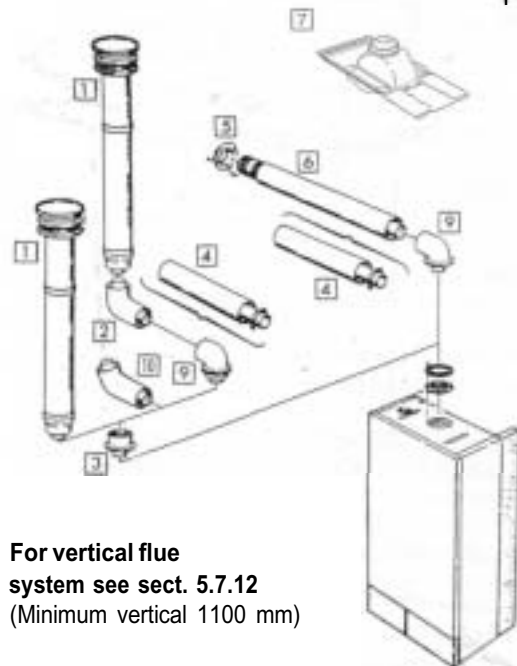


Fig. 12

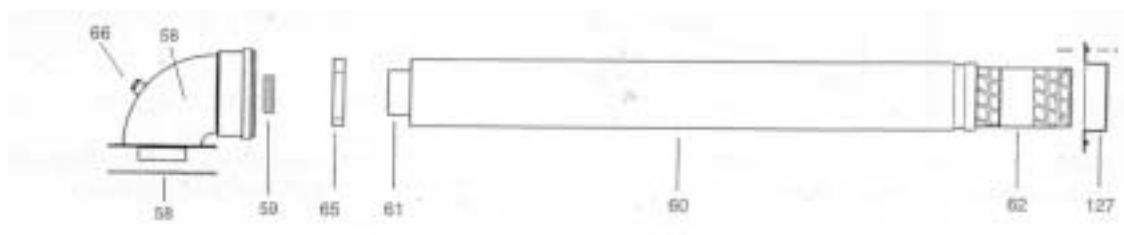

5.2.2 OPTIONAL EXTRAS:

- a) Straight header (Fig. 10) item 3.
- b) 1000 mm flue extension.
- c) Concentric 90° in-line bend (Fig. 10) item 2.
- d) Concentric vertical flue (Fig. 10) item 1.
- e) Concentric 45° in-line bend (Fig. 10) item 10.

FLUE EXTENSION BOX CONTAINING (Fig. 14):
 1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications
 59 - Rubber seal 0 60
 63 Air intake duct extension
 64 - Flue exhaust duct extension
 65 - Pipe centering spring

STRAIGHT HEADER BOX CONTAINING (Fig. 13):
 55 - Rubber seal 0 100
 57 - Straight header supplied as an extra cost Only when requested
 59 Rubber seal 0 60
 66 - Flue gas sample point

5.3 UNPACKING

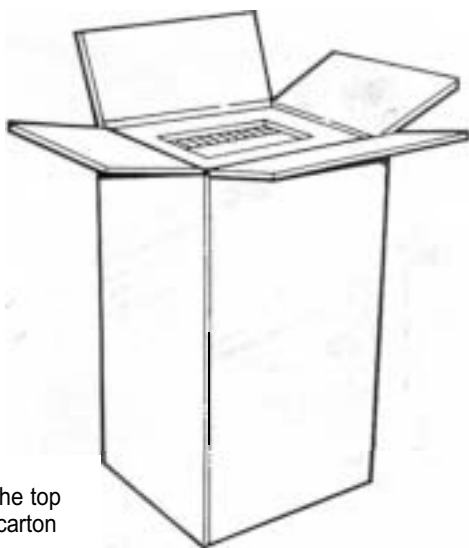


Fig. 15

- 1) Open the top of the carton

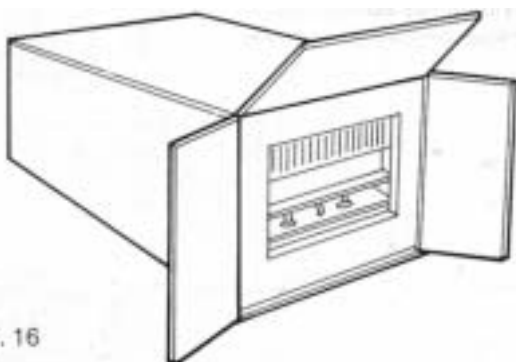


Fig. 16

- 2) Rest the carton on the floor (keeping the flaps open)

Fig. 13

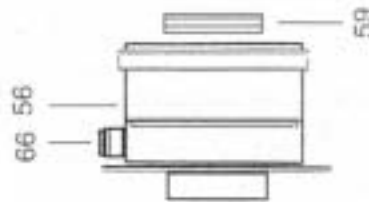


Fig. 14

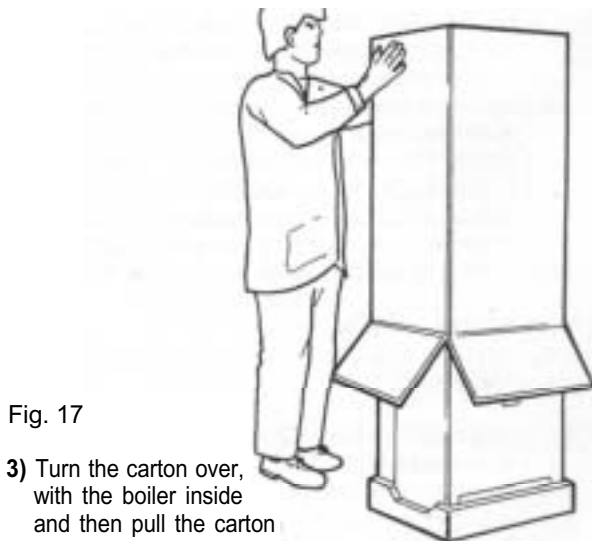


Fig. 17

- 3) Turn the carton over, with the boiler inside and then pull the carton

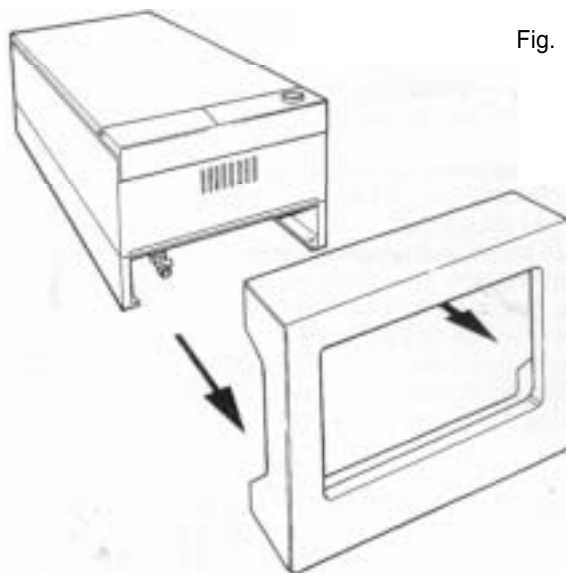


Fig. 18

- 4) Rest the boiler on the floor and remove the polystyrene guards

5.4 POSITIONING OF THE BOILER

- 5.4.1 - Remove the 2 screws that secure the upper part of the front panel of the casing (Fig. 19).
 - Carefully slide the front panel a few millimetres up towards the top of the appliance until it is free from its slot, and then lift off Fig. 20).
- 5.4.2 Unscrew the 2 screws that fasten the lower grating on the casing and remove it from the sides of the casing (Fig. 22).

Fig. 19

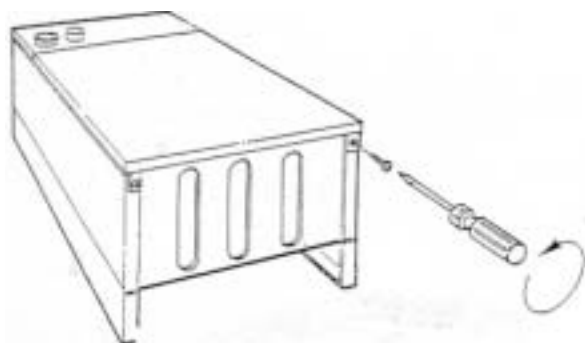


Fig. 20



Fig. 21

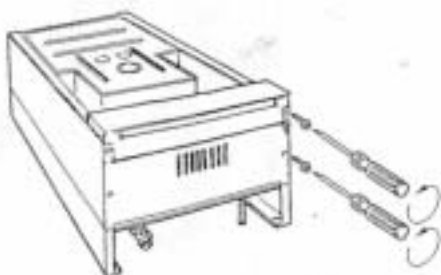


Fig. 22

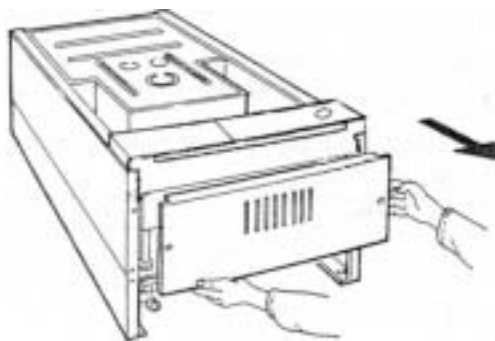


Fig. 23

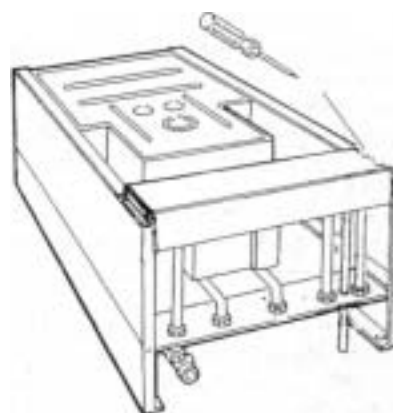


Fig. 25

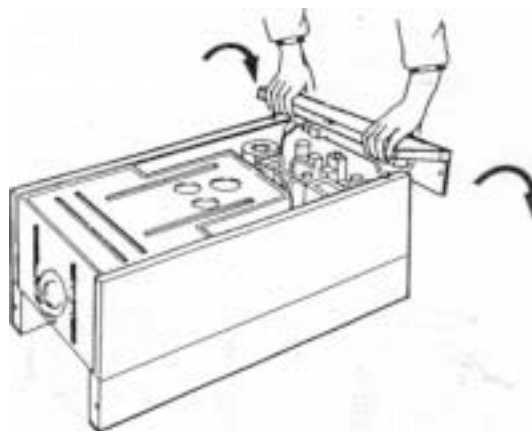


TABLE 6

RSF 84E (T)	RSF 100E (T)
F = 200 mm G = 275 mm	F = 200 mm G = 255 mm

5.4.3 Push down the 2 plastic clips that fasten the instrument panel (Fig. 23).

Fig. 26

5.4.4 Lower the instrument panel down by rotating it on its own hinges (Fig. 25).

5.4.5 Unscrew the two screws that fasten the two side panels. Remove the two sides of the casing by slightly lifting them and carefully sliding towards the top of the appliance, to release them from their upper suspension hooks (Fig. 26-27).

5.4.6 Make sure the casing and screws are put to one side in a safe place.

5.5 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET

5.5.1 Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical.

- Mark the four boiler fastening holes on the wall as well as the centre of the flue duct.
- Detach the template from the wall.
- Use a 10 mm. dia drill to make the 4 boiler securing holes. Insert the plastic expansion plugs.
- Cut or core drill a 105 mm. dia hole for inserting the flue duct.
- Screw in the two upper coach bolts leaving them about 10 mm. out from the wall to enable the boiler to be located on the wall.

Fit the elbow header positioning it towards the required direction (Fig. 30).

IMPORTANT: Make sure that the elbow's dia. 60 mm duct is inserted into the fan, the rubber seal and orifice are been correctly fitted.

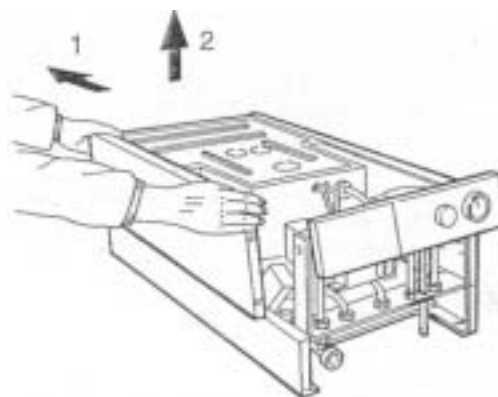


Fig. 27

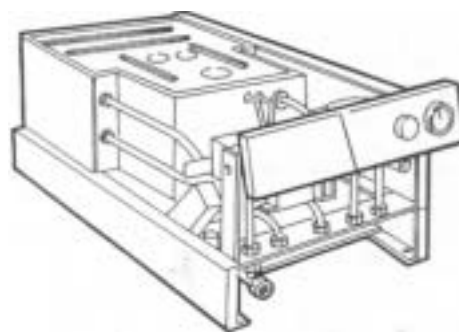


Fig. 26


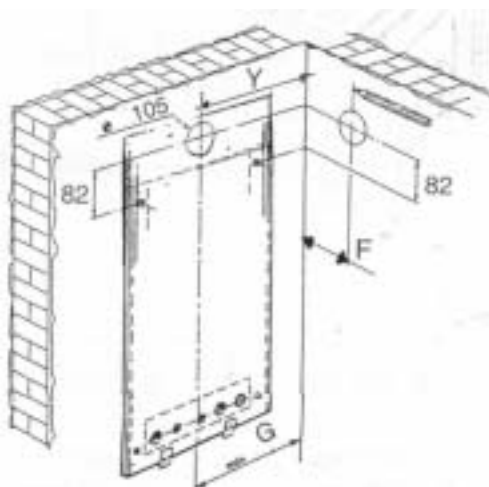


Fig. 29

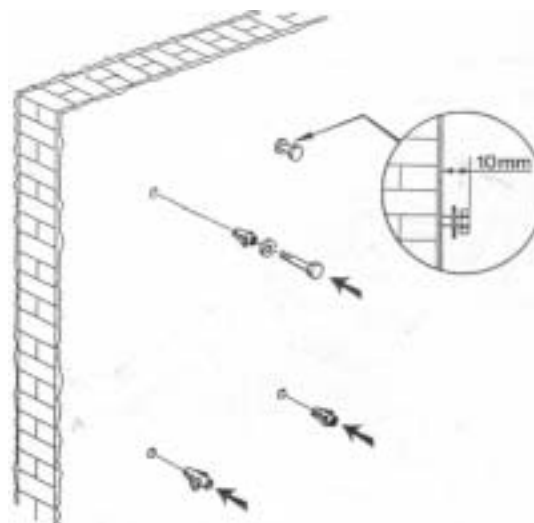

5.5.3 If the standard duct furnished with the boiler is too long (the wall to go through is less than 680 mm thick) it can be shortened as follows:

- Remove the centering spring 65, the flue terminal to disengage inner flue duct.
 - Measure the thickness W of the wall.
 - Cut the outer flue duct at right angles to a length equal to $W + 152$ mm.
- Must be de-burred.

- Cut the inner flue duct (60 mm) at right angles to a length equal to $W + 264$ mm.
- Insert from cut end. Reassemble the two tubes. Insert centering spring 65. Must be de-burred. Reassemble together inner and outer flue duct insert centering spring.

Fig. 30

Orifice plate
concentric
flue system
RSF 84E= 81
RSF 100E= 79


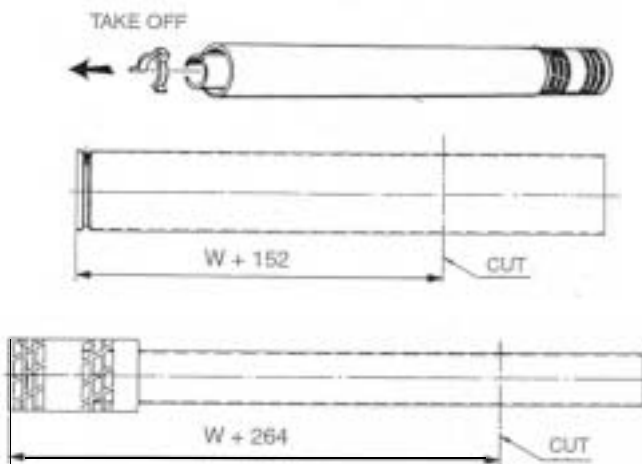
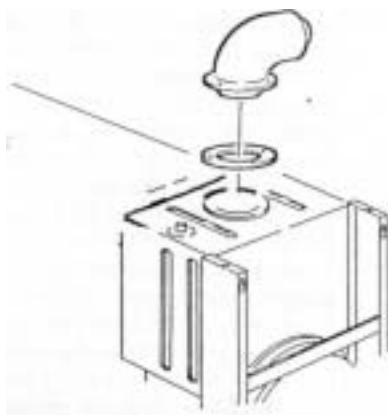


Fig. 32

INTAKE AND EXHAUST TERMINAL COMPONENTS

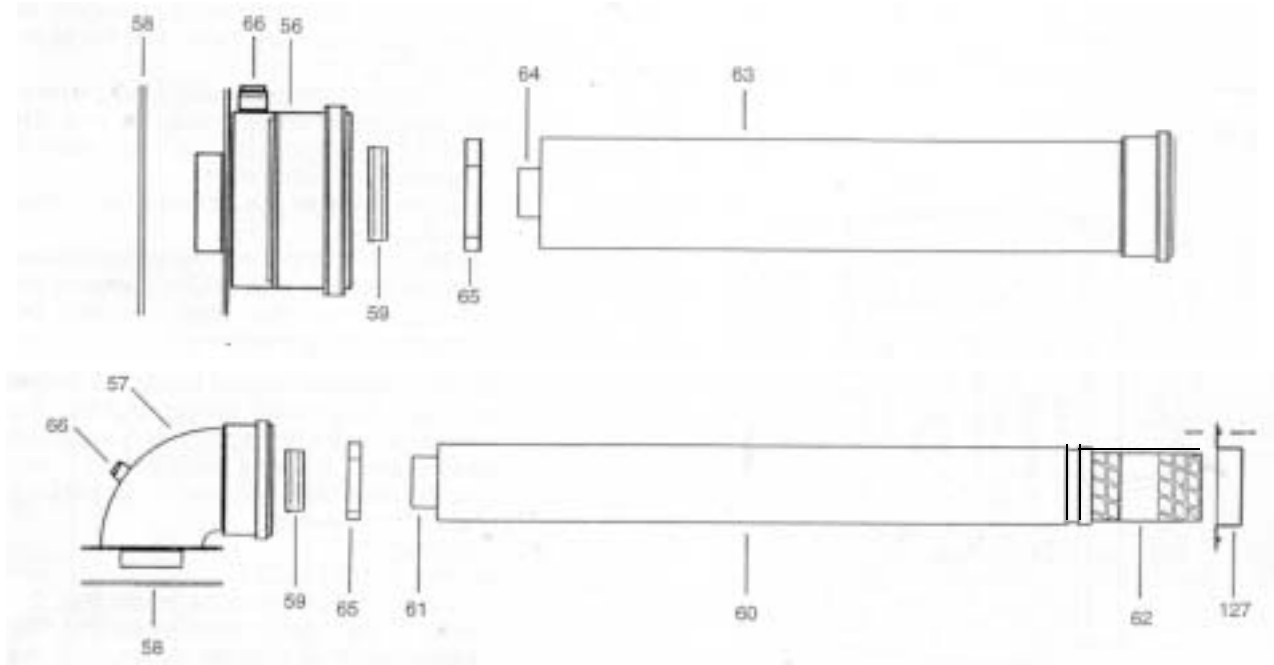Fig. 31



KEY

56 - Straight header
57 - Elbow header
58 - Header gasket

59 Rubber seal 0 60
60 - STD air intake duct
61 - STD flue exhaust duct
62 -Terminal
63 -Air intake duct extension

64 - Flue exhaust duct extension
65 - Pipe centering spring
66 - Sample point
127 -Terminal cover plate
128 - Screw

- 5.5.4 Insert the flue assembly into the wall, being careful to make sure that the outer air duct comes flush to the inner surface of the wall.
- 5.5.5 Lift the boiler on to the wall (Fig. 34), locating onto the top coach bolts. Fit the two lower coach bolts and tighten all four securing bolts.
- 5.5.6 Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube 61 into its header 57A (Fig. 31). Position flue into elbow header and push so as to locate inner and outer flue correctly.

Fig. 33


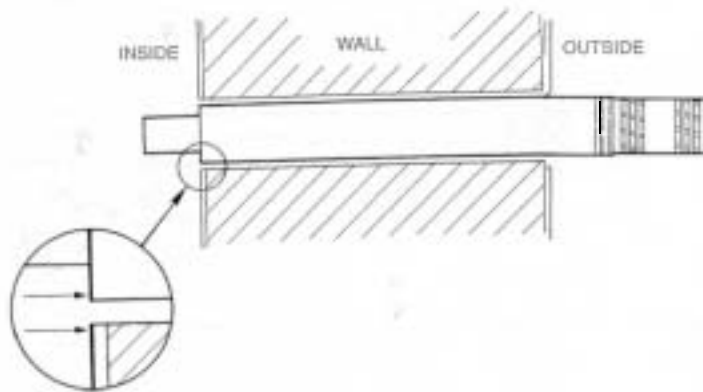


Fig. 34

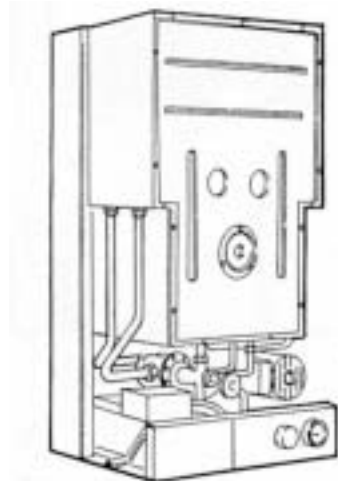

- 5.5.6 Fit terminal cover plate if required.
- 5.5.9 Extension kits are available on order.

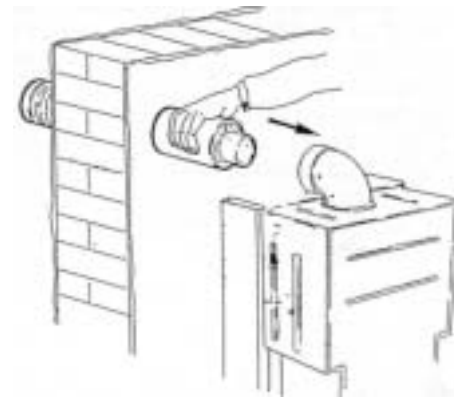


Fig. 35

- 5.5.10 Each extension length extends the pipe by approximately 1000 mm long up to a maximum of two extensions.

Pipeline length can be established using the instructions in section 5.5 for rear flue outlets and section 5.7 for side flue outlets. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal. Extensions must be joined together with the standard terminal pipe, inserted in each other as far as they can go.

If an extension must be shortened, this must be done from the straight end, and not from the widened or tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output pipe fits into the boiler header until it stops. The air intake pipe should be located approximately 2 mm from the boiler header (Fig. 31).

When cutting both inner and outer ducts of the extension, always ensure that the reduced end (male) of the inner duct is longer than the outer duct.

All joints must be sealed with the rubber seals supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

NOTE: a suitable support bracket is available from Ravenheat Manufacturing and should be used to support flue length at least every 1.8 metre preferably at each joint this bracket should be rigidly secured to wall and flue duct.

- 5.5.11 IN LINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurement should be taken from the outer edge of the flue and bend (Fig. 398).

IMPORTANT: in line flue bend - 750 mm must be deducted from overall length for each 90° bend. Obtuse flue bend - 375 mm must be deducted from overall length for each 135° bend (Fig. 39 B).

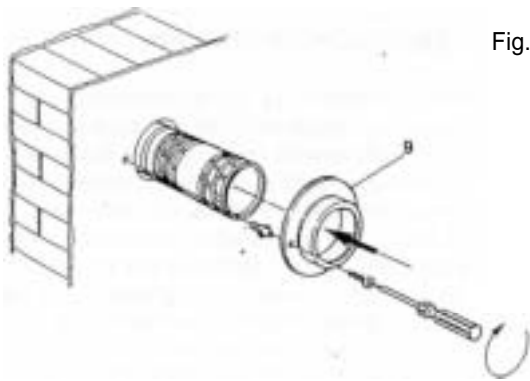


Fig. 37

- Screw in the two upper coach bolts leaving them about 10 mm out from the wall in order to enable the boiler to be located.

5.6 COMPLETING BOILER INSTALLATION

- 5.6.1 Reassembles the outer casing (sect 5.4) proceeding in this order
- 1) Fit the two sides.
 - 2) Refit the instrument panel in reverse order as in (sect. 5.4.4).
 - 3) Refit the lower grating (sect. 5.4).

5.7 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 39)

- 5.7.1
- Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than MEASUREMENT IN TABLE 6.
 - Mark the four boiler securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.
 - Trace the centre of the flue duct hole measure distance F (table 6). From the corner of the wall (Fig. 28), measure the distance y between the centre of flue duct hole to the corner. Detach the template from wall.
 - Use a dia. 10 mm. drill to make the 4 holes for securing the boiler. Insert the plastic expansion plugs. Core drill 105 mm dia. hole in the side wall for inserting the flue duct.

5.7.2 Positioning the elbow towards the required direction (Fig. 30).

- 5.7.5
- If the standard duct furnished with the boiler is too long (position of the boiler from the wall to go through as illustrated in the drawing and wall thicknesses less than what was specified above) it can be shortened as follows: Fig. 28-29-31-32.
 - Remove the centering spring 65, pull the flue terminal disengage inner flue duct.
 - Measure the thickness W of the wall.
 - Cut the outer air duct (100 mm dia.) at right angles and to a length equal to $W+Y - 47 \text{ mm}$. (Fig. 32).
 - Cut the inner flue duct (60 mm dia.) at right angles and to a length equal to $W+Y + 65 \text{ mtn}$.
 - Outer air duct and inner flue duct must be de-burred.
 - Reassemble the two tubes. Insert centering spring 65 (Fig. 31).

Fig. 39


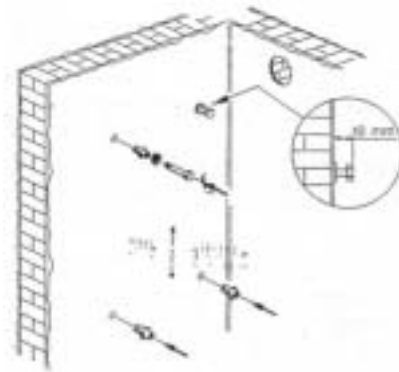


Fig. 39B

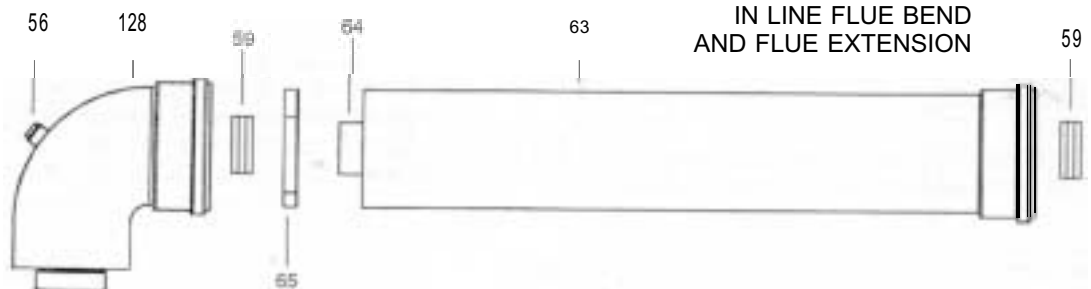

KEY

- 56 - Sample point (if required)
- 57 - Elbow Header
- 59 - Rubber seal 0 60

IN LINE FLUE BEND AND FLUE EXTENSION

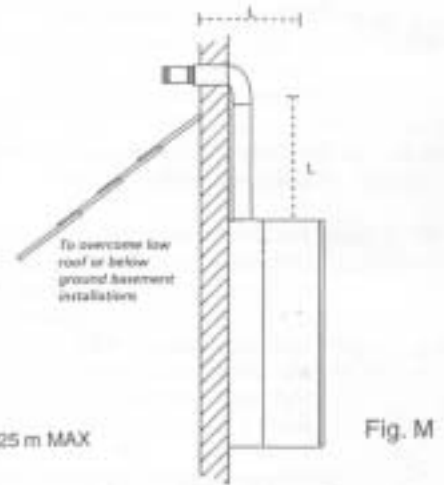
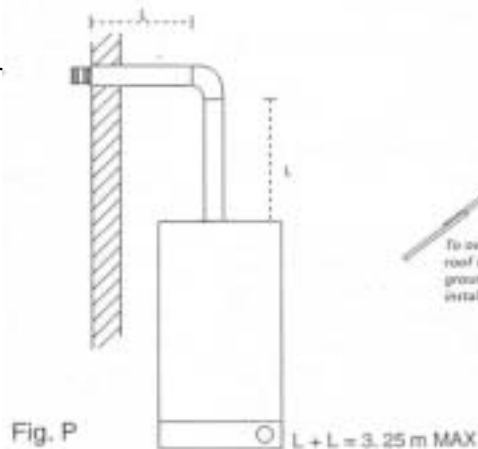
- 63 Air intake duct extension
- 64 - Flue Exhaust duct extension
- 65 - Pipe centering spring
- 128 - In Line Bend (45° and/or 90°)

- 5.7.6** Insert the flue assembly into the wall, making sure it will not interfere when fixing the boiler on the wall.
- 5.7.7** Lift the boiler on the wall. Locate onto the top coach bolts. Fit the lower coach bolts and tighten all four securing bolts.
- 5.7.6** Working above the boiler pull the flue duct towards the elbow in order to engage tube into its header (Fig. 35). Position flue into straight header and push so as to locate inner and outer flue correctly. Ensuring good seal is made with o.rings.
- 5.7.10** Fit terminal cover plate if required (Fig. 37).
- 5.7.11** Extension kits are available on order for flue extension of up to 2.5 metres total length (Fig. 31-39B). For further details see sect 5.5.10.

5.7.12.1 VERTICAL FLUE OPTIONS

The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an off-set vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 135190° flue bend (Fig. 41).


IMPORTANT NOTES
For greater flue lengths
see twip flue sect. 10




5.7.12 VERTICAL FLUE INSTRUCTION ONLY

INLINE FLUE BEND - 750 MM MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 90° BEND
OBTUSE FLUE BEND - 375 MM MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 135° BEND

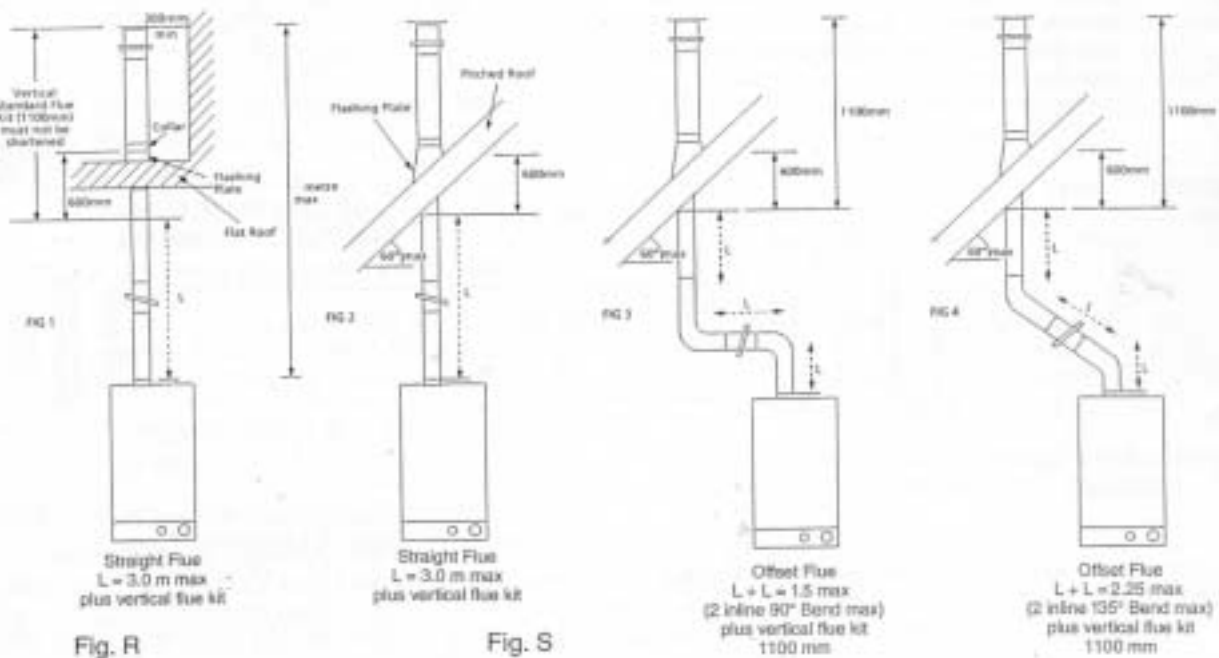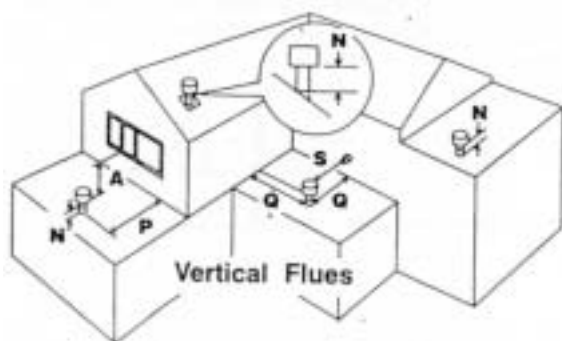Fig. 41





POSITION MIN. DISTANCE mm

N above roof level (to base of terminal)	300
P from adjacent wall to flue	300
Q from internal corner to flue	300
S from facing terminal	1,200
M horizontally from a vertical terminal to a wall	300

Before proceeding with installation check the contents of the RAVENHEAT VERTICAL FLUE KIT, comprising of the following pieces:

- 1 RAVENHEAT VERTICAL FLUE complete with terminal assembly (for vertical flue application).
- Additional 1000 mm (approx) Flue Extension pieces as necessary, each extension is provided with flue centering bracket.
- One box containing straight header.


Proceed with installation as detailed in section 5 up to 5.4.8., of the main Installation and Servicing Instruction, ignoring all references to horizontal flue installations.

Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the flue centre line is virtually below the point at which the flue will exit the roof.

- Ensure that the maximum permissible flue length is not exceeded (Fig. 42).
- Mark the four boiler fastening holes on the wall.
- Detach the template from the wall.
- Use a 10 mm dia. drill to make the 4 boiler securing holes. Insert plastic expansion plugs (Fig. 29).
- Screw in the two upper coach bolts leaving them about 10 mm out from the wall to enable the boiler to be located on the wall.
- Position the straight header on the top of the appliance (Fig. 43) item 6, and ensure that the gasket is correctly fitted.

Important: Make sure that the flue header dia 60 mm duct is inserted fully onto the fan spigot.

Model	Max no of flue extensions	Overall max flue length	Distance to centre of flue from back wall
RSF 84E (T)	4	4 metre	200 mm
RSF 100E (T)	4	4 metre	200 mm

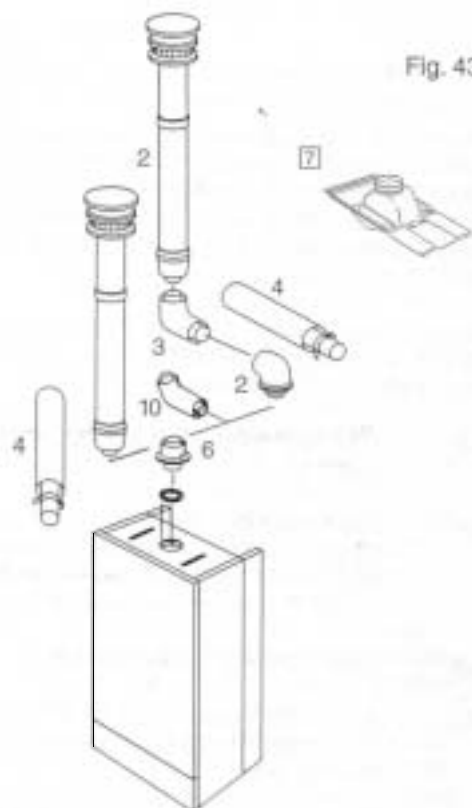

Cut a 105 mm diameter hole through the ceiling and/or roof, at the point previously marked.

Fit a roof flashing sleeve (7 Fig. 43) to the roof, available from Ravenheat Manufacturing.

Insert the Vertical Flue terminal assembly through the flashing plate from the outside.

Fix the appliance to the wall, locating onto the top coach bolts. Fit the two lower coach bolts and tighten all four securing bolts.

Measure the vertical distance between the top of the flue (Fig. 42) and the bottom of the flue terminal assembly (Fig. 41). The measurements should be taken from the outer diameter of the flue.

NOTE: Where this length does not match any standard combination of the extensions, extension can be cut to the required length (Fig. 44).

When cutting both inner and outer ducts of the extension, always cut on spigot side, and they must be de-burred.

Fig. 44



Starting at the appliance end, assemble the extension duct sections, making each inner and outer (flue) joint by inserting the spigot end into the socket end of the next tube. Make sure that the entire flue is adequately supported. Use at least one bracket for each extension used.

Ensure that all inner flue connections have a good fit/seal, and that the space clips in each extension are correctly positioned.

5.8 REASSEMBLE BOILER AS PER (sect. 5.6.1)

5.8.1 Fitting valves pack

Remove plastic caps from boiler connection and fit flanged copper tail and valves as per Fig. 46 using washers provided.

5.9 GAS CONNECTION (Fig. 46)

5.9.1 A minimum gas pressure of 20 mbar (8 in wg.) must be available at the boiler inlet at full flow rate.

5.9.2 Fit gas service cock to the boiler via the union nut and connect gas pipe. Do not overtighten and use another spanner as a counter force to avoid straining internal connections.
Important: Consult sect. 4.5.1

5.10 CENTRAL HEATING CONNECTION (Fig. 46)

5.10.1 Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.

- Connect the central heating return pipe to the isolating cock marked CHR.
- Connect the central heating flow pipe to the isolating cock marked CHF.
- Pipe dimension's and position are marked on template supplied and Fig. 49A

5.11 DOMESTIC HOT WATER (Fig. 46)

5.11.1 The domestic hot water circuit does not need a safety valve but it is essential to ensure that the pressure of the cold water supply does not exceed 10 bar. If in doubt it is advisable to install a pressure reducing valve. The minimum pressure needed to operate the domestic hot water system is 0.5 bar with a flow of approx 3 Lts. per min. The regulator screw on the cold water outlet of the diverter valve may be adjusted to prevent excess volume flow (Fig. 53 COMMISSIONING SECTION). Flush out all foreign matter from the supply pipe before connecting to the appliance.

- Connect the 15 mm. cold water pipe to the stop cock to the appliance inlet marked DCW.
- Connect the 15 mm. hot water pipe with a suitable connection.

5.12 SAFETY VALVE DISCHARGE

5.12.1 The safety valve is located near the pump. It has a threaded outlet RC 1/2" (to 15 mm copper) to permit a discharge pipe to be connected. When connecting ensure the discharge pipe does not restrict access. The discharge should terminate facing downwards exterior to the building in a position where discharging (possibly boiling water & steam) will not create danger or nuisance, but in easily visible position, and not to cause damage to electrical components or wiring.
The discharge must not be over an entrance or a window or any other type of access.

5.13 ELECTRICAL CONNECTIONS

5.13.1 The electricity supply must be as specified in clause (sect. 4.10).

- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations.

It is essential that all external controls must be **volt free**.

Factory fitted internal wiring must not be disturbed when wiring external controls.

- To gain access to the electrical box remove the front panel of the case as described in clauses (sect. 5.4.1) and the instrument panel as described in clauses (sect. 5.4.3).

- The terminals are easily visible on the front of the electronic control board (Fig. 48).

- Heat resistant flexible cable is fitted between the isolator and the terminal block. It is a 3 core cable of 0.75 mm² (24x0,2 mm) to BS 6500.

Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.


The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductor does not become taut before the earthing conductor.

Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

WARNING: If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from Ravenheat Manufacturing Ltd).

5.64 **PROGRAMMABLE TIME CLOCK**
Instructions for use Consult User's Guide

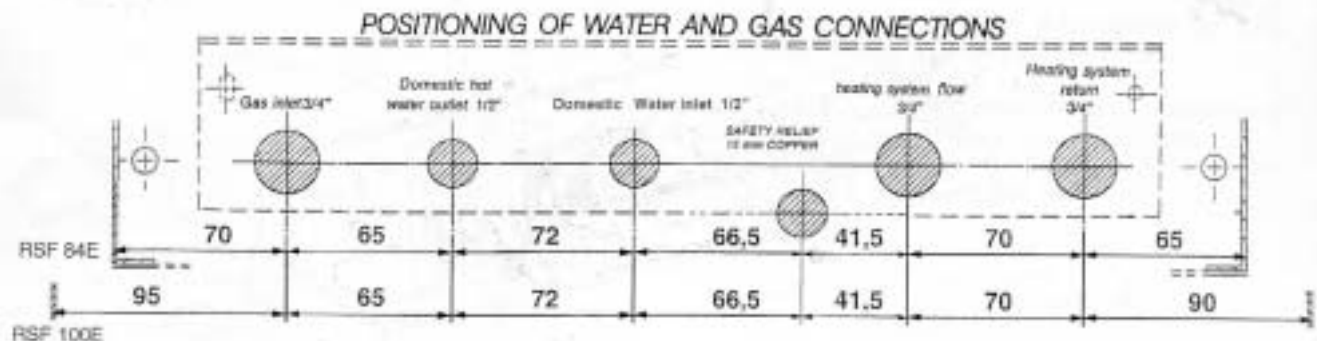Fig. 49/A



SECTION 6 COMMISSIONING

6.1 Each boiler has been through a rigorous operational procedure at our factory and should not require any further adjustment. If in the unlikely event of the appliance not operating correctly, please turn to the Fault Finding and Logic Sequence charts.

6.2 GAS SUPPLY INSTALLATION

6.2.1 Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.

6.3 ELECTRICAL INSTALLATION

Preliminary electrical system checks to ensure electrical safety shall be carried out by a competent person (earth continuity, polarity, resistance to earth). Those checks are outlined in the <<Instructions for British Gas Multimeter>> Booklet. If a fault has occurred on the appliance the fault finding procedure should be followed as specified under the servicing section of this document.

6.4 INITIAL FILLING OF THE SYSTEM

Open central heating flow and return valves.

Unscrew the cap on automatic air release valve one full turn (leave open permanently).

- Close all air release taps on the central heating system.
- Gradually open stopcock at the filling point connection to the central heating system until water is heard to flow.
- Starting with the lowest radiator open each air release tap in turn. Close it only when clear water, free of bubbles, flows out. In the same way release air from any high points in the pipework.
- Continue filling the system until at least 1.5 bar registers on gauge. Then turn off the filling points stopcock.
- Inspect the system for water soundness and remedy any leaks discovered.

6.5 SETTING THE SYSTEM DESIGN PRESSURE

The design pressure must be a min. 1 bar and max. 1.5 bar. These figures are read off the pressure gauge.

- The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to a max of 1,5 bar).
N.B.: The safety valve is set to lift a 3 bars (30 mt/42.5 psig).
- To lower the system pressure to the required value remove drain point (Fig. 93) or drain on the heating circuit.



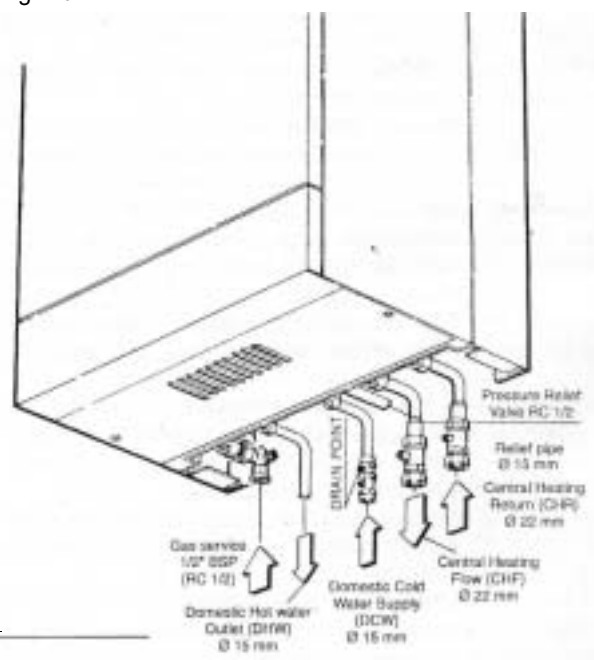
- If external controls are installed (e.g. timeclock and thermostat) make sure that they call for heat.
- Turn summer/winter selector switch 1 to winter  .

Fig. 46



6.6 FILLING THE HOT WATER SYSTEM

Close all hot water draw-off taps.
Open the cold water inlet cock.
Slowly open each draw-off tap until clear water is discharged.

6.7 LIGHTING THE BOILER (Fig. 50)

Before lighting the main burner make sure that the heating circuit flow and return valves are open and also that the cold water input cock is also open.

ELECTRICAL CONNECTION

Fig. 48



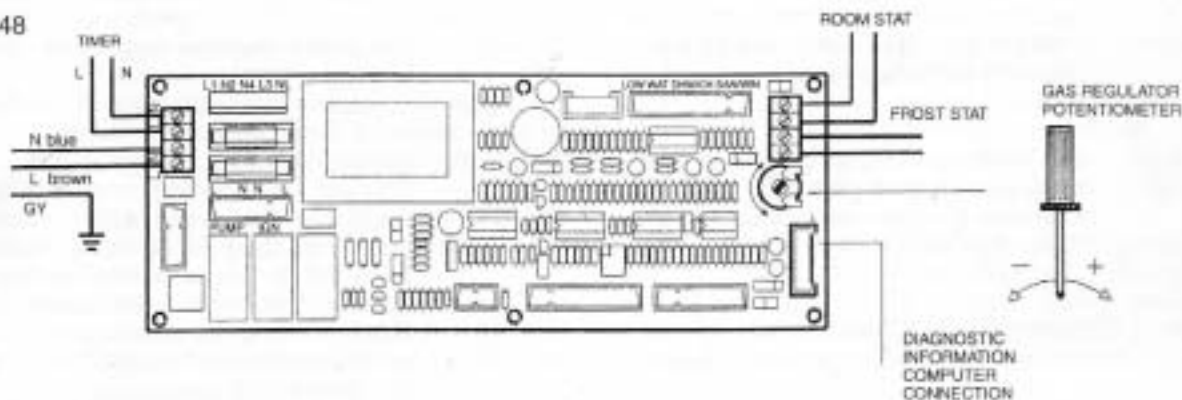


Fig. 49

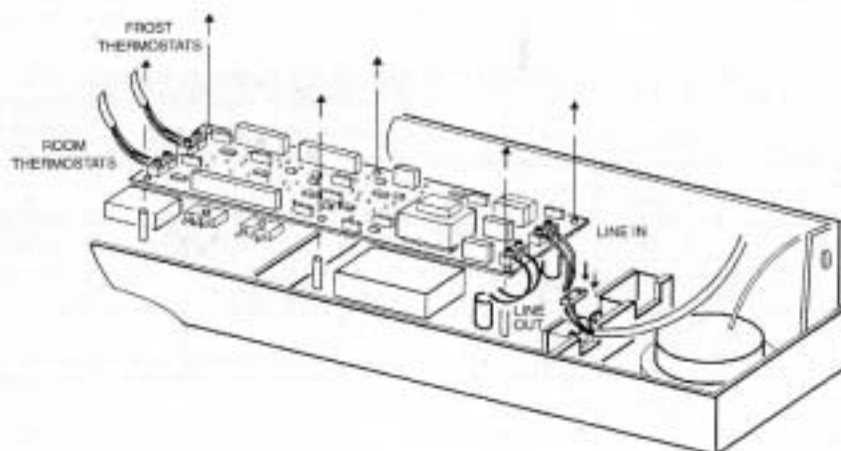


INSTRUMENT PANEL

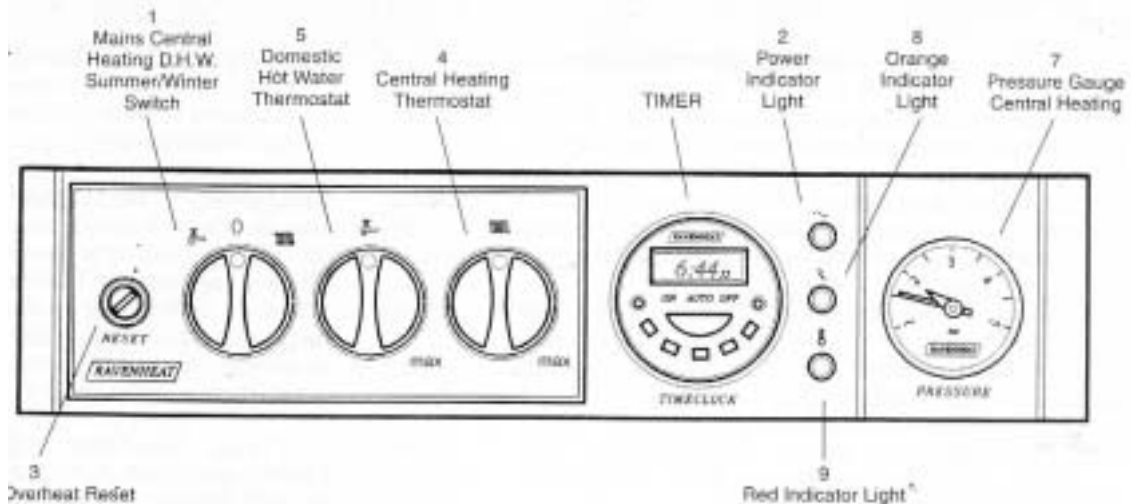Fig. 50



GAS VALVE

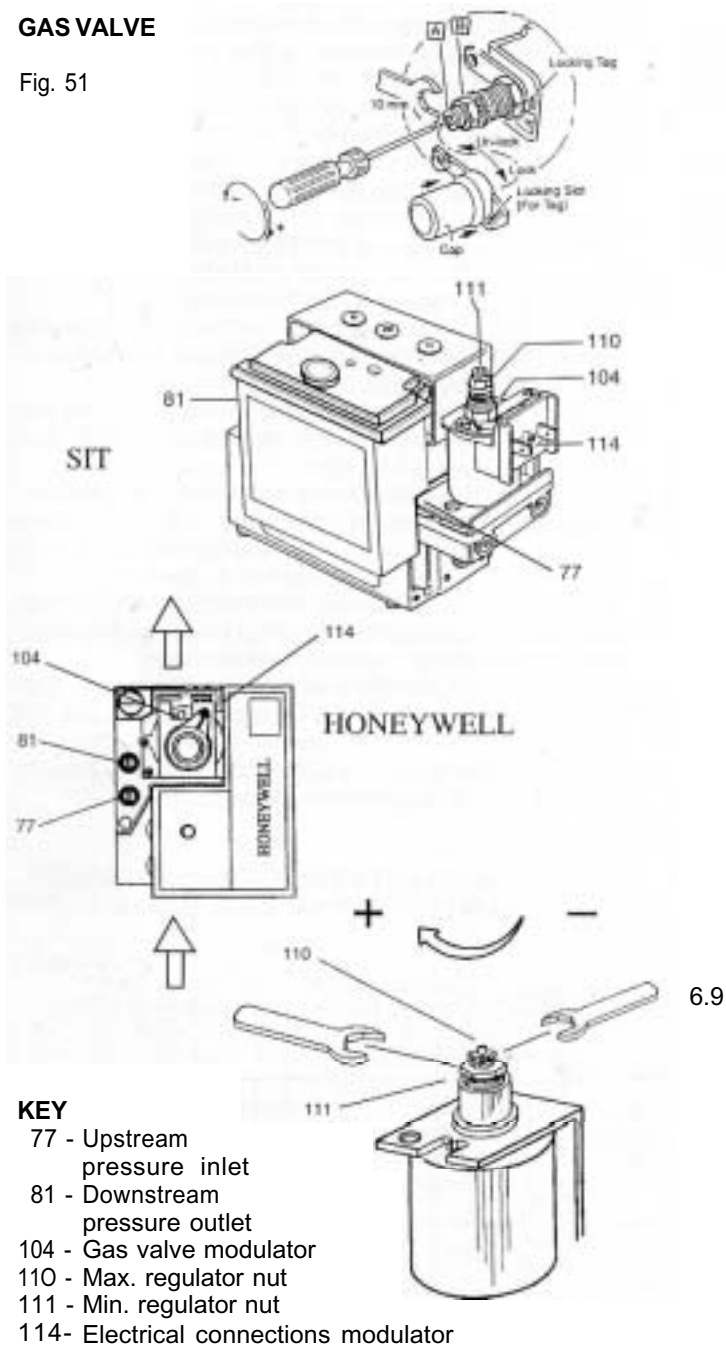Fig. 51



- Turn control thermostat 4 up to its maximum setting.

- Now the main burner should turn on.

With leak detection fluid test for gas soundness of all gas components and joints.

- Turn control thermostat 4 up to its maximum setting.

- Turn control thermostat 4 up to its maximum setting.

- Now the main burner should turn on

With leak detection fluid test for gas soundness of all gas components and joints.

- See paragraph 6.14 for regulating the heating circuit thermostat.

Check gas mains pressure (Fig. 52). Fit a gas pressure gauge on pressure inlet 77 (Fig. 51) on the gas valve, after releasing the seal screw.

Check the gas mains pressure with boiler operating.

Check with the Local Gas Supplier if the pressure differs significantly from 20 mbar.

CHECK THE GAS PRESSURE AT THE BURNER NATURAL GAS (G 20)

Now check if the maximum gas pressure at the burner is equal to 8.1 ± 0.5 mbar (3.2 f 0.2 in w.g.) for RSF 84E or 12.5 ± 0.5 mbar (4.9 f 0.2 in w.g.) for RSF 100E.

To do this proceed as follows:

- Turn off main switch 1 (Fig. 50)
- Set main switch 1 on
- Set control thermostat 5 at its maximum setting.


- Fit a pressure gauge, using a hose, to pressure test point 81, (Fig. 51), after first loosening its close-off screw.
- Open one or more hot water taps so that at least 10-12 litre of water flows per minute.
- The pressure indicated on the pressure gauge is the maximum operating gas pressure.
- Check if the minimum pressure corresponds to 1.5 mbar (0.6 in w.g.) RSF 84E, 1.4 mbar RSF IOOE as is set at the factory.
Detach one of the wires going to modulator 104 (Fig. 51) and make the boiler operate just as was done for checking the maximum pressure.

Observe the pilot flame which will light a second before main burner. It should be about 20 mm long (Fig. 528) and envelop the spark electrode tip.

6.9.1 CHECK THE GAS PRESSURE AT THE BURNER LPG (G 3-I)

Now check if the maximum gas pressure at the burner is equal to 20.5 ± 0.5 mbar (8.23 f 0.2 in w.g.) for RSF 84E or 23.5 & 0.5 mbar (9.43 f 0.2 in w.g.) for RSF IOOE.

To do this proceed as follows:

- Turn off main switch 1 (Fig. 50)
Set summer/winter switch 1 on .
Set control thermostat 5 at its maximum setting.
Fit a pressure gauge, using a hose, to pressure test point 81 (Fig. 51), after first loosening its close-off screw.
Open one or more hot water taps so that at least 10-12 litre of water flows per minute.
- The pressure indicated on the pressure gauge is the maximum operating gas pressure.
- Check if the minimum pressure corresponds to 4.4 mbar (1.77 in w.g.) RSF 84E, 3.7 mbar (1.48 in w.g.) RSF IOOE as is set at the factory.
Detach one of the wires going to modulator 104 (Fig. 51) and make the boiler operate just as was done for checking the maximum pressure.

Observe the pilot flame which will light a second before main burner. It should be about 20 mm long (Fig. 52B) and envelop the spark electrode tip.

6.10 ADJUSTING MINIMUM AND MAXIMUM PRESSURE (Fig. 51) SIT-HONEYWELL GAS VALVE

- Remove cap covering modulator to gas valve.
- Detach one of the cables connected to the modulator 114.
- With the boiler operating use a screw

driver (HONEYWELL 9 mm spanner) to turn the nut 111 clockwise to increase pressure and anti-clockwise to decrease pressure.

6.11

RECONNECT THE DETACHED CABLE


Use a screw-driver to hold nut 111 firm (HONEYWELL 9 mm spanner) and use a 10 mm spanner (HONEYWELL 7 mm spanner) wrench to rotate the nut 110 clockwise to increase the pressure and counter-clock-wise to decrease it.
After adjustment turn off D.H.W. Taps.

6.12

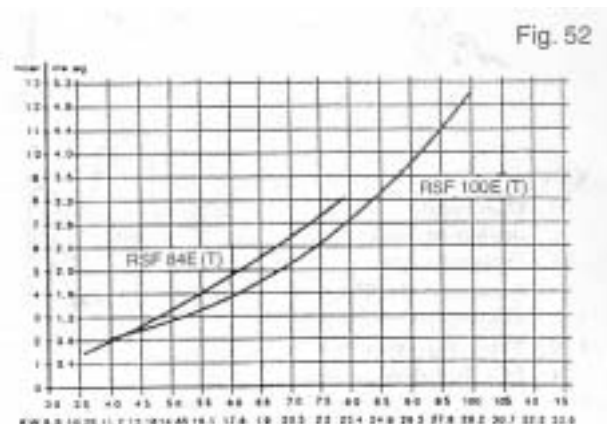
SETTING CENTRAL HEATING GAS PRESSURE THE BOILER COMES SET AT MID POSITION RATING FOR USE ON C.H. (table 1/2/3/4)

When the boiler operates in the C.H. mode the gas pressure at the burner can be set between the min. and max. values.

This permits capacity to be adjusted to suit system demand. If adjustment is required proceed as follows:

- Remove the front panel and the panel instrument as described in clauses (sect. 5.4.1 and sect 5.4.3). Unscrew the two screws holding the control box cover and lift off (Fig. 78).
- Select  (winter) switch position
- Turn control thermostat 4 to maximum setting (Fig. 50).
- Check all external controls are on and calling for heat ensure all D.H.W. taps are off.
- With boiler operating use a screwdriver to turn potentiometer (Fig. 48) clockwise to increase pressure and anti-clockwise to decrease pressure.
- To obtain the desired heat value establish pressure as per (Fig. 52 or Fig. 52A).
- Replace the protective cover.
- Once this pressure is established, mark it up on data badge with adhesive red label/arrow burner pressure setting so that this can be referred to and checked during future servicing.

RATIO BETWEEN BURNER PRESSURE AND OUTPUT NATURAL GAS (G 20)



RATIO BETWEEN BURNER, PRESSURE AND OUTPUT LPG (G 31)



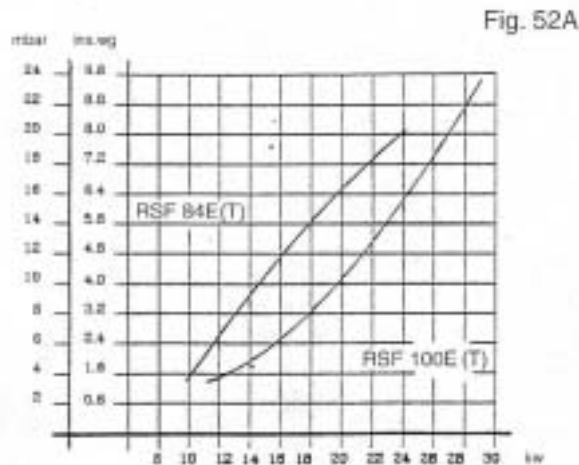


Fig. 528

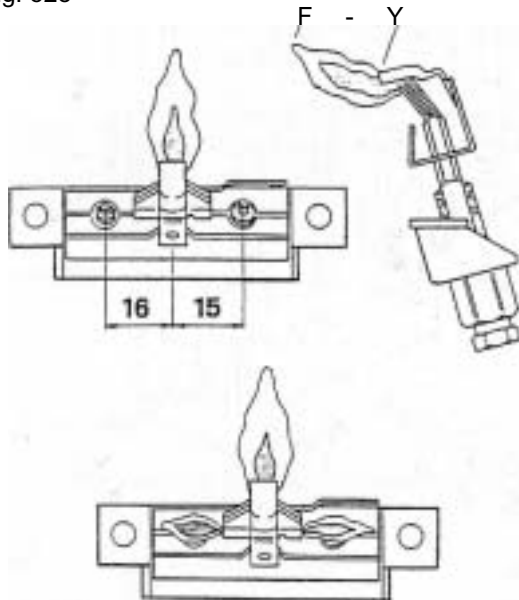

THREE WAY VALVE

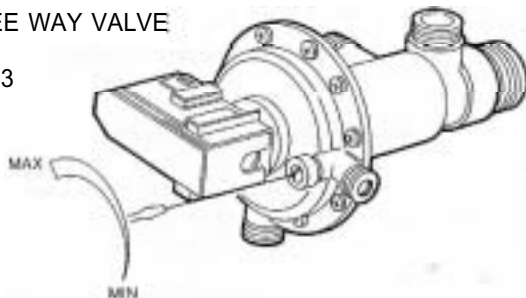Fig. 53



benchmark

The code of practice for the installation,
commissioning & servicing of central heating systems

Once the process of commissioning the boiler is complete, the commissioning engineer **MUST** complete his section in the Benchmark log book.

6.13 CHECKING THE FLUE SYSTEM

6.13.1 The flue system should be visually checked for soundness. Check all clamps and fixings are secure and tight.

6.14 CHECKING THE HEATING THERMOSTAT


6.14.1 Allow the system to warm up and then turn the C.H. thermostat to ensure the main burner modulates from "high" to "low" and "low" to "off" and vice versa (scale range covers approx. 45° C - 85° C).

6.15 TESTING AND REGULATING THE DOMESTIC HOT WATER SYSTEM FLOW

- 6.15.1 To put the appliance in operation with the (summer/winter) switch in winter position.
- Open a domestic hot water tap (preferably the bath tap). Ensure cold water inlet stopcock is open and the D.H.W. thermostat 5 (Fig. 50) is set at maximum.
 - If the burner does not light check that the water flow rate is above the min. required to operate the differential pressure 2.8 Lts./min. (0.61 gals/min).
 - The temperature of the water will depend on the rate at which it flows. If, due to high water pressure, the flow rate is too high (and thus the temperature too low for practical use) the flow rate may be adjusted. It is better to set for the lowest acceptable temperature preferably at the bath tap since the user can gain higher temperatures at other restricted flow taps (Table 1/2).
 - To adjust the flow rate refer to (Fig. 53) rear view and locate the adjustment screw (Fig. 2). Turn the screw clockwise until the required temperature is reached.
N.B.: If the cold supply is subject to large fluctuations or is above the permitted max. water pressure, a suitable pressure/flow regulator should be fitted in the cold water supply to the appliance.
 - Turn the appliance mode selector switch 1 (Fig. 50) to the summer position.
Slowly close the draw off tap to reduce the flow rate to above the min. (approx. 2.8 litre/min - 0.61 gals/min). Rotate the D.H.W. control thermostat to ensure it operates at its various setting.
 - Close the draw-off tap still further. The burner should stop when the rate falls below about 2.8 litres/min (0.61 gals/min.).

EXPLODED DIAGRAM OF BOILER BODY

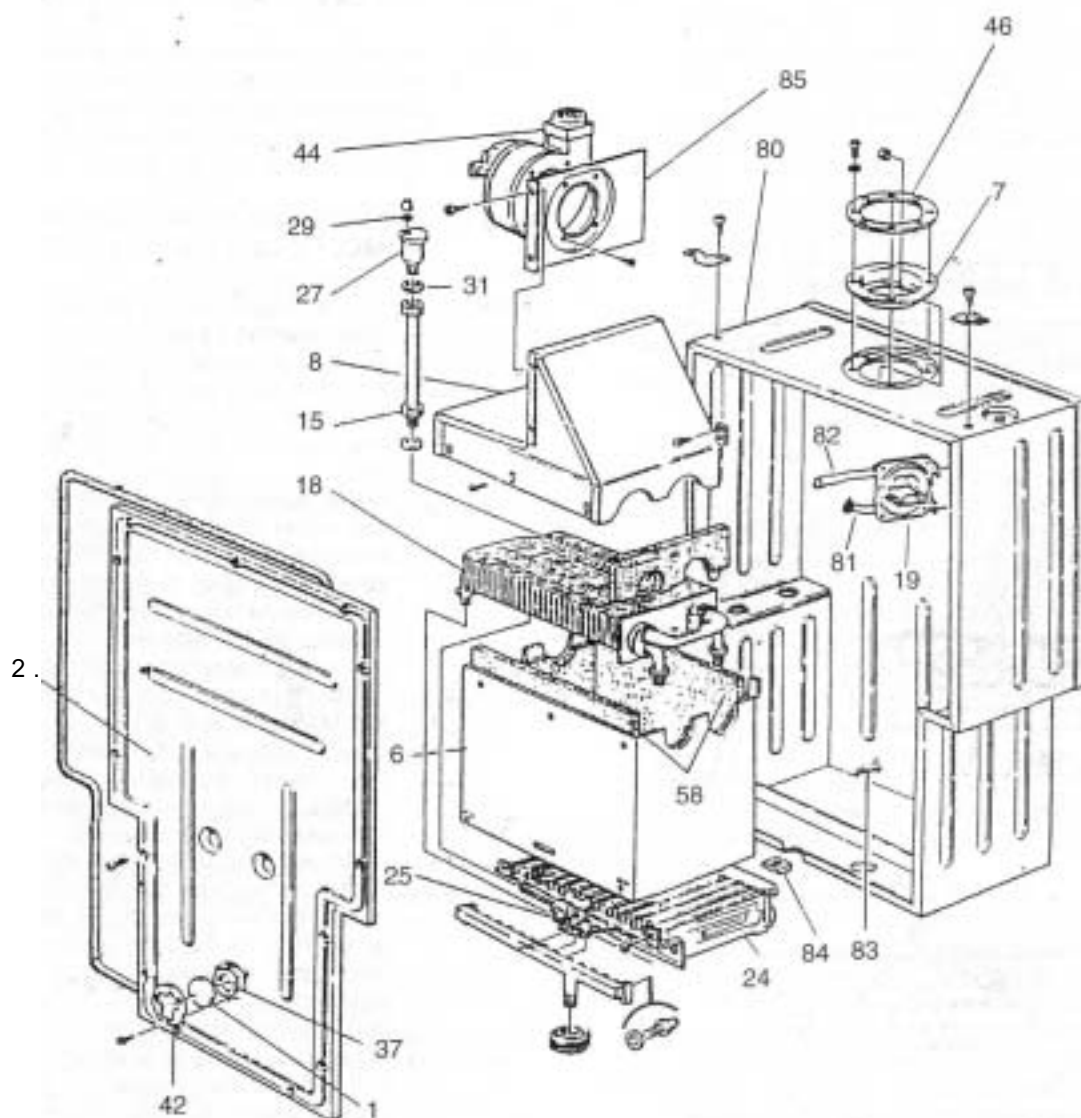

Fig. 54



KEY

- | | | |
|---------------------------|--------------------------|----------------------------|
| 1 - Window | 24 - Main burner | 46 - Header gasket |
| 2 - Plenum chamber cover | 25 - Pilot burner | 58 - Ceramic insulation |
| 6 - Combustion chamber | 27 - Auto air vent valve | 80 - Plenum chamber |
| 7 - Air restriction ring | 29 - Seal | 81 - Connection tube - |
| 8 - Flue gas exhaust hood | 31 - Seal | 82 - Connection tube + |
| 15 - Connection pipe | 37 - Window seal | 83 - Burner centering pin |
| 18 - Heat exchanger | 42 - Window clamp ring | 84 - Seal |
| 19 - Air pressure switch | 44 - Fan | 85 - Fan fastening bracket |

6.16 HANDING OVER TO THE USER

- 6.16.1 After completion of installation and commissioning of the system, the installer should hand over to the Householder by taking the following actions:
- Hand the "User's Instructions" to the Householder. and explain His/Her responsibilities under the "Gas Safety Regulations 1996".
 - Explain and demonstrate the lighting and shutting down procedures.
 - The operation of the boiler including the use and adjustment of ALL system controls which should be fully explained to the Householder. This then ensures the greatest possible fuel economy consistent with household requirements of both heating and hot water consumptions. Advise the User of the precautions necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.
 - Explain the function and the use of the boiler  only/  (Summer/Winter) and ON/OFF switch.
 - Explain and demonstrate the function of time and temperature controls neon lights radiator valves etc. for the economic use of the system.
 - If an optional time clock is fitted, then draw attention to the time clock User's Instructions and hand them to the Householder.
 - Stress importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out AT LEAST ONCE A YEAR.

Fill in the Benchmark log book and leave completed with the customer.

SECTION 7 SERVICING INSTRUCTIONS



The code of practice for the installation, commissioning & servicing of central heating systems

Ravenheat are a member of the Benchmark initiative and fully supports the aims of the programme. Benchmark has been instructed to improve the standards of installation and commissioning of central heating systems in the UK and to encourage the regular servicing of all central heating systems to ensure safety and efficiency.

7.1 SERVICING

- 7.1.1 To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals. The frequency of cleaning will depend upon the particular installation conditions and usage but in general, once year should be adequate.

WARNING

Before the start of any servicing or replacement of components always isolate electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.

Data badge position - lower left hand sub frame.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the outer case (sect. 5.4). Operate the appliance by turning the hot water services on to a high water flow, and observe the main burner.
- Check that the flame covers all the flame ports and is of a light blue colour. Yellow flames and excessive lifting of flames indicate poor combustion.
- **IMPORTANT:** After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried along with functional checks in operation.

7.2 TO INSPECT AND CLEAN THE APPLIANCE

- 7.2.1 Before carrying out cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris.
- 7.2.2 Inspect the heat exchanger for any blockage. Deposits of any material should be brushed always using a soft brush.
NOTE: Do not use brushes with metallic bristles.
- 7.2.3 Examine internal pipe-work connections and automatic air vent for any water leaks. Rectify if necessary.
- 7.2.4 Examine the combustion chamber insulating material and renew if damaged (sect. 7.9).
- 7.2.5 Remove and examine the main burner injector and pilot injector clean or renew, as necessary (sec. 7.12 & 7.14).
- 7.2.6 Inspect the main burner and remove any deposit with a soft brush. Check the electrodes for damage or deterioration, clean or renew as necessary. Ensure that the spark gaps are correct to dimensions specified in Fig. 52B.

- 7.2.7 Examine the fan for any mechanical damage, check to ensure free running of the fan wheel. Clean the wheel if necessary with a soft brush. Check sealing gasket and renew if damaged (sect. 7.6).
- 7.2.0 Examine flue duct and flue hood and ensure that there is no obstruction. Examine the gasket at the entry into the flue duct.
- 7.2.9 It is essential that a good seal is made at the outlet to the fan, renew this gasket if there is any sign of damage or deterioration.
- 7.3 TO REMOVE/REPLACE THE FRONT PANEL OF THE CASING (Fig. 19 & 20)**
- 7.3.1 Remove the 2 screws that secure the upper part of the front panel of the casing. Lift the front panel few millimeters to the top, until it is free from the slot and remove panel.
- 7.4 TO REMOVE/REPLACE THE COMBUSTION CHAMBER COVER**
- 7.4.1 Remove the front casing panel (sect. 7.3).
- 7.4.2 Unscrew all the screws that fasten the cover to the chamber body and put them into a container so that they don't get lost.
- 7.4.3 Detach the cover, being careful not to damage the seal.
- 7.4.4 Reassemble in reverse order. Ensure good seal of cover when replacing.
- 7.6 TO REMOVE/REPLACE THE FAN ASSEMBLY (Fig. 58)**
- 7.6.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).
- 7.6.2 Disconnect the electrical connections from the fan motor.
- 7.6.4 Support the fan and remove the two fixing screws and bracket from the front of the flue hood. Push down and carefully withdraw it from the appliance. Place in a safe place until required. Reassemble in reverse order. Ensure wires are connected correctly (Fig. 94).
- 7.7 TO REMOVE/REPLACE THE FLUE HOOD (Fig. 60)**
- 7.7.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).
- 7.7.2 Remove the fan (sect. 7.6)
- 7.7.3 Remove the three screws on the front that fasten hood to the combustion chamber.
- 7.7.4 Remove the two screws at the rear of hood.
- 7.7.5 Pull the flue hood upwards and then remove by tilting forward (Fig. 61).
- 7.7.6 Replace in reverse order.
- 7.8 TO REMOVE THE HEAT EXCHANGER (Fig. 62-63-64)**
- 7.8.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4). Unscrew the two screws that fasten the two sides panel (sect. 5.4.5). Remove the lower grating (sect. 5.4.2). Lower the instrument panel (sect. 5.4.3 & 4).
- 7.6.2 Remove the two sides of the casing by slightly lifting them and sliding them towards the top of the appliance, to release them from their upper suspension hooks.
- 7.8.3 Close the on/off valves for the heating and the hot water circuits. Drain the heating system from the drain point mounted on the system (Fig. 93) and drain the hot water from the lowest tap on its pipeline system and drain point on D.H.W. inlet cock (Fig. 46).
- 7.8.4 Remove the fan (sect. 7.6).
- 7.8.5 Remove the flue hood (sect. 7.7)
- 7.8.8 Remove the automatic air vent (Fig. 92)
- 7.8.9 Disconnect unions for the hot water and heating water pipelines (Fig. 62).
- 7.8.10 Unscrew the rings that fasten the heat exchanger to the combustion chamber (Fig. 62).
- 7.8.11 Remove the two side insulation panels at top of heat exchanger (Fig. 63).
- 7.8.12 Pull the heat exchanger up until its connections come out from the combustion chamber and then remove it (Fig. 64).
- 7.8.13 Replace in reverse order. Ensure correct wire position (Fig. 94).
- IMPORTANT:** When replacing a heat exchanger new seals must be used.
- 7.9 TO REMOVE/REPLACE COMBUSTION CHAMBER INSULATION PANELS (Fig. 64).**
- 7.9.1 Remove casing front panel (sect. 7.3). Remove combustion chamber front cover (sect. 7.4).

Remove fan assembly and flue hood (sect. 7.6 & 7.7).
 Remove main burner (sect. 7.15).
 Remove top insulation pieces at sides.
 Remove 2 screws securing combustion chamber.
 To rear of boiler and lower chamber carefully remove all insulation panels.

7.9.2 Replace in reverse order.

Fig. 58


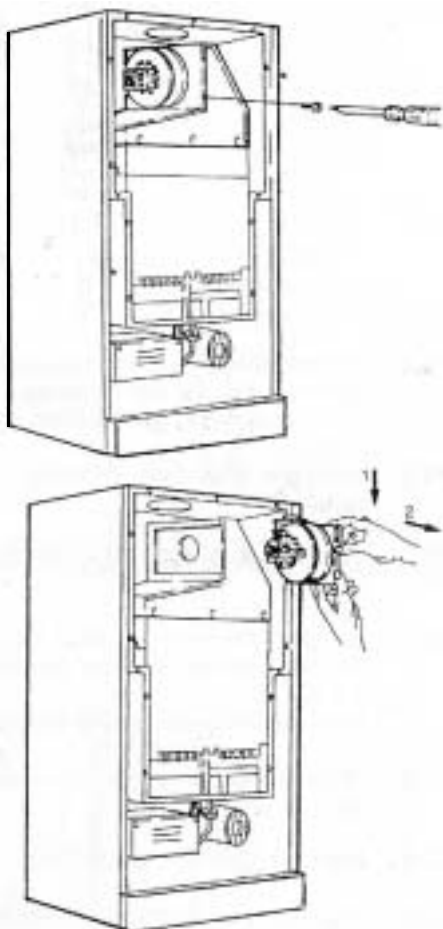


Fig. 60

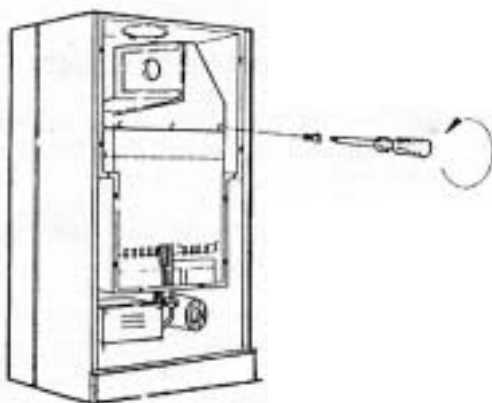

7.10 TO REPLACETHE ELECTRODE
 (Fig. 66)

7.10.1 Remove front casing (sect. 7.3).
 Remove combustion chamber front cover
 (sect. 7.4)

Fig. 61

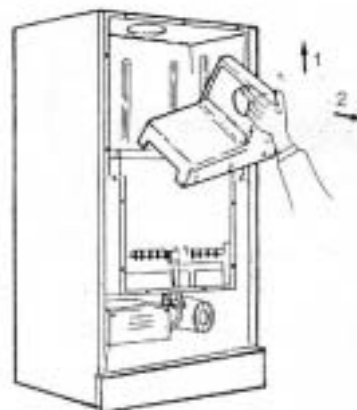


Fig. 62

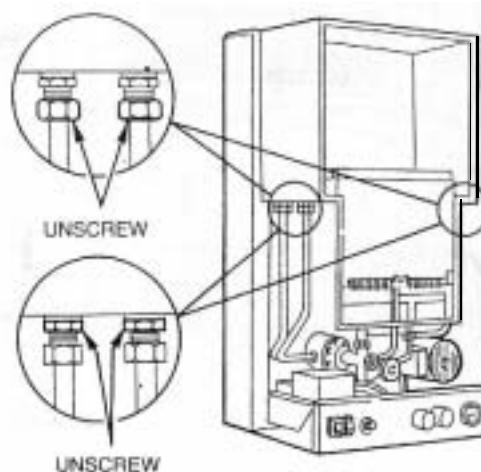


Fig. 63

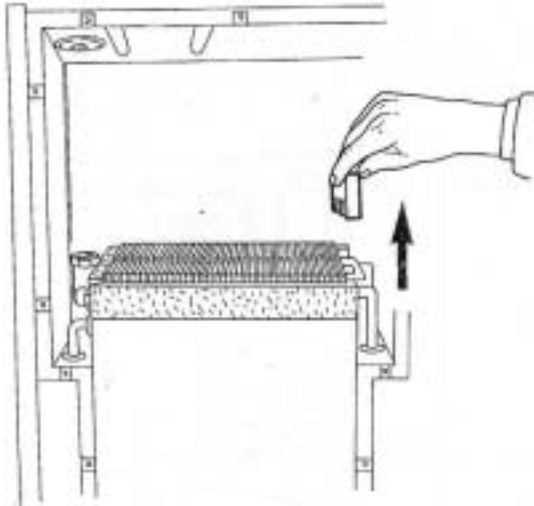


Fig. 64


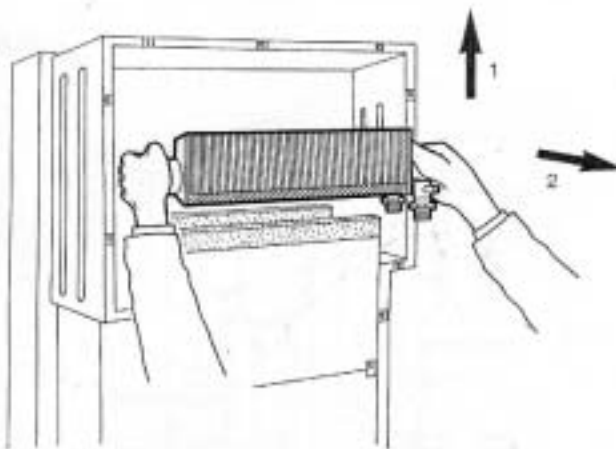


Fig. 66

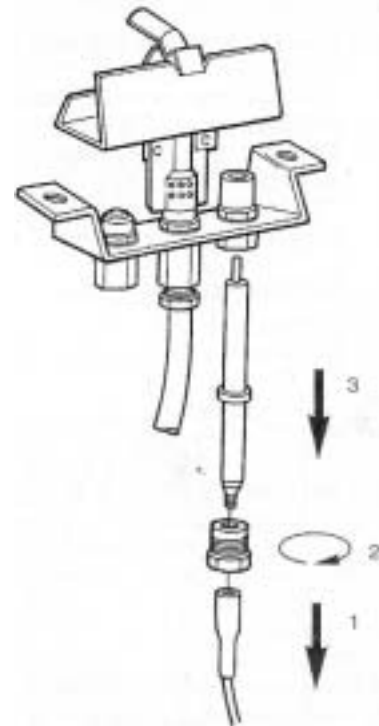

7.10.2 Detach the wire from electrode and then unscrew the nut that secures it to the pilot burner assembly and remove.

7.10.3 Replace with new electrode in reverse order.

7.12 TO REPLACETHE PILOT INJECTOR (Fig. 68)

7.12.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).
Remove the lower grating (sect. 5.4.2).

7.12.2 Release the fitting that secures pilot pipe at the gas valve.

7.12.3 Remove electrode (sect. 7.10)

7.12.4 Unscrew pilot connection from pilot burner.

7.12.5 Pull the aluminium tube downwards and the injector should come out by itself.

7.12.6 Replace in reverse order.

7.13 TO REPLACETHE PILOT BURNER

7.13.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).

7.13.2 Remove the electrode and pilot injector (sect. 7.10 and sect. 7.12).

7.13.4 Remove the two screws securing pilot burner to main burner (Fig. 69).

7.13.5 Replace in reverse order.

7.14 TO REMOVE/REPLACE THE MAIN INJECTORS

- 7.14.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 4). Remove the pilot burner assembly as described in sect. 7.13.
- 7.14.2 Unscrew the union (Fig. 70).
- 7.14.3 Unscrew the 4 screws securing the injector manifold to the burner (Fig. 71).
- 7.14.4 Pull the manifold up and out from the combustion chamber (Fig. 72).
- 7.14.5 Unscrew and replace the injectors and their seals (Fig. 73).
- 7.14.6 Relocate the grommet, sealing the gas supply pipe to the casing taking care not to damage it. Replace if necessary.
- 7.14.7 Replace in reverse order.

Fig. 69

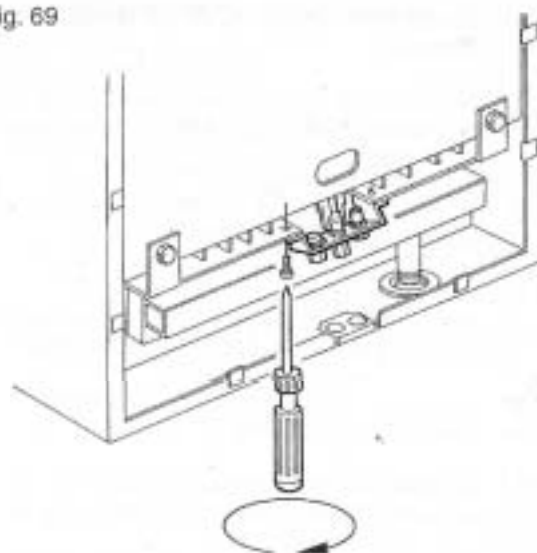


Fig. 70

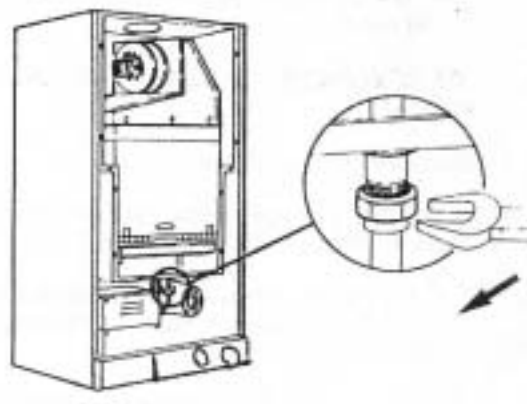


Fig. 71


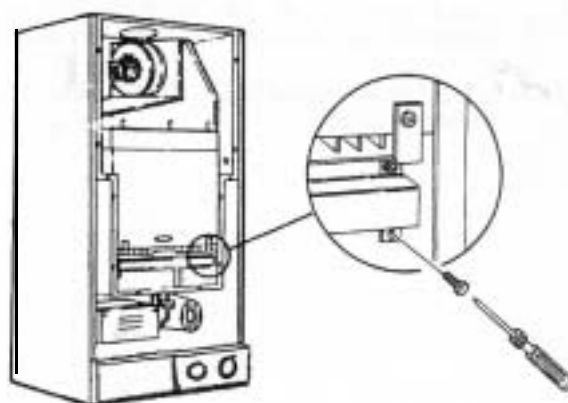


Fig. 68

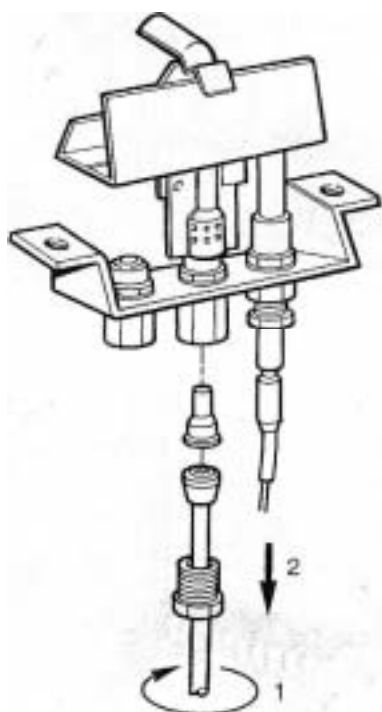

7.15 TO REMOVE/REPLACE THE MAIN BURNER

7.15.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).

7.15.2 Remove the pilot burner assembly as described in sect. 7.13.

7.15.3 RSF 100 ONLY
Remove the two screws holding the lower plate to the burner and remove the plate.

7.15.4 Remove the injectors manifold as described in sect. 7.14.

7.15.5 Remove the two screws securing the main burner to the combustion chamber (Fig. 74).

7.15.6 Pull the burner forward and remove (Fig. 75).

7.15.7 Replace in reverse order.

IMPORTANT: When refitting the burner make sure that the pins at the rear of the combustion chamber locate into the slots made on the rear of the burner.

7.16 TO REMOVE/REPLACE THE GAS VALVE (Fig. 51)

7.16.1 Remove front casing panel (sect. 7.3).

7.16.2 Push the 2 plastic clips that fasten the instrument panel (Fig. 23).

7.16.3 Lift the instrument panel to detach it from the sides, and lower it down by rotating it on its own hinges (Fig. 25).

7.16.4 Pull the 2 wires from the Modulator. Remove the electronic ignition board (7.32.2/3).

7.16.5 Remove the lower grating (sect. 5.4.2).

7.16.6 Unscrew the pilot burner tube connection.

7.16.7 Remove the eight screws (four per side) that connect the gas valve to the gas pipelines and then remove it from its seat.

7.16.8 Replace in reverse order, always using new seals.

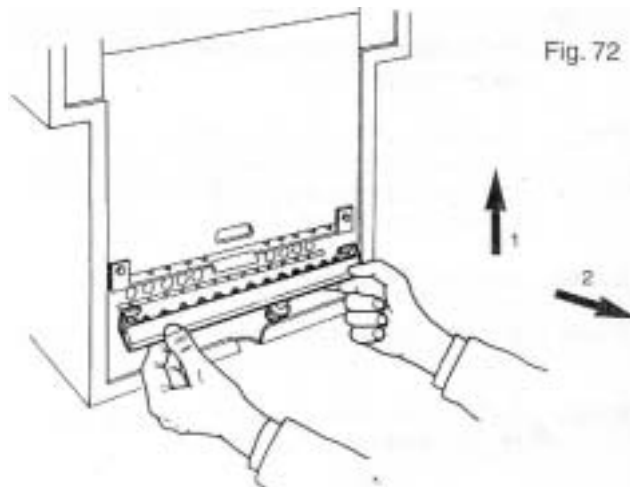


Fig. 72

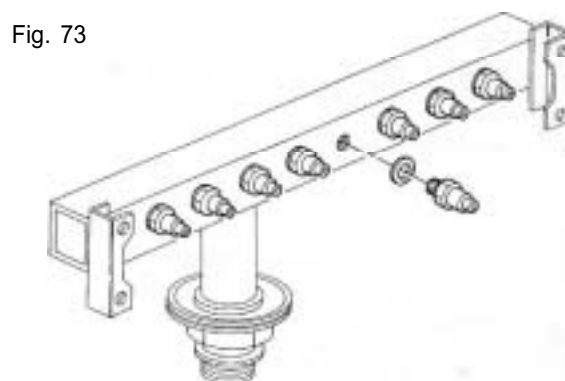


Fig. 73

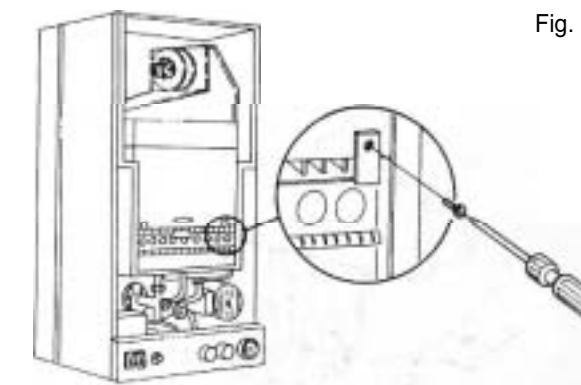


Fig. 74

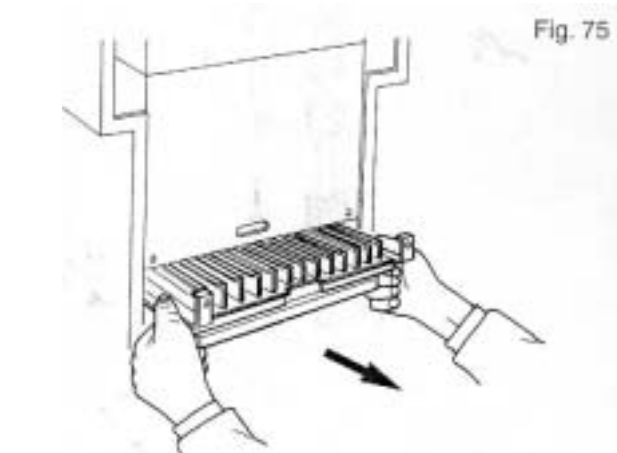


Fig. 75

7.19 **TO REMOVE/REPLACE THE HEATING CONTROL AND DOMESTIC HOT WATER CONTROL**

7.19.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (7.31.2/3).

7.19.2 Pull off the thermostat knob (Fig. 78). Remove the lock nut and remove the control board (PCB)

7.19.3 Detach the wires by unclipping the connector from the control board (Fig. 79).

7.19.4 Unscrew the lock nut which fastens the potentiometer to the instrument panel (Fig. 78).

7.19.5 Replace in reverse order.

7.20 **TO REMOVE/REPLACE THE MAIN SWITCH (Fig. 82).**

7.20.1 Remove the front panel from the outer casing (sect. 7.3), lower the instrument panel (sect. 7.16.2 & 3), remove the control box cover (7.31.2/3) and remove the control knob.

7.20.2 Detach the wires that connect to the switch - make sure that these wires are later reconnected to the same poles (Fig. 94).

7.20.3 Pull the switch out from the instrument panel by pressing the clamp springs.

7.20.4 Replace in reverse order.

7.21 **TO REMOVE/REPLACE THE WATER PRESSURE GAUGE (Fig. 83).**

7.21.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3). Remove the lower grating (sect. 54.2).

7.21.2 Close the heating system on/off valves and drain the water from the drain point on the heating system (Fig. 93).

7.21.3 Unscrew the fitting that secures the pressure gauge probe.

7.21.4 Remove the gauge from the instrument panel by pressing its fastening springs.

7.21.5 Replace in reverse order.

7.22 **TO REMOVE/REPLACE THE OVERHEAT THERMOSTAT**

7.22.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (sect. 7.31.2/3).

7.22.2 Remove lower grill and right side of the casing (sect. 5.4.2 & 5).

7.22.3 Remove the three wires that connect to the overheat thermostat making sure that these wires will subsequently be reconnected to the same poles (Fig. 94).

7.22.4 Unscrew the plastic cover and locknut that fastens the overheat thermostat and remove it.

7.22.5 Remove the split pin and pull the thermostat sensor from its pocket complete with case sealing grommet.

7.22.6 Remove case sealing grommet from the old thermostat and fit to new one.

7.22.7 Replace in reverse order.

7.23, **TO REMOVE/REPLACE THE ELECTRIC CONTROL BOARD (PCB)**

7.23.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 1.16.2 & 3).

7.23.2 Unscrew the 2 screws holding the control box cover and remove. Disconnect mains cables and any other connections (room thermostat and frost thermostat if fitted).

7.23.3 Detach the connectors from the board.

7.23.4 Detach the PCB board from its base by unscrewing the six screws.

7.23.5 Replace in reverse order (ensure all electrical connections are made correctly).

7.23.6 Having replaced PCB recommission boiler on heating mode (sect. 6.15).

7.24 **TO REMOVE/REPLACE THE DIFFERENTIAL PRESSURE SWITCH (Fig. 87).**

7.24.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).

7.24.2 Detach the wires that connect to the pressure switch, make sure that these wires are later reconnected to the same poles (Fig. 94).

7.24.3 Unscrew the two screws that fasten the pressure switch to the back of combustion chamber.

7.24.4 Remove the two silicone tubes.

7.24.5 Ensure tubes are connected correctly (Fig. 87) avoiding kinks,

Replace in reverse order ensuring that the - tapping is connected to the tube terminating inside the case and the + tapping is connected to the tube terminating at flue ring (Fig. 87 and 94).

7.26 TO REMOVE/REPLACE THE PUMP (Fig. 88)

7.25.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3).

7.25.2 Remove lower grill of the casing (sect. 5.4.2 & 5), lower the electric box (sect. 7.16.2 & 3).

7.25.4 Remove the terminal covers and detach the supply wires (Fig. 88).

7.25.5 Unscrew the two hexagonal nuts that fasten the pump to its pipes and remove the pump.

NOTE: It may be necessary to loosen the flow pipe at the heat exchanger to replace the pump gaskets.

7.25.6 Always use new seals when re-fitting new pump.

7.25.7 Replace in reverse order.

Fig. 76

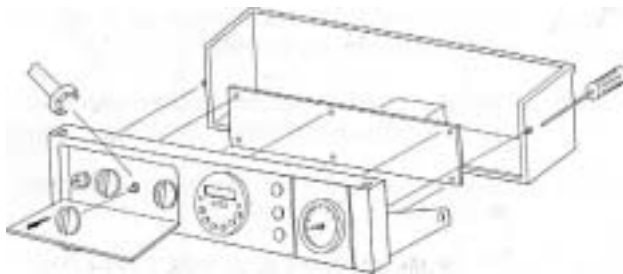


Fig. 79


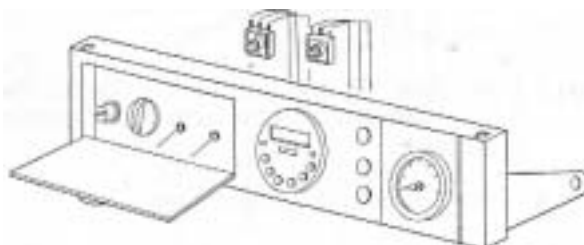


Fig. 81

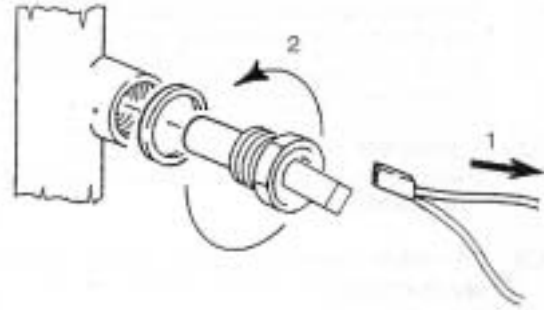

IMPORTANT:

7.25.6 Make sure that the arrow that indicates the direction of flow aims from the bottom upwards.

7.25.9 Replace wires and cover ensuring that connection wire br=L and bl=N.

7.25.10 Refill as described in the sect. 6.4 & 5 and check for leaks (see 7.26.2).

7.26 TO REMOVE/REPLACE THE DIVERTER VALVE (Fig. 89)

7.26.1 Remove the front panel from the outer casing and lower the instrument panel (sect. 7.16.2 & 3). Remove lower grating (sect. 5.4.2).

7.26.2 Close the on/off valves for the heating circuit and the hot water circuit. Drain the boiler at drain point (Fig. 93) and drain hot water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).

7.26.4 Unscrew the five nuts that connect the diverter valve and pull it out from boiler being careful not to damage the wires,

7.26.5 Pull off circlip securing microswitches to diverter valve.

7.26.6 If replacing microswitch assembly use a screw-driver to prise off the protective cover of the microswitches.

7.26.7 Detach the wires that are connected to this. Remember that they must subsequently be reconnected to the same terminals (Fig. 94).

7.26.8 Replace in reverse order. Always use new seals.

7.26.9 Fill the boiler as described in (sect. 6.4 & 5) and check for leaks.

7.27 TO REMOVE/REPLACE THE CENTRAL HEATING AND/OR HOT WATER CONTROL THERMISTOR

- 7.27.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.162).
- 7.27.2 Remove left/right side of casing (sect. 5.4).
- 7.27.3 Remove the wires that connect the thermistor (Fig. 61).
- 7.27.4 Close the on/off valves for the heating circuit and the hot water circuit. Drain the boiler at drain point (Fig. 93) and drain hot water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).
- 7.27.5 Undo the nut and withdraw the sensor (Fig. 81) from its pocket.
- 7.27.6 Replace in reverse order

Fig. 82


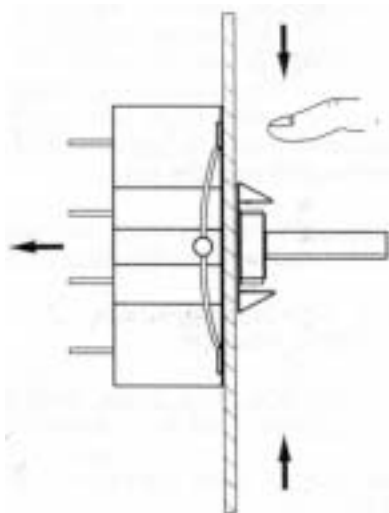


Fig. 83

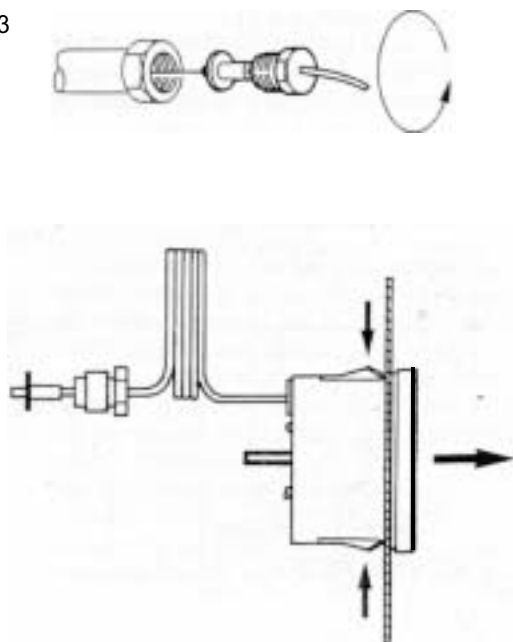

7.28 TO REMOVE/REPLACE THE CENTRAL HEATING EXPANSION VESSEL

In the unlikely event of failure of the central heating expansion vessel it is recommended a suitable expansion vessel be fitted external to the boiler. It should be positioned on the return pipe and as close to the boiler as possible (Fig. 7). However, if it is necessary to replace the central heating expansion vessel the boiler must be removed from the wall as follows.

- 7.291 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3) and remove the control box cover (sect. 7.31.2/3). Remove the lower grating (sect. 5.4.2). Remove the two sides of the casing (sect. 5.4.5).
- 7.292 Close the on/off valve on the domestic cold water, central heating and gas supply.
- 7.293 Drain domestic water from the lowest hot water tap and drain point on DHW inlet cock (Fig. 46).
- 7.294 Drain the boiler (Fig. 93).
- 7.28.5 Disconnect all pipework connected to boiler.
- 7.28.7 Disconnect mains cables and any other connections (room thermostat, programming clock).
- 7.28.8 Remove the duct proceeding in reverse order as described in (sect. 5.5 or 5.7).
- 7.28.9 Remove the 2 lower coach bolts and release 2 top coach bolts then remove boiler from the wall.
- 7.28.10 Unscrew the nut that connects the expansion vessel and remove it (Fig. 91).
- 7.28.12 Remove the expansion vessel.
- 7.28.13 Replace all the components in reverse order using new seals.
- 7.28.14 Fill the system as described in the sect. 6 and check for leaks.

7.29 TO REMOVE/REPLACE THE AIR AUTOMATIC VENT (Fig. 92)

- 7.29.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).
- 7.29.2 Remove the lower grating (sect. 5.4.2).
- 7.29.3 Remove the fan assembly and the flue hood (sect. 7.6 & 7.7).

7.29.4 Close the on/off valves for the central heating circuit and drain the water from the boiler drain point (Fig. 93).

7.29.5 Unscrew and remove the plastic cap that protects the valve vent hole (Fig. 92).

7.29.6 Disconnect the unions 1 and 2 (Fig. 92) slightly turn and remove pipe and auto air vent.

7.29.7 Replace in reverse order, using new seals.

7.29.8 Fill the system as described in the sect. 6.4 & 5 and check for leaks.

7.30 TO REMOVE/REPLACE THE PRESSURE RELIEF VALVE (Fig. 93)

7.30.1 Remove the front panel (sect. 7.3) and the lower grating (sect. 5.4.2) from the outer casing, lower the instrument panel (sect. 7.16.2 & 3). Remove right side of the casing (sect. 5.4.5).

7.30.2 Close the on/off valves for the heating system and drain the water from the drain point (Fig. 93).

7.30.3 Unscrew the valve from its body, clean or replace. Replace in reverse order.

7.30.4 Fill the system as described in (sect. 6.4 & 6.5) and check for leaks.

7.31 TO REMOVE/REPLACE TIME CLOCK (Fig. 88/A)

7.31.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 and 3).

7.31.2 Remove control box cover (sect. 7.23.2).

7.31.3 Remove control board (sect. 7.23.2) from panel.

7.31.4 Remove two clips securing the timer.

7.31.5 Carefully remove the four wires connecting timer by pulling spade connectors from timer.

7.31.6 Replace in reverse order (ensure all electrical connections are made correctly) (Fig. WA).

7.32 TO REMOVE/REPLACE THE IGNITION BOARD

7.32.1 Remove front casing (sect. 7.3) lower the instrument panel (sect. 7.16.2 & 3).

7.32.2 Remove the screw from the ignition box cover.

7.32.3 Detach the ignition box from its base on the gas valve.


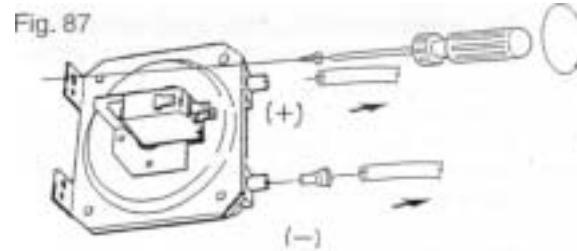


Fig. 88

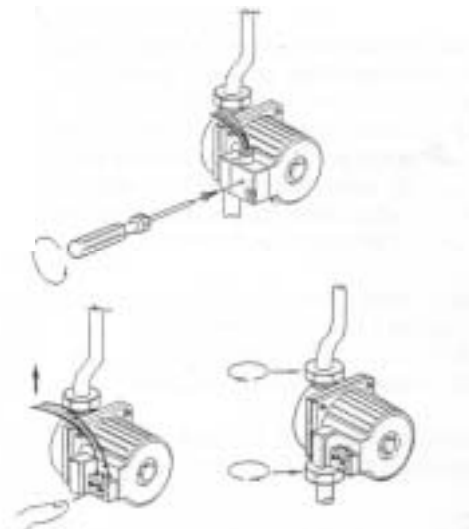

7.32.4 Remove the PCB cover and detach the connectors from the board.

7.32.5 Replace in reverse order ensure all electrical connections are made correctly.

7.33 TO REMOVE/REPLACE LOW WATER CUT-OFF SWITCH

7.33.1 Remove the front panel from the outer casing (sect. 7.3 & 4).

7.33.2 Remove the lower grating (sect. 5.4.2).

7.33.3 Close the on/off valves for the heating system and drain the water from the drain point (sect. 5.4.5).

7.33.4 Pull wire off and unscrew the sensor from its body. Replace in reverse order.

7.33.5 Fill the system as described in the (sect. 6.4 & 6.5) and check for leaks.

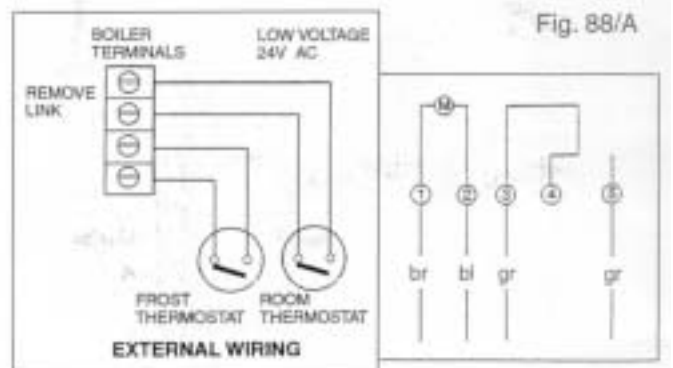


Fig. 89

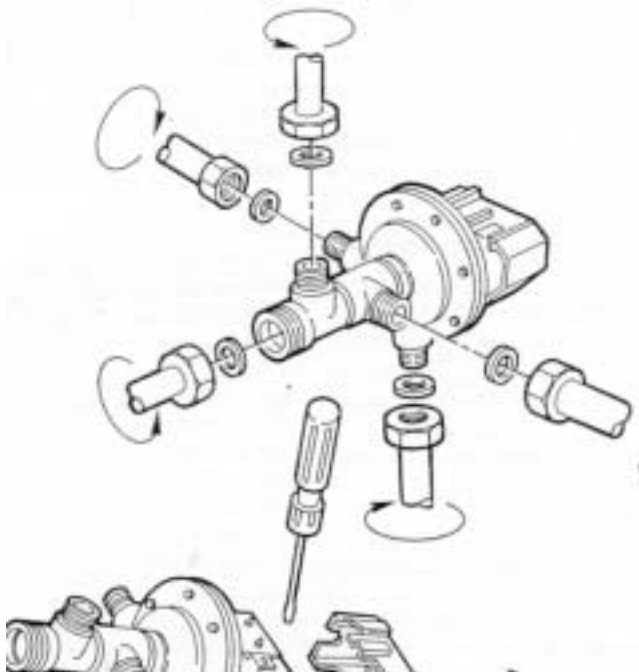


Fig.



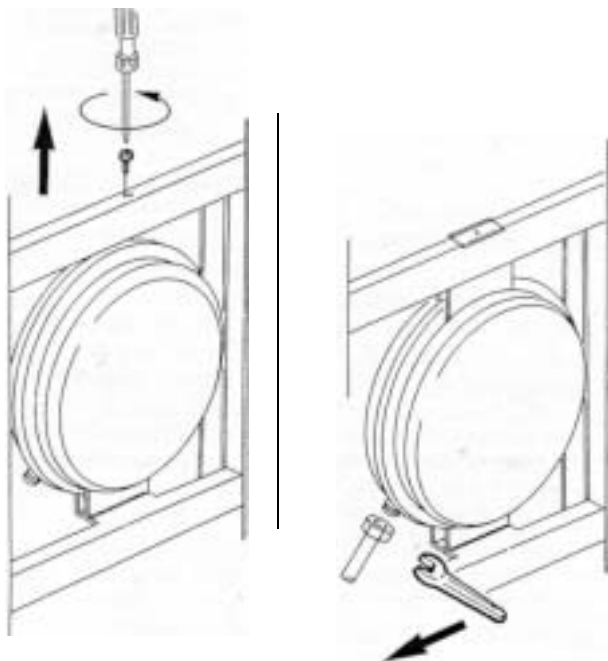
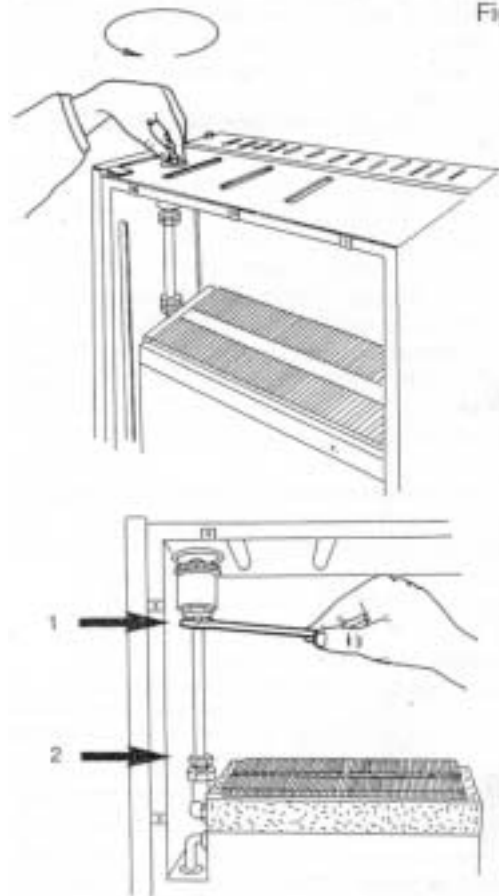


Fig. 93

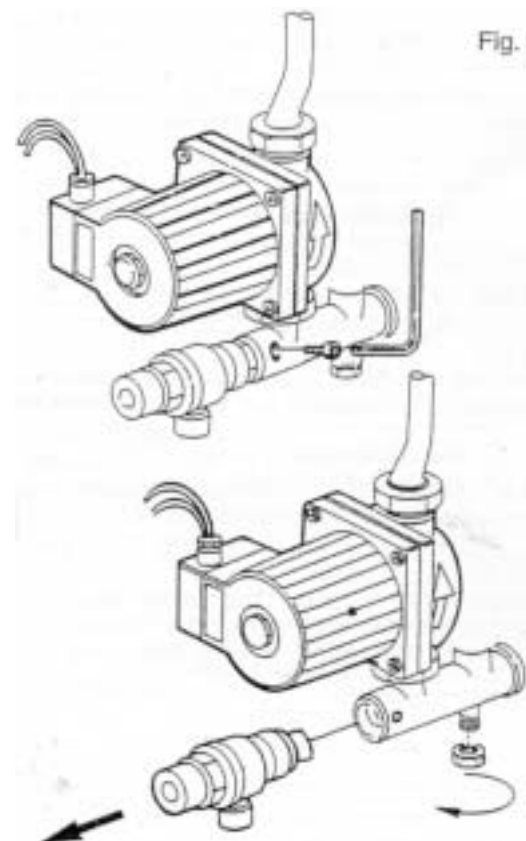

Section 8 FAULT FINDING CENTRAL HEATING

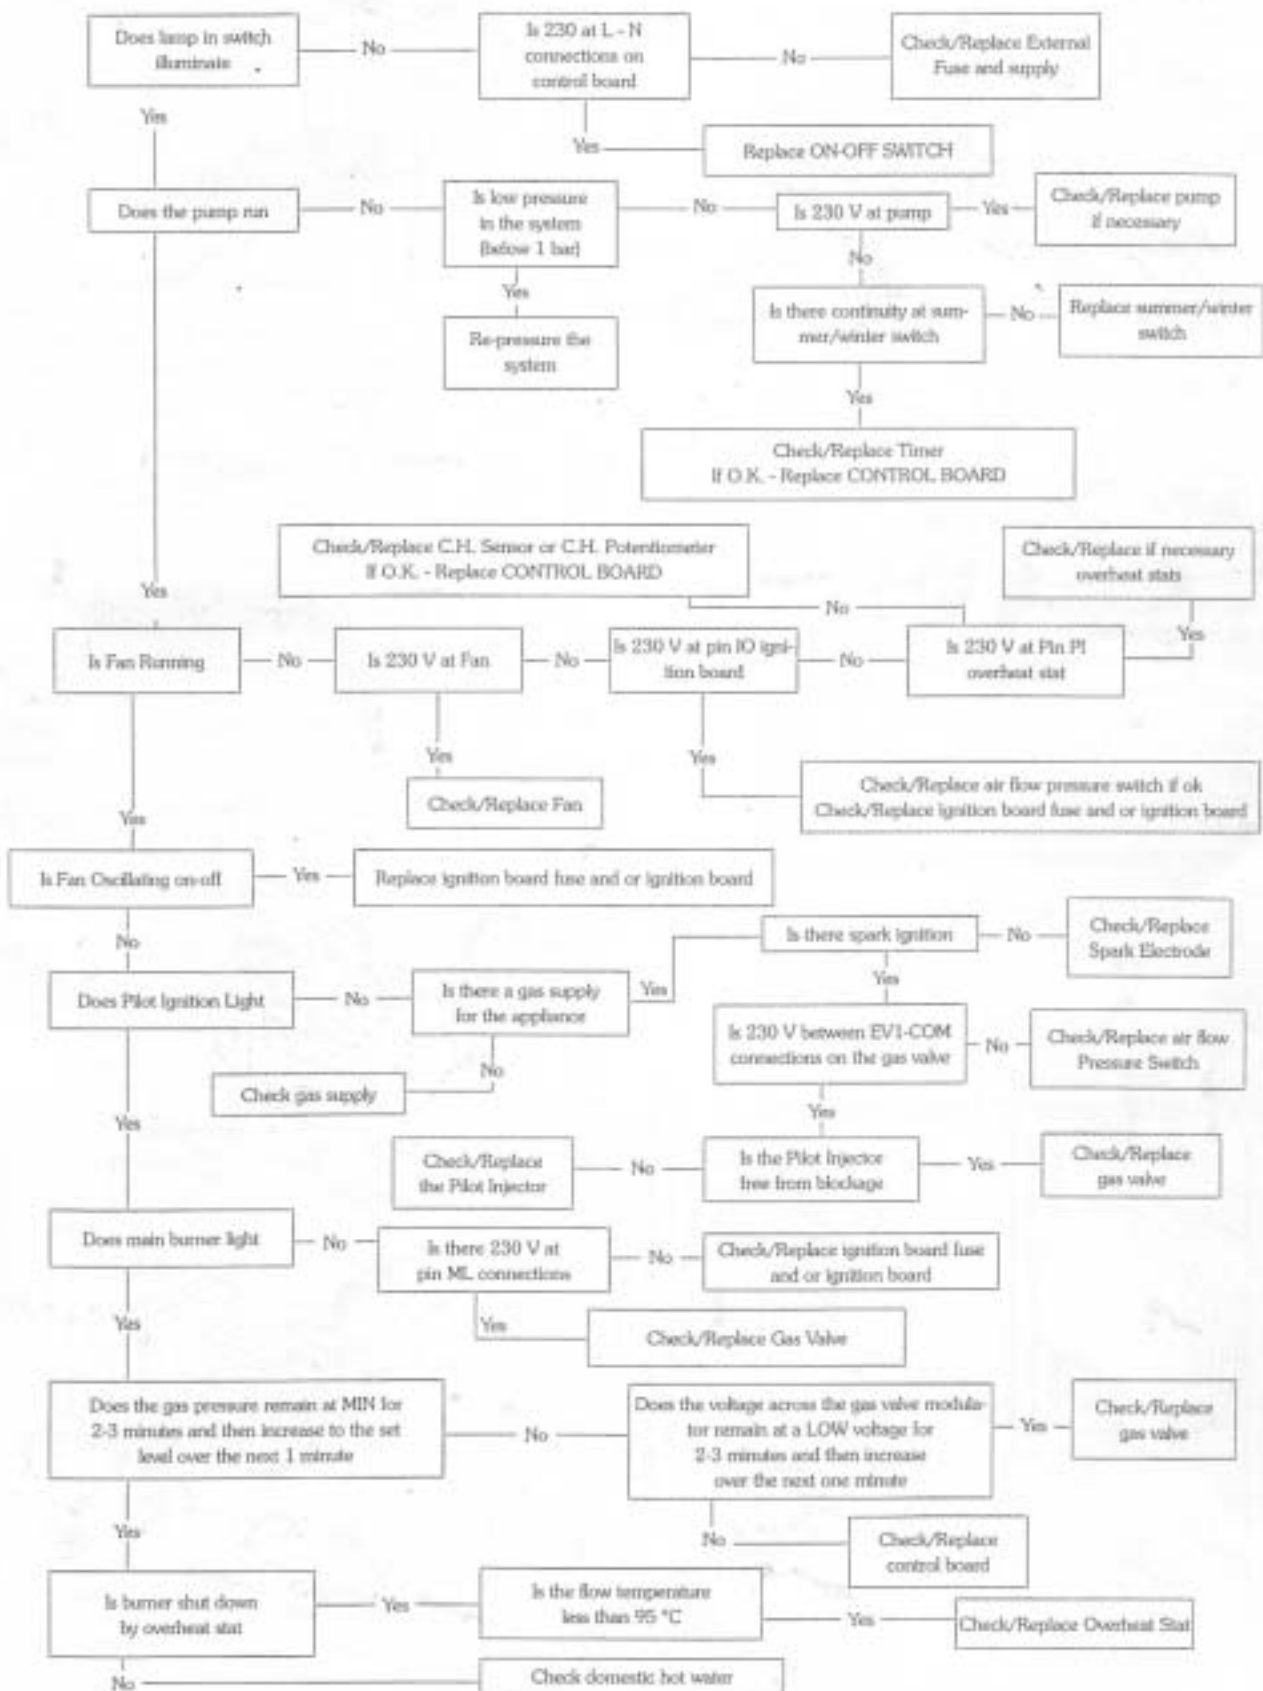Switch on
Select "Winter"
Central Heating
Stat to maximum
Ensure external controls calling for heat (Room Stat/Time Clock/TRV)




FAULT FINDING DOMESTIC HOT WATER

Before continuing it may be necessary to see Central Heating Fault Finding.

Select only (Summer) Domestic Hot Water.

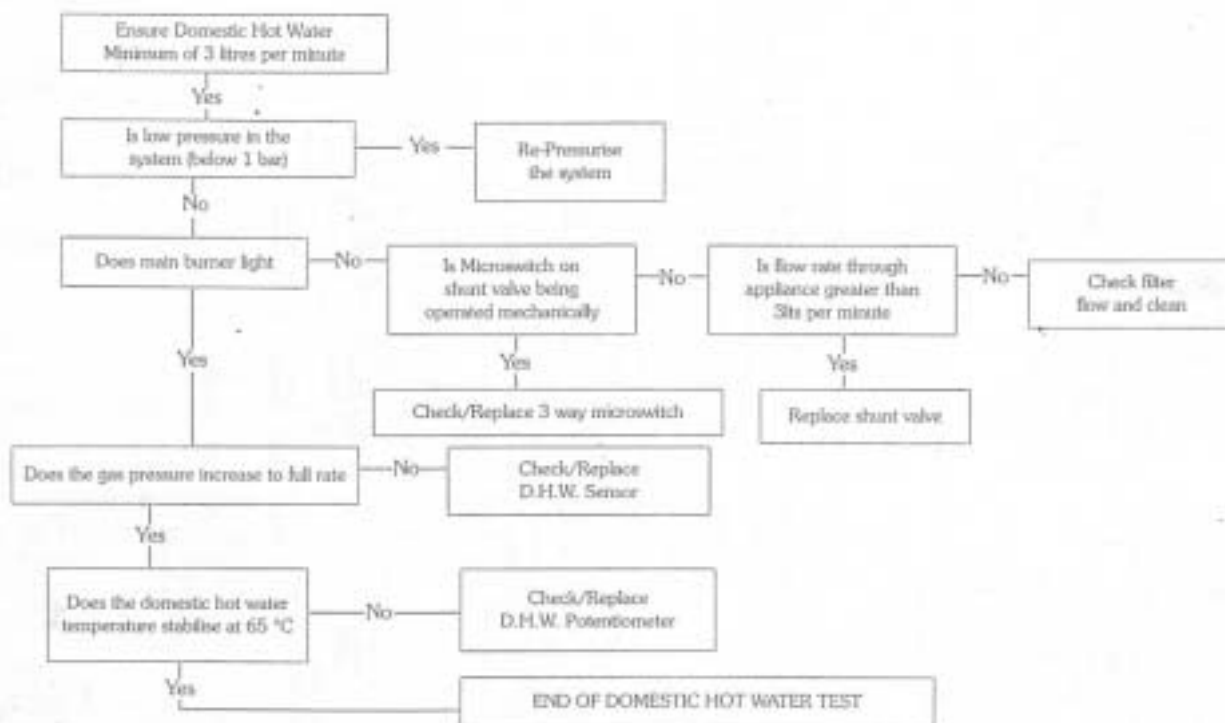
Open Domestic hot tap close to appliance.




BOILER NOT OPERATIONAL ON TIMER (INTEGRAL)

Switch on/Select "Winter"/Central Heating

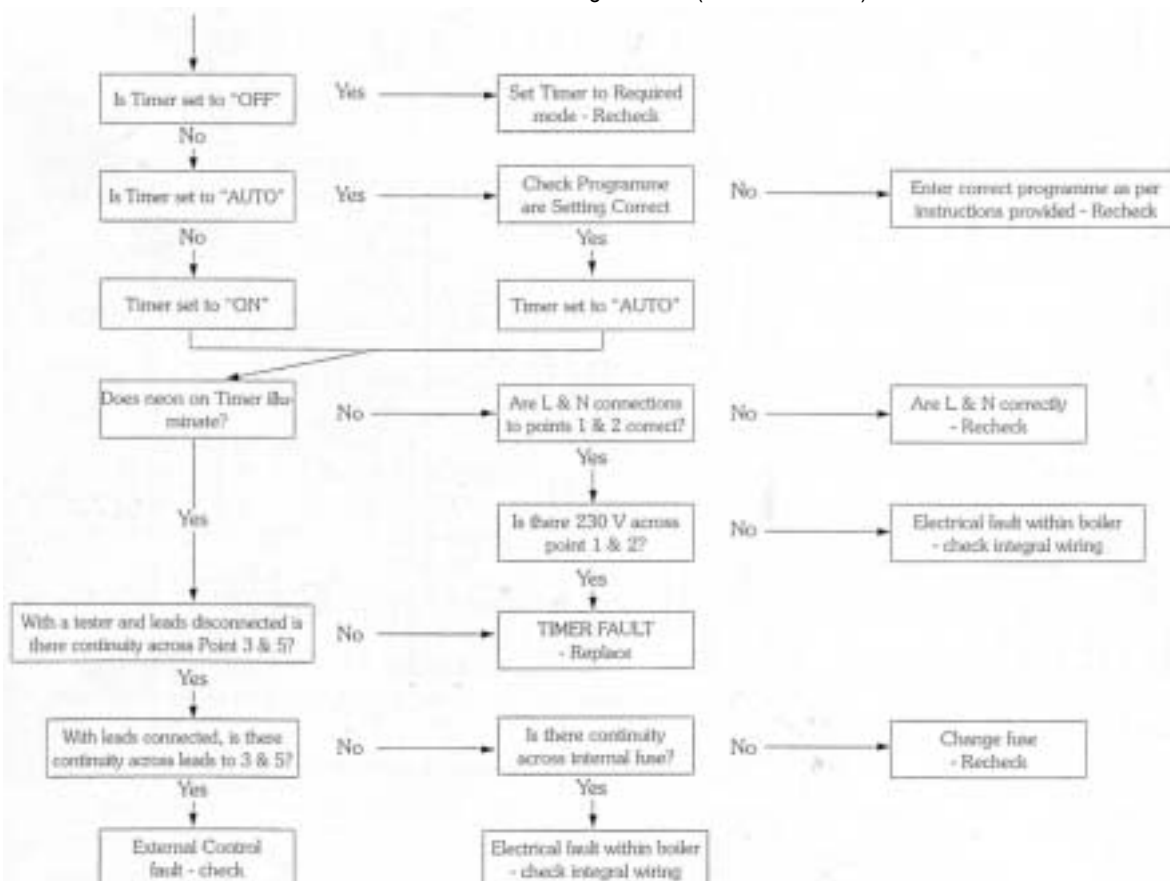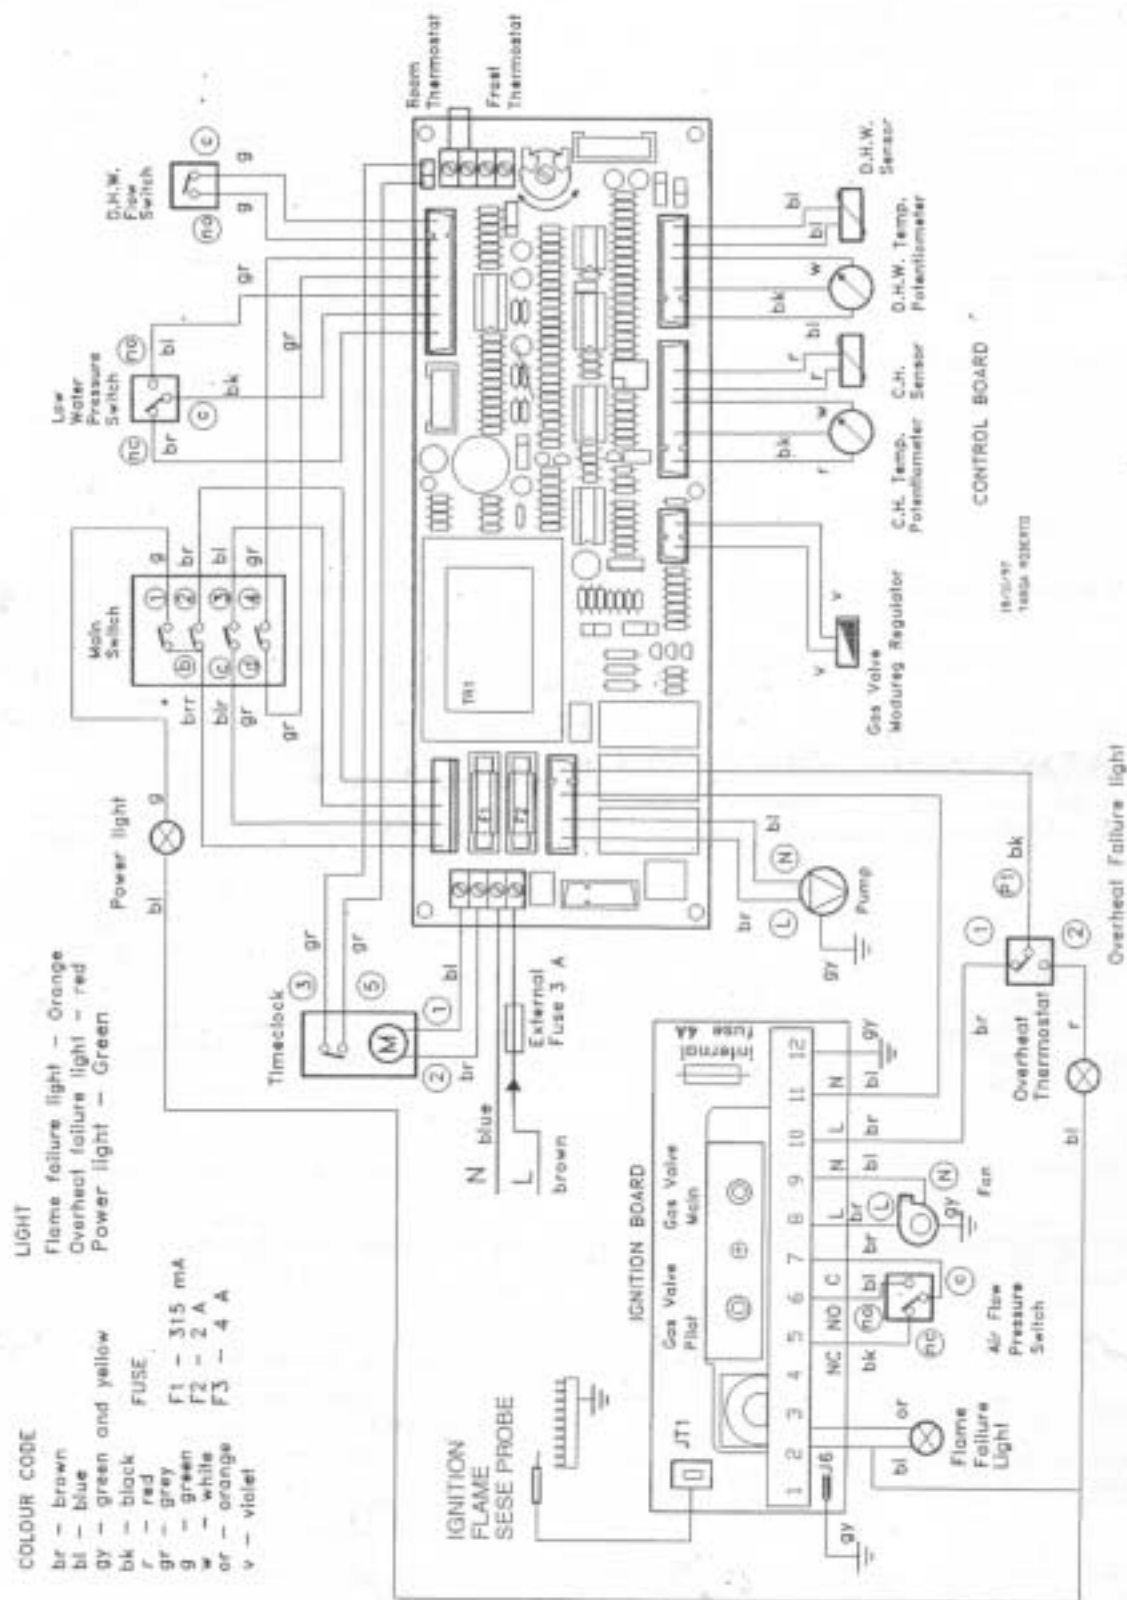
Stat to Maximum/Ensure External control calling for heat (Room Stat/TRV)






**FUNCTIONAL
FLOW DIAGRAM**
General Layout

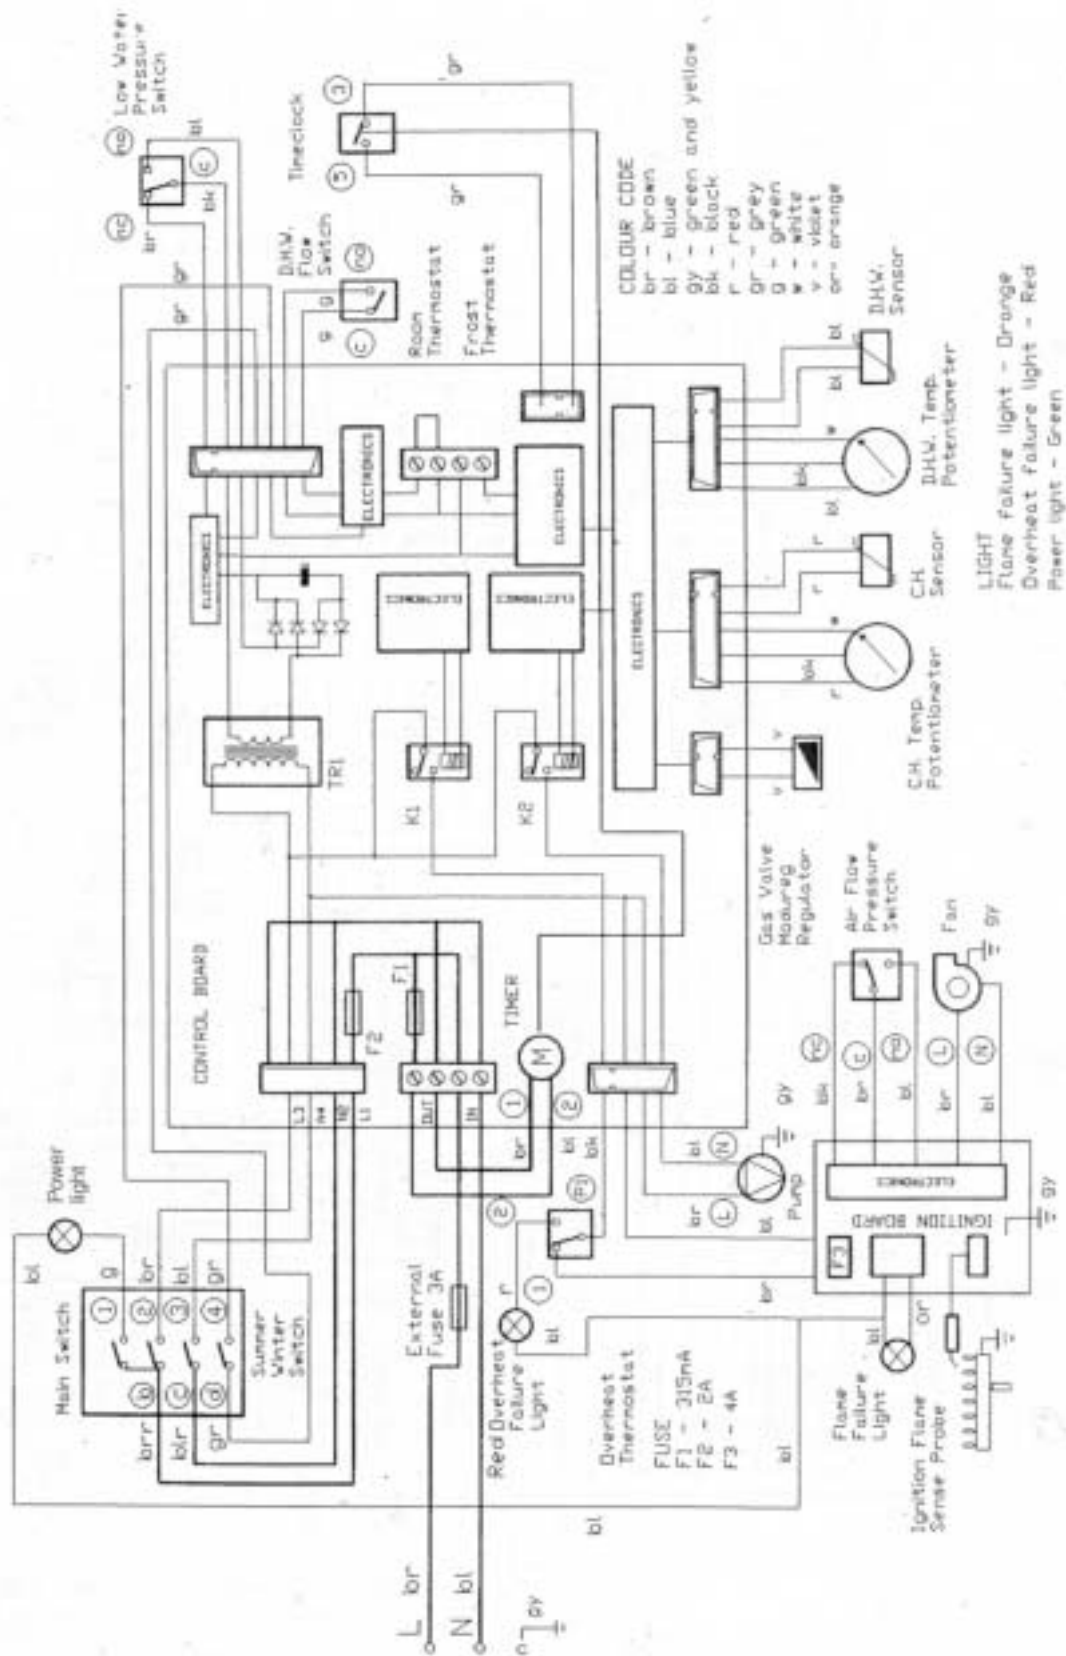Fig. 95




FUNCTIONAL FLOW DIAGRAM
In D.H.W. mode

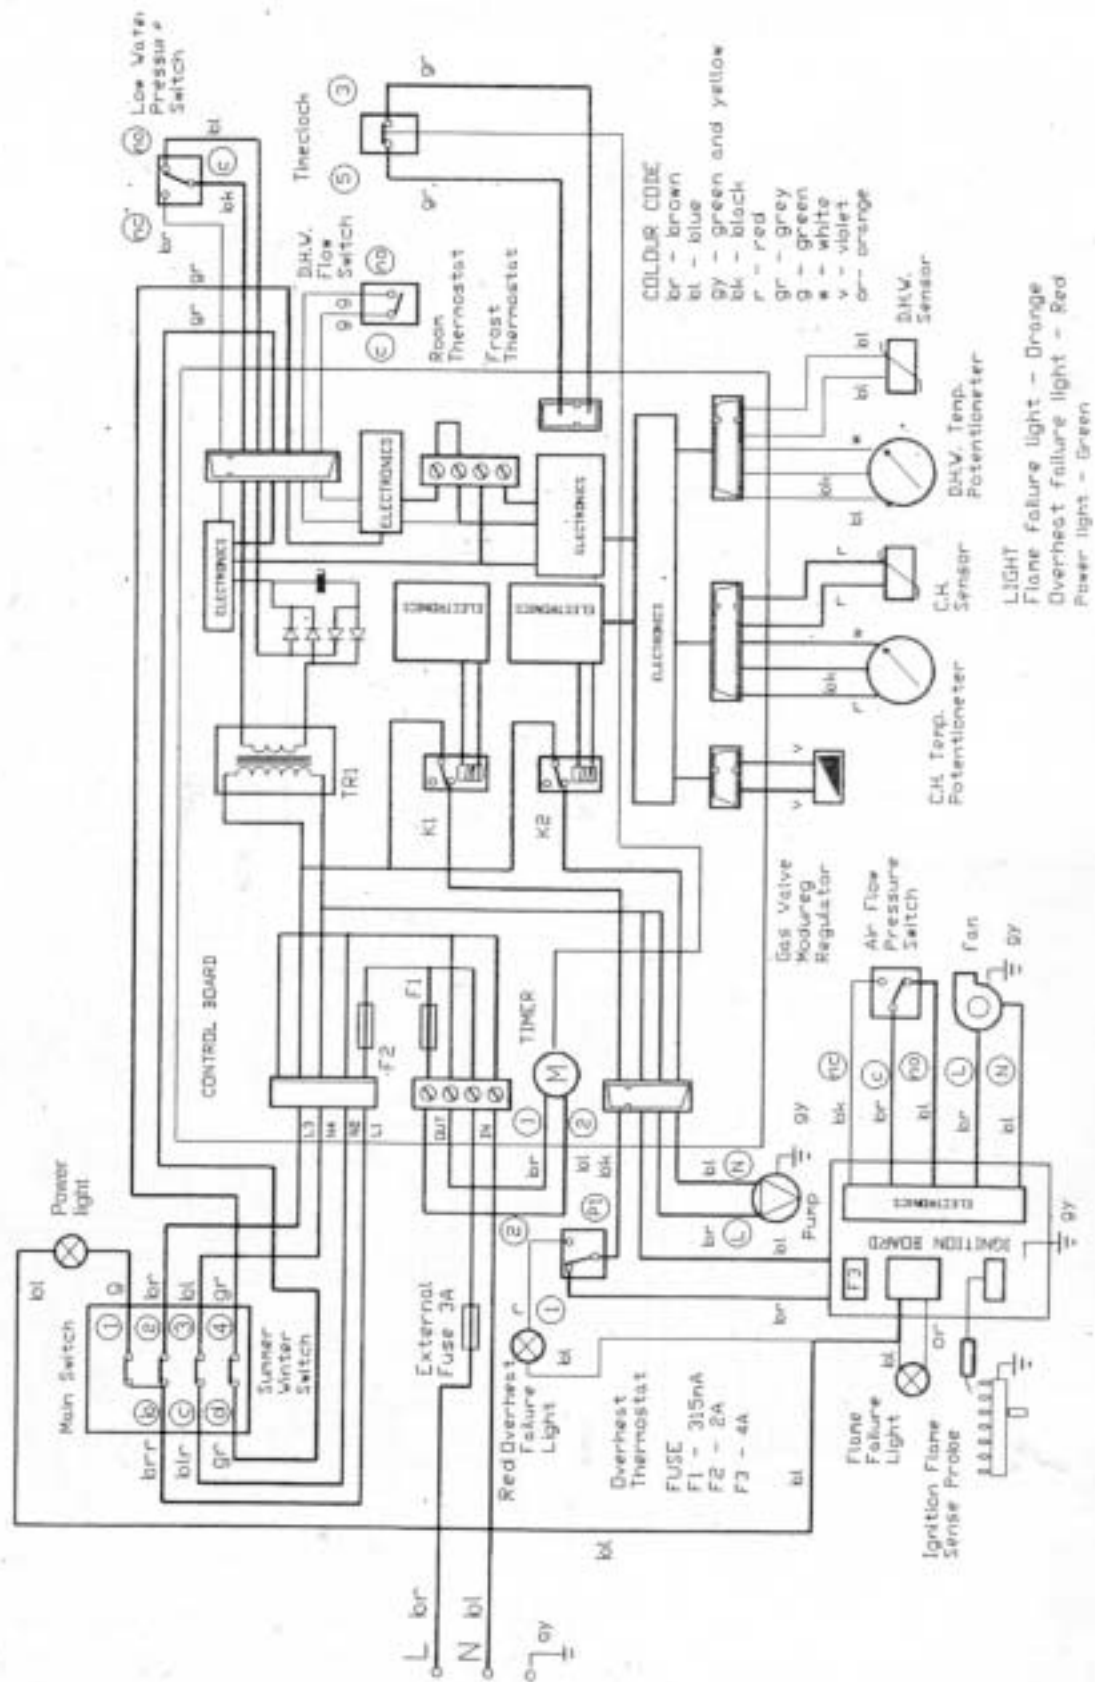Fig. 98



FUNCTIONAL FLOW DIAGRAM
In central heating mode

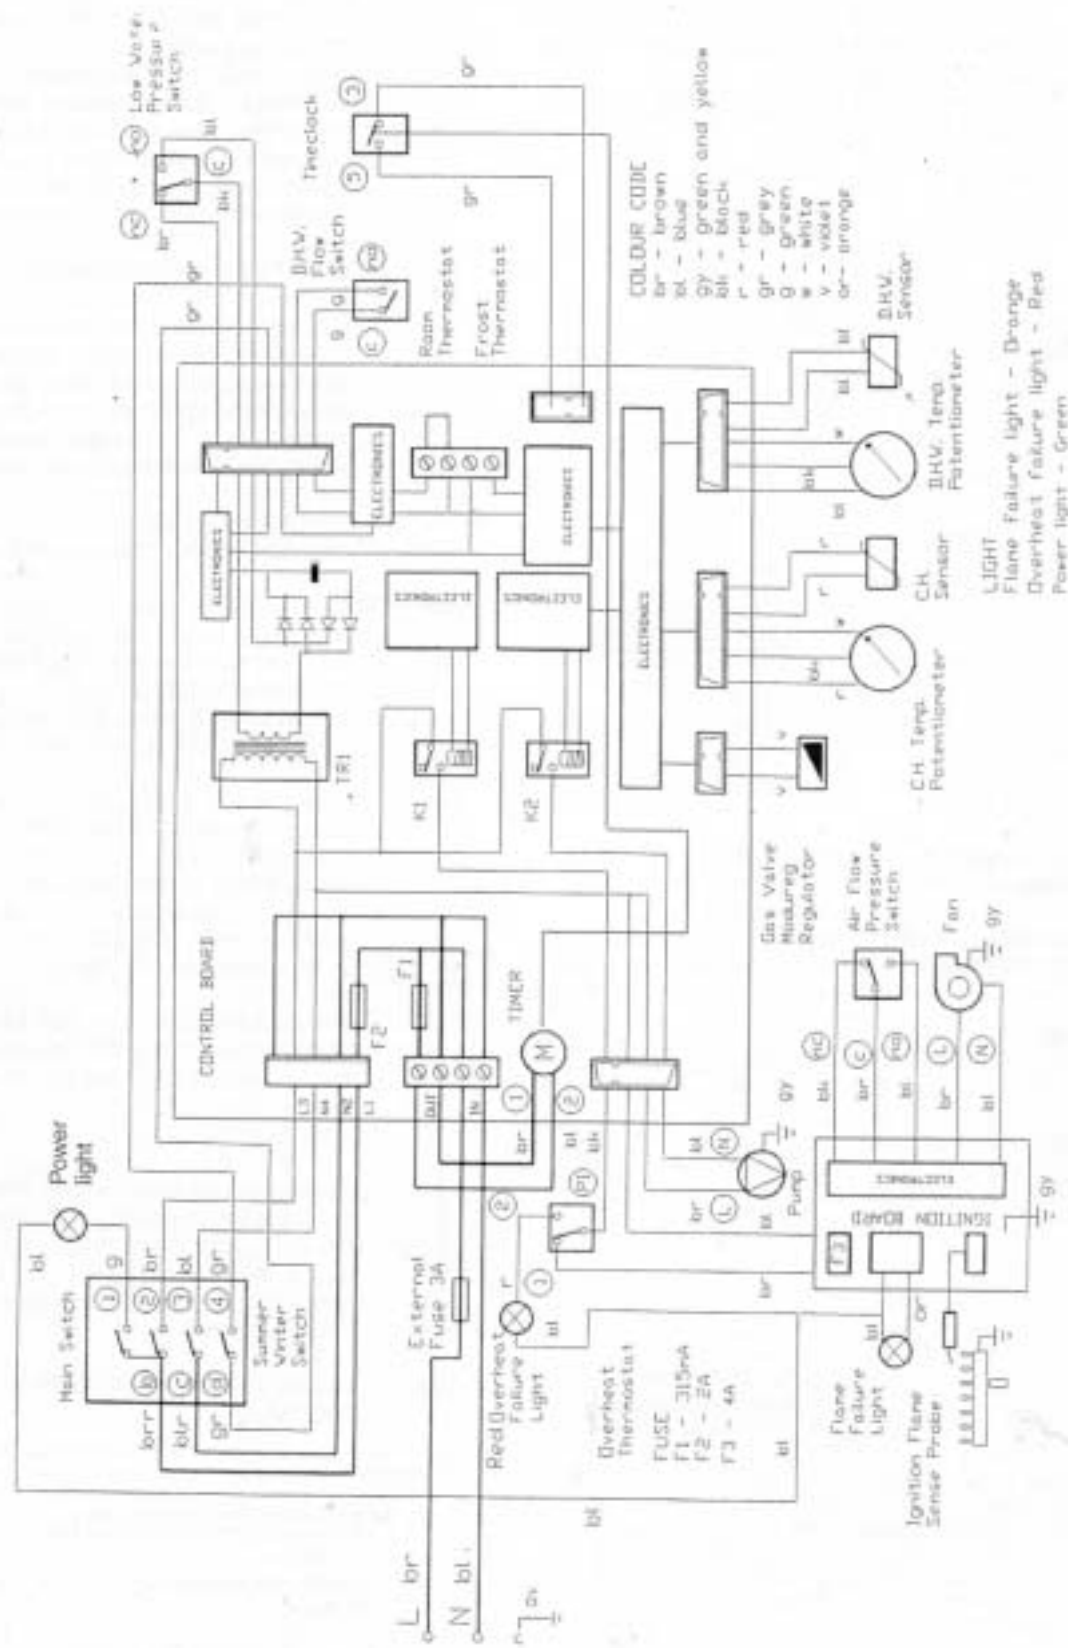Fig. 99



10.0 INSTALLATION INSTRUCTIONS FOR TWIN FLUE PIPE (ECCENTRIC FLUE DUCT SYSTEM)


IMPORTANT: CORRECT 80MM ORIFICE MUST BE FITTED



Fig. 1.8

- 10 - air intake bend 90° 13 - 45° flue exhaust bend
 10 - flue exhaust bend 90° 14 - flue exhaust duct
 11 - air inlet terminal 14 air intake duct
 12 - flue exhaust terminal 15 - two-way flue gas header
 13 45° air intake bend 16 - vertical eccentric flue exhaust duct

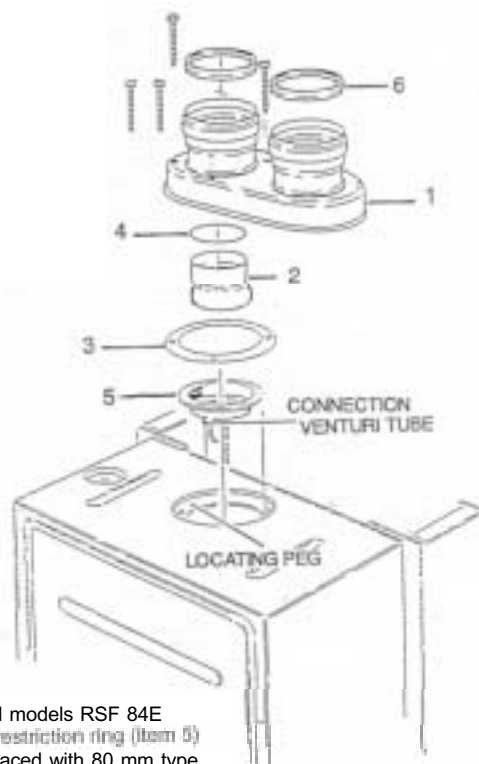Fig. 1.9



NOTE: on all models RSF 84E
 RSF 100E, restriction ring (item 5)
 must be replaced with 80 mm type
 supplied with twin flue header.

IMPORTANT

As with all flues the kits must be installed taking due account of the current issue of BS 5440 parts 1 & 2 and timber frame housing REF IGE/UP/7/1998.

Also note that the requirements will vary depending upon the kit being installed. Guidance is provided but unless otherwise stated, always comply with the recommendations of the relevant codes of practice.

10.1 TWIN FLUE INSTRUCTIONS

This part of the installation manual covers the installation and fixing instructions of the twin flue eccentric flue duct systems only. When ordering twin flue it must be stated for RSF 84 - RSF 100 range. Typical installation procedures are illustrated by drawings.

IMPORTANT

Correct 80 mm orifice must be fitted.

IMPORTANT NOTICE

- 10.2** Supplied with the twin flue header is an 80 mm diameter orifice plate. Before fixing the twin flue system the existing 81 or 82 orifice plate must be removed.
- 10.3** Take out the 4 temporarily fitted securing screws, lifting out the gasket and orifice plate disconnecting it from the venturi tube. Discard this orifice plate and m-fit the 80 mm orifice plate ensuring that the venturi tube has been refitted, making sure this is securely located into the locating peg.
- 10.4** Before fitting the twin flue header locate the 60 mm 'O' ring into the header outlet. Apply silicone lubricant and carefully push in from the bottom the 60 mm aluminium tube item 2 fig. 1.9.
- 10.5** Locate the ceiling washer fixing the twin flue header as illustrated making sure that the inner aluminium exhaust locates firmly on the fan outlet spigot. Make sure that the screws are satisfactorily located through the gasket seal.
- 10.6** Locate the 2 80 mm 'O' rings in the twin flue header.

ITEM	DESCRIPTION	PART NO.
1	Flue adaptor gasket and screws with sampling point condensing drain	30013
2	Straight pipe	30005
3	Eccentric vertical terminal	30015
4	90° elbow	30001
5	45° elbow	30003
6	Air inlet terminal (plastic) 80 mm	30009
7	Exhaust terminal (stainless steel) 80 mm	30011
8	Pitch roof slate	
9	Flat roof slate	
10	Twin flue pipe socket seal 80 mm	30007
11	Condensing drain trap	



90° M/F bend consisting of:

90° elbow with 'O' ring side F
80 mm dia 'O' ring




135° M/F bend consisting of:

135° elbow with 'O' ring side F
80 mm dia 'O' ring



Vertical eccentric flue exhaust duct

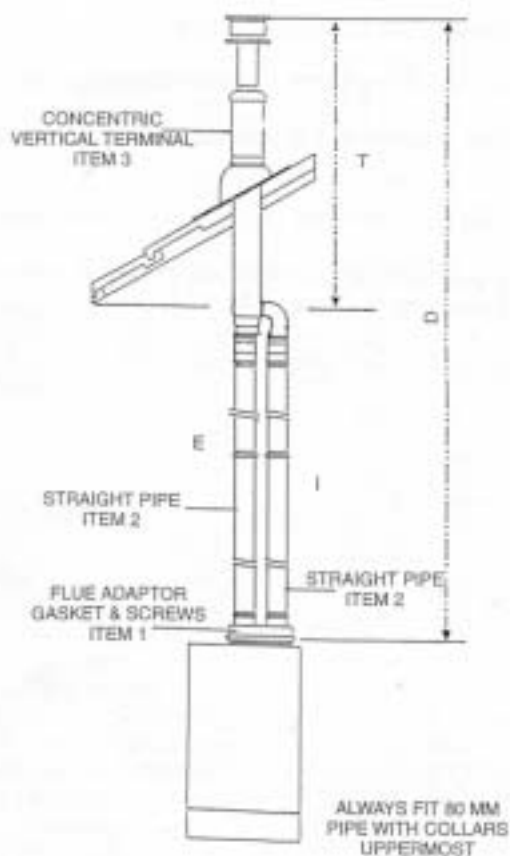Fig. 2.8



Figures 2.8, 3.8 and 4.8 show the versatility of this flue system. Measurements and bends must be calculated correctly so as not to oversize maximum flue lengths.

All spigot ends that are cut must be de-burred with a file.

All located 'O' rings must be lubricated with a silicone grease to ensure easy, snug fit.

NOTE: Exhaust flue must slope 2" down towards the boiler 35 mm fall per metre.

Spacing Clips

Spacing clips are available on request should they be required.

Sampling point

Sampling point is positioned on the outlet of the twin flue header for the use of sampling gas combustion products.

Condensing trap

To drain the exhaust pipe only with a greater distance of over 6 metres, a condensing trap must be fitted, or as an alternative to this the sampling point may also be used as a condensing drain should this be required.

E = EXHAUST
I = INLET
T = TERMINAL
D = DISTANCE (TOTAL)

Exhaust/suction system with concentric pipes for flat or sloping roofs. Extensions with two separate pipes.

Maximum distance $D = I + E + T = 14 \text{ metre} + 14 \text{ metre} + 1 \text{ metre} = 29 \text{ metre}$ maximum (pipe + terminal).

Exhaust terminal must not be cut.


NOTE: The pressure loss for each elbow fitted is:

90° elbow less 4 metre of pipe length for each one fitted.

45° elbow less 1.5 metre of pipe for each one fitted.

For exhaust pipe with a distance of over 6 metre a condensing trap must be fitted.

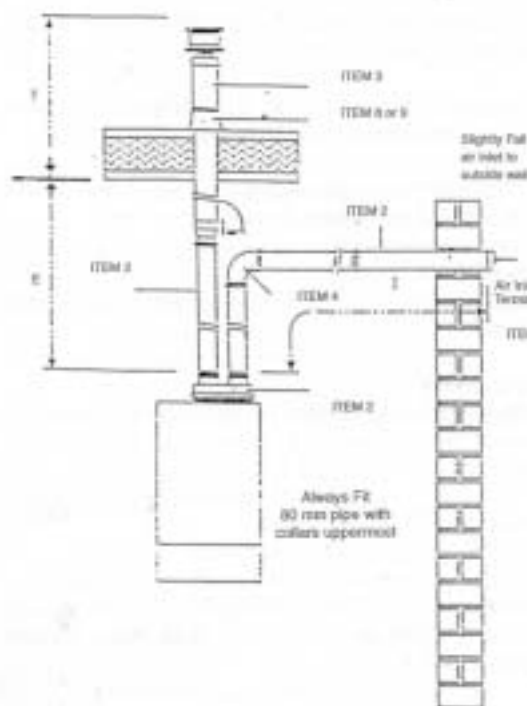Fig. 3.8



Exhaust/suction system with two separate rated 80 diam pipes - exhaust on flat or sloping roof, suction from vertical wall.

Maximum distance $D = I + E + T$ = Total exhaust/inlet pipe = 26 metre.

Exhaust terminal must not be cut.

Min inlet pipe distance = 0.1 metre.

NOTE: The pressure loss for each elbow is:

90° elbow less 4 metre of pipe length for each one fitted.

45° elbow less 1.5 metre of pipe for each one fitted.

For exhaust pipe with a distance of over 6 metre a condensing trap must be fitted.

Exhaust/suction system with two separate pipes through a single vertical wall.

Maximum distance $D = I + E$ = Total exhaust/inlet pipe 24 metre.

Min inlet pipe distance 0.1 metre.

Min exhaust pipe distance 0.1 metre.


NOTE: The pressure loss for each elbow fitted is:

90° elbow less 4 metre of pipe length for each one fitted.


45° elbow less 1.5 metre of pipe for each one fitted.

For exhaust pipe with a distance of over 6 metre a condensing trap must be fitted.

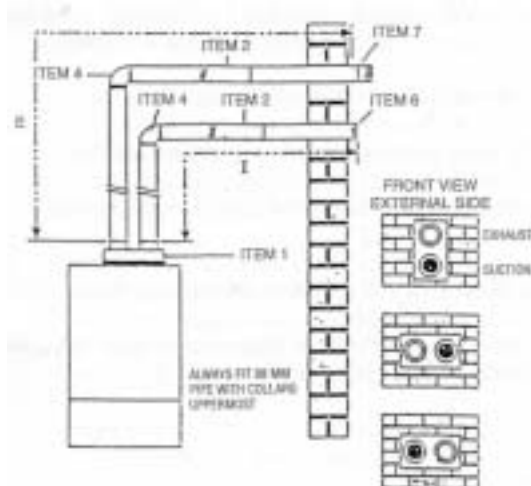Fig. 4.8



SECTION 11 EXPLODED PARTS DIAGRAM

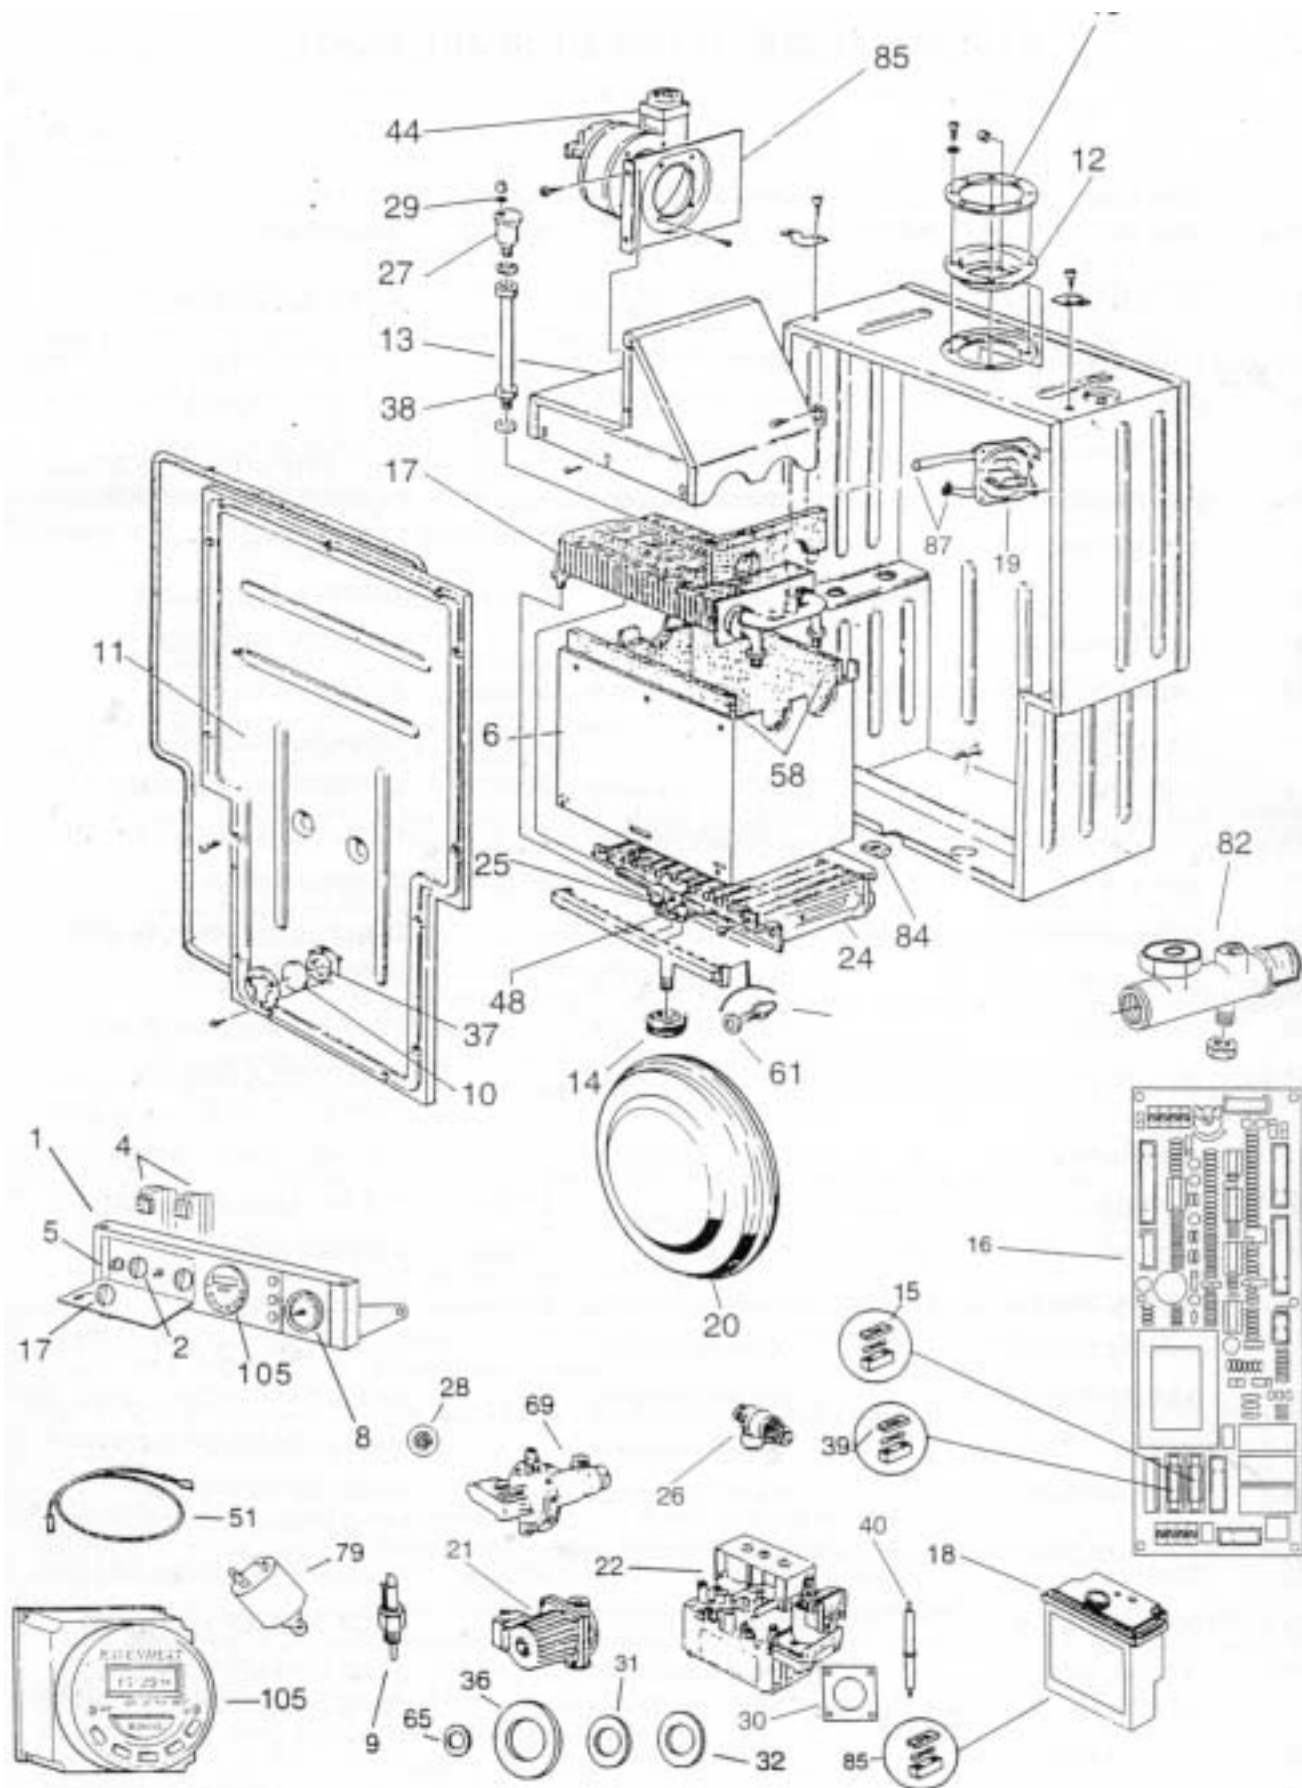

RAVENHEAT SHORT LIST OF SPARE PARTS

Pos.	RSF IOOE (T) Part. No.	G.C. Part. No.	RSF 84E (T) Part. No.	G.C. Part. No.	Description
1	0014FR007005/0		0014FR006005/0		INSTRUMENT PANEL
2	0012COM06005/0		0012COM06005/0		MAIN SWITCH
4	0012POTO5005/0		0012POT05005/0		D.H.W/C.H. POTENTIOMETER
5	0007TER0301O/O	371267	0007TER0301O/O	371267	OVERHEAT THERMOSTAT
6	0001CAM03005/0		0001CAM01005/0		COMBUSTION CHAMBER
7	0014MAN06015/0		0014MAN06015/0		THERMOSTAT KNOB
8	5027055	372642	5027055	372842	WATER GAUGE
9	0007TER05005/0		0007TER05005/0		D.H.W/C.H. SENSOR
10	0014VET01005/0	371268	0014VET01005/0	371268	SIGHT GLASS
11	0001 COP03010/0		5003066	372849	CHAMBER COVER
12	0001 DIA05005/0		0001DIA04005/0	371269	AIR RESTRICTION RING
13	0001CAP3005/0	371292	0001CAP04005/0	371270	FLUE GAS EXHAUST HOOD
15	5021103	372845	5021103	372845	F2 FUSE 315 mA
16	0012CIR05010/0		0012CIR05010/0		PRINTED CONTROL BOARD
17	0002SCA01010/1		0002SCA05005/0		HEAT EXCHANGER
18	0012CIR05016/0		0012CIR05016/0		PRINTED IGNITION BOARD
18.1	0012GEN05010/0		0012GEN0501010		HONEYWELL PRINTED IGNITION BOARD
19	0005PRE05005/0		0005PRE05005/0		AIR PRESSURE SWITCH
20	5009057	372880	5009057	372880	8 LT EXPANSION VESSEL
21	5009080	372896	5009080	372896	5 METRE PUMP
22	0008VAL03005/0	173100	0008VAL03005/0	173100	GAS VALVE
22.1	0008VAL05005/0		0008VAL05005/0		HONEYWELL GAS VALVE
24	0003BRU07005/0		0003BRU05015/0		MAIN BURNER NATURAL GAS (G 20)
24.1	0003BRU0701O/O		0003BRU08005/0		MAIN BURNER LPG (G 31)
24.2	0003PIL0501/00		0003PIL05010/0		PILOT BURNER FOR HONEYWELL GAS VALVE G 20
25	5012114	372894	5012114	372894	PILOT BURNER NATURAL GAS (G 20)
25.1	0003PIL01005/0		0003PIL01005/0		PILOT BURNER LPG (G 31)
25.2	0003PIL05015/0		0003PIL05015/0		PILOT BURNER FOR HONEYWELL GAS VALVE G 31
26	0008VAL01017/0		0008VAL01017/0		SAFETY VALVE 3 BAR

RAVENHEAT SHORT LIST OF SPARE PARTS CONTINUED

Pos.	RSF 100E (T): Part. No.	G.C. Part. No.	RSF 84E (T) Part. No.	G.C. Part. No.	Description
27	5015015	372888	5015015	372888	AUTO AIR VENT
20			0014REG01005/0		WATER FLOW REGULATOR
29	0013GUA03005/0	371272	0013GUA03005/0	371272	GASKET
30	0013GUA03035/0	371273	0013GUA03035/0	371273	GASKET 32X32X2 GAS VALVE
31	5018025	372851	5018025	372851	GASKET 18.5X11.5X2
32	5018030	372867	5018030	372867	GASKET 24X15X2
36	5018046	378864	5018046	372864	GASKET 30X22X2
37	0013GUA01045/0	371274	0013GUA01045/0	371274	GASKET 48X42X1
38	0010TUB03050/0	371296	5003655	372854	PIPE TO AIR PURGE
39	0012FUS05015/0		0012FUS02015/0	371275	INTERNAL FUSE 2 A
40	5021050	372892	5021050	372892	IGNITION ELECTRODE
44	1012VEN07006/0		1012VEN07006/0		FAN RSF 84/100
46	0014GUA01020/0	371279	0014GUA01020/0	371279	FLUE GASKET
48	5012096	372856	5012096	372856	NOZZLE 0.27 FOR NAT GAS
48.1	0003UGE01005/0		0003UGE01005/0		NOZZLE 0.22 FOR LP GAS
51	0012CAV03005/0	371278	0012CAV03005/0	371278	CABLE FOR ELECTRODE
58	1015PAN03005/0	E02130	5095025	372853	INSULATION PADS SET
60	0003UGE03005/0	371297			NOZZLE 1.25 FOR NAT GAS
60			5212210	372862	NOZZLE 1.35 FOR NAT GAS
60.1	0003UGE01012/0		0003UGE01012/0		NOZZLE 0.85 FOR LP GAS
61	5012125	372861	5012125	372861	SEAL FOR NOZZLE
65	5018015	372865	5018015	372865	GASKET 11X5X2
69	0008VAL03010/O	371298	00EVAL03010/0	371298	3 WAY VALVE
79	0005PRE03010/0	371310	0005PRE03010/0	371310	LOW WATER PRESS/SWITCH
82	5003283	372874	5003283	372874	BRASS MANIFOLD
84	5023020	372855	5023020	372855	DEPRESSION CHAMBER PILOT SEAL
85	0012FUS05020/0		0012FUS05020/0		INTERNAL FUSE 4 A
87	5021312	372875	5021312	372875	NYLON TUBES FROM PRESSURE SWITCH
105	TM6192	371258	TM6192	371258	DIGITALTIMER



Chartists Way, Morley, Leeds, LS27 9ET.

Telephone: (0113) 252 7007

Tfax: (0113) 238 0229

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.



USER'S GUIDE

HIGH EFFICIENT COMBINATION BOILER

RSF 84ET - RSF 84E - RSF 100ET - RSF 100E
WITH OR WITHOUT BUILT IN TIMER

It is the law that all gas appliances are installed by a competent person, in accordance with the gas safety installation and use current regulations. To the current Gas Safety (Installation and Use) Regulations "1996"

All CORGI registered installers carry a CORGI I.D. card and have a registration number. Both should be recorded in your boiler log book. You can check your installer by calling CORGI direct on: 01256 732300.



Escape of gas

Should a gas leak be suspected, contact your gas supplier without delay.

Do NOT search for gas leaks with a naked flame.

WARNING: This appliance must be earthed.

Do not touch or tamper with this sealed unit or its components

1. INTRODUCTION

1.1 Please carefully read information given in the booklet to help you gain maximum control from your appliance with minimum trouble and cost.

1.1.1 Your Ravenheat Combination Boiler has been designed to supply your Central Heating and Domestic Hot Water directly from one unit.
When central Heating is operating, the circulation will be interrupted when domestic hot water is being drawn off. This will normally not affect the level of heating.

CLEARANCES AROUND THE BOILER

	RSF 84E(T)	RSF 100E(T)
Above	125 mm	150 mm
Below	100 mm	100 mm
Front	450 mm	450 mm
Sides	75 mm	5 mm

25mm in front when installed in a cupboard.

1.2.1 Minimum clearances are required for safety and maintenance. Do not obstruct any purpose made ventilation opening if boiler has been fitted in a compartment.
Never hang clothes, etc., over the appliance.

1.3 USER CONTROLS

See Fig. 1

1.3.1 This appliance is designed to operate with the minimum of attention by the user. All controls are to be found on the control panel.


1.4 OPERATING SAFETY CHECKS TO PROTECT YOUR APPLIANCE

1.4.1 Before lighting the appliance check central heating system pressure (7) is not less than 1 bar gauge. If it is below this do not light but consult your installer about refilling your system as you may have a leak in the system.


1.4.2 An ORANGE warning light on the control panel (8) warns of a flame failure of the main burner. This can be reset manually by pressing mains boiler on/off switch (1).

1.4.3 A RED warning light on the control panel (9) warns of a high temperature lockout on the overheat thermostat. This could occur due to air or poor circulation in the boiler/heating circuit. This can be reset manually by removing grey cover (3) on control panel and pressing red reset button. Replace cap. If lockout should persist leave the appliance shut down and consult your installer/service engineer immediately.

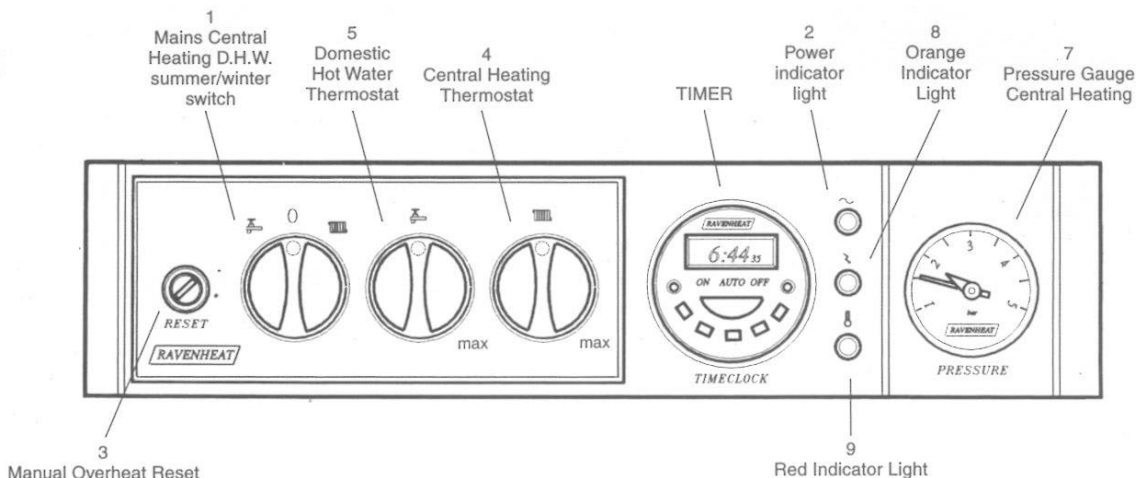Fig. 1




2. OPERATING DOMESTIC HOT WATER

- 2.0 Select  only switch position (1).
- 2.1 Open hot water tap. After about 3 seconds main burner will always operate.
- 2.2 Temperature of domestic hot water can be varied by adjusting the water flow rate at the tap. Domestic thermostat (5) will control maximum temperature leaving the appliance. The knob can be set between minimum and maximum approximately 35 °C to 65 °C (95F to 149F). For maximum temperature of domestic hot water leave in maximum position.


3. OPERATING HEATING & HOT WATER

TO SET AND ADJUST BUILT-IN TIMER
MODEL SEE OPPOSITE PAGE 3.

- 3.0 Select  switch (2) position.
- 3.1 Switch on time clock, adjust room stat and/or thermostatic radiator valves to high settings.
- 3.2 Main burner will operate. Temperature output of central heating can be adjusted by central heating thermostat (4). The knob can be set between minimum and maximum approximately 40 °C to 85 °C (140F to 185F). While the appliance is being used to provide domestic hot water, the central heating will not operate. When hot water is no longer required the appliance will automatically revert to central heating and should not noticeably affect the level of central heating. Adjust external controls to required settings.

NOTE: An anti-cycling device is fitted to the heating function. When the boiler reaches its set maximum temperature it will not operate on heating for about 3 minutes but the domestic hot water function will always operate on demand.

3.3 TO SHUT DOWN THE APPLIANCE

- 3.3.1 For short periods, switch to  only and turn off all hot taps. For long periods switch of the on/off switch (1). If the appliance is to be shut down for long periods when there is a risk of freezing, then appliance should be drained. Similar refilling must be done by a competent person following approved procedures.

4. CLEANING OF APPLIANCE OUTER CASING

- 4.1 Use a clean damp cloth. Do not use any abrasive cleaners end with a dry cloth lightly polish to protect painted surfaces.

Control panel and fixtures can be wiped with damp cloth and dried. Spray polishes must not be used on control panel surfaces or switches, Care must be taken in preventing any liquids entering the appliance.

4.2 CARE OF YOUR APPLIANCE AND SYSTEM

- 4.2.1 Annual servicing of your appliance is required to maintain safety and efficiency of its operation. Therefore it is recommended that the appliance is serviced at least once a year and that the whole of the heating system be checked at the same time by a qualified installer. If it is known or suspected that a fault exists on the boiler then it MUST NOT be used until the fault has been corrected by a COMPETENT PERSON. It is essential that the instructions in this booklet are strictly followed for safe and economic operation of the boiler.


SERVICING SHOULD BE CARRIED OUT BY A QUALIFIED INSTALLER.

Ravenheat Manufacturing Ltd.,
Chartists Way, Morley, Leeds LS27 9ET.

PROGRAMMABLE TIMECLOCK INSTRUCTIONS FOR USE

Your Ravenheat boiler comes complete with (optional) digital programmer. The timeclock is supplied with a cover to prevent accidental loss of programme, or children tampering with preset programmes.

5. TO PROGRAMME TIME CLOCK

To access programming buttons remove clear cover. Press  reset key with a pencil before setting or reprogramming times.

5.1.1 TO SET TIME AND DAY OF THE WEEK:

5.1.1.1 SET DAY OF WEEK:

- Press clock button and hold in.
Press day button to desired day.
- Release both buttons.
The day of the week will be set.

5.1.1.2 SET HOUR:

- Press clock button and hold in.
Press hour button to desired time.
- Release both buttons.
The hour will be set.

5.1.1.3 SET MINUTE:

- Press clock button and hold in.
Press minute button to desired time.
- Release both buttons.
The minute will be set.

NOTE: When, setting time holding in the hour/minute button this will rapidly advance the display.

5.1.2 TO SET PROGRAMMES:

5.1.2.1 Press timer button and release to enter into programme mode.

5.1.2.2 Programme "1 ON" will show in lower left hand corner.

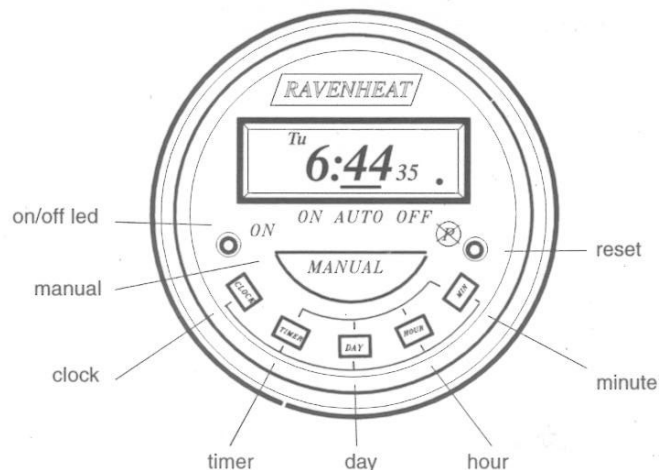
5.1.2.3 Press DAY key to select the programme period. There are 10 day settings for your choice.
(1) Mo to Su (2) Mo (3) Tu (4) We (5) Th (6) Fr (7) Sa (8) Su (9) Mo+TucWe+Th+Fr (10) Sa+Su.

You now have a choice of 6 programmes.

5.1.2.4 Press hour button to set the required hour 'on'.

5.1.2.5 Press minute button to set minute.

5.1.2.6 After setting the programme press TIMER key again "1 OFF" will appear. Repeat procedure 5.1.2.3 through to 5.1.2.5 to set programme "1 OFF" TIME.



For each programme days 'off' setting must be input the same as the 'on' setting.

5.1.2.7 After setting programme 1 ON/OFF TIME repeat step 2.1 to 2.7 to set programmes 2 through to 6 if required.

5.1.2.8 Your timer gives you up to 6 different ONE and 6 different OFF settings per programme period. Note you have a choice of 6 ON-6 OFF programmes max.

5.1.2.8.1 REVIEW YOUR PROGRAMMES:

- Press the TIMER key to advance display to each subsequent ON or OFF setting.
 - Check days and times displayed.
 - To make a change, follow instructions under "TO SET PROGRAMMES".
- Note on completion of programming operations press the clock button to show current time/day and replace the clear tamper proof cover.

5.1.2.8.2 MANUAL KEY

- Press MANUAL key to select ON /AUTO OFF mode.
- ON mode is to turn on the timer, OFF mode is to turn off the timer.
- AUTO mode is to set the timer to programme mode. It will turn on or turn off according to the programmes you set.
- From ON to AUTO mode it will turn on until next OFF programme.
- From OFF to AUTO mode it will turn off until next ON programme.

5.1.2.8.3 LED INDICATOR

LED light is on when the boiler is operating in heating mode.

5.1.3 TO RESET TIMER:

Press reset button to reset the timer unit.

NOTE:

Once the reset button is pressed, the stored time and programme will be cleared to initial state.

N.B.: When the clock is either "programmed" on, or is on constant, the red indicator will illuminate



Chartists Way, Morley, Leeds, LS27 9ET.

Telephone: (0113) 252 7007

Tfax: (0113) 238 0229

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.