




Bosch Group

24CDi/28CDi/35CDi II RSF

WALL MOUNTED COMBINATION BOILER FOR CENTRAL HEATING
AND MAINS FED DOMESTIC HOT WATER

INSTALLATION AND SERVICING INSTRUCTIONS

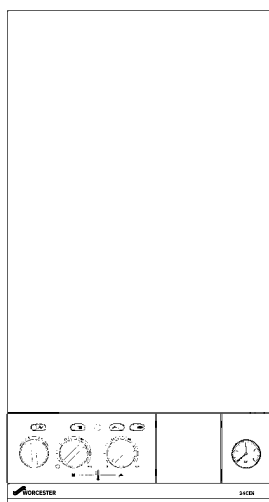

	24CDi	28CDi	35CDi II
GC NUMBER (N.G)	47 311 30	47 311 34	47 311 58
GC NUMBER (L.P.G.)	47 311 31	47 311 35	47 311 59



Worcester Bosch supports the
Benchmark code of practice

BOILER OUTPUT

Automatic Modulating Control

	Domestic Hot Water	Central Heating
24CDi	9 - 24kW	9 - 24kW
28CDi	9 - 28kW	9 - 24kW
35CDi II	9.5 - 35.3kW	10.5 - 27.5kW

IMPORTANT: THESE INSTRUCTIONS APPLY IN THE UK ONLY

THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER OR AT THE GAS METER

This appliance must be installed by a competent person in accordance
with the Gas Safety (Installation and Use) Regulations 1998

Contents

1. Installation Regulations	Page 2	11. Electrical	Page 10
2. General Information	Page 2	12. Installation	Page 13
3. Technical Data	Page 4	13. Commissioning	Page 17
4. Siting the Appliance	Page 6	14. Instructions to the User	Page 19
5. Siting the Flue Terminal	Page 7	15. Inspection and Servicing	Page 20
6. Air Supply	Page 7	16. Replacement of Parts	Page 21
7. Sealed Primary Systems	Page 8	17. Short Parts List	Page 27
8. Gas Supply	Page 8	18. Operational Flow Diagrams.....	Page 29
9. Open Vent Primary Systems	Page 9	19. Fault Finding	Page 31
10. Domestic Hot Water	Page 9	20. Conversion Instructions.....	Page 39

1. Installation Regulations

1.1 Gas Safety (Installation & Use) Regulations 1998: It is the law that all gas appliances are installed by a competent person in accordance with the above regulations. Failure to install appliances correctly could lead to prosecution. It is in your interest, and that of safety, to ensure compliance with the law.

1.2 The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

1.3 The compliance with a British Standard or European Norm does not, of itself, confer immunity from legal obligations.

1.4 The installation of the appliance must be in accordance with the relevant requirements of the Gas Safety Regulations, current IEE Regulations, Building Regulations, Building Standards (Scotland) and local water bye-laws.

1.5 The installation should follow the recommendations of the following British Standards unless otherwise indicated:

BS6798 - Specification for the installation of gas fired hot water boilers of rated input not exceeding 60kW (Gross).

BS5449 - Central heating for domestic premises.

BS5546:1 - Installation of gas hot water supplies for domestic purposes.

BS5440/1 - Flues and ventilation for gas appliances of rated input not exceeding 60kW (Gross): Flues.

BS5440/2 - Flues and ventilation for gas appliances of rated input not greater than 60kW (Gross): Air supply.

BS 5482 - Domestic butane and propane gas burning installations - permanent dwellings.

BS6891 - Installation of low pressure gas pipework installations up to 28mm (R1).

BS6700 - Domestic water supply in buildings.

BS7593 - Water treatment in domestic heating systems.

1.6. To ensure that the installation will perform to the highest standards, the system and components should conform to any other relevant standards.

1.7. The appliance and/or components conform, where applicable, with the Essential Requirements of the Gas Appliance Directive, the Boiler Efficiency Directive, the EMC Directive and the Low Voltage Directive.

1.8. In accordance with the requirements of COSHH the appliance does not contain any substances which are harmful to health.

1.9. Product Liability regulations indicate that, in certain circumstances, the installer can be held responsible, not only for mistakes on his part but also for damage resulting from the use of faulty materials. We advise that, to avoid any risk, only quality approved branded fittings are used.

1.10. LPG Installation. The appliance shall not be installed in a room or internal space below ground level when it is intended for use with LPG. This does not preclude the installation into rooms which are basements with respect to one side of the building but open to the ground on the opposite side.

1.11. The advice and instructions given in this document covers, as far as possible, the foreseeable situations which may arise. Contact Worcester Heat Systems Technical Department, Telephone: 08705 266241, for advice on specific installations.

2. General Information

2.1. General Information

2.1.1. The appliance is set to provide the maximum output for domestic hot water and a central heating load of 24kW (24/28CDi) or 27.5kW (35CDi II). The hot water flow rate is limited to a nominal 9 l/min (24CDi) or 10 l/min (28CDi) or 12 l/min (35CDi II) at a maximum temperature rise of 40°C.

2.1.2. The sanitary water section of the appliance is suitable for water mains pressures of up to 10bar.

2.1.3. Conversion kits are available to convert the appliance from Natural Gas to Propane operation and vice versa. The kits include conversion instructions.

2.2 Electrical Supply

Mains supply: 230V ~ 50 Hz. 180Watts.

External fuse: 3A (BS 1362). Internal fuses: T 2A (F1), and T 1.25A (F2).

2.3 Gas Supply

Check the data plate (located on the inner cover of the appliance) to ensure the appliance has been set up for the correct gas supply. The appliance can be set up for either of the following gases: Natural gas (G20) or Propane (G31). **A conversion kit including instructions is available to change the appliance from one gas to the other.**

The boilers require a gas flow in m³/h of:

	NG (G20)	LPG (G31)
24CDi	2.9	1.13
28CDi	3.3	1.3
35CDi II	4.16	1.6

The meter governor or regulator should deliver a dynamic pressure of 20mbar for natural gas or 37mbar for propane at the appliance, which is about 18.5mb or

35.5 mbar at gas valve inlet pressure test point.

The complete installation, including the gas meter (G20), must be tested for soundness and purged. Refer to BS 6891.

2.4 Packing

The appliance and flue components are packed in separate cartons.

2.5 Installation

The appliance is suitable for indoor installations only.

A wall-spacing frame to allow pipe runs behind the appliance is available.

An inlet water filter is fitted to the mains cold water inlet on the appliance.

The appliance is fitted with a system filling link assembly. See Page 8.

The appliance is suitable for connection to a sealed or open vented primary system (**35CDi II SEALED SYSTEM ONLY**).

Any specified ventilation openings made into a wall or compartment door must not be obstructed.

If the appliance is to be fitted into a compartment then the compartment must conform to the requirements of BS 5440:2.

Notwithstanding the instructions given in BS 5440:2, this appliance may be fitted in a compartment with no vents as long as the minimum clearances stated in Section 6: Air Supply, are maintained.

Do not place anything on top of the appliance.

The clearances specified for servicing must be maintained. Refer to Fig. 2.

2.6 Flue

The appliance has a multi-directional horizontal fanned flue system. The standard telescopic flue assembly accommodates flue lengths from 297mm to 725mm.

Extension flue lengths available are from 726mm up to 4000mm (24CDi) or up to 3000mm (28CDi and 35CDi II).

A vertical flue assembly kit is available.

Optional 45° and 90° flue bends are available.

A terminal guard, Type K2, GC 393 553, is available from Tower Flue Components, Vale Rise, Tonbridge, TN9 1TB.

Do not allow the flue terminal fitted to the outside wall to become obstructed or damaged.

A kit for the internal fixing of the flue is available separately.

2.7 Controls

The ON/OFF switch will turn the mains electricity on and off at the appliance.

Note: There is still a live connection to the appliance.

The electronic control system and gas valve modulate the heat input in response to the central heating and domestic hot water temperature settings.

The Central Heating Temperature control knob provides for the selection of domestic hot water only (turned fully anti-clockwise) or central heating and domestic hot water (turned clockwise).

The position of the Domestic Hot Water control knob will determine the temperature of the water delivered to the tap or shower or bath.

A choice of fascia mounted programmers are available as optional extras. A remote mounted programmer may be connected to the appliance.

The integral fascia displays indicate the status of the appliance.

There is provision for the connection of a mains voltage room thermostat and/or a frost thermostat.

The electronic controls prevent rapid cycling of the appliance in the central heating mode.

2.8 System Notes



IMPORTANT: Check that no dirt is left in the water pipework as this could cause damage to the appliance. Thoroughly flush the heating system and the cold water mains supply in accordance with the recommendations of BS7593: 1992.

Remove all system cleanser before adding any inhibitor.

The water pipe connections throughout a sealed system must be capable of sustaining a pressure of up to 3 bar.

Radiator valves must conform to the requirements of BS 2767:1991.

The relief valve discharge must be directed away from any electrical components or where it would cause a hazard to the user.

A drain cock to BS 2879 must be fitted to the lowest point of the system.

For circuit design purposes it is important that due note is taken of the information given in Table 3 relating to the available pump head.

2.9 Showers, Bidets, Taps and Mixing Valves

Hot and cold taps and mixing valves used in the system must be suitable for operating at the mains pressure.

Thermostatically controlled or pressure equalising shower valves will guard against the flow of water at too high a temperature.

If a pressure equalising valve is used, set the Domestic Hot Water temperature control knob to the 'MAX' position.

Hot and cold mains fed water can be supplied direct to an over-rim flushing bidet subject to local Water Company requirements.

With all mains fed systems the flow of water from the individual taps will vary with the number of outlets operated simultaneously and the cold water mains supply pressure to the property. Flow balancing using 'Ball-o-Fix' type valves is recommended to avoid an excessive reduction in flow to individual outlets. For further information contact Worcester Heat Systems Technical Helpline.

2.10 Safety Considerations

The appliance must not be operated in a waterless condition.

The appliance must not be operated with the boiler inner casing cover removed.

Work must not be carried out on the appliance without the gas and electricity supplies being switched off.

Checks must be made to ensure that, where applicable, the ventilation openings made into walls and partitions are of the correct size and are not obstructed.

IMPORTANT: Where back-flow prevention devices, including water meters, are fitted the expansion of hot water into cold water main can be prevented. This can result in a pressure build-up that may cause damage to the boiler and household devices such as showers, washing machines etc.

In these cases we recommend that a mini-expansion vessel be fitted adjacent to the boiler in the cold water pipe.


2.11 Operation

Domestic Hot Water: With a demand for hot water the burner will light at its maximum setting and then automatically adjust its output to maintain the temperature of the delivered water. When hot water is no longer required, the burner will extinguish. The fan and pump may continue to run for a short period to dissipate the residual heat from the appliance.

Central Heating: With a demand for heating the burner will light at its minimum setting and gradually increase to give the maximum output. The output of the appliance is then automatically adjusted to maintain the temperature of the system. The output can reduce down to its minimum of setting. If the system no longer requires even the minimum output to maintain the desired room temperature the burner will extinguish. The fan and pump may continue to run to dissipate the residual heat from the appliance. The appliance will remain off for a fixed period of three minutes before re-lighting to automatically meet the system requirements.

Domestic Hot Water and Central Heating: The appliance will supply heat to the central heating system as required. A demand for domestic hot water at a tap or shower will override the central heating requirement for the period of the domestic hot water demand. When hot water is no longer required the appliance will return to the central heating state and its normal mode of operation. The fan may continue to run to dissipate the residual heat from the appliance as necessary.

Fig. 1. Appliance water flow diagram.

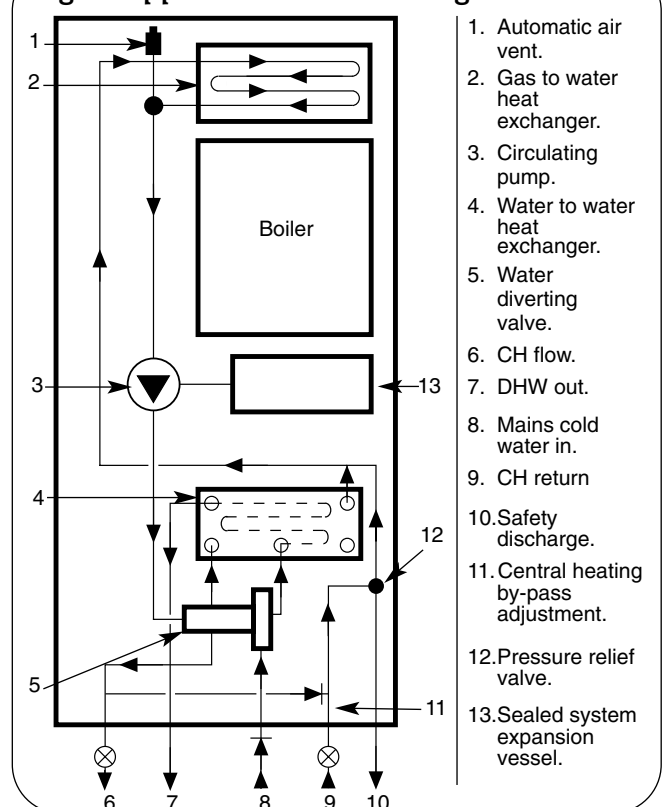

3. Technical Data

Table 1 Note: Gross Heat Input x 0.901 (NG) or x 0.922 (propane) = Net Heat Input.

NOMINAL BOILER RATINGS (10 minutes after lighting)	BOILER ADJUSTED FOR G20 (Natural Gas)			BOILER ADJUSTED FOR G31 (Propane)		
	24CDi	28CDi	35CDi II	24CDi	28CDi	35CDi II
MAX. OUTPUT (DHW) kW	24.0	28.0	35.3	24.0	28.0	35.3
MAX. INPUT (net) kW	27.0	31.5	39.2	27.0	31.5	39.2
BURNER PRESSURE mbar	14.8	15.5	13.5	35.5	35.5	34.7
GAS RATE m ³ /h	2.9	3.3	4.15	1.13	1.3	1.6
MAX. OUTPUT (CH) kW	24.0	24.0	27.5	24.0	24.0	27.5
MAX. INPUT (net) kW	27.0	27.0	30.1	27.0	27.0	30.1
BURNER PRESSURE mbar	14.8	10.8	8	35.3	24.3	21.3
GAS RATE m ³ /h	2.9	2.9	3.19	1.13	1.3	1.23
MIN. OUTPUT (DHW) kW	9.0	9.0	9.5	9.0	9.0	9.5
MIN. INPUT (net) kW	11.4	11.4	11.9	11.4	11.4	11.9
BURNER PRESSURE mbar	1.5	1.0	0.9	5.4	3.8	3.1
GAS RATE m ³ /h	1.2	1.2	1.26	0.46	0.5	0.49

Table 2.

FLUE DETAILS		
HORIZONTAL FLUE		mm
WALL HOLE DIAMETER	EXTERNAL FIX	110
	INTERNAL FIX	150
STANDARD FLUE (From flue outlet centre)	MIN UNCUT LENGTH	425
	MAXIMUM LENGTH	725
EXTENDED FLUE	MAXIMUM LENGTH 24CDi	4000
	28CDi and 35CDi II	3000
FLUE ASSEMBLY DIAMETER		100

Table 3

PUMP HEAD				
BOILER OUTPUT	HEAD	MIN. FLOW RATE		FLOW/ RETURN DIFFERENTIAL °C
kW	Metres	L/min.		
9.0	4.2	11.7		11°C
24.0	2.0	24CDi	20.5	12.5°C
		28CDi	28.5	12°C
27.5	1.9	35CDiII	28.5	12°C

Table 4

MECHANICAL SPECIFICATIONS		
CENTRAL HEATING FLOW - COMPRESSION		22mm
CENTRAL HEATING RETURN - COMPRESSION		22mm
COLD WATER INLET - COMPRESSION		15mm
DOMESTIC HOT WATER FLOW - COMPRESSION		15mm
GAS INLET		Rp 3/4
RELIEF VALVE DISCHARGE		15mm Copper Tube
	24/28CDi	35CDi II
CASING HEIGHT	850mm	850mm
CASING WIDTH	450mm	500mm
CASING DEPTH	360mm	370mm
WEIGHT - DRY	45kg	49kg
WEIGHT - MAXIMUM INSTALLATION	42kg	46kg
WEIGHT - PACKAGED	48kg	53kg

Table 5

PERFORMANCE SPECIFICATIONS				
PRIMARY WATER CAPACITY		2.0 litres		
MAXIMUM MAINS INLET PRESSURE		10 bar		
MINIMUM MAINS INLET PRESSURE (working) for max. hot water flow		1.2 bar		
MINIMUM MAINS INLET PRESSURE (working) to operate appliance		0.7 bar		
MAXIMUM CENTRAL HEATING FLOW TEMPERATURE		82°C nom		
MAXIMUM CENTRAL HEATING SYSTEM SET PRESSURE		1.5 bar		
DOMESTIC HOT WATER TEMPERATURE RANGE		50 - 62°C		
		24CDi	28CDi	35CDi II
OUTPUT TO DOMESTIC HOT WATER	NATURAL GAS (G20)	9.0 - 24 kw	9.0 - 28kw	9.5 - 35.3kw
	LPG - PROPANE (G31)	9.0 - 24 kw	9.0 - 28kw	9.5 - 35.3kw
OUTPUT TO CENTRAL HEATING	NATURAL GAS (G20)	9.0 - 24 kw	9.0 - 24kw	10.5 - 27.5kw
	LPG - PROPANE (G31)	9.0 - 24 kw	9.0 - 24kw	10.5 - 27.5kw
DOMESTIC HOT WATER SPECIFIC RATE AT 30° RISE		11.8 l/min	13.5 l/min	16.8 l/min
MAXIMUM DOMESTIC HOT WATER FLOW RATE FROM APPLIANCE AT 40° RISE		9.0 l/min	10 l/min	12 l/min
NOx CLASSIFICATION		Class 2		
SEDBUK*	NATURAL GAS	78.1% D	78.9% D	78.5% D
SEDBUK*	LPG - PROPANE	81% D	80.7% D	80.8% D

*The value is used in the UK Government Standard Assessment Procedure (SAP) for the energy rating of dwellings. The test data from which it has been calculated have been certified by the Gastec notified body.

Table 6a (24CDi)

DOMESTIC HOT WATER - TEMPERATURE RISE				
DISCHARGE RATE l/min	7	8	9	10
TEMPERATURE RISE °C	49	42.9	38.1	34.3

Table 6b (28CDi)

DOMESTIC HOT WATER - TEMPERATURE RISE				
DISCHARGE RATE l/min	7	8	9	10
TEMPERATURE RISE °C	57.3	50.2	44.6	40.1

Table 6c (35CDi II)

DOMESTIC HOT WATER - TEMPERATURE RISE				
DISCHARGE RATE l/min	9	10	11	12
TEMPERATURE RISE °C	57.3	50.2	44.6	40.1

Table 7

GAS SUPPLY SYSTEM - BASED ON NG (G20)			
TOTAL LENGTH OF GAS SUPPLY PIPE meters			
3	6	9	
GAS DISCHARGE RATE m ³ /h		PIPE DIAMETER mm	
8.7	5.8	4.6	22
18.0	12.0	9.4	28

Table 8

CLEARANCES (mm)		
	INSTALLATION	SERVICE
ABOVE APPLIANCE FLUE ELBOW	30	30
IN FRONT OF APPLIANCE	600	600
BENEATH APPLIANCE	200	200
RIGHT AND LEFT HAND SIDE	10	10

Table 9

SYSTEM CAPACITY WITH A 10 LITRE VESSEL			
TOTAL SYSTEM VOLUME litres			
INITIAL PRESSURE bar	INITIAL CHARGE PRESSURE bar		
	0.5	1.0	1.5
1.0	72	92	n/a
1.5	39	53	64

4. Siting The Appliance

4.1 The appliance may be installed in any room although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations BS 7671 and, in Scotland, the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of appliances in rooms containing baths or showers.

Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control using mains electricity must not be able to be touched by a person using the bath or shower.

4.2 The appliance is not suitable for external installation.

4.3 The appliance does not require any special wall protection.

4.4 The wall must be capable of supporting the weight of the appliance. See Table 4.

4.5 The specified clearances must be available for installation and for servicing. See Fig. 2. and Table 8.


4.6 The appliance can be installed in a cupboard used for airing clothes provided that the requirements of BS 6798 and BS 5440:2 are maintained.

Notwithstanding the instructions given in BS 5440:2, this appliance may be fitted in a compartment with no vents as long as the minimum clearances stated in Section 6: Air Supply, are maintained.

4.7 An airing space must be separated from the boiler space by a perforated non-combustible partition. Expanded metal or rigid wire mesh are acceptable provided that the major dimension is less than 13mm. See BS 6798.

4.8 The distance between the inner face of a cupboard door and the cabinet front should not be less than 75mm.


Fig. 2. Appliance casing dimensions and required clearances.

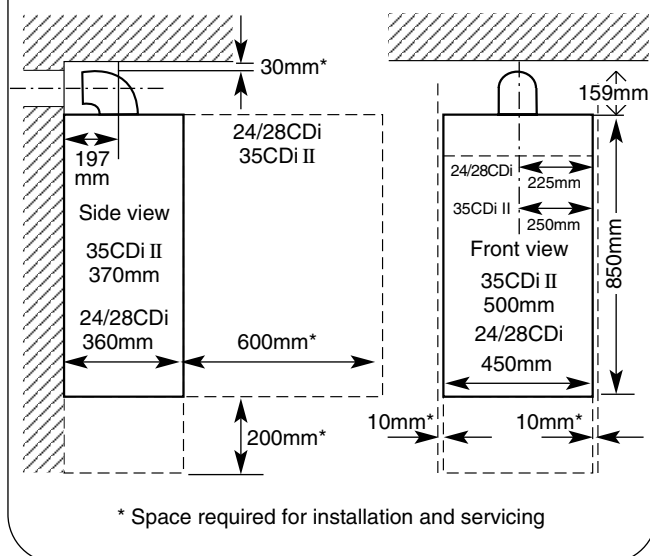

4.9 The pipe connection positions on the manifold are shown in Fig.3 allowing the system to be pre-piped and flushed before the appliance is fitted. Always consider the possible need to disconnect the pipes from the appliance after installation.

4.10 LPG Installation: The appliance shall not be installed in a room or internal space below ground level when it is intended for use with LPG. This does not preclude the installation into rooms which are basements with respect to one side of the building but open to ground level on the opposite side.

Fig. 3. Appliance pipework connections

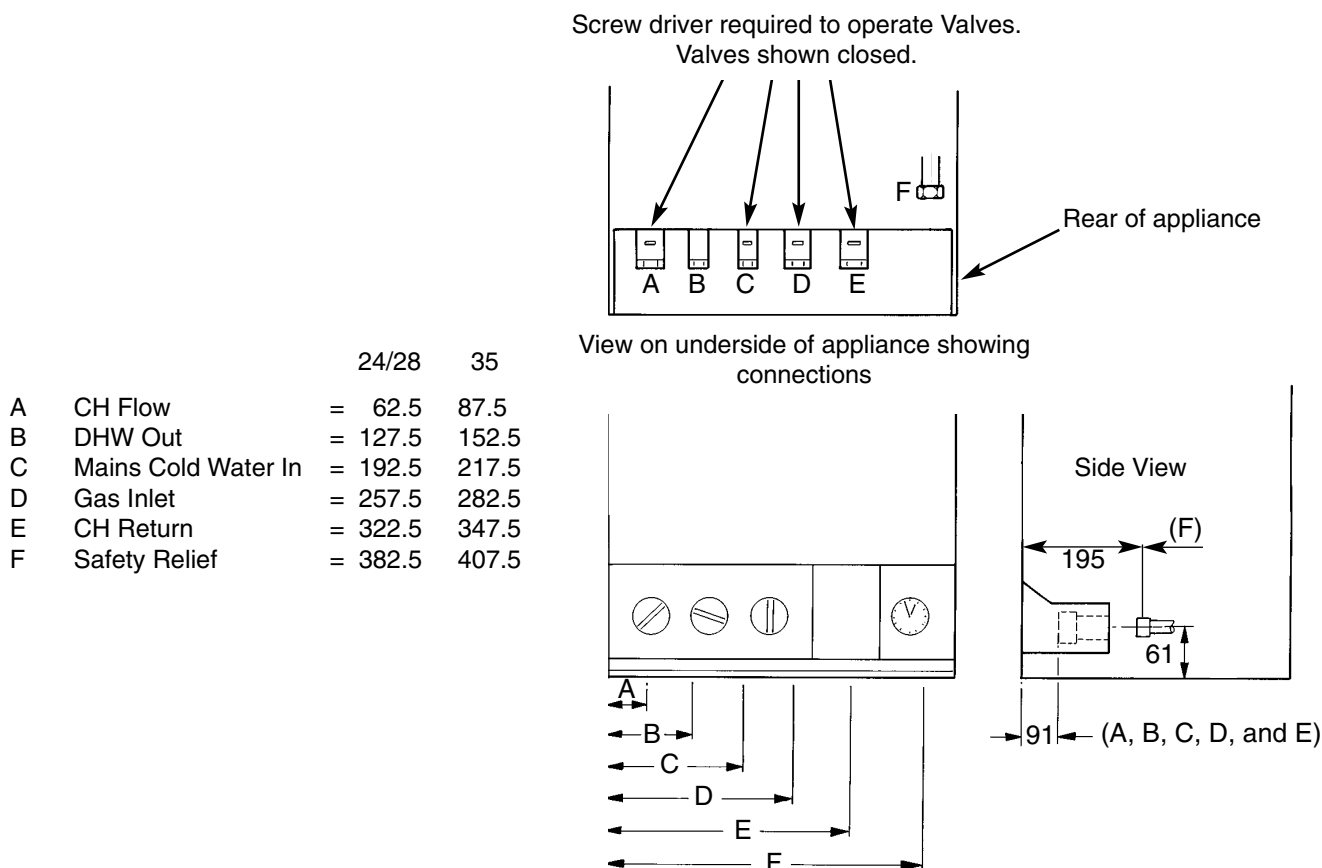

5. Siting The Flue Terminal

The flue system must be installed following the requirements of BS5440:1.

The standard uncut flue kit length is 425 - 725mm. Extension kits for flues up to 4m (24CDi), 3m (28CDi and 35CDi II) are available.

The terminal must not cause an obstruction nor the combustion products a nuisance.

A minimum of 75mm must be achieved where the terminal is near fusible or combustable materials such as a plastic drain pipe or guttering or carport roof UNLESS suitable heat shields are provided.

If the terminal is less than 2m above a surface to which people have access then a guard must be fitted. The guard must be evenly spaced about the terminal and fixed with plated screws. A guard Type K2 can be obtained from Tower Flue Components, Vale Rise, Tonbridge, TN9 1TB.

It is essential that products of combustion cannot re-enter the building. Refer to Fig 4.

6. Air Supply

6.1 The appliance does not require a separate vent for combustion air.

6.2 The appliance can be fitted in a cupboard or compartment with no vents for cooling but the minimum clearances must be increased to those given below. (**Note:** The clearance at the front is to removable panel, e.g. a door).

Above the flue turret	30mm
In front	250mm
Below	200mm
Right-hand side	75mm
Left-hand side	75mm

6.3 If the appliance is to be fitted in a cupboard or compartment with less clearance than those in the table above (minimum clearances are given in Section 4. Siting The Appliance) then permanent air vents for cooling are required. One at high level and one at low level, either direct to outside air or to a room. Both vents must pass to the same room or be on the same wall to the outside air.

6.4 The minimum free areas required are given below.


POSITION OF AIR VENTS	AIR FROM THE ROOM			AIR DIRECT FROM OUTSIDE		
	24CDi	28CDi	35CDi II	24CDi	28CDi	35CDi II
HIGH LEVEL	270 cm ²	315 cm ²	393 cm ²	135 cm ²	158 cm ²	197 cm ²
LOW LEVEL	270 cm ²	315 cm ²	393 cm ²	135 cm ²	158 cm ²	197 cm ²

6.5 Refer to BS 6798 and BS 5440:2 for additional information.

Fig. 4. Siting of the flue terminal.

TERMINAL POSITION	MIN. DISTANCE
A- Directly below an openable window or other opening e.g. air brick.	300 mm
B- Below gutters, soil pipes or drain pipes.	75 mm
C- Below eaves.	25 mm
D- Below balconies or car port roof.	25 mm
E- From vertical drain pipes and soil pipes.	25 mm
F- From internal or external corners.	25 mm
G- Above ground, roof or balcony level.	300 mm
H- From a surface facing a terminal.	600 mm
I- From a terminal facing a terminal	1200 mm
J- From an opening in a car port (e.g. door window) into dwelling.	1200 mm
K- Vertically from a terminal on the same wall.	1500 mm
L- Horizontally from a terminal on the same wall.	300 mm
M- From door, window or air vent .	300 mm

Advice should be taken if the terminal is in close proximity to surfaces which may be of plastic materials i.e. car-ports, gutters etc.

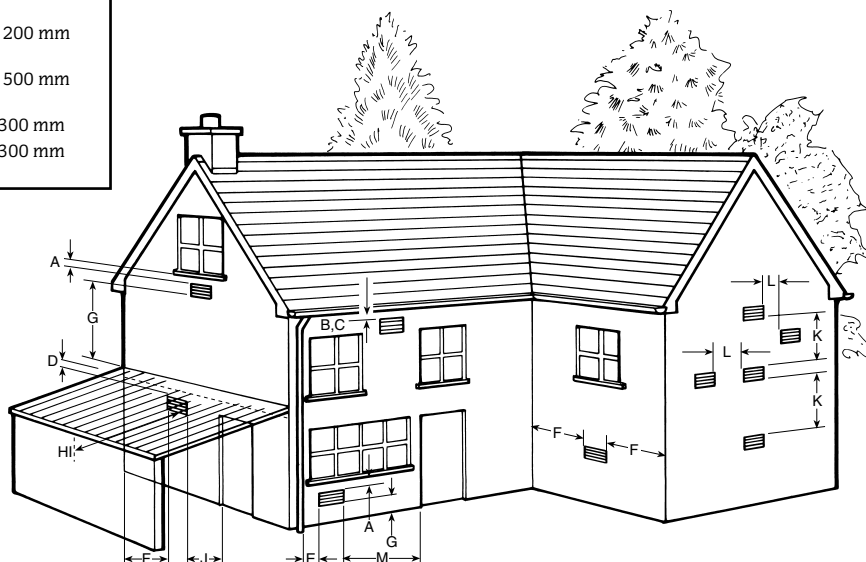

7. Sealed Primary Systems

See Figs. 5, 6 and 6a

7.1 The system must comply with the requirements of BS 6798 and BS 5449.

7.2 The appliance must not be operated without the system being full of water, properly vented and pressurised.

7.3 The pressure relief valve operates at 3 bar (45lb/in²). The discharge must be directed away from electrical components or where it might be a hazard to the user.

7.4 The pressure gauge indicates the system pressure which must be maintained.

7.5 The 10 litre expansion vessel is charged to 0.5 bar and is suitable for a static head of 5 metres (17.5ft). The pressure can be increased if the static head is greater than 5 metres (17.5ft).

7.6 With an initial system pressure of 0.5 bar, a system capacity of about 72 litres can be accommodated. Refer to BS 7074 for more information. The charge pressure can be increased but with a decrease in system volume.

7.7 The appliance includes a system filling link.

7.8 Water loss must be replaced.

7.9 Repeated venting loses water from the system. It is essential that this water is replaced and the system pressure maintained. Refer to Section 13 Commissioning.

7.10 Connections to the mains water supply must not be made without the authority of the local Water Company.

7.11 The pump is set at maximum and must not be adjusted.

7.12 Connections in the system must resist a pressure of up to 3bar.

7.13 Radiator valves must conform to BS2767:10.

7.14 Other valves used should conform to the requirements of BS1010.

7.15 No special system inhibitor is needed.

8. Gas Supply

8.1 The boilers require a gas flow in m³/h of:

	NG (G20)	LPG (G31)
24CDi	2.9	1.13
28CDi	3.3	1.3
35CDi II	4.16	1.6

Check that the supply system can accommodate this together with any other appliances connected to it. Refer to Table 7.

8.2 A natural gas appliance must be connected to a governed meter.

8.3 There must be a pressure of 20mbar (G20) or 37mbar (G31) at the inlet to the appliance. This is equivalent to a pressure of 18.5 - 19.0mbar (G20) or 35 - 35.5mbar (G31) at the inlet pressure tapping on the gas valve.

Fig. 5. Sealed primary water system.

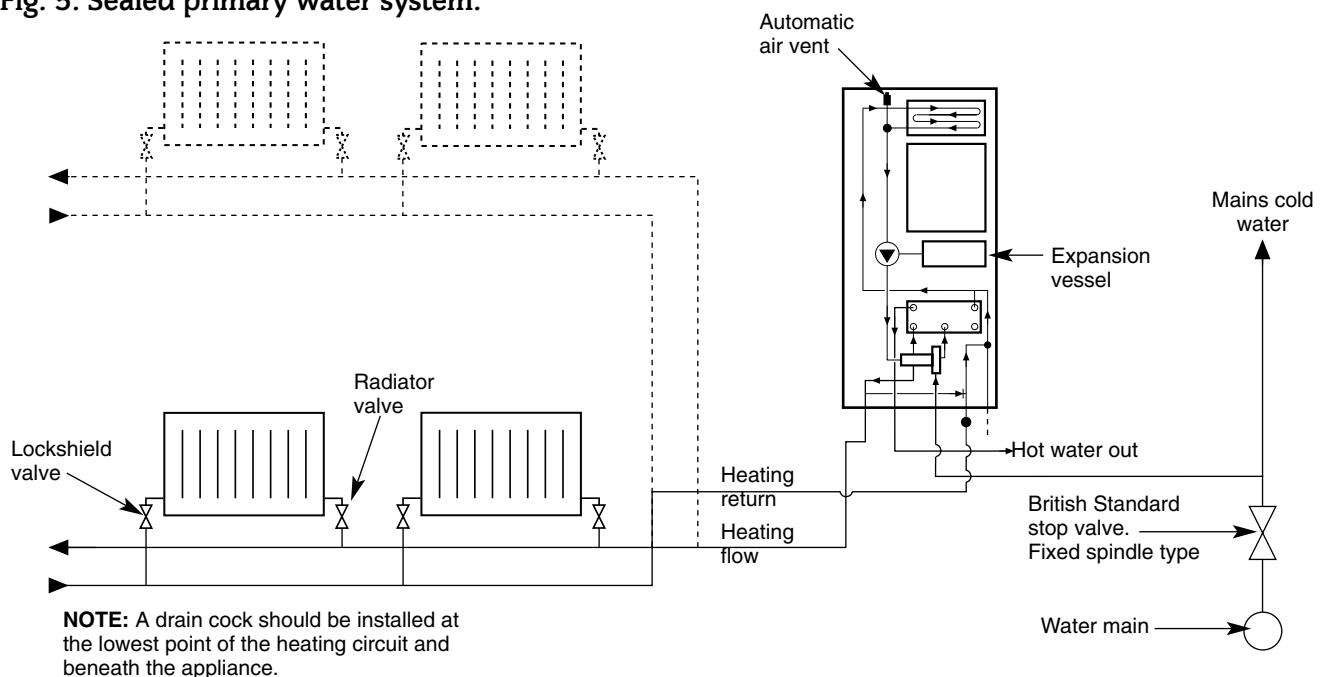


Fig. 6. Filling Loop.


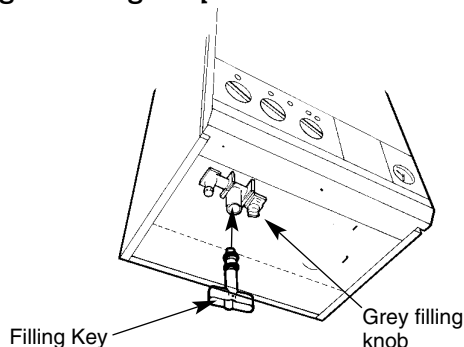


Fig. 6a. Filling Key inserted for filling.

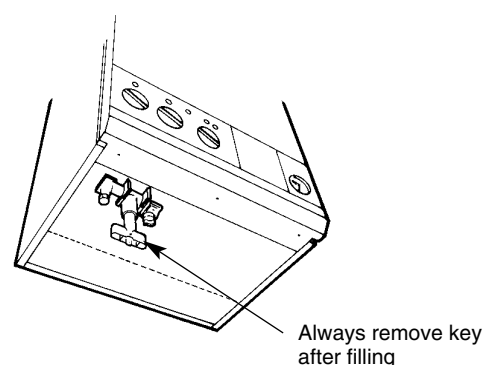

9. Open Vent Primary Systems

9.1 The size of the flow and return pipework is given in Section 3 – Table 4. The components required to connect the appliance to an open vent system are available as an optional extra kit.

9.2 The feed and expansion cistern should be arranged so that there is a minimum static head of 0.3 metres (12 inches) above the top of the appliance or above the highest point in the heating circuit, whichever is the higher. See Fig. 7

9.3 The feed and vent pipe should be 22mm diameter and rise continuously from the appliance to the feed and expansion cistern.

9.4 A pressure relief valve is not required on an open vented system.

9.5 Air within the appliance will be expelled via the feed and vent connection or dissipated into the rest of the system which must be fitted with manual air vents at any high point.


9.6 The pump is set to maximum and must not be reset.

9.7 If it is required to use the appliance for domestic hot water before the central heating circuit is connected, a 22mm copper by-pass must be connected between the central heating flow and return. Refer to Section 12 and Fig. 7.

N.B: 35CDi II IS NOT SUITABLE FOR OPEN VENT SYSTEMS.

Fig. 7. Open vent water system.

Static Head (S.H.): Minimum static head 0.3m (12ins) measured from the top surface of the appliance or the highest point in the heating system to the water level in the feed and expansion tank.

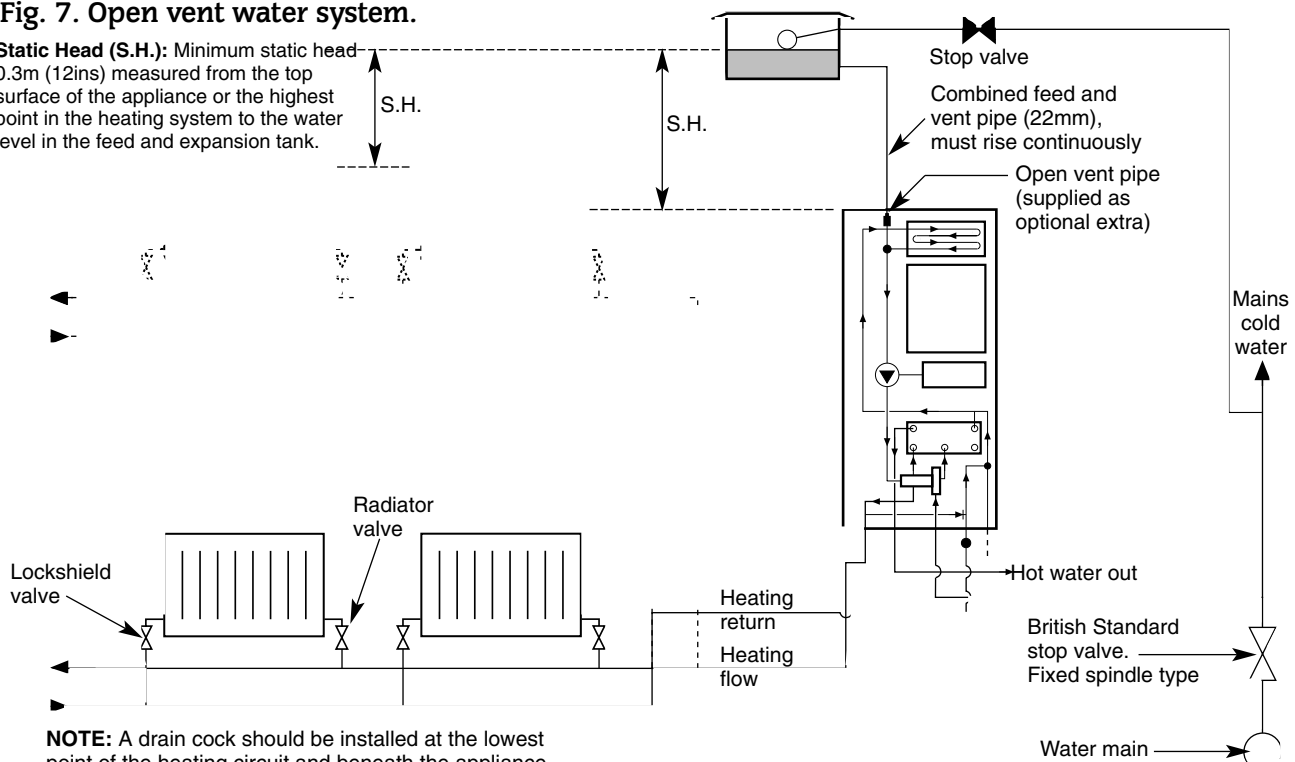

10. Domestic Hot Water

10.1 The following are general requirements and, if necessary, reference should be made to the local Water Company before fitting the appliance.

10.2 MAINS COLD WATER INLET. Devices capable of preventing the flow of expansion water must not be fitted unless separate arrangements have been made. An expansion vessel connection point is provided within the appliance. An Rc1/8" connection is provided. A mini expansion vessel kit is available from Worcester Heat Systems Ltd. A thread sealant compatible with potable water must be used. Refer to Section 2.9.

10.3 The final 600mm of the mains cold water connection to the appliance should be made in copper tube only.

10.4 The appliance is suitable for a mains pressure of up to 10 bar.

10.5 The appliance is fitted with a mains supply isolating valve.

10.6 The maximum domestic hot water flow rate is 9.0 litres/min ($\pm 15\%$) 24CDi or 10.0 litres/min ($\pm 15\%$) 28CDi or 12.0 litres/min ($\pm 10\%$) 35CDi II.

10.7 In winter (when the mains inlet water temperature is lower) a reduced flow rate at the taps may be required to achieve the hot water delivery temperature available in warmer weather.

10.8 It is suggested that long pipe runs to the taps or shower should be insulated to prevent the rapid cooling of domestic hot water after a tap or shower has been turned off.

10.9 Hot and cold taps and mixing valves used with this appliance must be suitable for operating at mains pressure and temperatures of 65°C.

10.10 No anti-siphonage arrangements are necessary except for some loose head showers. See Clause 12.

10.11 Thermostatically controlled or pressure equalising shower valves will guard against the flow of water at too high a temperature.

10.12 The head of a loose head shower must not fall closer than 25mm (1in) above the top edge of the bath to prevent its immersion in bath water. Alternatively the shower must be fitted with an anti-siphonage device at the point of the flexible hose connections.

10.13 The supply of hot and cold mains water direct to a bidet is permitted, subject to local Water Company requirements, provided that the bidet is of the over-rim flushing type. The outlet(s) should be shrouded and unable to have any temporary hand held spray attached. No anti-siphonage arrangements are necessary.

10.14 As the maximum temperature of the Water to Water heat exchanger is limited by the control circuit, there is normally no need for water treatment to prevent scale accumulation. In exceptional circumstances a device to prevent scale formation can be fitted.

Installation of a scale inhibitor assembly should be in accordance with the requirements of the local Water Company. An isolating valve should be fitted to allow servicing. The water hardness can be determined using a standard test paper or by reference to the local Water Company.

11. Electrical

11.1. Mains supply : 230V ~ 50Hz, 180watts. External fuse 3A, Internal fuses F1 - 2A, F2 - 1.25A (20mm). Spare internal fuses are supplied with the appliance. Refer to Fig 14.

11.2. The appliance must be earthed. It must be possible to completely isolate the appliance.

11.3. The mains cable must be 0.75mm² (24x0.20 mm) to BS6500-Table 15 or 16.

11.4 The mains cable must be connected to the terminal ST12 marked L (red or brown lead), N (black or blue lead) and the Earth stud (green or green/yellow lead) and secured with the cable clamp. Check that sufficient loose lead has been left to allow access to the control box. The Earth lead must be still be slack when the other leads are taut. Refer to Fig 8.

11.5. The connection to the mains must be either: A 3A fused three-pin plug and unswitched socket outlet, both complying with BS1363 or a double pole isolator with a contact separation of 3mm in all poles and supplying the appliance and controls only.

11.6. Access to the mains connection on the driver board is gained by removing the bottom cover from the facia. Refer to Fig 12.

11.7. A room thermostat or an externally mounted programmer must be suitable for mains voltage operation and the leads securely fixed in the clamps provided. The controls must be earthed at the connection on the control board. Refer to Fig 11 and 13.

11.8. A choice of programmers, to fit into the facia, are available to control the CH. Full instructions are sent with the programmer. Refer to Fig 15.

11.9. On very rare occasions an external frost thermostat might be considered where parts of the system are remote from the appliance. Refer to Worcester Heat Systems Technical Department for more information - Tel: 08705 266241.

11.10. A radio frequency room thermostat is available for use with the appliance.

11.11. **Safety Check:** If there is an electrical fault after installation check for fuse failure, short circuits, incorrect polarity of connections, earth continuity or resistance to earth.

Fig. 8. Mains electricity connections.



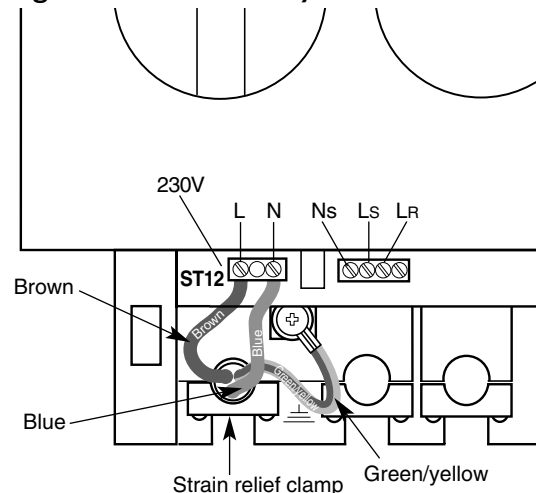


Fig. 9. Wiring diagram.

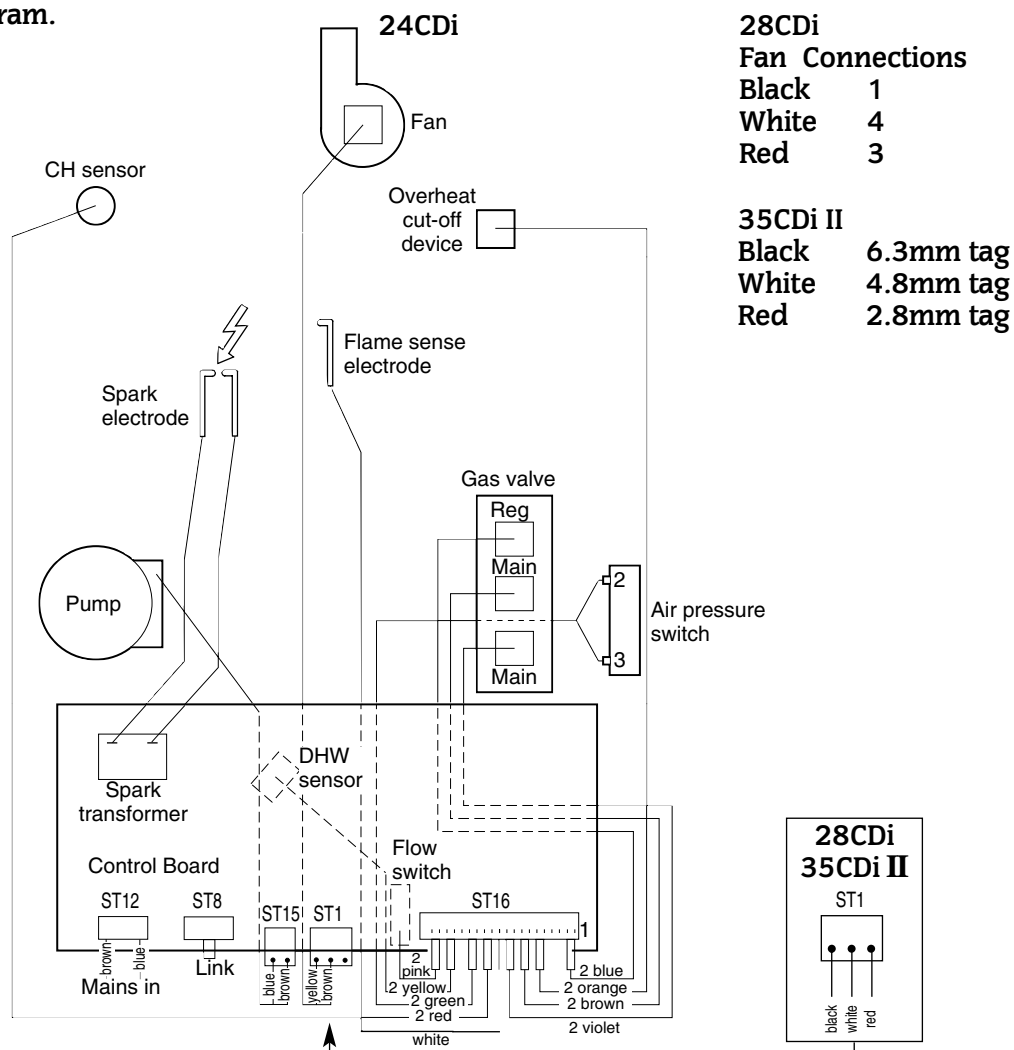


$$Z$$


Fig 11 - Electrical Connections

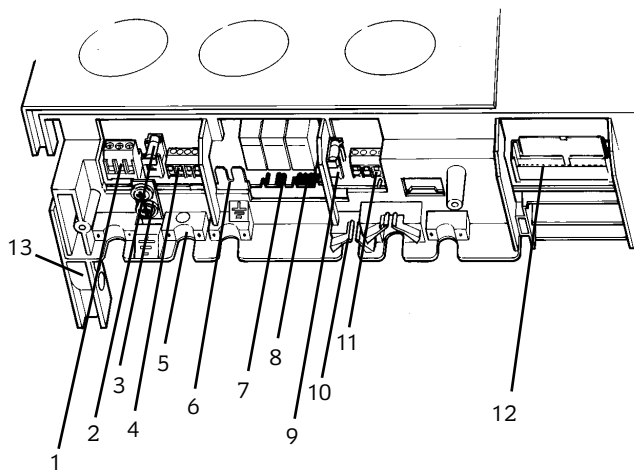

- | | |
|--|-------------------------------|
| 1. ST12-Mains | 9. Fuse-F2 |
| 2. Fuse-F1 | 10. Cable Entry Clamp |
| 3. Earth Screw | 11. ST13-24volt Controls |
| 4. ST8-Room Thermostat and External Control -Mains Voltage | 12. Main Harness and Clamp |
| 5. Cable Entry Screw Clamp | 13. Control Panel Pivot Point |
| 6. Earth Tag | |
| 7. ST15-Pump | |
| 8. ST1-Fan | |

Fig 12 - Facia Connections Cover

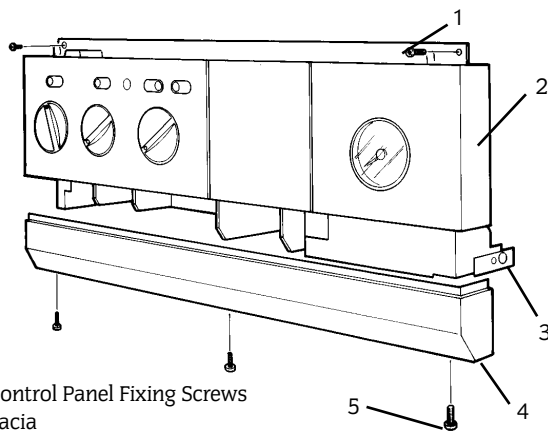

- | |
|-----------------------------------|
| 1. Control Panel Fixing Screws |
| 2. Facia |
| 3. Control Panel Pivot Point |
| 4. Connection Cover |
| 5. Connection Cover Fixing Screws |

Fig 13 - Mains Voltage External Controls Connections




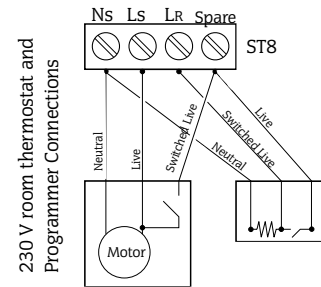


Fig 14 - Replacement Fuses

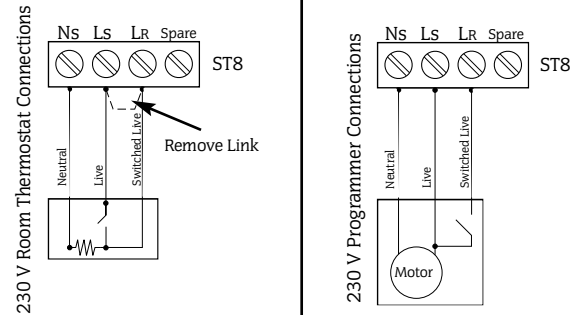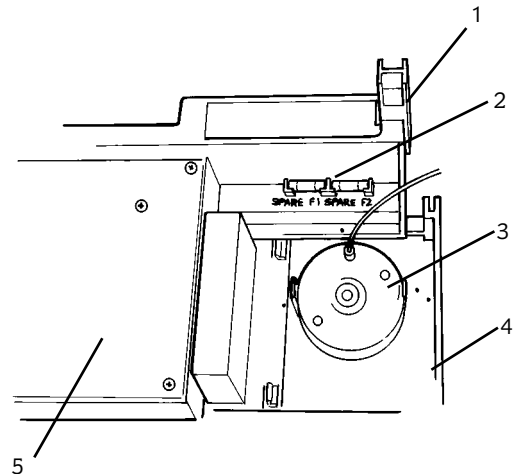

- | | |
|------------------------------|---------------------------|
| 1. Control Panel Pivot Point | 4. Facia Panel |
| 2. Fuses-F1,F2 | 5. Control Board Assembly |
| 3. Pressure Gauge | |

Fig 15 - Programmer Connection

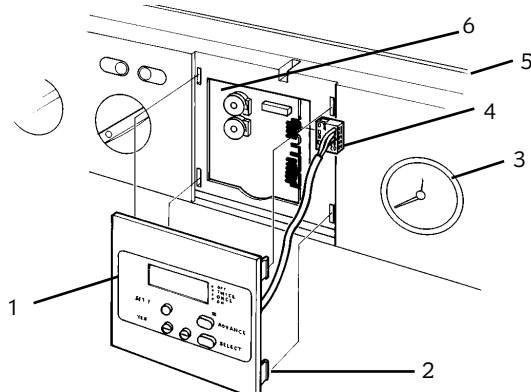

- | | |
|---------------------------|-------------------------|
| 1. Programmer | 4. Programmer Connector |
| 2. Programmer Fixing Clip | 5. Facia |
| 3. Pressure Gauge | 6. Control Board |

12. Installation

Read this section fully before starting the Installation.

12.1 General.

The appliance is supplied suitable for fitting to a sealed system. If it is to be fitted to an open vent system refer to Section 9.

The flue must be installed in accordance with BS5440:1.

An optional wall spacing frame is available to allow pipework to be run behind the boiler.

12.2 Unpacking and Appliance Preparation.

Remove all the packaging from the appliance.

Using the two M4 thread-forming screws supplied in the hardware pack assemble the wall-plate cross members to the pre-plumbed manifold. Refer to Fig 16.

12.3 Site Preparation

Check that the wall is sound, flat and will support the weight of the appliance. Refer to Table 4.

Check that the position chosen for the appliance is in accordance with the instructions given in Section 4 and 5.

Ensure that the plastic cover over the valves and 'O' rings is left in place. The cover will protect the valves and 'O' rings against the ingress of dirt and dust.

12.4 Fixing Holes and Flue Opening

Hold the wall-plate to the wall. Check that the plumbing manifold is level.

Mark the position of the fixing holes. Two at the top and two on the plumbing manifold.

Mark the position of the appliance centre-line from the 'V' formed by the wall-plate cross-member. Refer to Fig 16.

Mark a horizontal line across the top of the plumbing manifold. Refer to Fig 16.

Rear Flue:

Draw a vertical line through the centre point marked on the wall. Measure 820mm upwards from the horizontal line marked on the wall along the vertical line and mark the point. This is the rear flue hole centre point position. Refer to Fig 16.

Side Flue:

Extend a line horizontally from the rear flue hole centre point along the appropriate wall.

Measure 197 mm from the junction of the walls and mark

a vertical line. Extend horizontally the side flue line to intersect the vertical line to give the position of the side flue hole.

NOTE: If the optional wall spacing frame is used then the 197mm dimension should be increased by 35mm (see instructions supplied with frame).

Check the position and alignment of the holes before drilling the fixing holes (60mm deep for N°12 plugs) and the flue holes Ø110 for external fitting and Ø150 for internal fitting). Ensure that the flue hole is horizontal through the wall. Refer to Fig 16.

12.5 Wall-mounting Plate and Manifold

Fit the plugs and fix the plate/manifold assembly to the wall.

Check that the assembly is properly aligned before tightening the screws.

12.6 Gas and Water Pipes

Remove and discard the plastic cover protecting the valves and 'O' rings. Check that the 'O' rings are fitted and that they are clean and lubricated.

Remove the gas cock, fix the appropriate fitting to connect to the inlet pipe and replace.

Connect the water connections to the manifold. Refer to Fig 3.

Pre-plumbing is not advised if no movement in the pipework is possible.

Pipework can only run horizontally outside the limits of the casing. It is important that the pipes are not fixed near the appliance using clips that put a strain on the connections.

Before the appliance is fitted to the wall the primary system and the mains supply must be thoroughly flushed and treated in accordance with the recommendations of BS7593:1992.

12.7 Install the Boiler

Slide the appliance onto the pre-plumbing manifold ensuring that the three pegs are located correctly.

Secure with two M6 nuts and washers at the top and screw the appliance to the manifold at the bottom using the three retaining caps and M6 bolts. Refer to Fig 17.

Unscrew and discard the automatic air vent cap. Refer to Fig.18.

Lower the facia. Refer to Fig 12.

Fit a discharge pipe to the relief valve leading it away from any electrics or where it may be a hazard. The pipe must not be less than 15mm in diameter and must run continuously downwards outside the appliance.

Fig. 16 . Fixing the wall mounting plate.

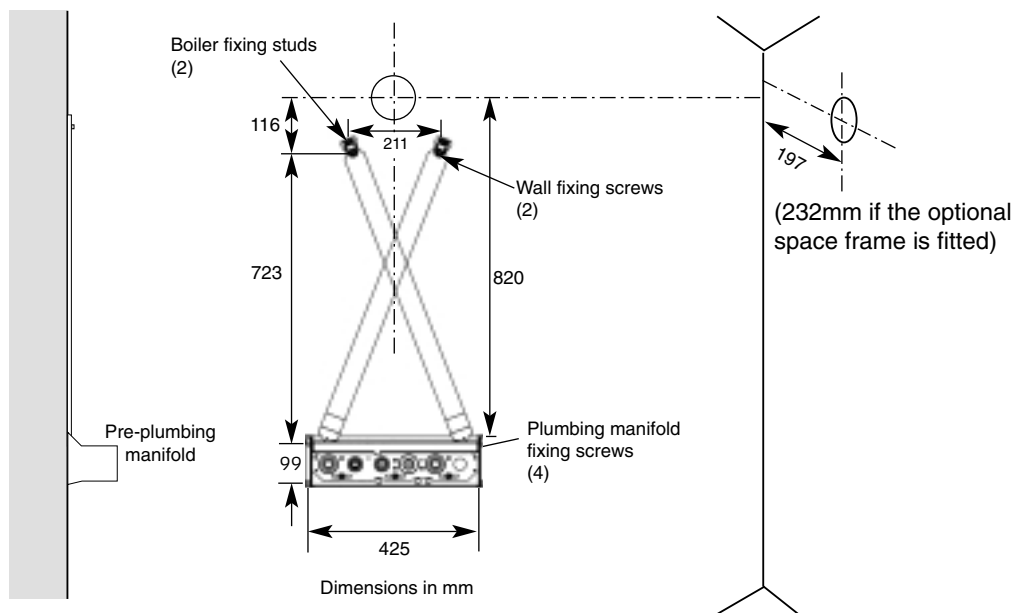


Fig. 17. Fixing the appliance to the wall mounting plate.

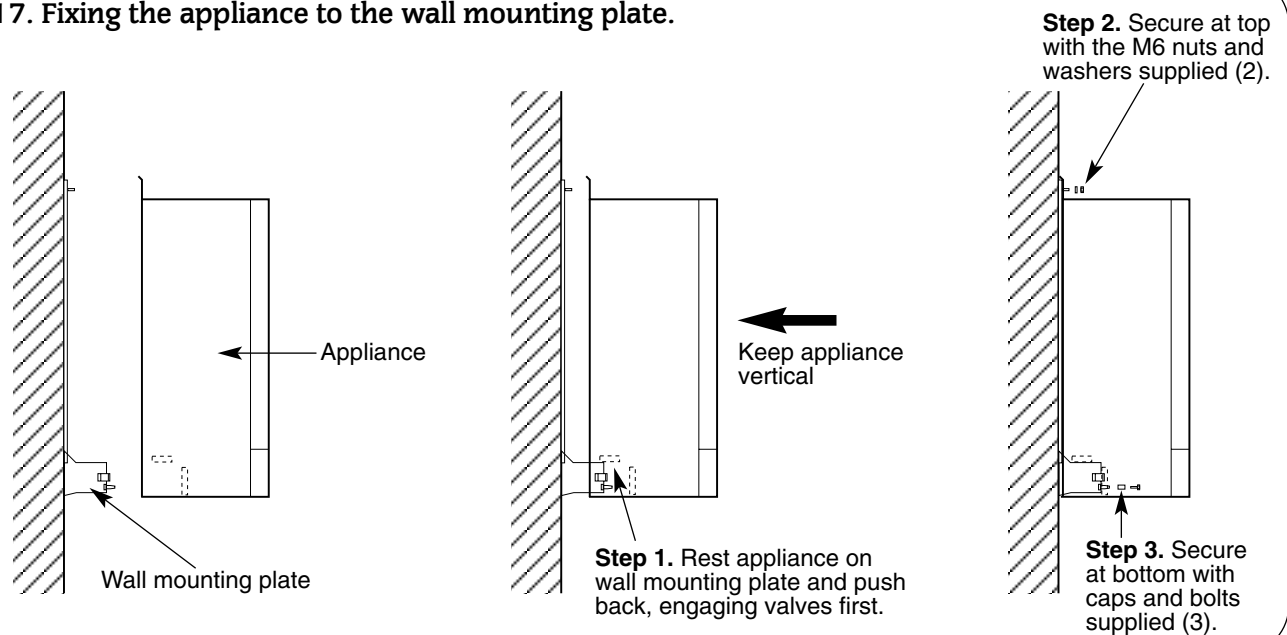


Fig. 18. Flue turret fixing and automatic air vent.

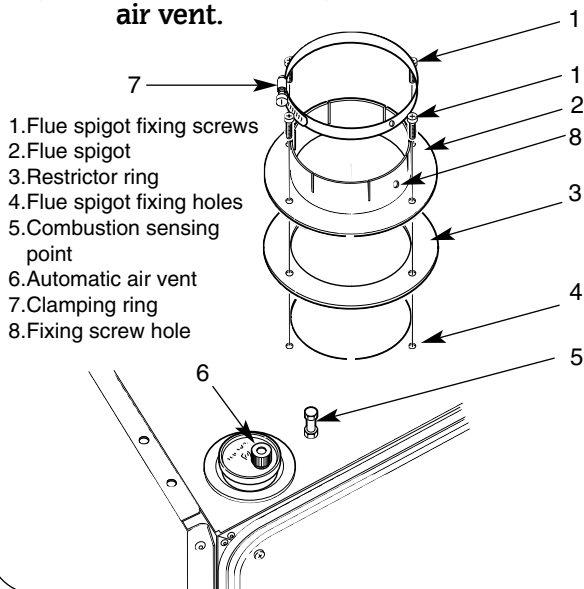


Fig. 19. Flue duct length (rear flue).


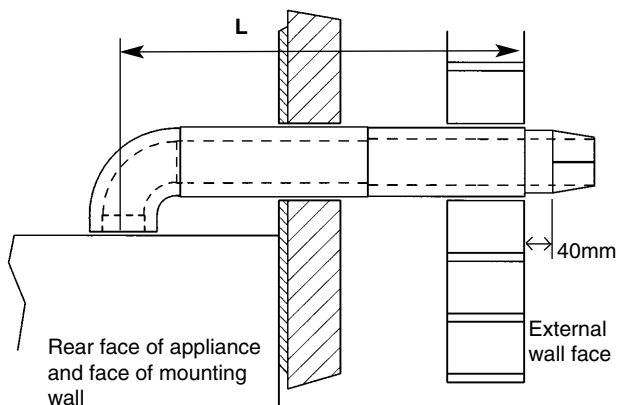


Fig. 20. Flue duct length (side flue).

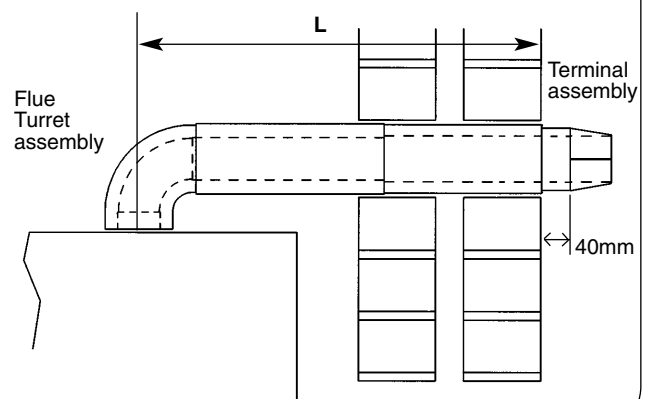

Remove the inner casing cover. Refer to Section 15.3.(b).

If the air/flue duct assembly is to be fitted from inside the building then the ducts must be cut to length, assembled and inserted through the wall now before fitting the flue elbow to the appliance. Refer to Section 12.10 following after the assembly of the flue ducts.

12.8 Air and Flue Duct Preparation.

The method of installation of the flue system may be varied to suit the actual site conditions. The instructions for connecting and fixing the ducts must, however, be strictly followed.

Unpack the flue spigot, restrictor ring and clamping rings from the Flue Spigot Kit in the boiler Installation Pack. Fit the spigot to the boiler top panel with the four screws provided in the Flue Spigot Kit.

IMPORTANT Check the maximum flue length and if it is less than 1m total overall length then fit the restrictor ring as shown in Fig. 18.

24CDi	75mm	Horizontal flue	up to 1m
28CDi	77mm	Horizontal flue	up to 1m
35CDi II	85mm	Horizontal flue	up to 1m

The standard uncut telescopic flue assembly is suitable for flues from 425mm up to 725mm measured from the centre-line of the boiler flue outlet to the outer face of the wall. Refer to Fig.19 & 20.

If $L > 725\text{mm}$ then extension duct kit/s will be required - each kit

extends the flue by 750mm up to a maximum of 4m. See table below.

EXTENSION	MAXIMUM FLUE LENGTH mm		
	24CDi	28CDi	35CDi II
1	1475	1475	1475
2	2225	2225	2225
3	2975	2975	2975
4	3725	3000	3000
5	4000		

12.9 Measure and Cut the Ducts.

General: Cut the ducts as necessary, ensuring that the ducts are square and free from burrs. Always check the dimensions before cutting. Measure the distance L. Refer to Fig.19 and 20.

The standard flue can be telescopically adjusted to any length between 425mm and 725mm.

Fix the flue assembly together using the self-tapping screws provided. Refer to Fig.21.

It will only be necessary to cut the standard assembly if $L < 425\text{mm}$. Cut the flue turret assembly and the terminal assembly by the same amount i.e $L = 350$ - remove 75mm from each assembly.

Minimum side flue length = 335mm (accommodating a 10mm Service clearance and a 100mm wall)

Minimum rear flue length = 297mm (accommodating a 100mm wall)

	24CDi	28CDi/35CDi II	
If L is between	1175 - 1475mm	1175 - 1475mm	(1 extension)
	1925 - 2225mm	1925 - 2225mm	(2 extension)
	2675 - 2975mm	2675 - 2975mm	(3 extension)
	3425 - 3725mm	N/A	(4 extension)
it is not necessary to cut the ducts.			

	24CDi	28CDi/35CDi II	
If L is between	725 - 1175mm	725 - 1175mm	(1 extension)
	1475 - 1925mm	1475 - 1925mm	(2 extension)
	2225 - 2675mm	2225 - 2675mm	(3 extension)
	2975 - 3425mm	2975 - 3000mm	(4 extension)
	3725 - 4000mm	N/A	(5 extension)

It is necessary to shorten the assembly by cutting the first extension duct assembly i.e. $L = 1000\text{mm}$ - remove 175mm from the air and flue ducts.

NOTE: Extension duct measurements do not include the socketed end. Unless specifically instructed the socketed end must not be removed.

Fix the flue ducts together before fixing the surrounding air duct, the cut ducts fit into the flue assembly.

12.10. Fitting the Flue Assembly with Access to the Terminal.

Prepare the flue duct assembly as described in Section 12.9.

Apply the plastic tape to the air duct in contact with the external brickwork.

From inside push the assembly through the wall. Align the flue turret and push fully onto the spigot on the appliance. Tighten the clamping ring and fix using the screw provided. Refer to Fig.24.

Make good the internal wall face and the external brickwork or rendering.

Replace the inner casing.

12.11 Fitting of the Flue Assembly without access to the Terminal.

NOTE: A larger diameter opening in the wall is required. Refer to Table 2.

Prepare the flue assembly as described in Section 12.9.

Fit the rubber sealing gasket centrally onto the terminal assembly and tighten the clamp. Refer to Fig. 23.

Apply the plastic tape to the air duct in contact with the external brickwork.

From inside push the assembly through the wall so that the gasket flange is against the outer face. Refer to Fig. 23.

It may be necessary to adjust the legs of the flue centring ring.

Align the flue turret and push fully onto the socket on the appliance. Tighten the clamping ring and fix using the screw provided. Refer to Fig 24.

Seal the gap around the duct at the inner wall face and make good.

Replace the inner casing.

Fig. 21. Flue turret, ducts and terminal assembly

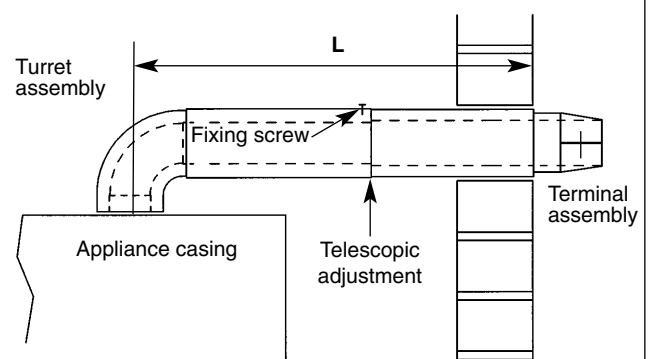


Fig.22. Flue assembly using extension kits.

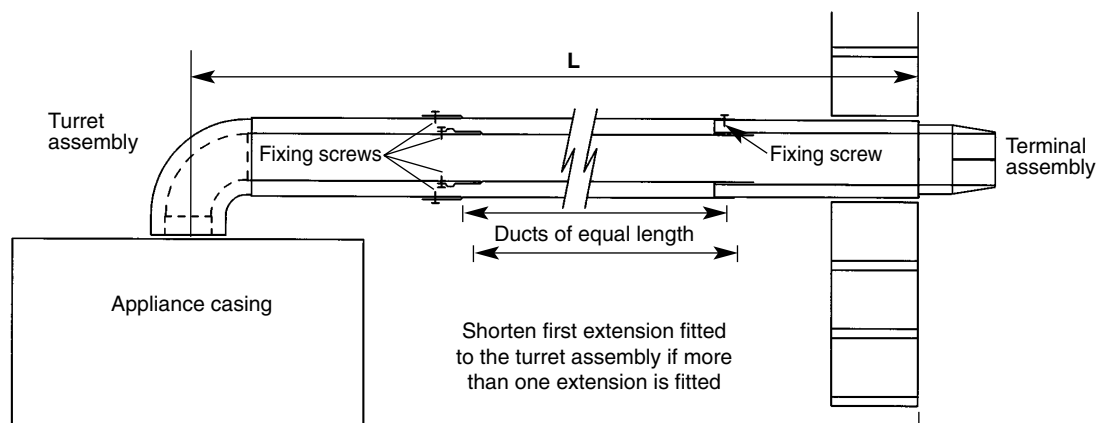


Fig.23 . Terminal assembly for internal fitting of the flue.



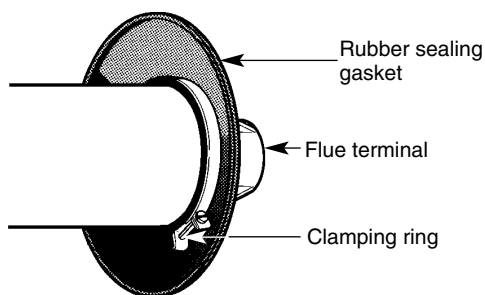


Fig.24 . Flue Turret Fixing .

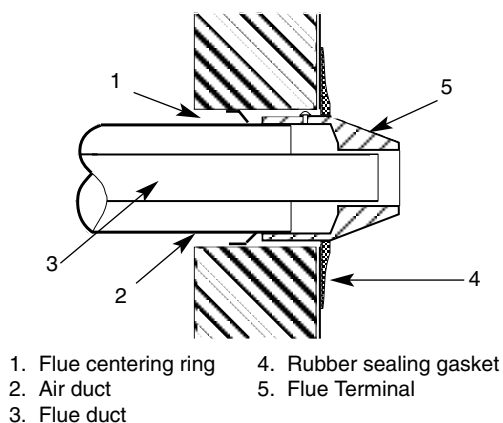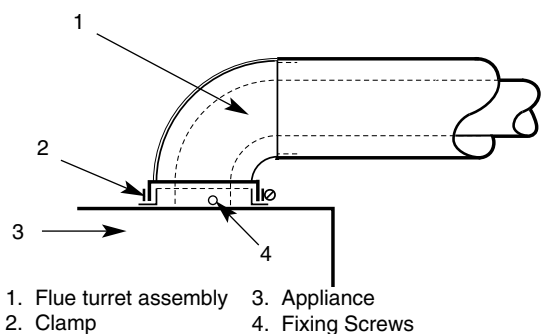

12.12. Flue Bends.

90° and 45° bends are available. A maximum of two bends may be used in addition to the first bend on the flue turret.

A 90° bend is equivalent to 750mm of straight duct.

A 45° bend is equivalent to 375mm of straight duct.

A maximum flue assembly of 3m is possible with 1 X 90° bend and 2m with 2 X 90° bends.

Measure the lengths X, Y and Z. Refer to Fig.25.

The maximum value of X using the turret assembly only is 506mm.

Reduce the ducts to the appropriate length i.e. $X = 406\text{mm}$, cut 100mm from the air duct and 120mm (to cover the entry into the 45° or 90° elbow) from the flue duct.

NOTE: The flue system ducts between the elbows, dimension Y, requires the socketed ends (of the first extension if two or more are used) to be removed and the air and flue tubes to be cut to the same length.

Cut the ducts to a length $Y = 162\text{mm}$. Refer to Fig.25.

The final section, dimension Z, of the flue system must include a section of plain duct assembly i.e. an extension assembly with the sockets removed. Reduce the final section, including the terminal assembly, by the appropriate amount i.e. Air duct $Z = 81\text{mm}$ and the flue duct $Z = 51\text{mm}$. Refer to Fig.25.

If $Z < 425\text{mm}$ it will be necessary to cut the air and flue ducts of the extension to a plain length of 100mm and reduce the length of the terminal assembly i.e. $Z = 350\text{mm}$ - remove 75mm from the terminal assembly.

If Z in $425 - 725\text{mm}$ it is not necessary to cut the terminal assembly or use a second extension duct as the length can be set telescopically.

If $Z > 725\text{mm}$ then two extension duct assemblies will be required, the first assembly being cut to length as plain tubes.

If more than two extension ducts are needed in any section to achieve the required length then the final section of the assembly must not be less than 325mm without cutting the terminal assembly.

NOTE: The flue duct of the final extension must be 30mm longer than the air duct.

Each section must be connected to the previous section of the flue bend by fixing the flue ducts together and then similarly fixing the air ducts which engage the elbows.

Fit the assembly as described in Section 12.10, 12.11. as appropriate.


Make good the internal and external brickwork or rendering.

12.13 Vertical Adapter for Horizontal Flues.

An adapter is available for an initial short section of vertical flue.

Measure and cut the flue as described in Section 12.12.

Fig. 25. Fitting the flue bends to the intermediate sections of the flue duct.

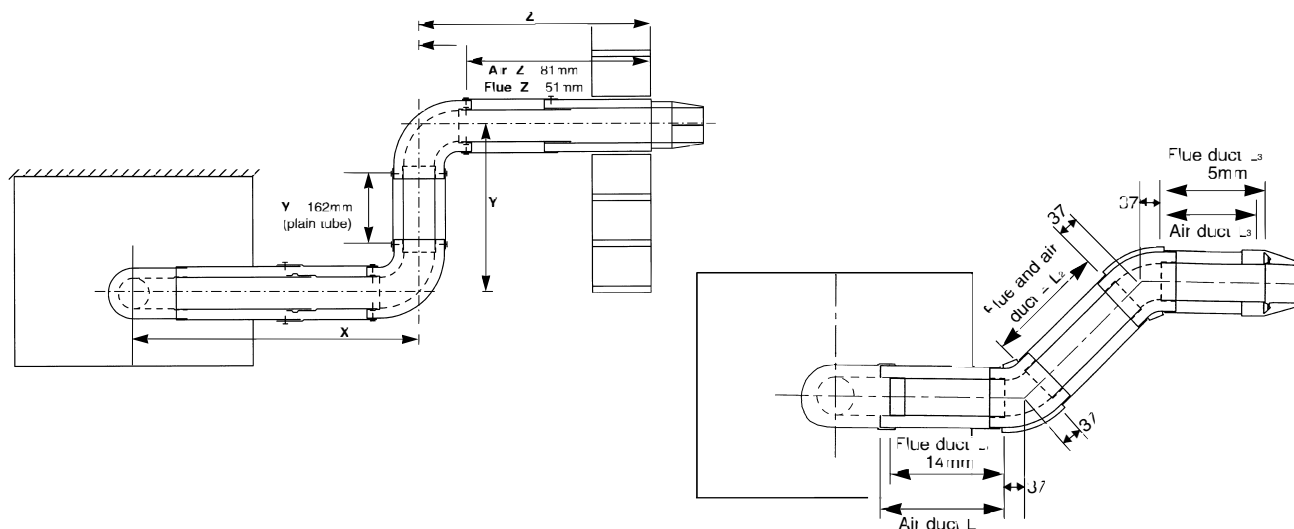

The first, vertical, section (equivalent to dimension X) is measured from the top of the boiler casing. Cut the vertical section of the extension duct to 167mm less than the measured distance. Do not remove the socketed ends.

The minimum measured distance is 167mm.

Seal the air duct to the turret using silicone sealant.

12.14 Completion of the Installation

Check that the gas and water connections have been tightened. Refer to Fig.3.

Fit the, optional, fascia mounted clock or programmer. Refer to the instructions sent with the control. Refer to Fig. 15.

Remove the fascia bottom panel. Refer to Fig.12.

Connect the mains electricity supply to the appliance at terminal ST12. Refer to Fig.8. The mains cable must be clamped.

Connect any room and/or frost thermostats, the electrical leads must pass through the appropriate space in the control panel and be fixed with the cable clamps provided. Refer to Fig.11.

Refit the fascia bottom panel.

Test the gas supply pipework to the appliance for soundness as indicated in BS6891.

If the appliance is not to be commissioned immediately, replace the cabinet front panel. Check that the gas supply, the electrical supply and the water connections are turned off.

If the appliance is to be filled and pressurised refer to Section 13, Commissioning for a full description.

If the premises are to be left unoccupied during freezing conditions then drain, or do not fill, the appliance and the system. For short periods commission the appliance, Refer to Section 13, and leave the appliance under the control of the built-in frost thermostat or remote frost thermostat (if fitted) or leave operating continuously with the room thermostat set at 6°C.

13. Commissioning



Benchmark Water Treatment: For optimum performance after installation, this boiler and its associated central heating system should be flushed in accordance with the guidelines given in BS7593:1992 - Treatment of water in domestic hot water systems. Full instructions are supplied with proprietary cleansers sold for this purpose. If an inhibitor is to be used after flushing, it should be used in accordance with the inhibitor manufacturers instructions.

Suitable flushing agents and inhibitors are available from Betz Dearborn Tel: 0151 4209563 and Fernox Tel: 01799 550811. Instructions for use are supplied with these products.

IMPORTANT: Any system cleanser must be flushed from the system before an inhibitor is added.

13.1 SUMMARY

The appliance is dispatched with the controls set to provide a maximum output for domestic hot water and central heating load of 24 kW (24/28CDi) or 27.5kW (35CDi II).

The appliance automatically modulates to satisfy lower heat loads.

Domestic Hot Water Circuit

Confirm that the mains water supply has been flushed out at installation. If not it will be necessary to disconnect the cold water inlet pipe from the appliance and thoroughly flush.

Central Heating System

Confirm that the system has been fully flushed out at installation using a flushing agent. Flush the system before starting to commission the appliance and, at the end of the commissioning procedure, add a suitable flushing agent and drain whilst hot. Immediately refill and re-pressurise.

Gas Service. The complete system, including the meter, must be inspected and tested for soundness and purged as indicated in BS 6891. In the event of a leak, or suspected leak, at the 'O' ring joint on the main appliance manifold, connect a manometer to the test point on the inlet of the multifunctional gas valve. A soundness test carried out after turning off the appliance gas cock will test the section

between the gas cock and the gas valve, thus enabling the leak to be traced to either a visible joint or to the 'O' ring.

13.2 APPLIANCE AND CENTRAL HEATING SYSTEM PREPARATION

Remove the cabinet front panel.


Check that the electrical supply and the gas service to the appliance are off.

Check that all the water connections throughout the system are tight.


Open the system valves at the appliance. Open all the radiator valves, fill the system and vent each radiator in turn.

Remove the bottom panel to gain access to the filling loop assembly. Refer to Section 15.3d The grey knob for the filling loop is packed in the hardware pack and

Fig. 26. Appliance Casing, Facia Controls and Location of Equipment.

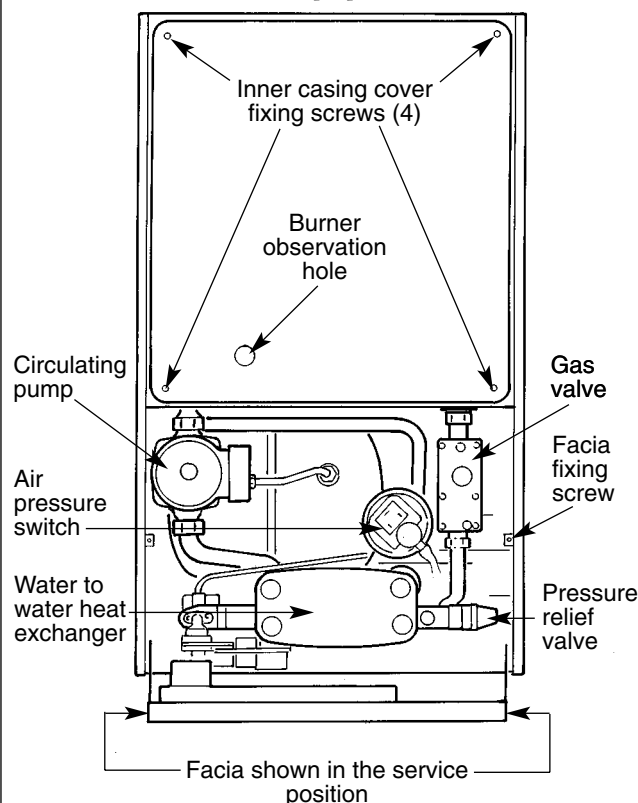

28CDi and 35CDi II ONLY (See Section 16.4.11)

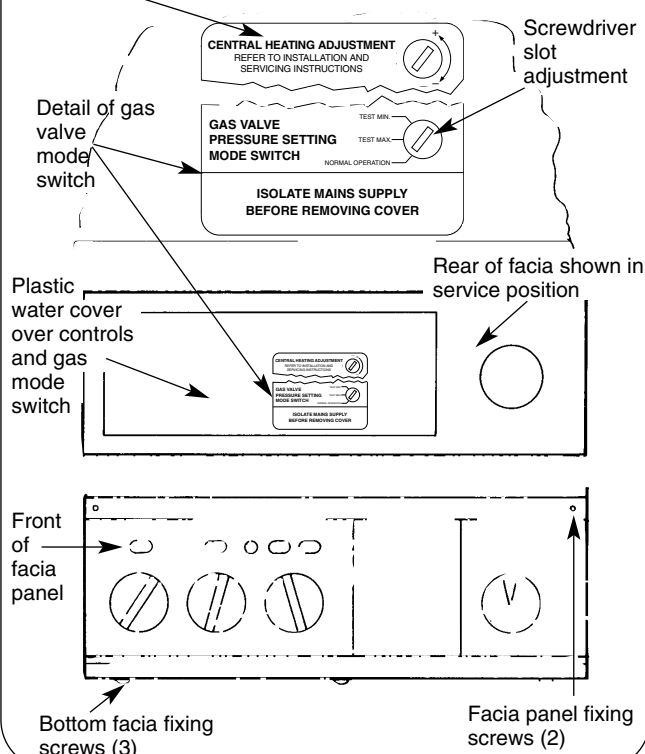

should be fitted as shown in Fig. 6,6a.

Insert the bayonet end of the filling key into the corresponding cutouts in the filling loop housing and twist to lock the key in place.

Turn the grey knob anti-clockwise to allow water ingress and fill until the pressure gauge reads 2.5 bar.

Turn the grey knob clockwise to stop filling and remove the filling key by lining up the bayonet end of the key with the cutouts in the filling loop housing and withdrawing the key.

N.B. The key must always be removed from the filling loop housing after the system has been filled to prevent accidental filling and to comply with Byelaw 14 of the Water Byelaws Scheme.

Store the key in a safe place for future use and refit the bottom panel.

The automatic air vent will vent the appliance. Check that the air vent cap has been loosened. See Fig. 18.


Check that the pressure relief valve operates by turning the knob anti-clockwise until it releases. Water should be expelled from the discharge pipe. See Fig. 27.

Lower the fascia panel to gain access. Refer to Section 15.3, c.

Set the Expansion Vessel Pressure

The charge pressure of the expansion vessel as dispatched is 0.5 bar, which is equivalent to a static head of 5 metres (17 ft). The charge pressure must not be less than the static head at the point of connection. A Schraeder type tyre valve is fitted to the expansion vessel to allow the charge pressure to be increased if necessary.

Fig. 27. Pressure relief valve.

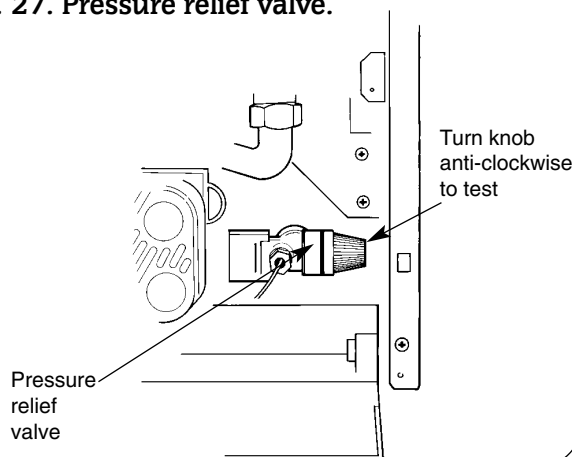

Set the system pressure

Release water from the system using the relief valve test knob (see Fig. 27), until the system design pressure is obtained, up to a maximum of 1.5 bar.

Initial system design pressure (bar) = Expansion vessel charge pressure + 0.3 bar.

NOTE: 1 bar is equivalent to 10.2 metres (33.5ft) of water.

Set the movable pointer on the pressure gauge to coincide with the indicating pointer giving a permanent record of the set system pressure.

If the pressure indicated on the pressure gauge is greater than 2.6 bar when operating at the maximum central heating temperature, an extra expansion vessel must be fitted to the system as close as possible to the appliance central heating return connection.

The appliance (as dispatched) can accommodate a system volume of about 83 litres. Refer to BS 7074 Part 1. If the system volume is in excess of that accommodated by the expansion vessel fitted to the appliance then an extra vessel must be fitted as close as possible to the central heating return connection of the appliance.

Any extra vessel fitted must be pressurised to the same figure as the integral vessel. If the expansion vessel fails then the specified replacement must be fitted.

13.3 PROGRAMMER

Any programmer fitted on the appliance should be set up at this stage following the instructions sent with the programmer.

The programmer will retain the settings for up to three weeks following an interruption in the electricity supply.

13.4 APPLIANCE OPERATION

Turn off the gas and electricity supplies to the appliance.

Loosen the burner pressure test point screw on the gas valve and connect a pressure gauge. See Fig. 28.

Undo the two screws and hinge down the fascia to gain access to the mode switch. Refer to Fig. 12.

Domestic Hot Water.

Set the gas valve mode switch, at the rear of the fascia, to the maximum position. Refer to Fig. 26.


Turn on the gas and electricity supplies.

Set the CH temperature control knob fully anti-clockwise to and the DHW temperature to MAX.

Open a hot water tap.

A continuous ignition spark will occur until the burner is alight and

Fig. 28. Gas Valve

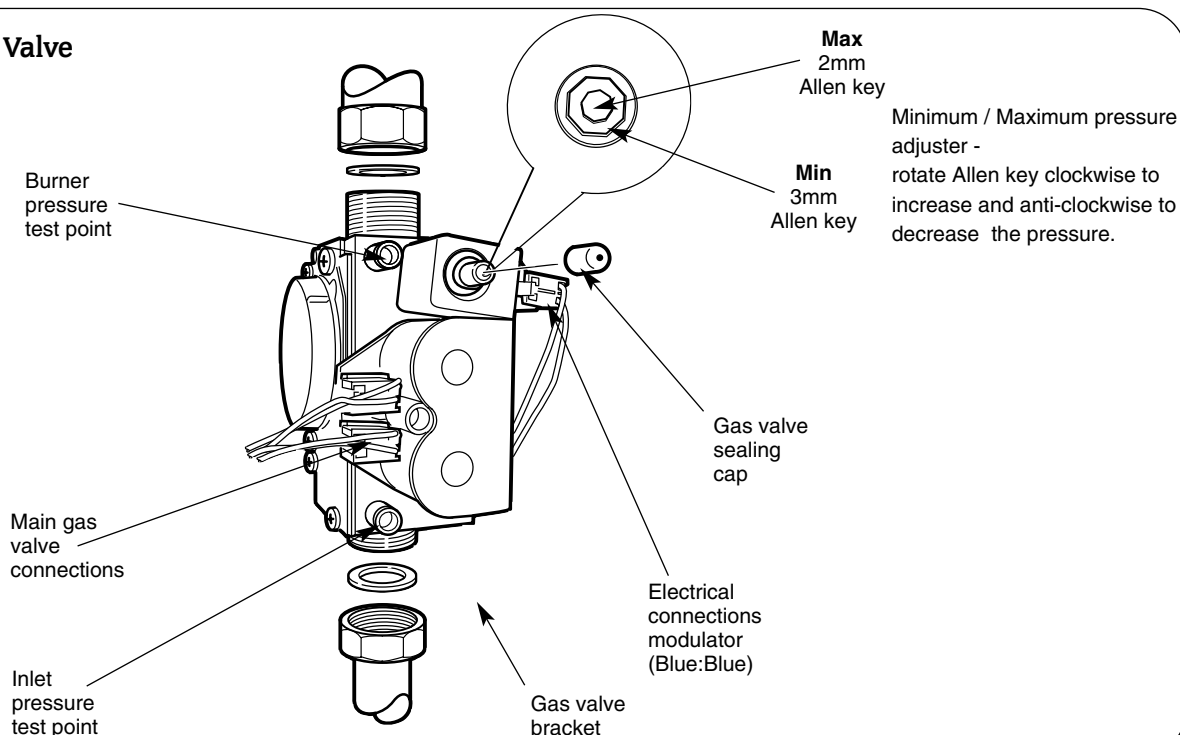

sensed by the control circuit. The burner pressure should be 14.8mbar (24CDi) or 15.5mbar (28CDi) or 13.5mbar (35CDi II) for natural gas and 35.5mbar (24/28CDi) or 34.7mbar (35CDi II) for propane. If the burner pressure cannot be achieved then check that the inlet pressure at the appliance is 20mbar for natural gas and 37mbar for propane. This is equivalent to a 18.5-19.0 mbar (G20) or 36 mbar (G31) at the gas valve.

Set the gas valve mode switch to the minimum position.

The burner pressure will drop to the minimum setting which should be 1.5mbar (24CDi) or 1.0mbar (28CDi) or 0.9mbar (35CDi II) for natural gas or 5.4mbar (24CDi) or 3.8mbar (28CDi) or 3.1mbar (35CDi II) for propane.

Test for gas soundness at the joint between the burner and the gas valve with leak detection fluid.

NOTE: The burner pressure is factory set and if (after checking that the supply pressure is sufficient) the correct pressure is not obtained then Worcester Heat Systems Service Department should be contacted.

If the appliance does not light, check that it is not in the 'lockout' state by pressing the lockout reset button. See Fig. 30.

Set the gas valve mode switch back to the normal position and refit the fascia.

Turn off the electricity supply, and then back on again to reset the controls.

Gradually close the hot tap and check that the burner pressure drops. Fully open the tap and check that the burner pressure rises. Fully close the tap and check that the burner goes off. The fan may continue running until the appliance has cooled to a preset temperature.

Set the Operating Switch to OFF.

Central Heating

Check that all the radiator valves are open. Set the room thermostat and the Central Heating Temperature Control to maximum. Set the DHW temperature control to MIN.

On sealed systems check that the system is pressurised and set to the required pressure as indicated on the gauge.

Set the Programmer, if fitted, to HEATING & WATER.

Set the operating switch to ON.

The burner will light.

The appliance will modulate its output from 9.0 to 24.0 kW (24/28CDi) or 10.5 to 27.5 kW (35CDi II) over a period of about two minutes.

Check the system to ensure that all the radiators are heating up evenly. If not then bleed each radiator through its vent screw.

Shut down all but one of the radiators and observe the burner pressure fall. Open all of the radiator valves and check that the burner pressure rises.

Balance the system so that the required temperature difference across the central heating flow and return pipes is obtained. See Table 3.

Adjust the central heating by-pass valve until the same temperature difference is obtained. See Fig. 29. This should be carried out with only a single radiator operating. If thermostatic radiator valves are fitted then one radiator should be left uncontrolled. The bypass valve should never be fully closed.

Set the room thermostat to minimum and check that the burner goes out. Reset the room thermostat to maximum and the burner will re-light and follow the normal operating procedure.

Check for proper ignition of the burner after a break in the gas supply. Turn off the gas service cock and wait for 60 seconds. The burner will go out but sparking from the electrode will continue for 10 seconds when the appliance will enter a 'lockout' state. Carefully open the gas service cock, press the lockout reset button and observe the burner re-light and follow the normal sequence of operation. Refer to Fig.30.

Set the Operating Switch to OFF.

Turn off the gas service cock and the electrical supply to the appliance.

Drain the system while the appliance is still hot.

Refill, vent and, with a sealed system, re-pressurise as described in Section 13.2.

Domestic Hot Water and Central Heating

Turn on the electricity supply to the appliance and open the gas supply cock at the appliance.

Set the Operating Switch to ON. If a programmer is fitted, set the domestic hot water to Continuous or 24Hrs and the central heating to ON. The burner will light and heat will pass into the system. Set the DHW temperature to MAX and turn on a hot water tap and check that fully heated hot water is discharged from the tap.

Close the tap and the burner will go off. The appliance will then return to the central heating mode and automatically balance with the system requirements.

Set the Operating Switch to OFF and the burner will go out.

12.5 COMPLETION OF COMMISSIONING

Disconnect the pressure gauge from the gas valve and tighten the test point screw.

Restart the appliance and check for gas soundness around the test point screw.

Refit the cabinet front panel.

If the appliance is being passed over to the user immediately, refer to Section 14 - Instructions to the User.


If the appliance is to be left inoperative, check that the Operating Switch is set to OFF. Turn off the gas service cock.

For short inoperative periods, leave the appliance under the control of the built in frost thermostat or the remote frost thermostat (if fitted) or leave operating continuously with the room thermostat set at 6°C

Do not switch off the electricity supply.


If there is any possibility of the appliance and the system being left totally unused in freezing conditions then switch off the gas and electricity and drain the appliance and the system.

Fig. 29. Central heating by-pass adjustment.

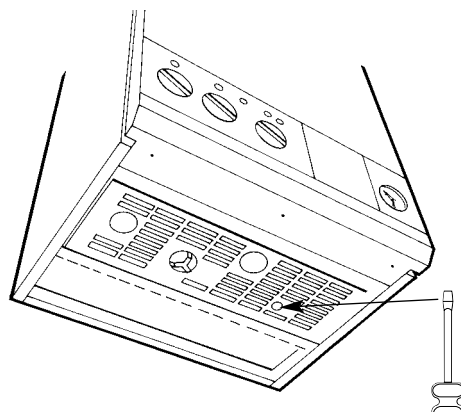

14. Instructions To The User

Fig. 30. User controls.

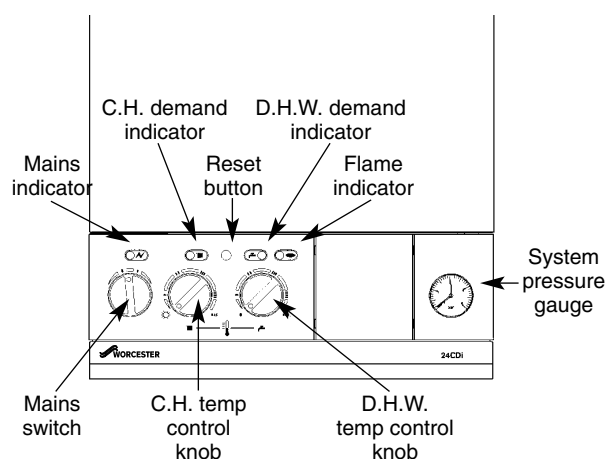

14.1 Tell the user how to operate the appliance and hand over the Users Instructions leaflet and Benchmark log book.

14.2 Tell the user what to do if the heating system is not to be used in frosty or freezing weather.

14.3 Tell the user the sealed system set pressure.

14.4 Tell the user of the importance of regular servicing. Worcester Heat Systems Ltd. offer a comprehensive maintenance contract.

14.5 Set the system controls to the user's requirements.

14.6 If an external programmer has been fitted which has a programmable domestic hot water facility then it is suggested that this be set to Continuous or the equivalent.

14.7 Tell the user about the safety devices and hazard notices.

15. Inspection And Servicing

15.1 SERVICING

To ensure continued efficient operation of the appliance it must be checked and serviced as necessary at regular intervals. The frequency of servicing will depend upon the particular installation conditions and usage, but once per year should generally be adequate. The extent of the service required by the appliance is determined by the operating condition of the appliance when tested by fully qualified engineers.

Any service work must be carried out by competent engineers such as British Gas or Corgi registered personnel.

15.2 PRE-SERVICE INSPECTION

Check that the flue terminal and the terminal guard, (if fitted), are clear. If the appliance is in a compartment, check that any ventilation openings in the compartment door or walls are clear. See Section 6 - Air Supply.

Check the system and remake any joints or fittings, if necessary, which show signs of leakage. Refill, vent and re-pressurise as described in Section 13.2.

Operate the appliance and the system taking note of any faults.

Measurement of the Flue Gases

For consistency of results of the flue gas measurements it is necessary to have a constant output and stationary equilibrium.

Switch on the appliance.

Switch to DHW and CH mode.

Hinge down the facia.

Turn the Mode Switch to the "Max." position.

Wait until the appliance reaches stationary equilibrium (approx. 10 minutes).

Remove the cap from the sensing point. See Fig. 18.

Insert the probe into the measurement gap up to a depth of 50mm.

Seal any gaps.

Expected measurements should be between:

CO: 0.001 and 0.003 %.

CO₂: 6.7 and 7.0 %.

After taking the measurement:

Replace the sealing cap.

Turn the Mode Switch back to the "normal" position.

Put the facia back in to its normal position.

SAFETY

Disconnect the electrical supply at the mains and turn off the gas supply at the gas service cock on the appliance before servicing.

After completing the service always test for gas soundness as indicated in BS 6891.

15.3 COMPONENT ACCESS

To carry out a full and comprehensive service of the appliance remove the following parts to gain access to the components which need to be checked or serviced.

(a) Cabinet Front Panel. Remove by lifting off the supports.


(b) Inner Casing Cover. Check that the electricity supply to the appliance is turned off. Remove the cabinet front panel. Unscrew the four screws securing the cover to the casing and lift off. See Fig. 26.

(c) Facia Panel. Check that the electricity supply to the appliance is turned off. Remove the cabinet front panel. Unscrew the two upper screws as shown in Fig.12 and hinge down the facia taking care not to distort the pressure gauge capillary tube or electrical connections.

(d) Bottom panel. Hinge down the facia panel. Disengage the front edge of the bottom panel from the two clips and remove the bottom panel from the appliance.

(e) Fan. Remove the inner casing cover. Carefully unplug the electrical connections and pull off the sensing tubes. Unscrew the three fixing screws and remove the fan assembly. See Fig. 31.

Fig. 31. Appliance components and fixings (upper assembly).

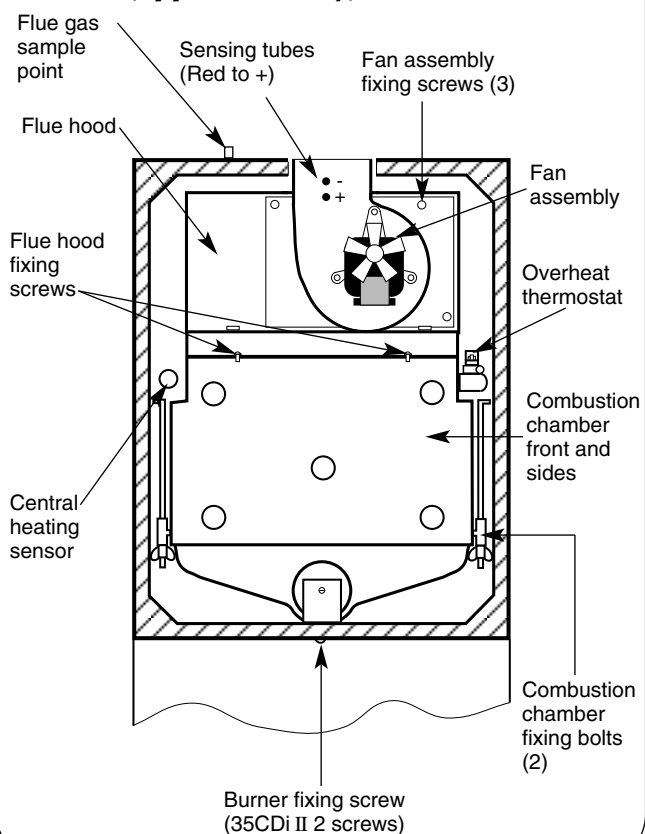

(f) Flue Hood Assembly. Remove the fan assembly. Undo the two screws securing the flue hood. Lift and slide the flue hood assembly from the appliance. See Fig. 31. When refitting the hood ensure that the rear return edge passes under the lip at the rear of the combustion chamber.

(g) Combustion Chamber Front and Sides. Remove the inner casing cover. Slacken off to the end of the thread but do not remove the two wing nuts securing the combustion chamber. Unhook the securing rods out of the locating holes in the combustion chamber sides. Ease the combustion chamber front and side assembly clear of the appliance. Refer to Fig. 31.

(h) Burner Assembly. Remove the combustion chamber front and sides. Pull off the two spark electrode leads and disconnect the flame sense lead at the plastic connector under the inner casing. **NOTE:** The flame sensing lead is attached to the burner. When the burner is removed ensure this lead is fed through the inner casing. Remove the grommet seal to allow the plastic connection to pass through the inner casing. Unscrew the G ³/₄ union nut on top of the gas valve and retain the sealing washer. Unscrew the front burner fixing screw. Lift the burner and ease the union nut through the inner casing sealing grommet.


Remove the burner assembly clear of the inner casing. Ensure the flame sensing lead passes through the base of the inner casing. See Fig. 31 and 32.

15.4 SERVICE OF COMPONENTS

Clean the Fan. Any dust or fluff should be removed with a soft brush or by blowing. Take care not to distort the pressure sensing device.

Clean the Main Burner. Brush the blade tops and mixing tube with a soft brush and check that all the flame ports are clear. Remove any blockages with a non-metallic brush. Inspect the injector and clean with a soft brush. Replace the injector if it appears damaged. Do not use a wire brush or anything likely to cause damage. Replace the spark and sense electrodes if they appear damaged.

Fig. 32. Burner and Electrode (24/28CDi shown)

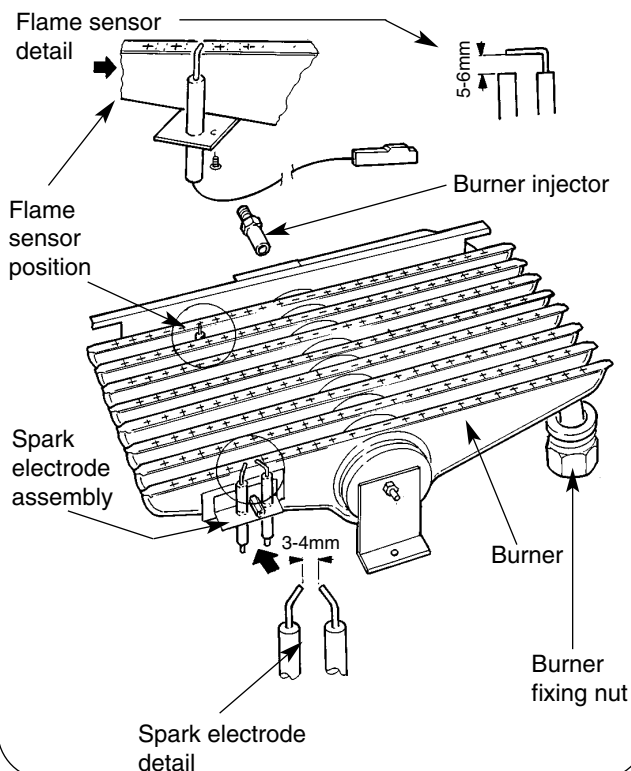

Clean the Gas to Water Heat Exchanger. Cover the burner manifold hole in the combustion chamber bottom panel with a cloth. Clean the heat exchanger using a soft brush. Remove the deposits from the bottom of the combustion chamber. Do not distort any of the blades.

Combustion Chamber Insulation. Examine and replace any pads that are damaged. Remove any dust or deposits using a soft brush after first dampening the pads.

Reassemble the appliance in the reverse order.

Check that all components are in place and correctly fixed. Leave the cabinet front panel to be fitted after checking the operation of the appliance.

15.5 TEST THE APPLIANCE

On completion of the service and reassembly of the appliance, check for gas soundness and the correct operation of the appliance as described in Section 13 - Commissioning.

Refit the cabinet front panel and reset the controls to the users requirements.

16. Replacement Of Parts

16.1 SAFETY

Switch off the electricity and gas supplies before replacing any components. After the replacement of any components, check for gas soundness where relevant and carry out functional checks as described in Section 13 - Commissioning

16.2 COMPONENT ACCESS

To replace components it is necessary to remove one or more sections of the cabinet and cover plates within the appliance as described in Section 15.3. Any 'O' ring or gasket that appears damaged must be replaced. Complete gasket and 'O' ring packs are available for the gas and water connections on the appliance. The fascia panel may also need to be hinged down as described in Section 15.3, c.

16.3 DRAINING THE APPLIANCE

Check that the electricity supply to the appliance is turned off. Before removing any component holding water it is important that as much water as possible is removed from the appliance.

(a) Central Heating Circuit. Turn off the central heating flow and return valves at the appliance. Fit tubes to the drain taps on the flow and return manifolds and open the drain taps about one turn, make sure that the dust cap on the auto air vent is loosened. See Fig. 18. Close the drain taps when the flow has stopped. Be careful **not to overtighten** the drain taps. Some water will remain in the expansion vessel, pump, diverter valve, water to water and Gas to Water heat exchangers and extra care must be taken when removing these components.

(b) Domestic Hot Water Circuit. Turn off the mains cold supply valve at the appliance and open the lowest hot water tap. A quantity of water will remain in the Water to Water heat exchanger and the diverter valve and extra care must be taken when removing these components.

Replace any components removed from the appliance in the reverse order using new gaskets/'O' rings/sealant where necessary. Always check that any electrical connections are correctly made and that all screws are tight.

16.4 COMPONENT REPLACEMENT

1. Automatic Air Vent. See Fig. 34

Remove the inner casing cover as described in Section 15.3, b.

Drain the central heating circuit as described in Section 16.3, a.

Remove the circlip and lift the assembly from the appliance.

Unscrew air vent from the pipe.

Fit the replacement assembly, making sure the 'O' ring is in good condition. Replace if necessary.

Ensure that the circlip is correctly fitted and the dust cap is loosened.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

2. Air Flow Pressure Switch. See Fig. 33.

Check that the electricity supply to the appliance is turned off.

Remove the cabinet front panel as described in Section 15.3, a.

Carefully pull off the sensing tubes and the electrical connections from the switch.

Unscrew the two screws underneath the gas valve and remove the switch and bracket from the appliance.

Fit the replacement switch in the reverse order ensuring that the electrical connections have been made to the correct terminals on the switch. Check that the sensing tubes are fitted correctly.

3. Fan. See Fig. 31.

Check that the electricity supply to the appliance is turned off.

Remove the fan assembly as described in Section 15.3, e.

Fit the replacement fan in the reverse order.

Fig. 33. Air pressure switch.


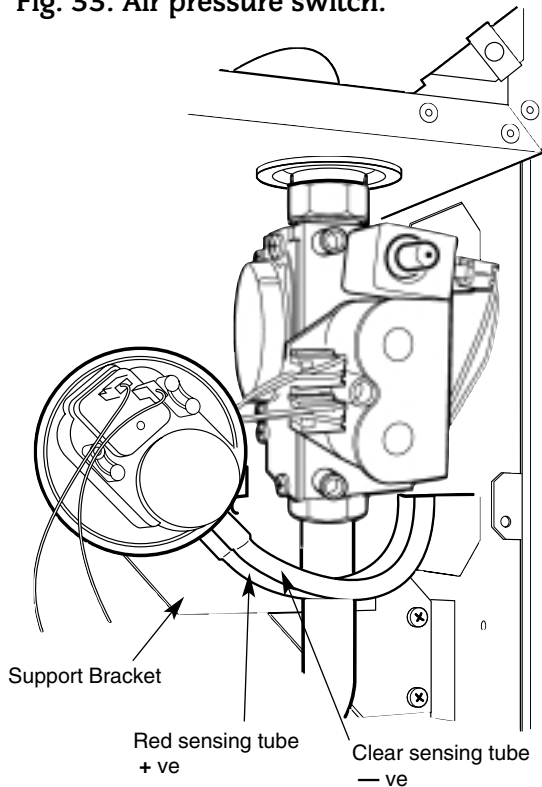


Fig. 34. Gas to water heat exchanger.

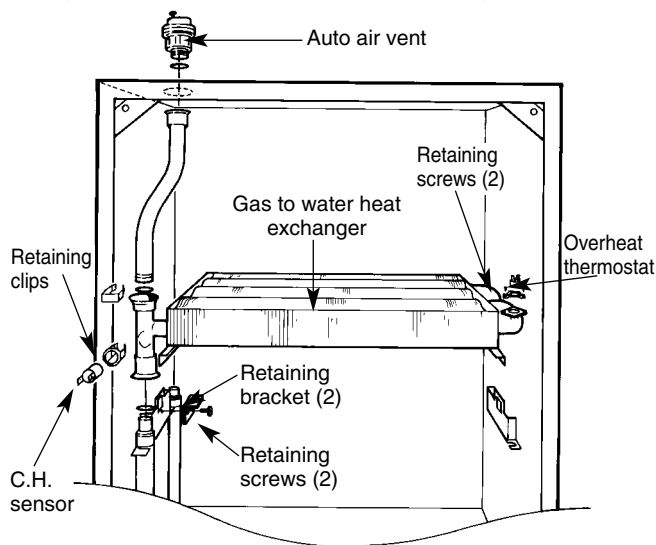

4. Overheat Thermostat. See Fig. 34.

Check that the electricity supply to the appliance is turned off. Remove the inner casing cover as described in Section 15.3, b. Carefully pull off the two wires from the thermostat head. Undo the two M3 screws and remove from the appliance. Fit the replacement thermostat in the reverse order ensuring that some heat sink compound is between the thermostat and the plate.

5. Gas to Water Heat Exchanger. See Fig. 34.

Check that the electricity supply to the appliance is turned off. Drain the central heating circuit as described in Section 16.3, a. Remove the inner casing cover, fan, flue hood assembly, overheat thermostat, central heating sensor, burner and automatic air vent assembly as described in Sections 15.3, b, e, f, and h, 16.4, 1, 16.4, 3 and 16.4, 12.

Slacken the two screws to remove the two retaining brackets and lift the heat exchanger from the casing. Take care that the rear insulation pad does not drop forwards onto the burner.

Fit the replacement heat exchanger in the reverse order ensuring that both the "O" rings are correctly fitted and lubricated and a layer of heat sink compound is on both the thermostats.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

6. Combustion Chamber Insulation. Refer to Fig. 35.

Check that the electricity supply to the appliance is turned off.


Drain the central heating circuit as described in Section 16.3, a.

Remove the inner casing cover, fan, flue hood assembly, burner, and Gas to Water heat exchanger as described in Sections 15.3, b, e and f, and 16.4, 5. Remove the fibre insulation pads from the combustion chamber side, rear, and front sections. To avoid the risk of fine particles dampen the pads before removal.

Fit the replacement pads in the reverse order taking care not to damage them.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

Fig. 35. Combustion Chamber Insulation

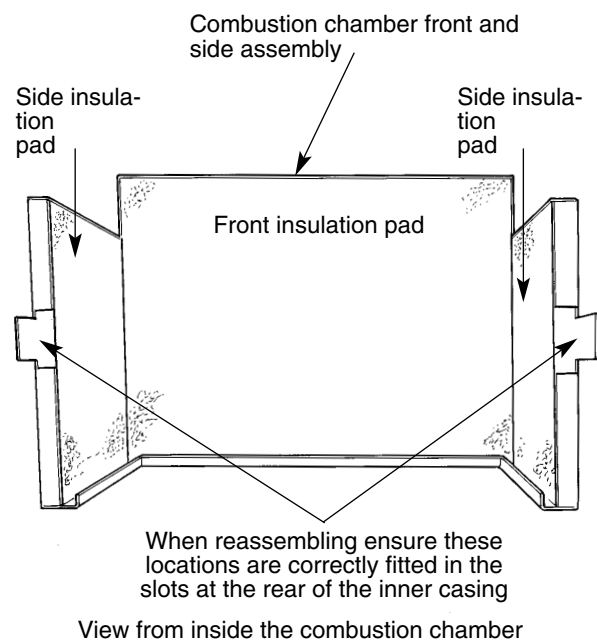

7. Burner. See Fig. 32.

Check that the electricity and gas supplies to the appliance are turned off.

Remove the burner assembly as described in Section 15.3, h.

Fit the replacement burner in the reverse order taking care not to damage the electrode leads.

8. Burner Injector. See Fig. 32.

Remove the burner as described in Section 15.3, h.

Unscrew the brass injector from the burner.

Fit the replacement injector in the reverse order.

9. Spark Electrode Assembly. See Fig. 32.

Remove the combustion chamber front and sides as described in 15.3, g.

Carefully pull off the two electrode leads,

Undo the M4 extended nut and remove the spark electrode assembly from the burner.

Fit the replacement electrode in the reverse order, checking that the spark gap is 3 to 4mm.

10. Flame Sensor. Refer to Fig. 32.

Remove the burner as described in Sections 15.3, h and 16.4.7. Undo the M3 screw and remove the sense electrode from the burner. Fit the replacement electrode in the reverse order, checking that the sense gap is 5 to 6mm.

11. Gas Valve. Refer to Fig. 28.

Check that the electricity and gas supplies to the appliance are turned off.

Hinge down the fascia panel into the servicing position as described in Section 15.3, c.

Remove the air pressure switch bracket as described in Section 16.4. 2.

Undo the two G³/₄ inch nuts on the gas valve and the two M4 screws on the gas valve bracket and withdraw the valve.

Whilst supporting the valve carefully pull off the three electrical solenoid plug connections.

Fit the replacement gas valve in the reverse order ensuring the sealing washers are correctly fitted.

Turn on the gas supply and check for soundness.

To set the burner pressure. Refer to Fig. 28.

The minimum and maximum burner pressure must be set after a new gas valve has been fitted.

Follow the procedure described in Section 13.4 - Appliance Operation.

The minimum burner pressure must be set first since maximum is adjusted simultaneously.

Start the appliance in the domestic hot water mode as described in Section 13.4. - Appliance Operation.

Turn the gas mode switch on the rear of the fascia to minimum. Refer to Fig. 26.

Adjust the minimum pressure screw on the gas valve to give a burner pressure of 1.5mbar (24CDi) or 1.0mbar (28CDi) or 3.1 mbar (35CDi II) for natural gas or 5.4mbar (24CDi) or 3.8mbar (28CDi) or 3.1mbar (35CDi II) for propane.

Turn the gas mode switch on the rear of the fascia to maximum.

Adjust the maximum pressure screw on the gas valve to give a burner pressure of 14.8mbar (24CDi) or 15.5mbar (28CDi) or 13.5mbar (35CDi II) for natural gas or 35.5mbar (24CDi) or 35.5mbar (28CDi) or 34.7mbar (35CDi II) for propane.

Turn the gas mode switch on the rear of the fascia to normal.


After completing the adjustments, check the minimum and maximum pressures and adjust as necessary.

28CDi/35CDi II ONLY: Ensure the appliance lights in the central heating mode. Turn the CH pressure adjuster on the rear of the control board (Fig. 26) fully clockwise, wait until the pressure stops increasing and then **slowly** turn it anti-clockwise until the burner pressure is 10.8mbar natural gas or 24.3mbar propane for 28CDi or 8mbar natural gas or 21.3mbar propane for 35CDi II.

After completing the adjustments, check the minimum and maximum pressures and adjust as necessary.

It should not be necessary to alter the central heating potentiometer setting when the gas valve only is replaced and the minimum and maximum pressures are set.

Fig. 36. Appliance Components (lower assembly)

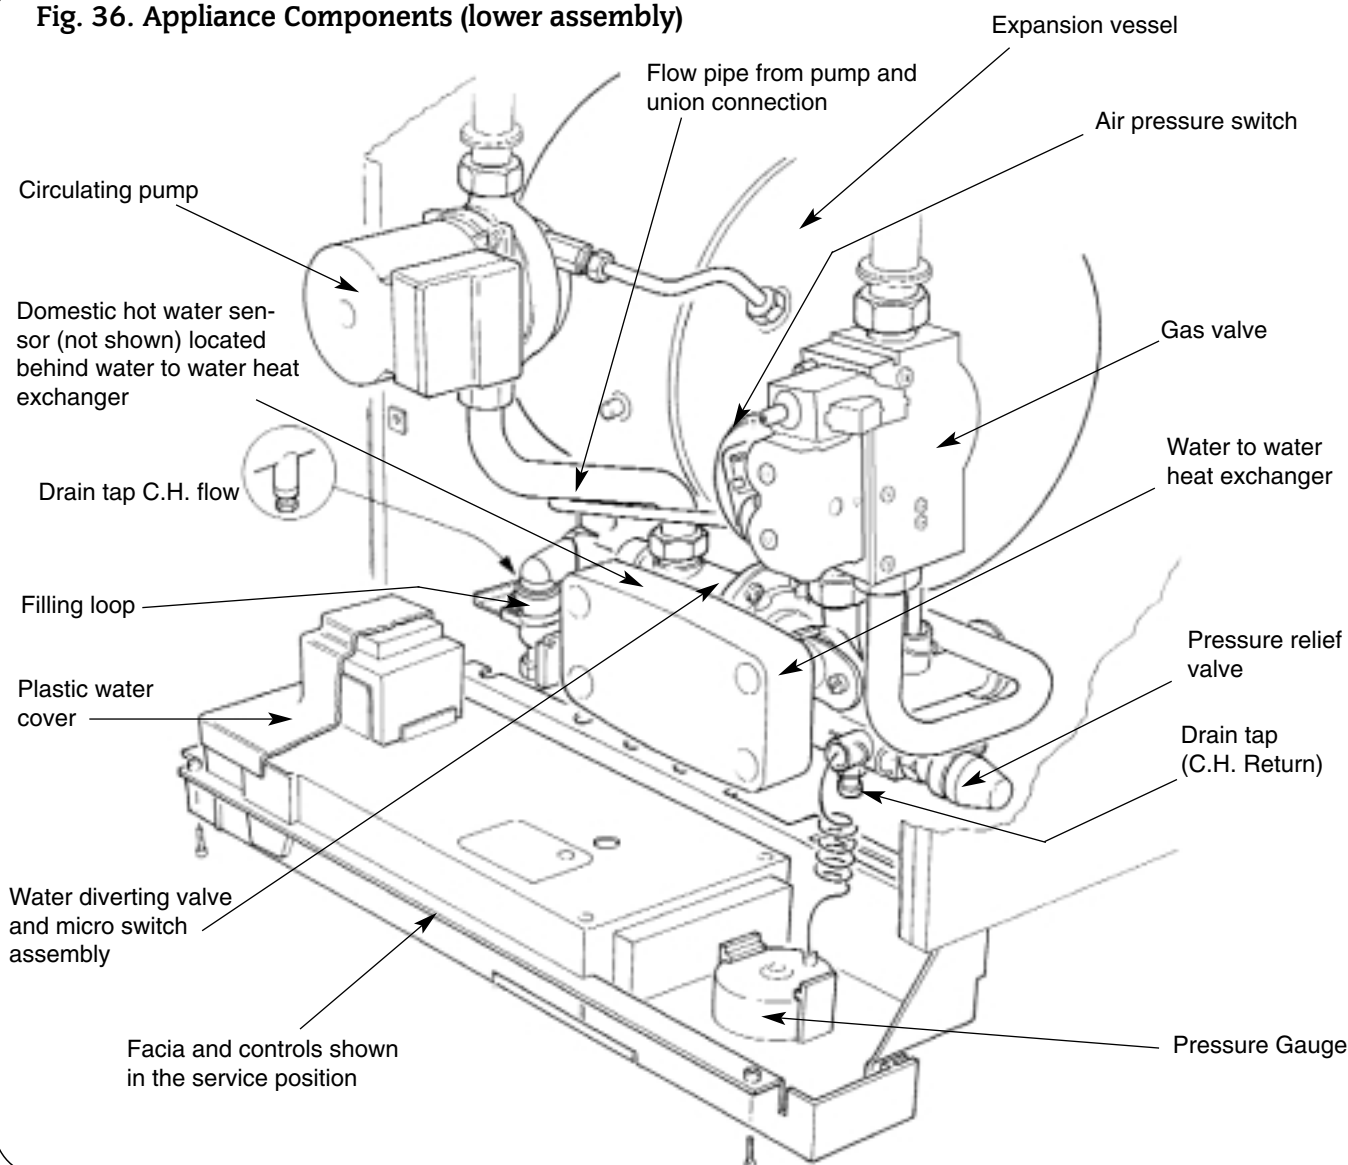

12. Central Heating Sensor. Refer to Fig. 34.

Remove the inner casing cover as described in Section 15.3, b. Check that the electricity supply to the appliance is turned off. Carefully pull off the two leads from the sensor. Pull off the sensor and spring retaining clip from the pipe. Fit the replacement sensor in reverse order with a layer of heat sink compound between the faces. Refit the leads.

13. Domestic Hot Water Sensor. Refer to Fig. 39.

Check that the electricity supply to the appliance is turned off. Hinge the fascia panel into the servicing position as described in Section 15.3, c.

Carefully pull off the two leads from the sensor.

Undo and remove the screw, pull off the sensor and spring retaining clip from the pipe.

Fit the replacement sensor in the reverse order ensuring a layer of heat sink compound is between the faces. Refit the leads.

14. Circulating Pump. Refer to Fig. 37.

Check that the electricity supply to the appliance is turned off.

Drain the central heating circuit as described in Section 16.3, a.

Hinge the fascia panel into the servicing position as described in Section 15.3, c.

Undo the two union nuts and the pipe to the expansion vessel, remove the pump from the pipe-work. Support the pump and remove the electrical cover.

Disconnect the electrical wires taking note of their positions.


Fit the replacement pump in the reverse order using new sealing washers.

Alternatively replace the pump head only by removing the four Allen screws on the pump, remove the head and support whilst removing the electrical connections. Refit the new head.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

NOTE: The direction of flow should be downwards. The speed should always be set to maximum.

Fig. 37. Circulating pump

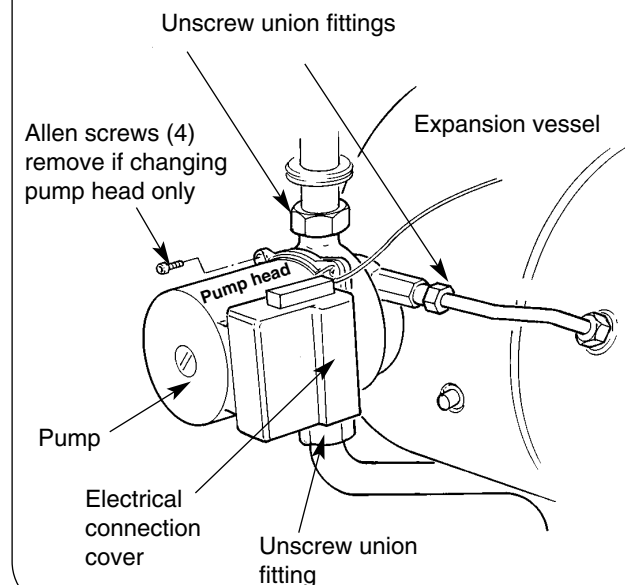

15. Pressure Relief Valve. Refer to Fig. 36.

Drain the central heating circuit as described in Section 16.3, a.

Hinge down the fascia panel as described in Section 15.3, c.


Remove the bottom panel as described in Section 15.3, d.

Pull out the retaining clip and remove the pressure gauge connection. Undo the discharge pipe connection and remove the valve taking care not to distort the pipework.

Fit the replacement valve in reverse order. Reconnect the discharge pipe.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

Fig. 38. Expansion Vessel

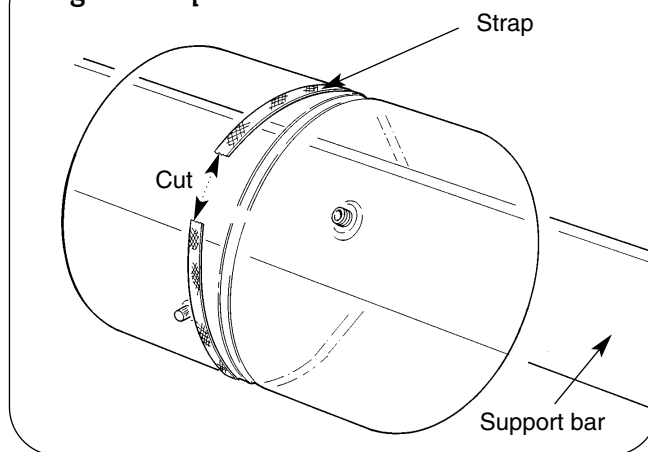

16. Expansion Vessel. Refer to Fig. 38.

Drain the central heating circuit as described in Section 16.3, a.

Hinge the fascia panel into the servicing position as described in Section 15.3, c.

Remove the air pressure switch, gas to water heat exchanger, water to water heat exchanger and pump as described in 16.4, 2, 5, 14 and 20 and remove the vessel.

Fit the replacement vessel in the reverse order.

Open the valves and fill and re-pressurise the system as described in Section 13.2

17. Water Diverting Valve Micro Switch Assembly.

Refer to Fig.39.

Check that the electricity supply to the appliance is turned off.

Hinge down the fascia panel as described in Section 15.3, c.


Remove the bottom panel as described in Section 15.3, d.

Using a pair of fine nosed pliers, pull the circlip off and remove the micro switch assembly from the valve. Remove the black cover and carefully pull off the connections from the terminals on the micro switches.

Withdraw the switch assembly from the appliance.

Fit the replacement micro switch assembly in the reverse order.

Fig.39. Water Diverting Valve and Micro Switch Assembly.

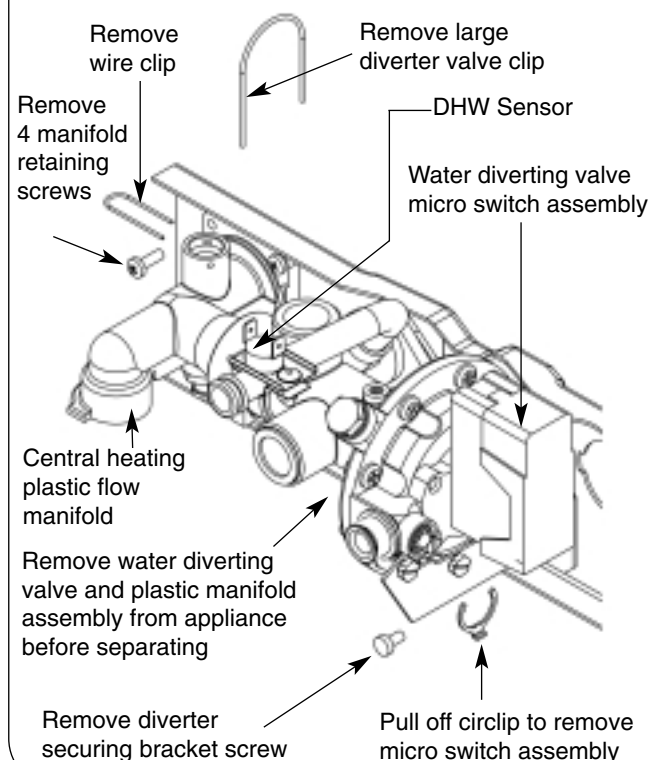

18. Water Diverting Valve. See Fig. 36, 40.

Check that the electricity supply to the appliance is turned off.
Drain the central heating and domestic hot water circuits as described in Sections 16.3, a and b.

Hinge down the fascia panel into the Servicing Position as described in Section 15.3, c.

Remove the bottom panel, filling loop, water to water heat exchanger and micro switch assembly as described in Section 15.3, d, and Sections 16.4.17, 20 and 22.

Pull off the large wire clip locating the water diverting valve to the central heating plastic flow manifold on the left hand side of the appliance.

Remove the wire clip securing the copper by-pass pipe to the flow manifold.

Retain the wire clips.

Carefully ease the by-pass pipe out of the manifold and allow the pipe to swing forwards to clear the manifold connection.

Remove the screw securing the bracket, located at the right hand end of the water diverting valve, to the appliance casing.

Remove the four screws located at the left hand side securing plastic manifold to the appliance.

Remove the water diverting valve and plastic manifold assembly clear of the appliance.

Ease the water diverting valve out of the plastic manifold.

Remove the securing bracket from the valve and the water filter from the valve cold water inlet.

Retain the plastic manifold, fixing screws, support bracket and water filter.

Discard the water diverting valve.

Reassemble the original support bracket, water filter and new 'O' ring seals to the replacement valve.

Lubricate the 'O' ring seal and push the plastic flow manifold onto the valve.

Reassemble the water diverting valve and plastic manifold assembly to the appliance in the reverse order.

Ensure all 'O' ring seals and fibre washers are renewed and replaced correctly and the 'O' rings are lubricated.

Reassemble the appliance in the reverse order.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

19. Inlet Water Filter. See Fig. 40.

Check that the electric supply to the appliance is turned off.

Drain the central heating and domestic circuits as described in Sections 16.3, a and b.

Hinge down the fascia panel into the servicing position as described in Section 15.3, c.

Follow the procedures as described in Section 16.4.18 and remove the water diverting valve from the appliance.

Remove the water filter from the cold water inlet.

Discard or clean the filter.

Fit the replacement filter (push fit) in the reverse order.

Reassemble the appliance in the reverse order.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

20. Water to Water Heat Exchanger. Refer to Fig. 40.

Check that the electricity supply to the appliance is turned off.

Drain the central heating and domestic hot water circuits as described in Sections 16.3, a and b.

Hinge down the fascia panel into the servicing position as described in Section 15.3, c.

Remove the bottom panel as described in Section 15.3, d.

Remove the filling loop as described in Section 16.4.22. Undo the diverter valve connection. Remove the bolt and circlip and pull the heat exchanger forward and away from the appliance.

Fit the replacement heat exchanger in the reverse order.

Open the valves and fill and re-pressurise the system as described in Section 13.2.

21. Domestic Hot Water Flow Regulator. Refer to Fig. 40.

Remove the water to water heat exchanger assembly as described in Section 16.4.20.


The plastic flow regulator is located within the brass housing on the heat exchanger.

Regulator size:

24CDi	9 l/min	white
28CDi	10 l/min	blue
35CDi II	12 l/min	red

Fit the replacement flow regulator and reassemble in the reverse order ensuring the fibre washers and 'O' rings are in place.

Fig. 40 Filling Loop, Water to Water Heat Exchanger and Domestic Hot Water Flow Regulator

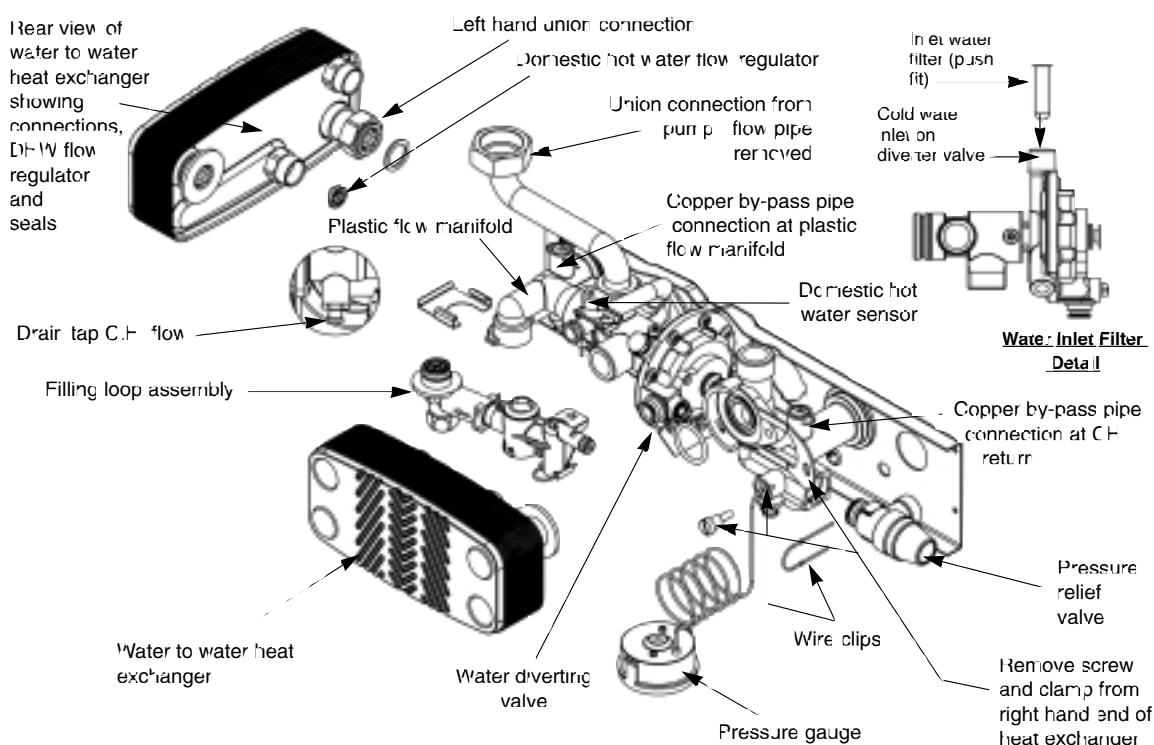

22. Filling Loop. Refer to Fig. 40.

Check that the electricity supply to the appliance is turned off.
Drain the central heating circuit as described in Section 16.3, a.
Hinge down the fascia panel into the servicing position as described in Section 15.3, c.

Remove the screw securing the filling loop to the underside of the water diverting valve.

Remove the clip retaining the filling loop to the plastic flow manifold.

Remove the wire clip joining the two sections of the filling loop and slide the air gap section in the direction of the arrow.

Remove from the appliance.

Fit the replacement assembly in the reverse order not forgetting the 'O'ring between the flow manifold and filling loop joint.

23. Control Board. See Fig. 41.

Check that the electricity supply to the appliance is turned off.

Remove the three screws fixing the fascia bottom panel to the fascia.

Remove the fascia bottom panel. Retain the panel and screws.

Carefully pull off all the connectors. Disconnect the mains supply lead at terminal ST 12 and the earth connection at the back.

Pull off the three plastic control knobs. Take care not to damage the knobs when pulling off.

Retain the knobs.

Hinge down the fascia panel into the servicing position as described in Section 15.3, c.

Remove the plastic water cover.

Remove the four corner screws on the back of the fascia and separate the metal back panel from the plastic fascia.

Ease off the two spark electrode lead connections.

Release the plastic catch at each of the four mounting posts pulling the control board forwards approximately 3mm to prevent the plastic catch from returning.

Pull the board off the remainder of the mounting posts until it is free.

Unplug the transformer from rear of the board. Discard the control board retain the transformer.

Plug in the transformer to the replacement control board. The transformer will fit in one direction only.

Locate the replacement control board over the four mounting posts and push back squarely until the plastic catch on the end of each post clicks into place.

Reassemble in the reverse order and ensure:

- i) the spark electrode leads are re-connected. Polarity is not important.
- ii) the connectors are fitted to the correct terminals.

Connectors are not interchangeable and will only fit the terminals from which they were removed.

Reassemble the fascia panel and fascia bottom panel in the reverse order. When replacing the control knobs ensure the knob with the shortest shaft is fitted to the left hand control position.

28CDi/35CDi II ONLY: Re-check the max. CH setting pressure and adjust as described in Section 16.4.11 (to set the burner pressure).

24. Transformer. See Fig. 41.

Check that the electricity supply to the appliance is turned off.

Remove the control board as described in Section 16.4.23.

Unplug the transformer from rear of the board. Discard the transformer retain the control board.

Plug in the replacement transformer to the control board. The transformer will fit in one direction only.

25. Pressure Gauge. Refer to Figs. 40 and 41.

Check that the electricity supply to the appliance is turned off.

Drain the central heating circuit as described in Section 16.3, a.

Hinge down the fascia panel into the servicing position as described in section 15.3, c.


Remove circlip and pull out the capillary sensing bulb in the return manifold.

Prise back the retaining clips securing the gauge to the fascia panel and remove.

Fit the replacement gauge in the reverse order ensuring the "O" ring is in place.

Open the valves and fill and re-pressurise the system as described in Section 13.2

Fig. 41. Rear of Facia in Servicing Position, Control Board and Transformer.






















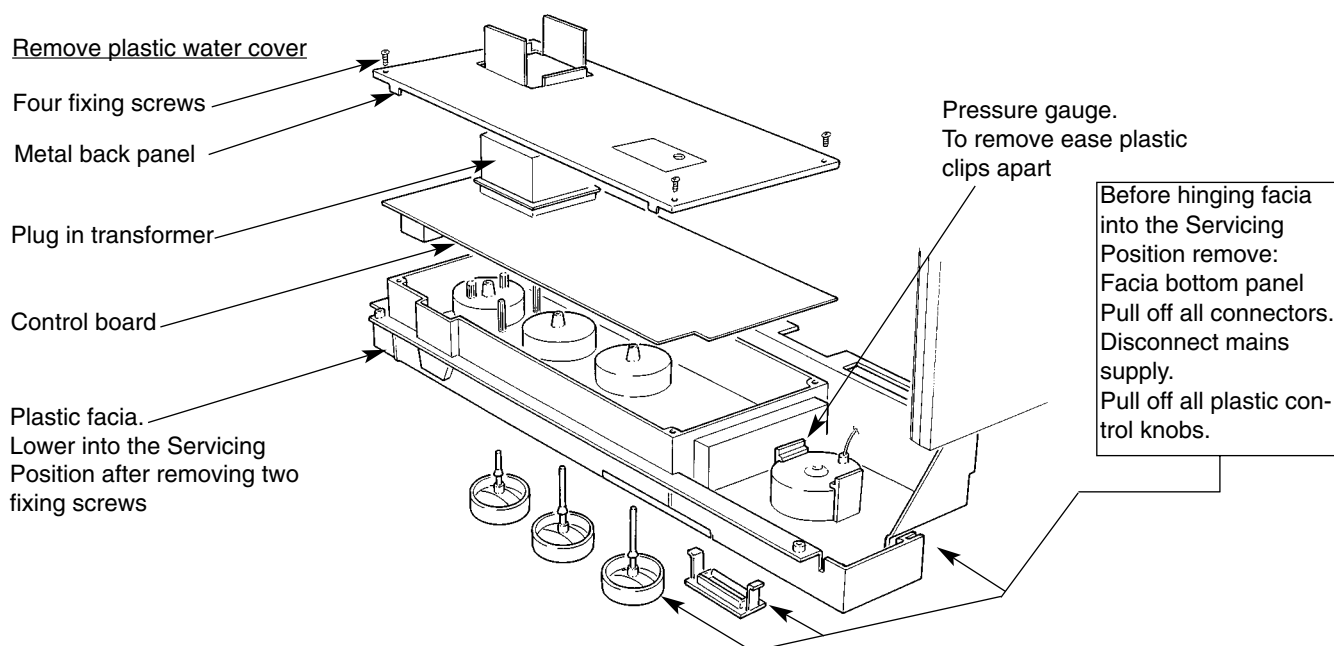


17. Short Parts List

Key No.	G.C. No.	Part	Manufacturer's Reference	Appliance			Qty	WHS Part No.
				24CDi	28CDi	35CDi II		
26	E80-450	Gas Valve – Natural Gas	Dungs BM 771 SL 040	✓	✓	✓	1	8 716 102 673 0
26	E80-451	Gas Valve – Propane	Dungs BM 771 SL 040	✓	✓	✓	1	8 716 102 868 0
78	E00-720	Burner – Natural Gas	Aeromatic, Ref. AC 23/05 3582		✓		1	8 716 142 602 0
78	E00-737	Burner – Propane	Aeromatic, Ref. AC 23/05 3585		✓		1	8 716 142 605 0
78	375 695	Burner – Natural Gas	Aeromatic, Ref. AC 23/05 3602	✓			1	8 716 105 121 0
78	173 012	Burner – Propane	Aeromatic, Ref. AC 23/05 3583	✓			1	8 716 142 600 0
78		Burner – Natural Gas	Aeromatic, Ref. AC 23/05 3598			✓	1	8 716 102 674 0
78		Burner – Propane	Aeromatic, Ref. AC 23/05 3599			✓	1	8 716 102 869 0
80	E00-721	Burner Injector – Natural Gas	Stereomatic, Type 7, Rs' / s 4.5mm		✓		1	8 716 140 208 0
80	E00-738	Burner Injector – Propane	Stereomatic, Type 7, Rs' / s 3.1mm		✓		1	8 716 140 222 0
80	173 091	Burner Injector – Natural Gas	Stereomatic, Type 7, 4.3mm dia.	✓			1	8 716 105 033 0
80	E00-741	Burner Injector – Propane	Stereomatic, Type 7, 2.78mm dia.	✓			1	8 716 140 209 0
80		Burner Injector – Natural Gas	Stereomatic, Type 7, 5.4mm dia.			✓	1	8 716 104 457 0
80		Burner Injector – Propane	Stereomatic, Type 7, 3.4mm dia.			✓	1	8 716 104 458 0
81	375 697	Spark Electrode Assembly	Buccleuch, Ref. BE/3462/SI	✓	✓	✓	1	8 716 142 100 0
82	E01 612	Flame Sensor + Harness	Buccleuch, Ref. BE/3461/SI	✓	✓	✓	1	8 716 120 345 0
95	299 515	Ignition Harness	Buccleuch, Ref. BE/3469/SI	✓	✓	✓	1	8 716 120 229 0
61	299 352	Gas to Water Heat Exchanger	Giannoni, Ref. PR22 323 003, D2107	✓	✓		1	8 716 142 800 0
61		Gas to Water Heat Exchanger	Giannoni, Ref. PR26 326			✓	1	8 716 102 675 0
42	299 353	Water to Water Heat Exchanger	Giannoni, Ref. PVW 12 E, D2108	✓			1	8 716 142 900 0
42	E00-711	Water to Water Heat Exchanger	Giannoni, Ref. PVW 14 E		✓		1	8 716 142 903 0
42		Water to Water Heat Exchanger	Giannoni, Ref. PVW 16E			✓	1	8 716 102 672 0
68	E00 716	Automatic Air Vent	Intermes, Ref. 02.05.010	✓	✓	✓	1	8 716 140 500 0
85	299 506	System Pressure Gauge	Cewal, spec. D2111	✓	✓	✓	1	8 716 142 300 0
40	375 699	Pressure Relief Valve	Caleffi, Ref. 312439	✓	✓	✓	1	8 716 142 404 0
29	173 006	Circulating Pump	Grundfoss, Ref. 50 50 6500	✓	✓	✓	1	8 716 143 108 0
25	173 001	Expansion Vessel	Zilmet, Ref. 301010	✓	✓	✓	1	8 716 142 500 0
34	173 005	Diverter Valve	Giannoni, Ref. V37/OM/I/F/4/A	✓	✓	✓	1	8 716 156 746 0
104	394 291	DHW Flow Regulator	Type E – Blue 10 Litre		✓		1	8 716 141 057 0
104	379 215	DHW Flow Regulator	Type E – White 8 Litre	✓			1	8 716 141 054 0
104		DHW Flow Regulator	Type E – Red 12 Litre			✓	1	8 716 141 061 0
105	378 416	Domestic Water Filter	MPM, V3326	✓	✓	✓	1	8 716 148 400 0
109	E01-840	Charging Link Assembly		✓	✓	✓	1	8 716 120 320 0
84	E00-722	Circuit Board	Bosch, Type Heatronic II 282		✓		1	8 748 300 276 0
84	173 013	Circuit Board	Bosch, Type Heatronic II AE	✓			1	8 748 300 219 0
84		Circuit Board	Bosch, Type Heatronic			✓	1	8 748 300 430 0
96	299 516	Transformer	ERA, Ref. BV 066-0188.0	✓	✓	✓	1	8 747 201 248 0
65	E00-716	Fan Assembly	WHS		✓		1	8 716 120 282 0
65	299 497	Fan Assembly – RSF	Sifan, REF. FFB.0226-016	✓			1	8 716 120 034 0
65		Fan Assembly	Fime GRO 1165			✓	1	8 716 102 587 0
66	299 363	Air Pressure Sensing Probe	WHS	✓	✓	✓	1	8 716 141 000 0
129	E00-730	Differential Air Pressure Switch	Huba, Ref. 605.99482		✓		1	8 716 146 153 0
129	173 016	Differential Air Pressure Switch – RSF	Huba, Ref. 605.99487	✓			1	8 716 142 406 0
129		Differential Air Pressure Switch	Huba, Ref. 605			✓	1	8 716 104 461 0
60	375 696	Thermister Sensor	Elmwood, Ref. 6655 - 9003 - 5	✓	✓	✓	2	8 716 142 302 0
62	173 015	Overheat Thermostat	Elmwood, Ref. 2455 R - 98 - 789	✓	✓	✓	1	8 716 142 303 0
133	299 354	Combustion Chamber Insulation 24/28CDi	WHS	✓	✓		1	7 716 192 204 0
133		Combustion Chamber Insulation 35CDi II	WHS			✓	1	7 716 192 224 0
134	299 355	Fibre Washer Pack	WHS	✓	✓	✓	1	7 716 192 205 0
135	299 356	'O' Ring Pack	WHS	✓	✓	✓	1	7 716 192 207 0
136	299 357	Fuse Pack	WHS	✓	✓	✓	1	7 716 192 206 0


Accessories

Part	WHS Part No.
Horizontal Telescopic Flue Kit	7 716 191 068
Flue Duct Extension Kit	7 716 191 006
Vertical Balanced Flue Kit & Terminal	7 716 191 079
Vertical Flue Adaptor	7 716 191 016
Digital Single Channel Programmer	7 716 192 003
Mechanical Single Channel Programmer	7 716 192 002
Digistat CD (Radio Controlled Room Thermostat)	7 716 192 006
Wall Spacing Frame 24/28CDi	7 716 192 111
Wall Spacing Frame 35CDi II	7 716 192 278
90° Flue Elbow (One)	7 716 191 013
45° Flue Elbow (Pack of Two)	7 716 191 014
Mini Expansion Vessel	7 716 192 105
Internal Flue Fixing Kit	7 716 191 018
Pre-System Filling Kit	7 716 192 102

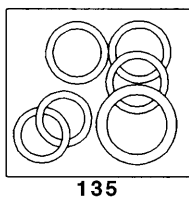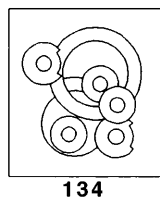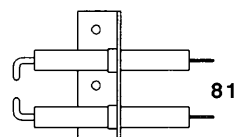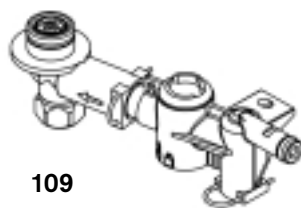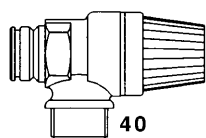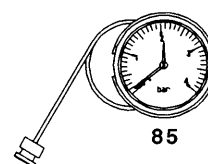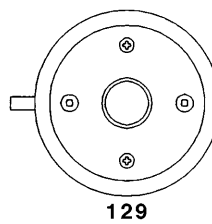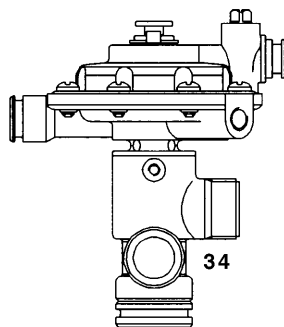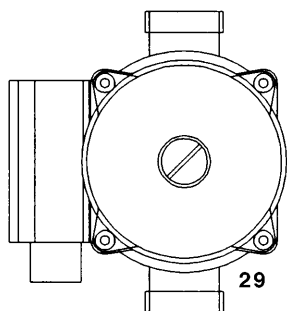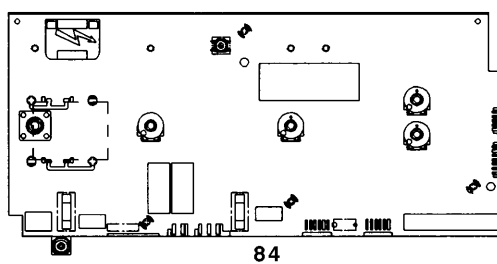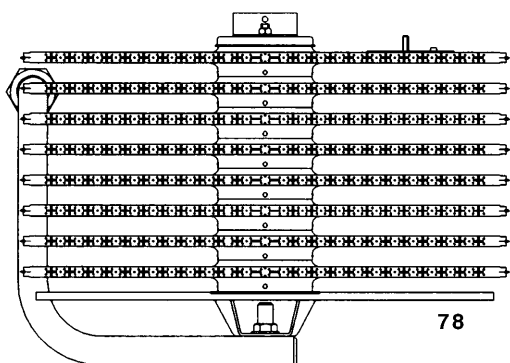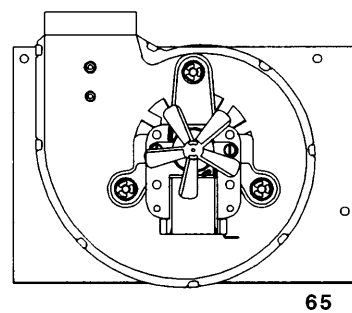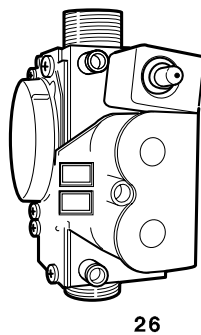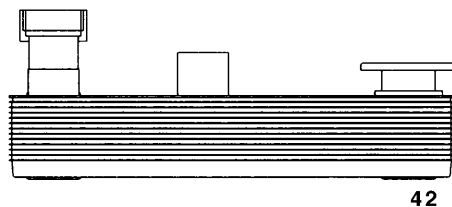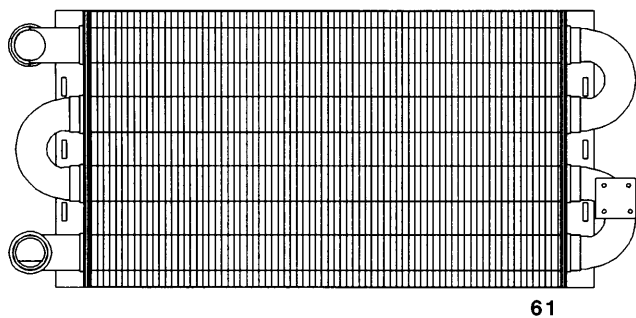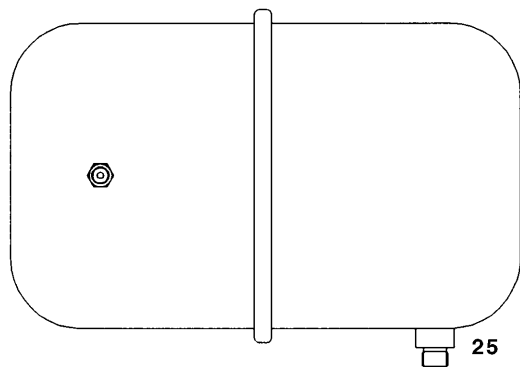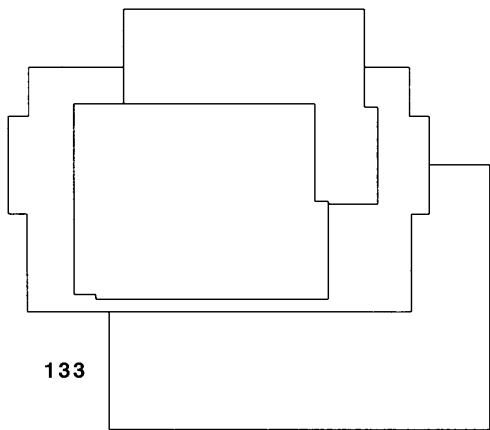


18. Operational Flow Diagrams


CENTRAL HEATING FUNCTION

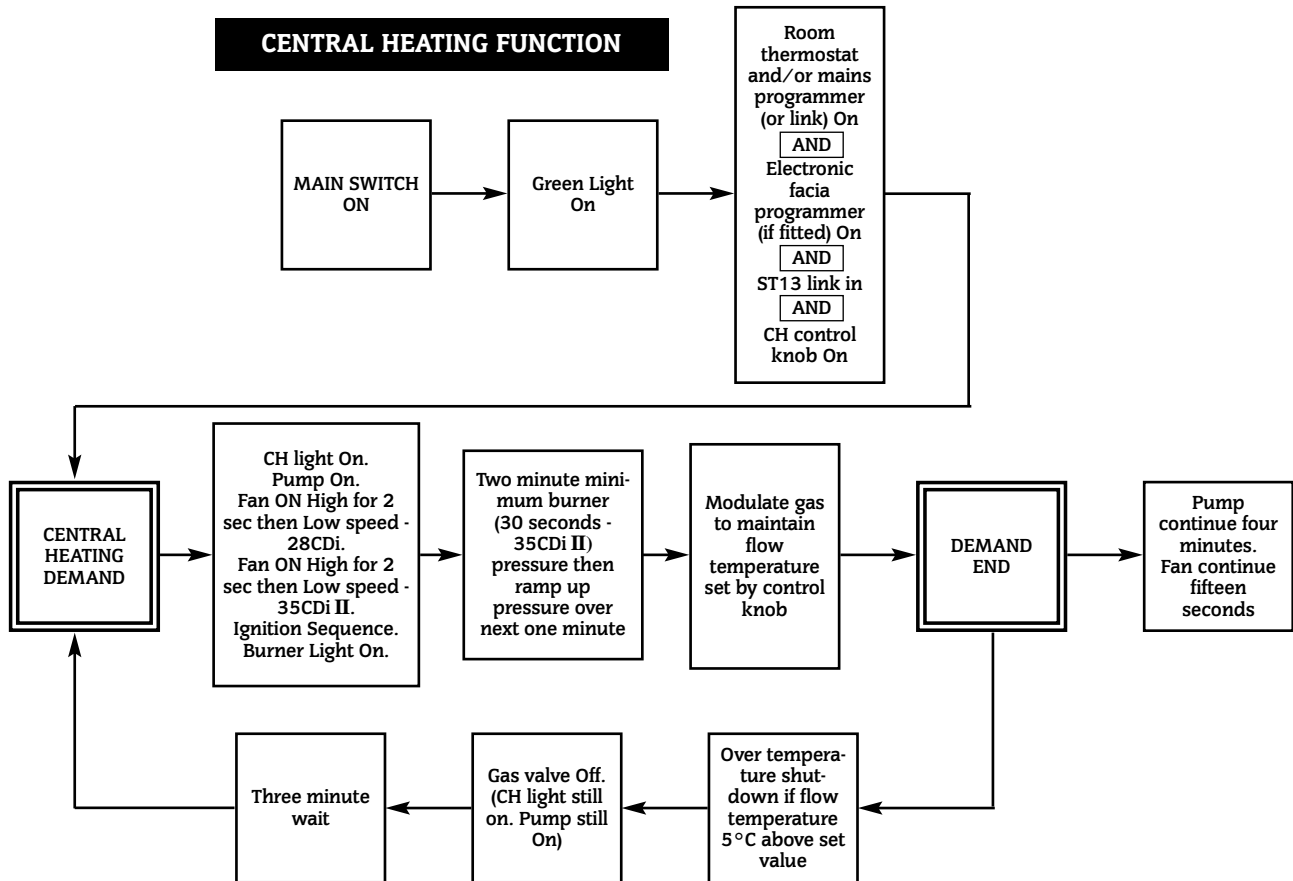


DOMESTIC HOT WATER FUNCTION

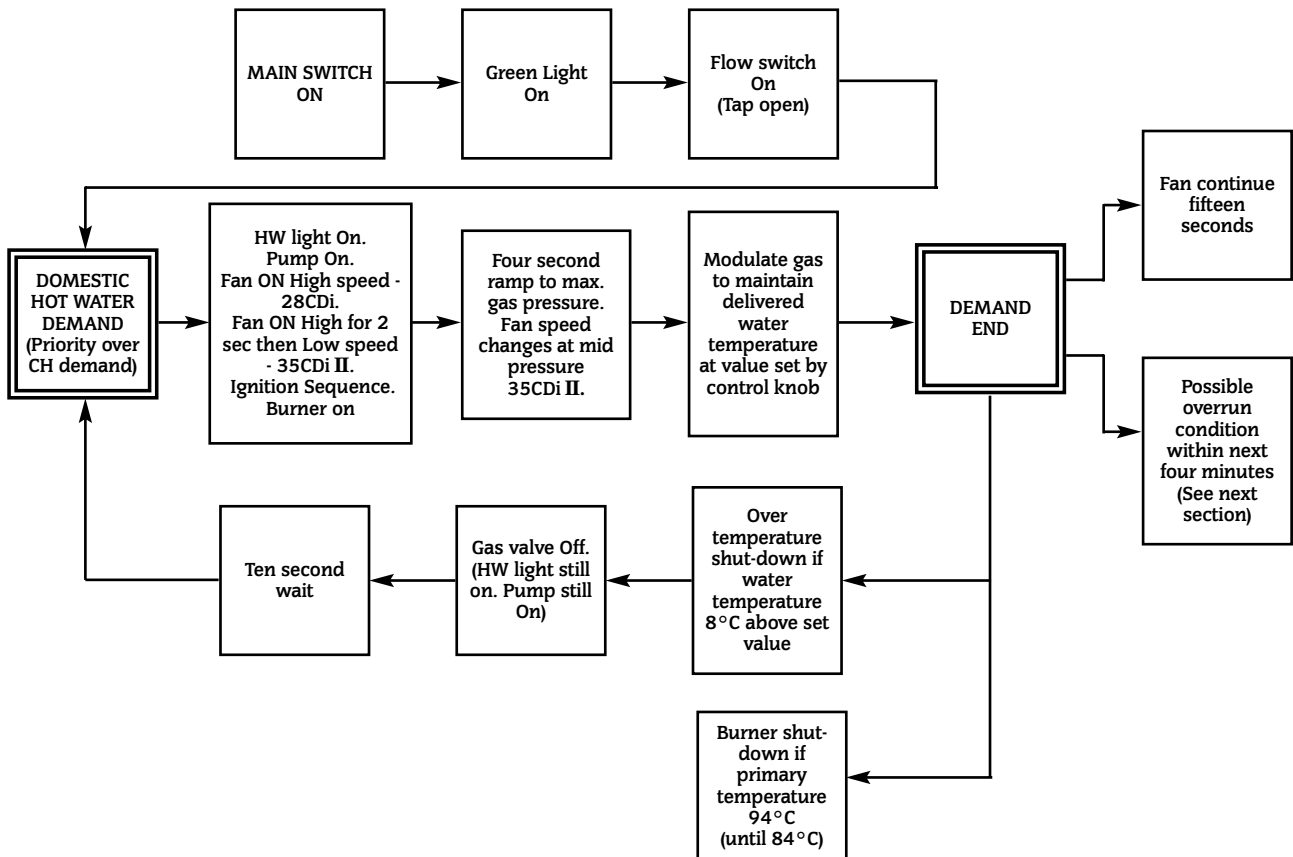

OVERRUN FUNCTION

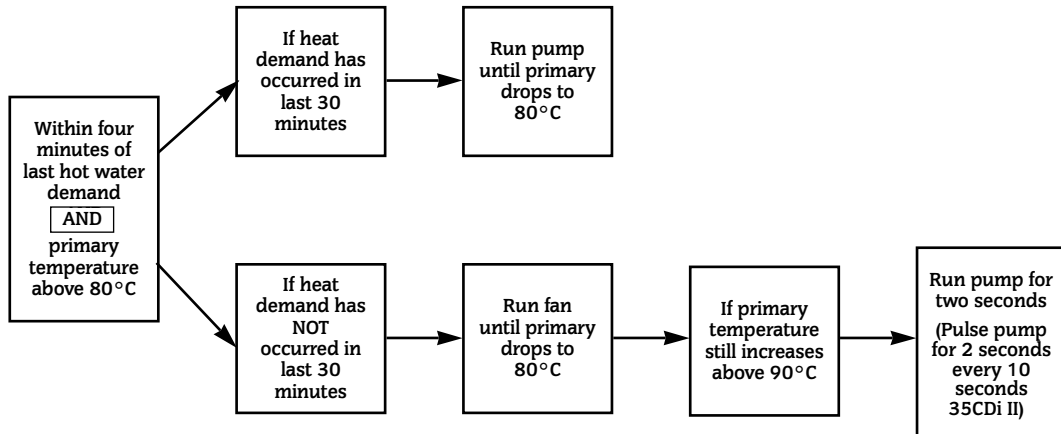

AUTOFROSTAT FUNCTION

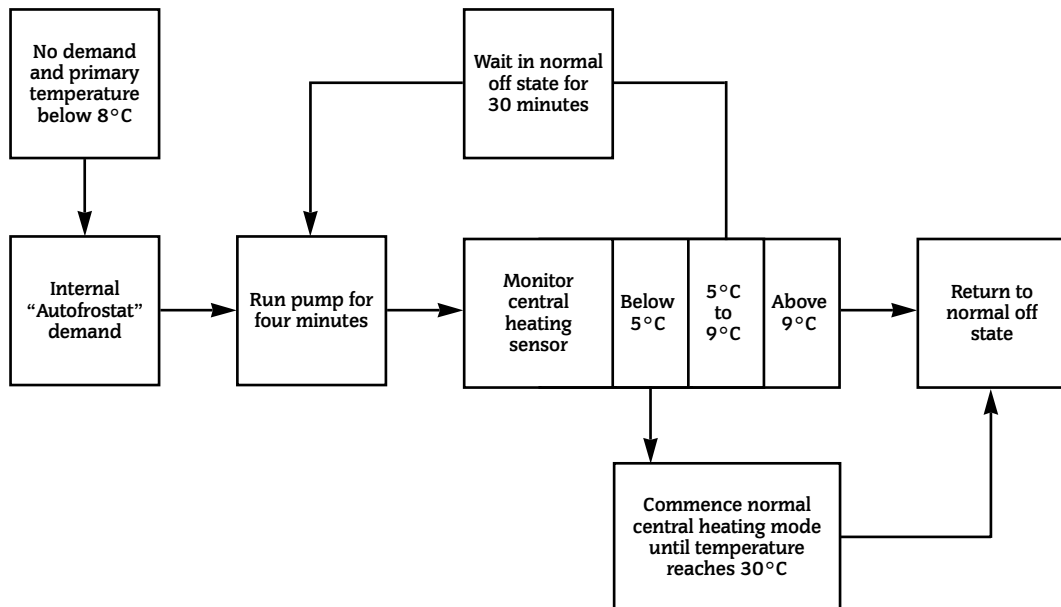

19. Fault Finding


Note: This fault-finding information is for guidance only. Worcester Heat Systems cannot be held responsible for costs incurred by persons not deemed to be competent.

The electronic control system for this boiler incorporates four lights on the fascia. These are used to show normal operating status. But as a secondary function, by flashing, they can also be used to help provide fault diagnostics. Therefore, with individual or groups of lights being permanently off, on or flashing, every normal fault can be identified.

To use the fault finding system, select a box below which represents the light situation during your fault. Then refer to the appropriate following section. This fault-finding system assumes that the appliance has been operating correctly until the time of failure.

PRELIMINARY CHECKS

Preliminary electrical system checks are the first electrical checks to be carried out during a fault-finding procedure. On completion of the Service/Fault-Finding task which has required the breaking and remaking of electrical connections, check (a) EARTH CONTINUITY, (b) SHORT CIRCUIT CHECK, (c) POLARITY and (d) RESISTANCE TO EARTH.



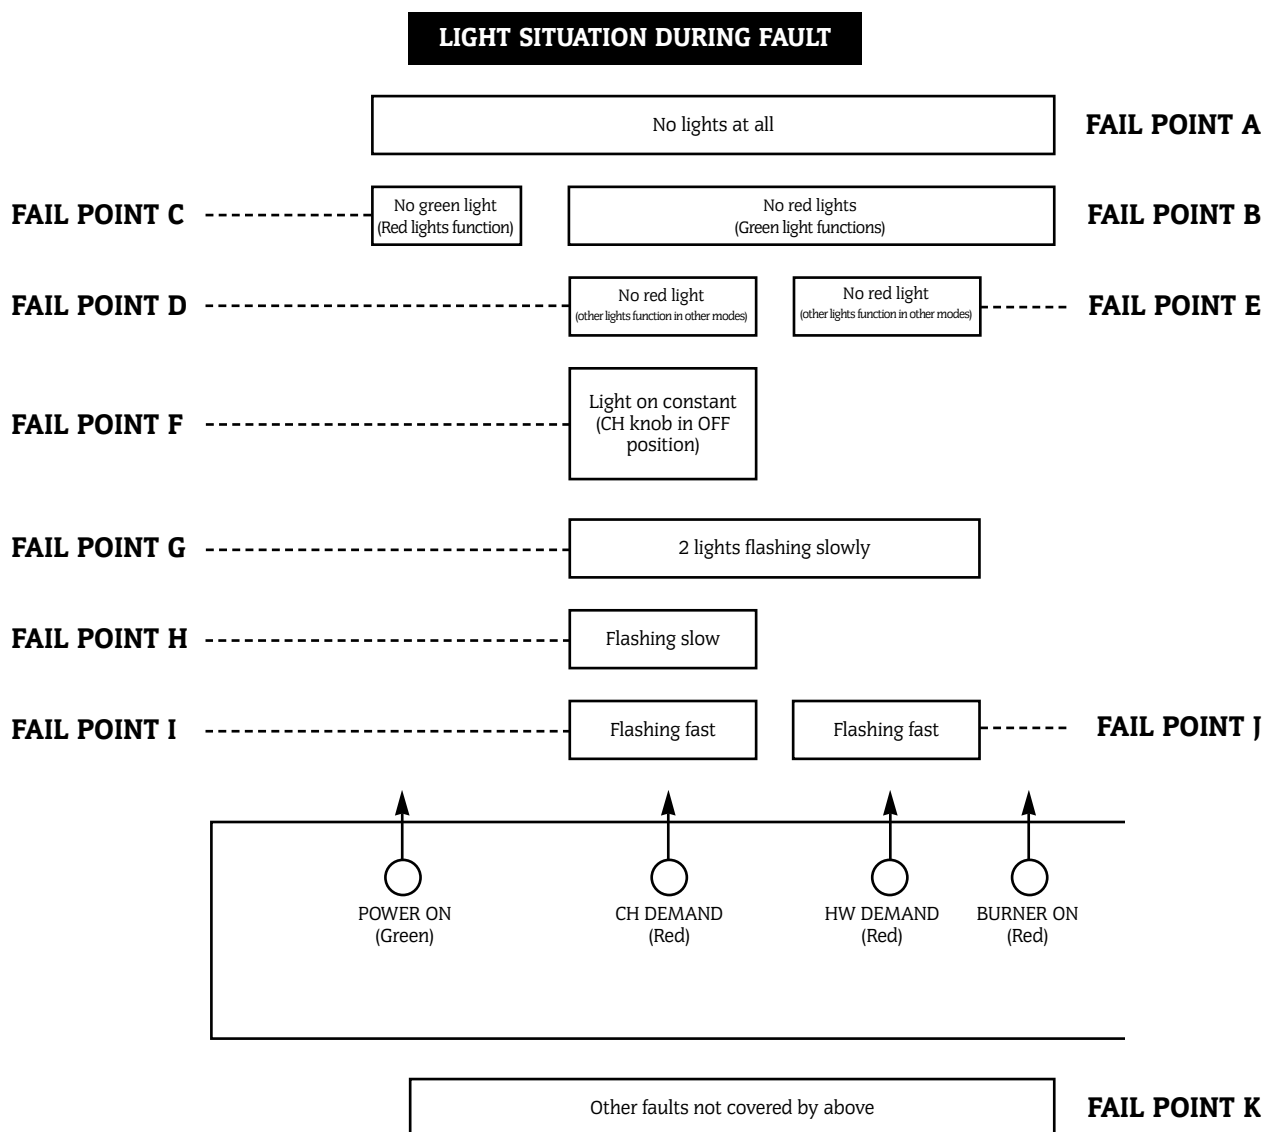




Note:



Slow flash is once per second, fast flash is five times per second.

Slow flash can only be cleared by using the fascia reset button (press for at least one second).


Fast flash is cleared by removing fault and/or main switch off/on.

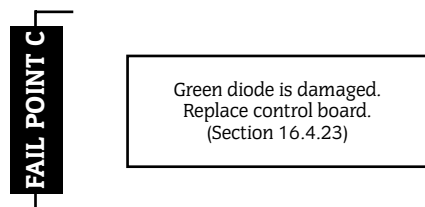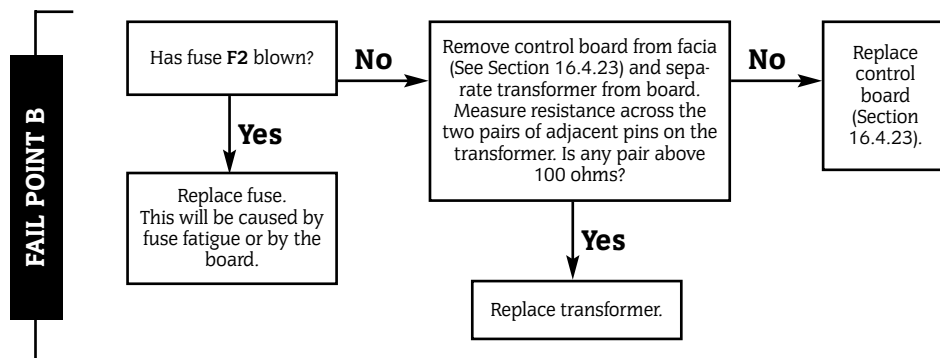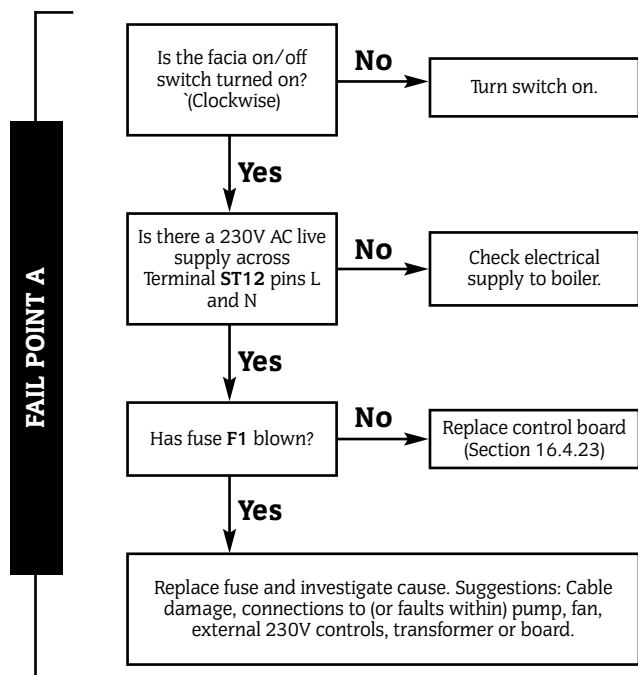


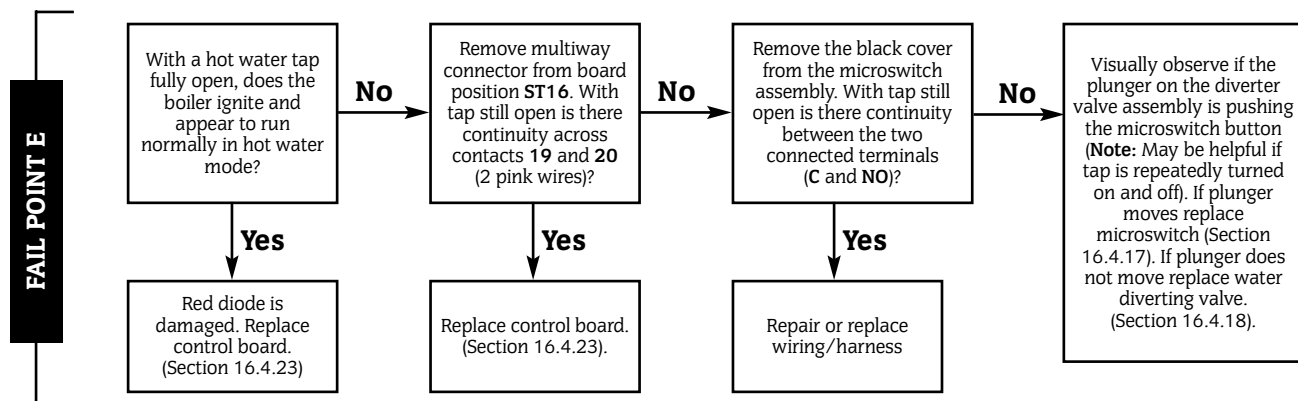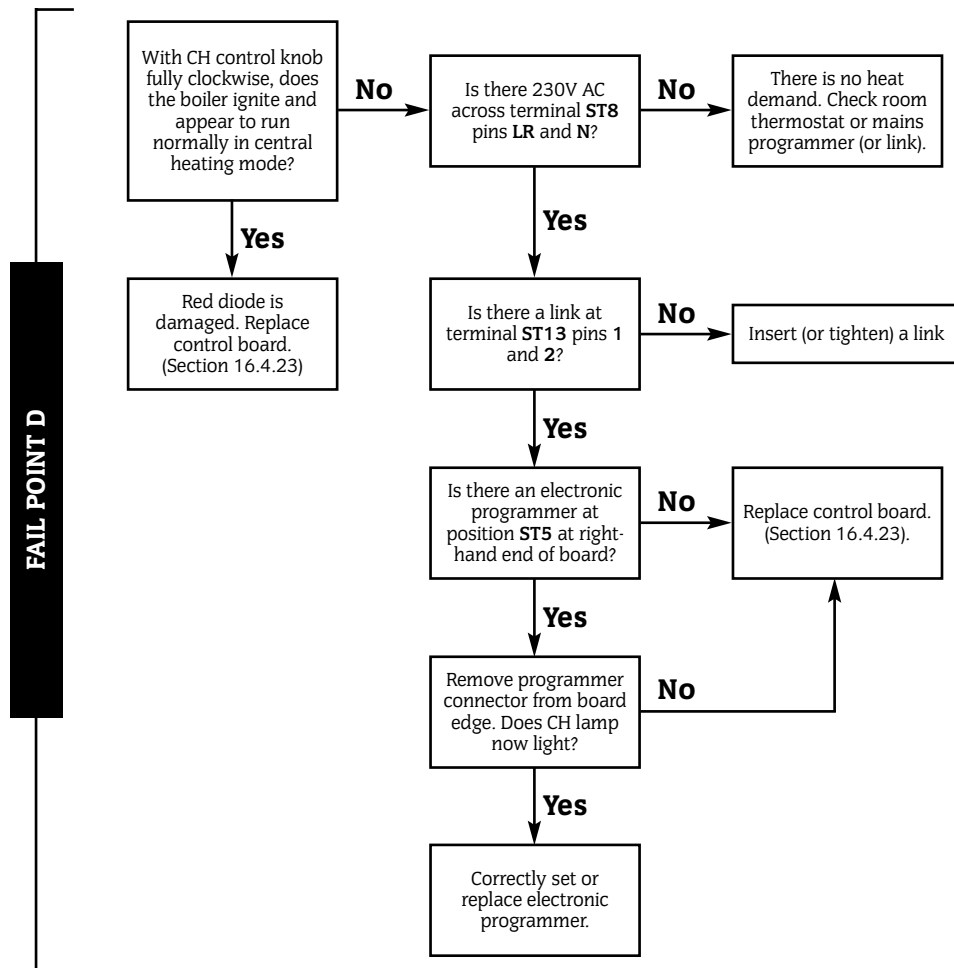


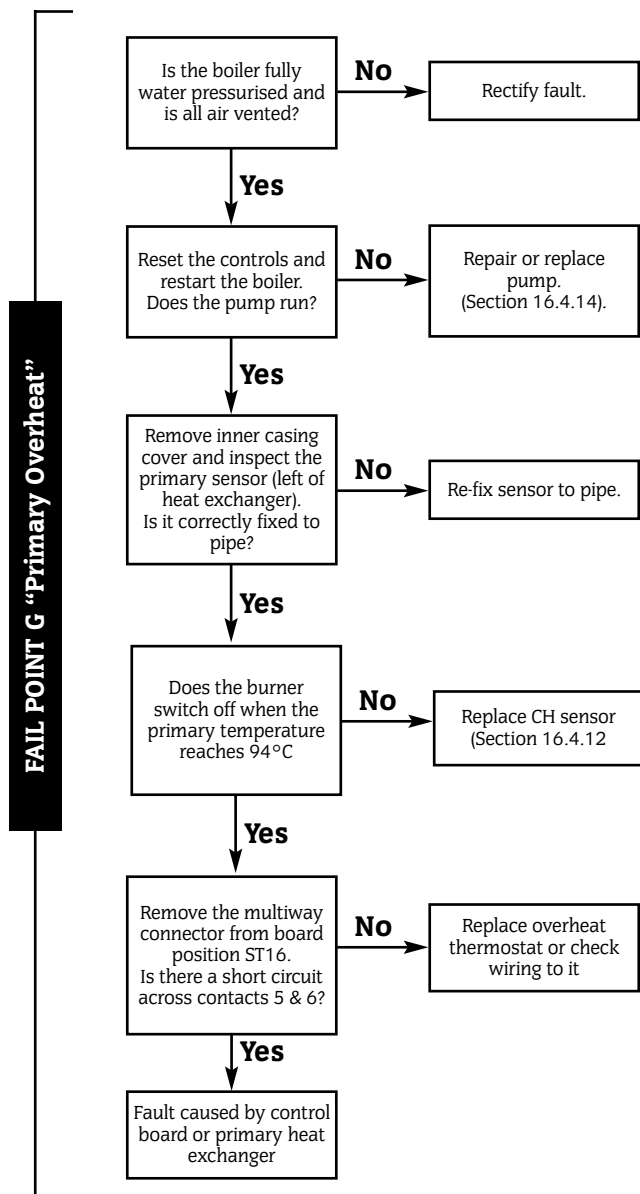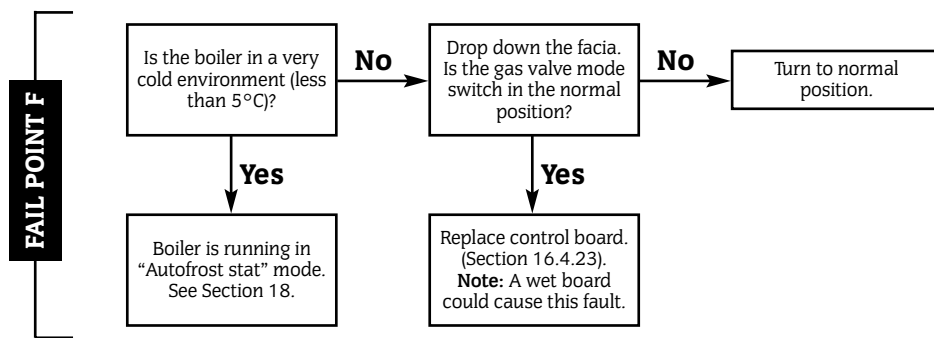


FAIL POINT H "Burner Lockout"

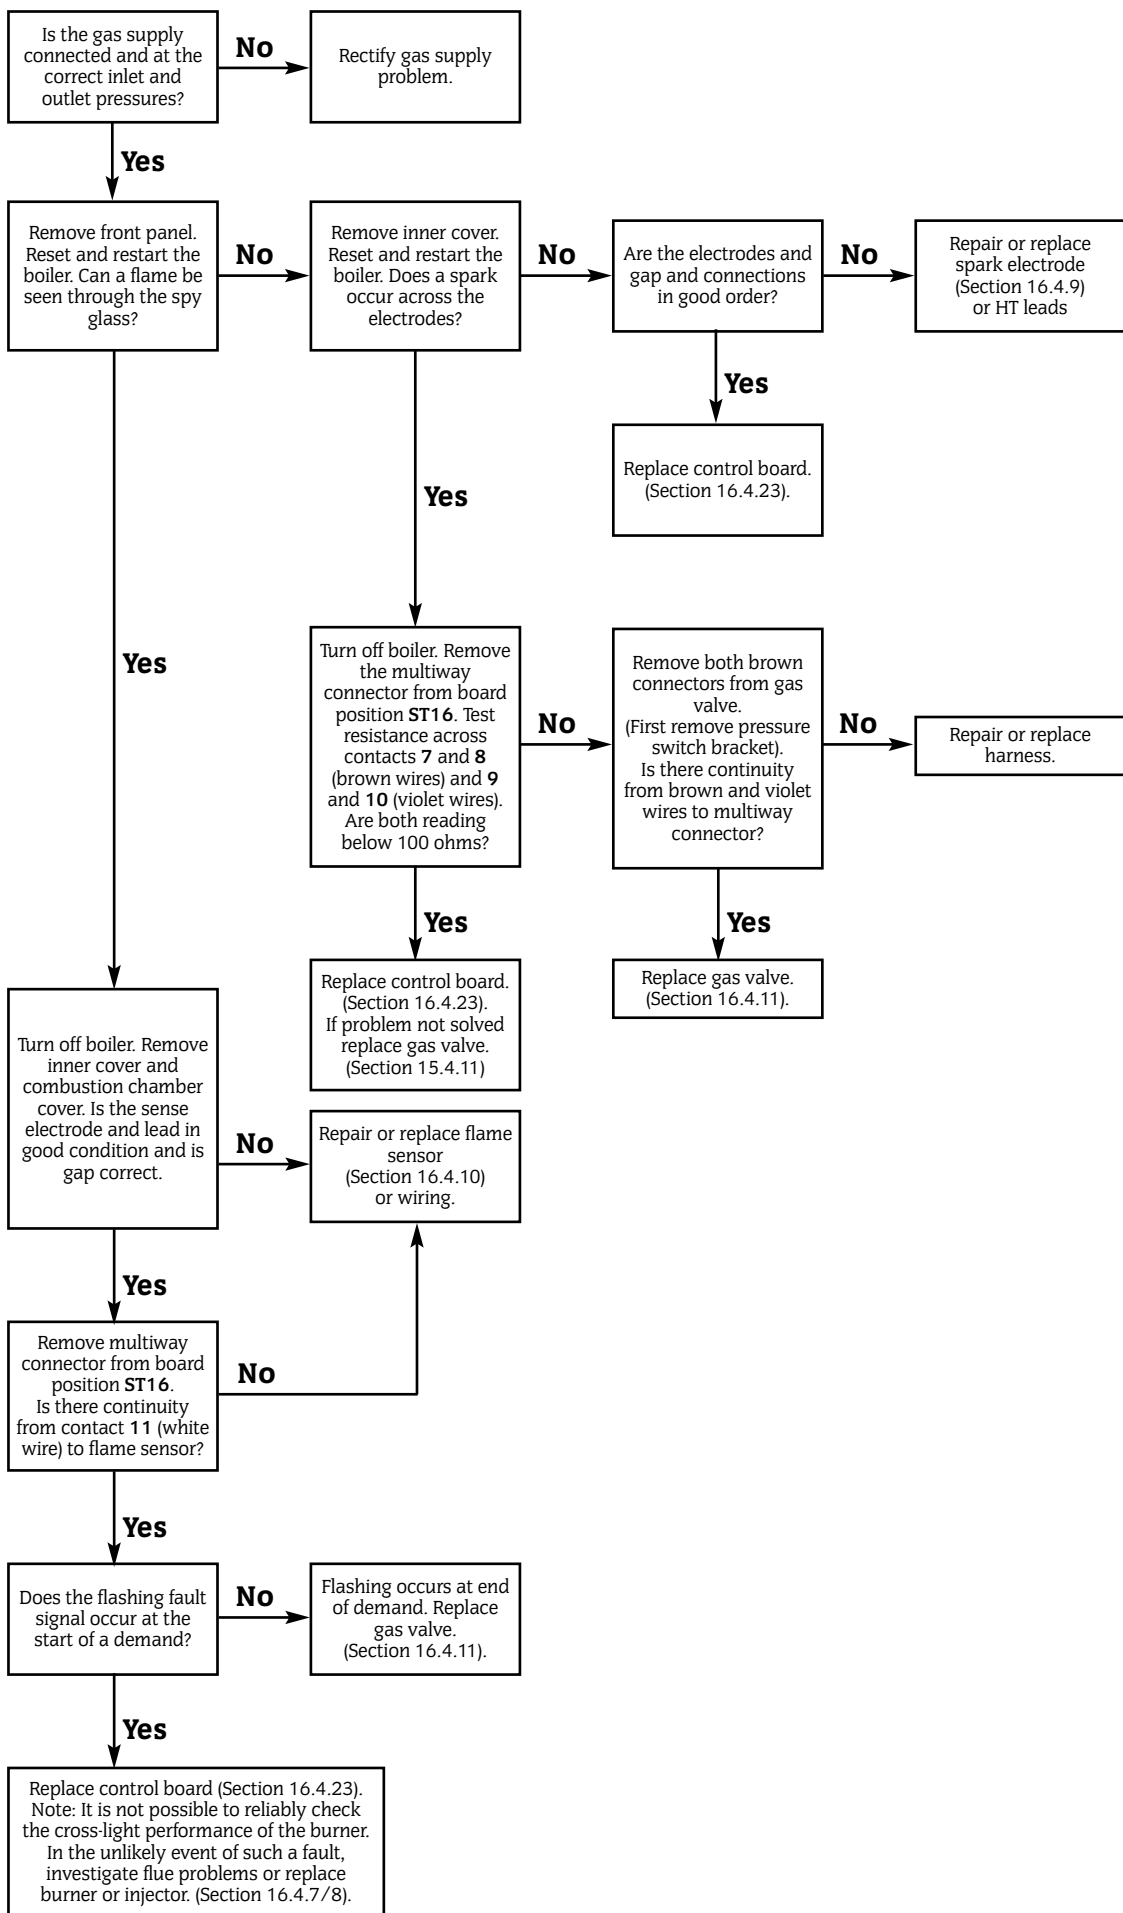

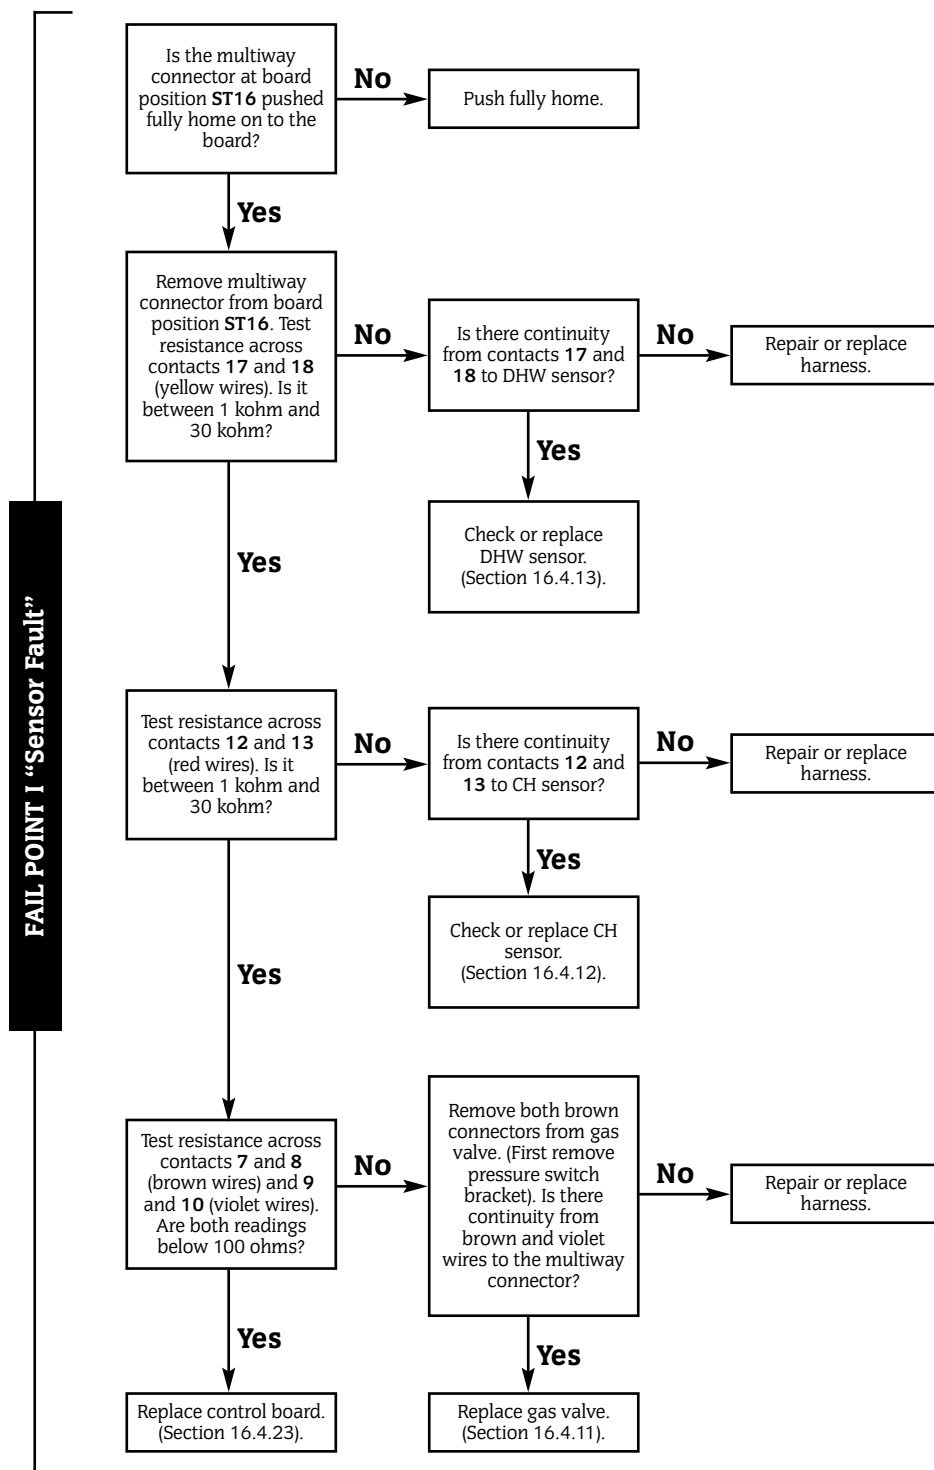

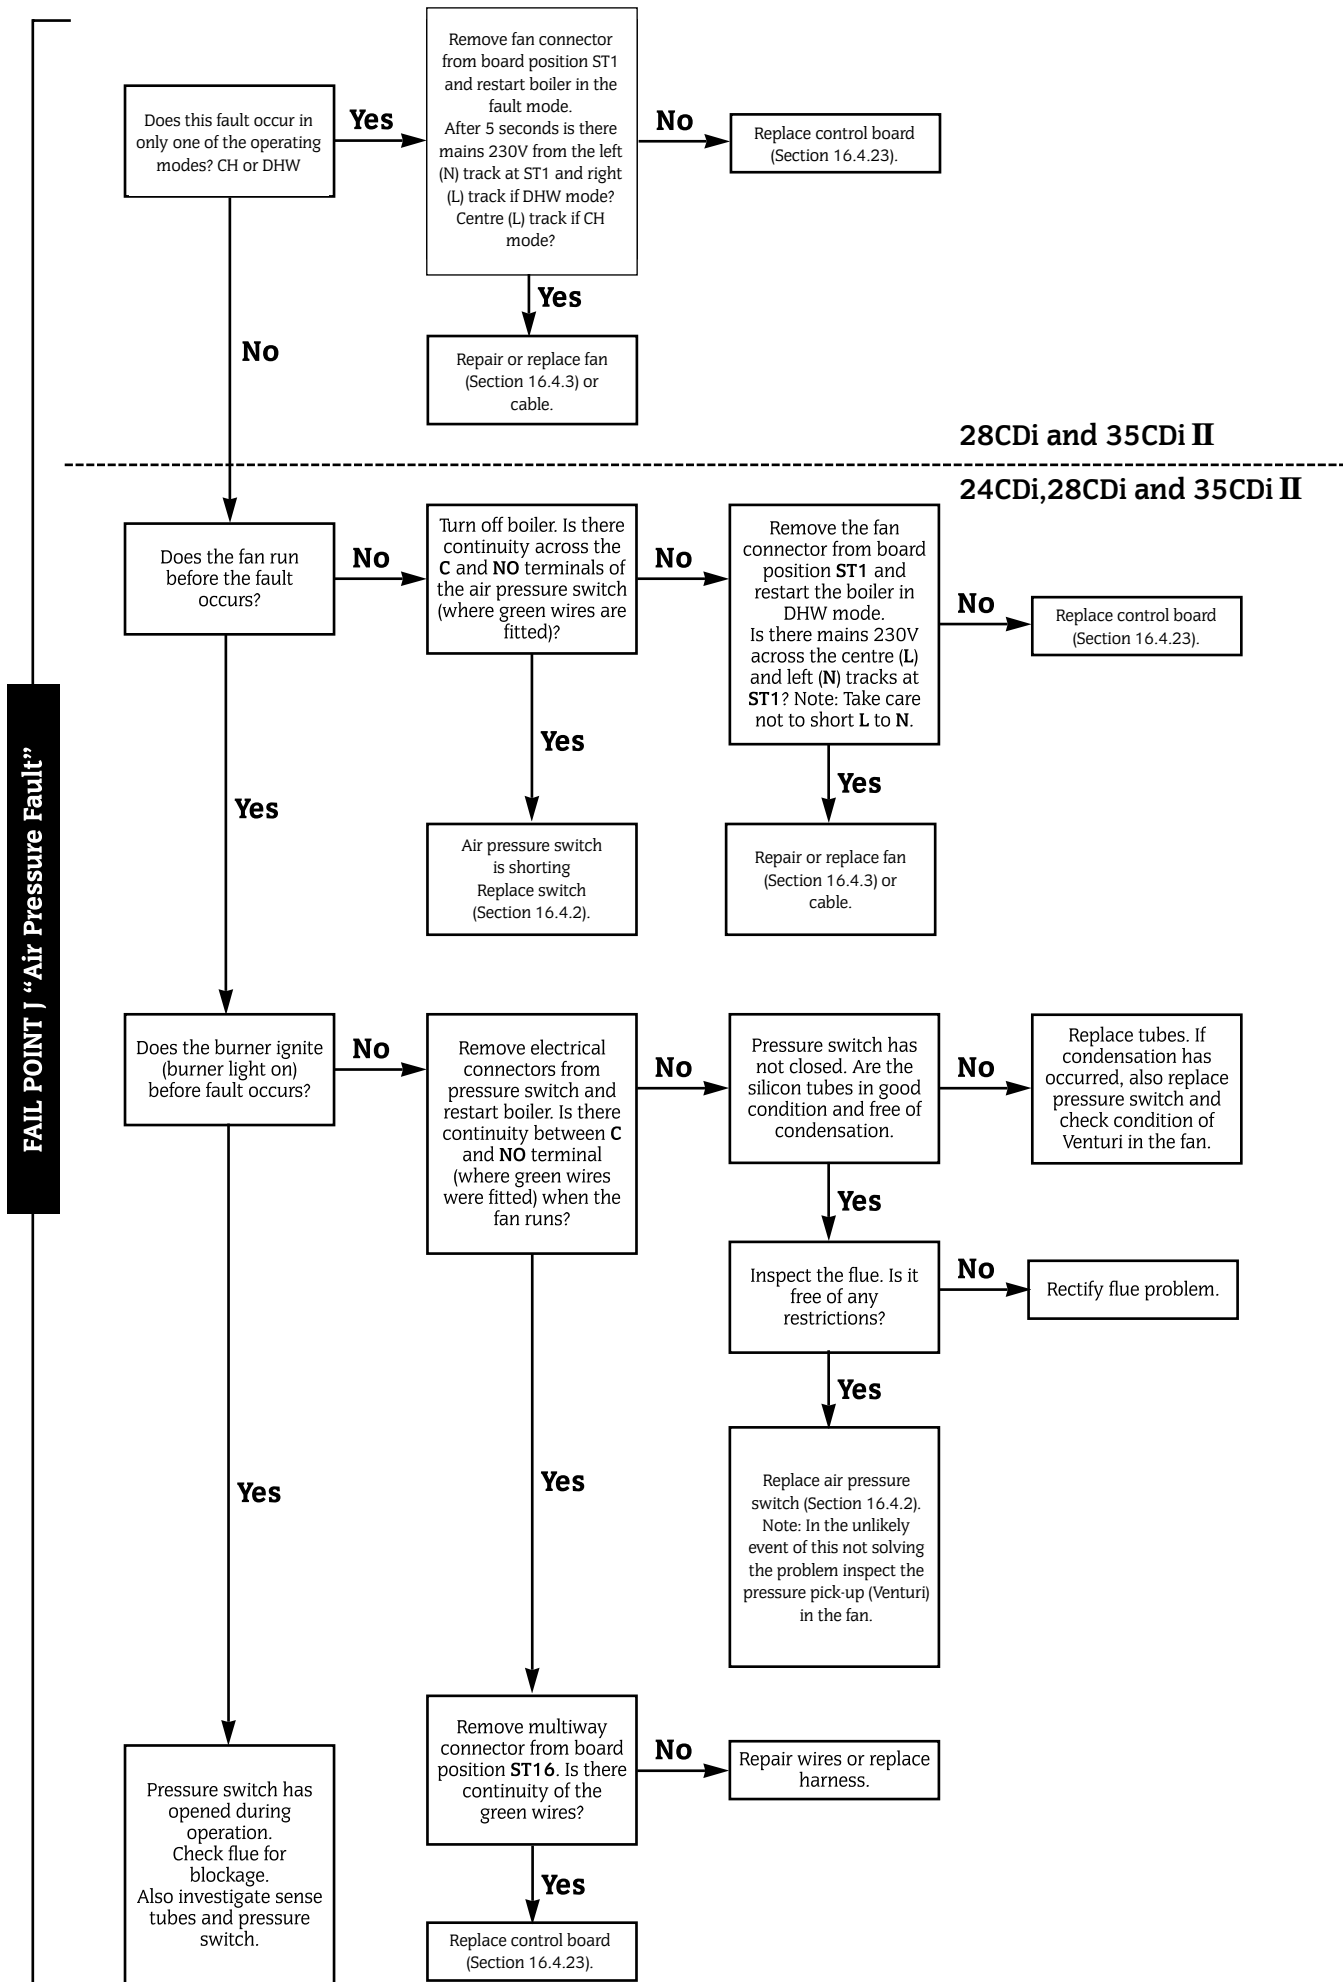

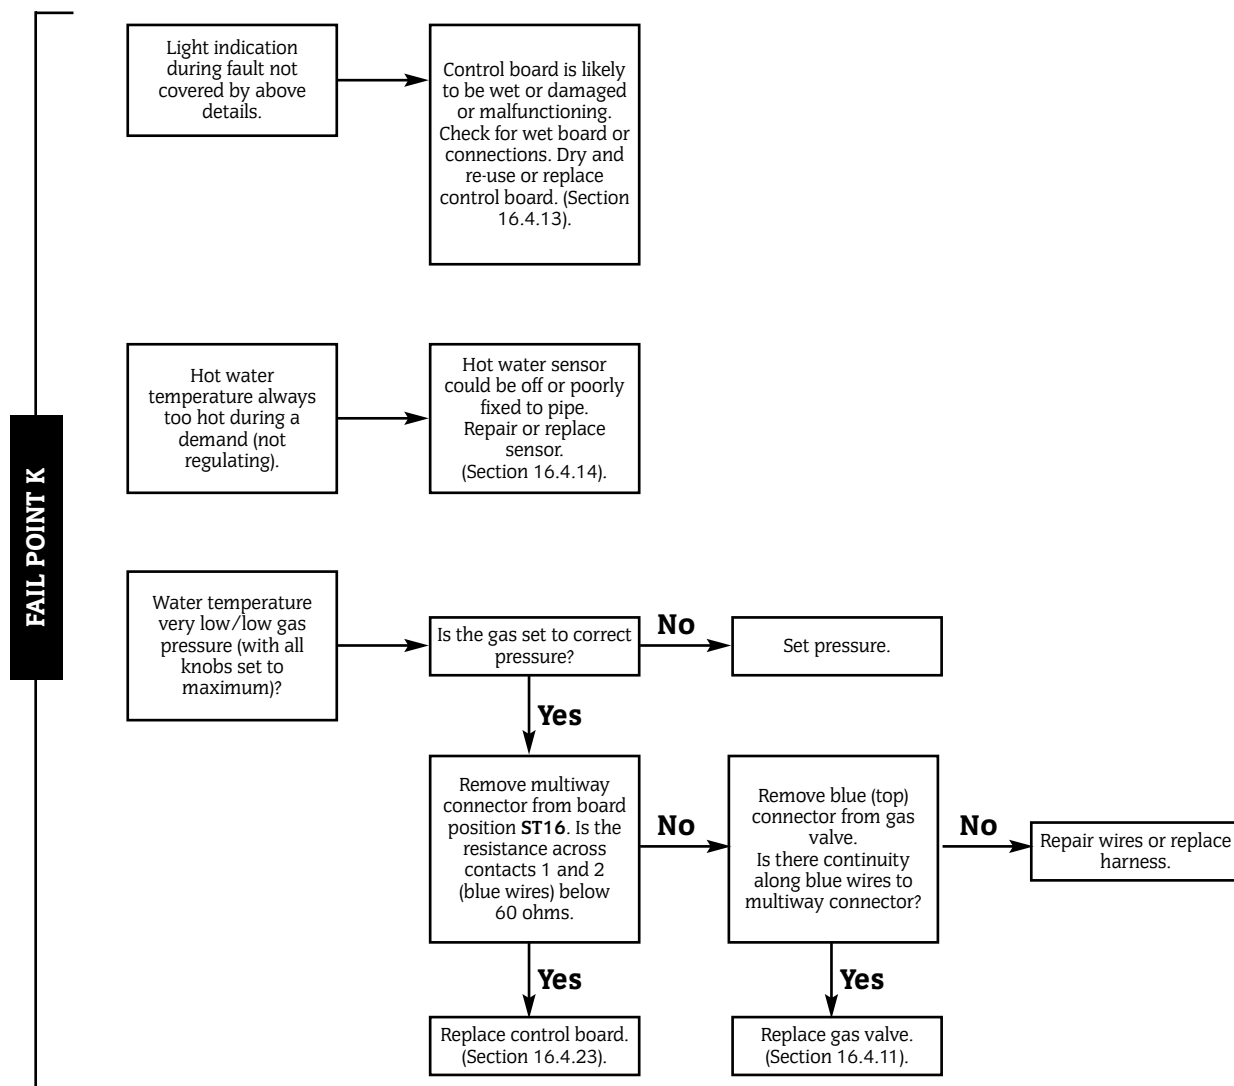

20. Conversion Instructions

ONLY COMPONENTS SUPPLIED BY WORCESTER HEAT SYSTEMS SHOULD BE USED.

ONLY COMPETENT PERSONNEL SHOULD ATTEMPT THE CONVERSION.


CONVERSION FROM NATURAL GAS TO LPG SHOULD NOT BE CARRIED OUT ON APPLIANCES INSTALLED IN A ROOM OR INTERNAL SPACE BELOW GROUND LEVEL

Conversion Kit LPG to NG	7 716 192 307
Conversion Kit NG to LPG	7 716 192 308

1. Ensure the gas service cock is turned **OFF** and the electrical supply is **ISOLATED**.
2. Refer to the Servicing Instructions to remove the cabinet front panel and inner casing.
3. Follow the dismantling instructions to remove the burner. Refer to Section: Inspection and Servicing.
4. Remove the injector and replace with the relevant injector from the kit. Refer to Section: Inspection and Servicing.
5. Remove the nut, end cap and bracket at the opposite end of the burner. If the conversion is LPG to NG it is necessary to remove the gauze. If the conversion is NG to LPG it is necessary to fit the gauze supplied in the kit.
6. Refit the end cap ensuring that the support bracket is in the correct orientation.
7. Remove the gas valve and replace with the gas valve supplied in the kit. Refer to Section: Replacement of Parts.
8. Re-assemble the burner and inner casing.
9. Turn on the gas and electricity supplies and follow the commissioning procedure to confirm gas soundness and correct boiler operation.
10. Check and adjust the setting pressures to the values in the table below and adjust if necessary. Refer also to the Installation and Service Instructions Section: Replacement of Parts "To Set the Burner Pressure".
11. Refit the plastic sealing cap to the gas valve modulating valve adjuster and seal with a dab of paint or similar.
12. Turn off the boiler and when cool peel off the arrow from the data plate on the combustion chamber front panel and re-stick against the gas type for which the boiler has been converted and adjusted.
13. Replace the boiler front panel.

The conversion is now complete.

GAS VALVE

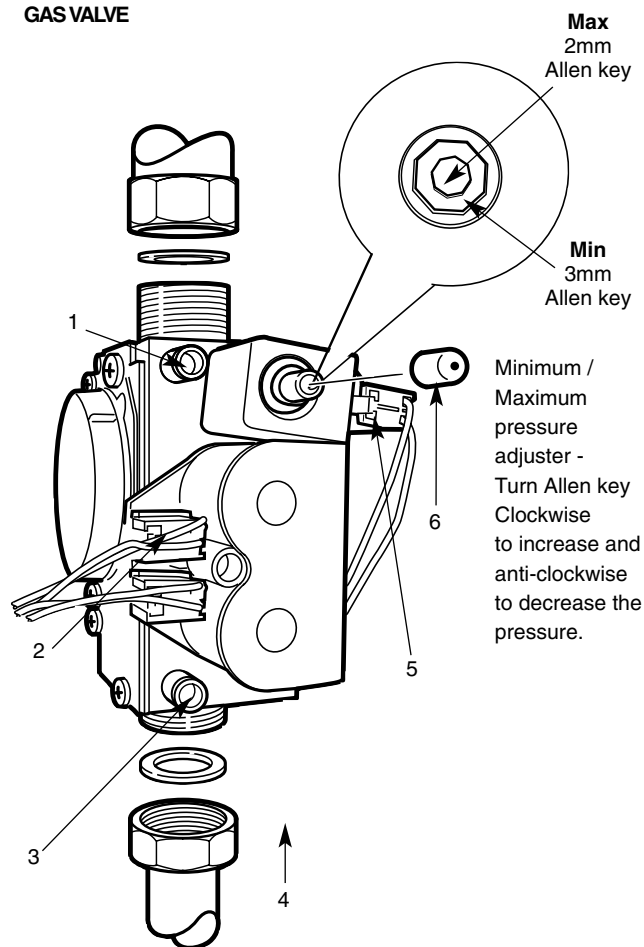

1. Burner pressure test point
2. Main gas valve connections
3. Inlet pressure test point
4. Gas valve bracket
5. Electrical connections modulator (Blue:Blue)
6. Gas valve sealing cap

NOMINAL BOILER RATINGS (10 minutes after lighting)		BOILER ADJUSTED FOR G20 (Natural Gas)			BOILER ADJUSTED FOR G31 (Propane)		
		24CDi	28CDi	35CDi II	24CDi	28CDi	35CDi II
MAX. INPUT DHW	kW	27.0	31.5	39.2	27.0	31.5	39.2
BURNER PRESSURE	mbar	14.8	15.5	13.5	35.5	35.5	34.7
MAX. INPUT CH	kW	27.0	27.0	30.1	27.0	27.0	30.1
BURNER PRESSURE	mbar	14.8	10.8	8	35.3	24.3	21.3
MIN. INPUT DHW	kW	11.4	11.4	11.9	11.4	11.4	11.9
BURNER PRESSURE	mbar	1.5	1.0	0.9	5.4	3.8	3.1

This manual is to be used in conjunction with the variant part number of the bar code below:

24CDi




8716102563

28CDi



8716102564

35CDi II

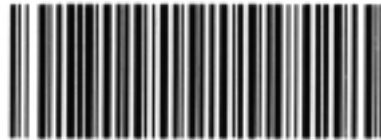

8716102651



*Worcester Heat Systems Limited (Bosch Group), Cotswold Way, Warndon, Worcester WR4 9SW.
Telephone: 01905 754624. Fax: 01905 754619.
Technical Helpline 08705 266241.
www.worcester-bosch.co.uk*


This booklet is accurate at the date of printing but will be superseded and should be disregarded if specifications and/or appearances are changed in the interests of continued improvement.

All goods sold are subject to our official Conditions of Sale, a copy of which may be obtained on application.

PUBLICATION 8 716 102 567j 01/03



Bosch Group

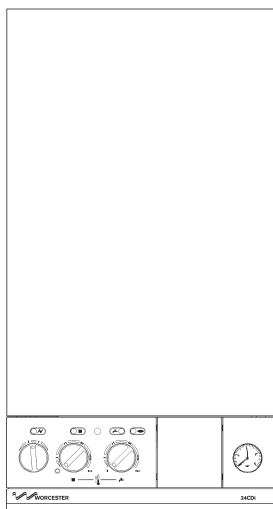

24CDi, 28CDi & 35CDi II COMBI



*Worcester Bosch supports the
Benchmark code of practice*

G.C. NUMBERS

APPLIANCE	NATURAL GAS	L.P.G.
24CDi Fanned Flued (RSF)	47 311 30	47 311 31
24CDi Balanced Flued (BF)	47 311 29	
24CDi Open Flued (OF)	47 311 32	47 311 33
28CDi Fanned Flue (RSF)	47 311 34	47 311 35
35CDi II Fanned Flue (RSF)	47 311 58	47 311 59

USER INSTRUCTIONS & CUSTOMER CARE GUIDE

EXCELLENCE COMES AS STANDARD

Thank you for purchasing a Worcester CDi gas-fired combination appliance.

Worcester CDi appliances are made by Worcester Heat Systems and the strictest quality control standards are demanded throughout every stage of production.

Indeed, Worcester Heat Systems have led the field in

innovative appliance design and performance for more than 30 years.

The result is that your new Worcester CDi appliance offers you the very best of everything - quality, efficiency, economical running costs, proven reliability and value for money.

What's more, you also have the assurance of our no-nonsense 1 year parts and labour guarantee.

And, to keep your boiler operating at peak condition and efficiency, an optional maintenance scheme is available from Worcester Heat Systems Ltd. Contact our Service Contracts team on 01905 754624 for further details.



CONTENTS

	Page No.
Operating Instructions	3-11
Fault and Breakdowns	12
Maintenance and Extended Warranty Information	13-14
Guarantee Details ...	15-16





GENERAL INFORMATION

GAS SAFETY (INSTALLATION AND USE) REGULATIONS 1998

It is the law that all gas appliances must be installed by a competent person in accordance with the above regulations. Failure to install appliances correctly could lead to prosecution. It is in your interest and that of safety to ensure compliance with the law. The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

WARNING: This appliance must be earthed and protected by a 3 amp fuse.

ELECTRICITY SUPPLY: 230V ~ 50Hz

IMPORTANT: To get the best from your Worcester CDi please read these instructions carefully.

NOTE: In the event of a fault the appliance should not be used until the fault has been corrected by a competent person.

BENCHMARK

The Benchmark initiative is a code of practice to encourage the correct installation, commissioning and servicing of domestic central heating boilers and system equipment.

A 'log book' is dispatched with every appliance. **This is a vital document that needs to be completed by the installer at the time of installation. It confirms that the boiler has been installed and commissioned according to the manufacturers instructions.**

All CORGI Registered Installers carry a CORGI ID card and have a registration number. Both should be recorded in your central heating log book. You can check that your installer is CORGI registered by calling CORGI on 01256 372300.

Without the completion of the log book, manufacturers may refuse to respond to a call-out request. It is important that your installer has given you the fully completed log book.

GENERAL DESCRIPTION

(See Fig.1.)

The WORCESTER CDi MODELS are combined domestic hot water and central heating appliances. They consist of a gas fired boiler having a varying output of between:

	CH	DHW
24CDi	9.0 - 24kW	9.0 - 24kW
28CDi	9.0 - 24kW	9.0 - 28kW
35CDi II	10.5 - 27.5kW	9.5 - 35.3kW

a heat exchanger to provide domestic hot water via the boiler, circulating pump and water diverting valve. All the necessary controls to provide mains fed domestic hot water and central heating.

The appliances are supplied as standard with a manual operating switch. Alternatively a fascia mounted programmer may have been fitted.

The appliances can operate in one of two modes. Hot water only or hot water and central heating.

Hot Water Mode:

When a demand is made for hot water by opening a tap or shower, the flow switch will energise the pump and circulate primary hot water around the boiler and water to water heat exchanger. The burner will light to its maximum setting.

When hot water is no longer required the appliance pump (or fan) may continue to operate to dissipate the residual heat within the boiler. A flow restrictor is fitted within the appliance which limits a hot water delivery rate to a maximum of:

24CDi	9.0 ($\pm 15\%$) litres/minute
28CDi	10.0 ($\pm 15\%$) litres/minute
35CDi II	12.0 ($\pm 15\%$) litres/minute


Hot Water and Central Heating mode:

When a demand is made for heating by the system controls (i.e. a programmer or room thermostat), the pump will energise, circulating primary water around the heating system and the burner will light.

The heat output from the appliance in this mode has been factory set to maximum. The appliance will operate as necessary to maintain the temperature of the radiators at the level set by the adjustment of the Heating Temperature Control Knob. (See Fig. 2.)

If the system no longer requires output to maintain the desired room temperature, the burner will extinguish. The pump will continue to run for a short period to dissipate the residual heat from the appliance and then switch off.

The appliance will supply heat to the central heating system as required. A demand for hot water at a tap or shower will override the central heating function for the period of the domestic hot water demand.

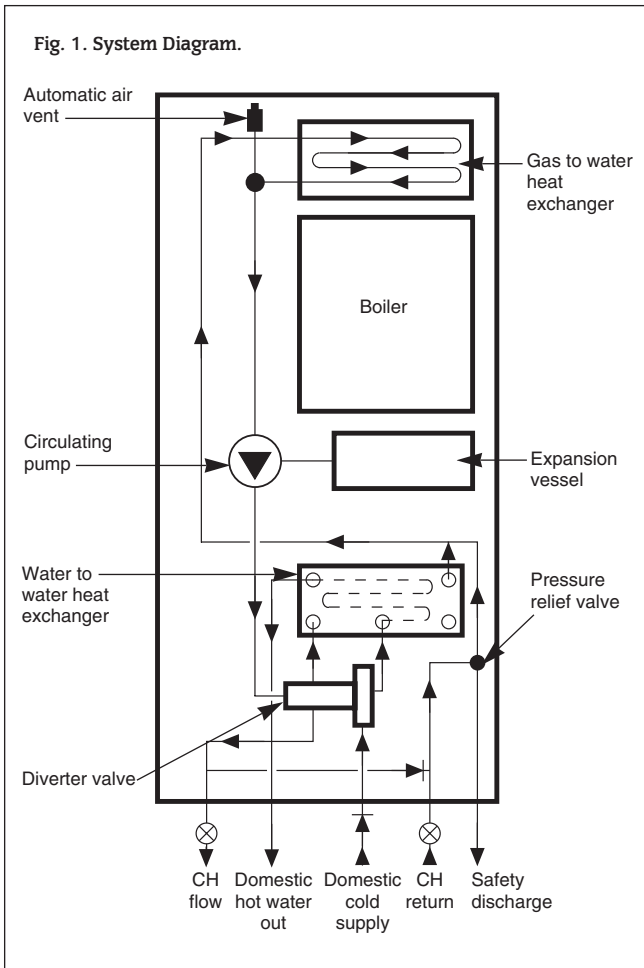





GENERAL NOTES

CENTRAL HEATING SYSTEM

During the first few hours of operation of the central heating system, check that all radiators are being heated at an even rate. Should the upper area of a radiator be at a lower temperature than the base of the radiator, it should be vented by releasing air through the venting screw at the top of each radiator. Make sure your installer shows you how to carry out the operation. Repeated venting will reduce the quantity of water in the system and this must be replenished for safe and satisfactory operation of the appliance. Should water leaks be found in the system or excessive venting be required from any radiator, your installer or heating engineer should be contacted and the system corrected.

Fig. 1a.

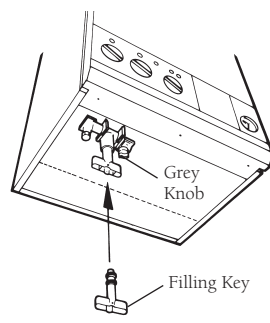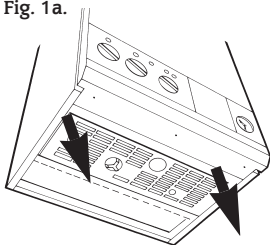

SEALED HEATING SYSTEM

The appliance can be fitted to a sealed heating system which is pre-pressurised. In this case your installer will advise you on the minimum and maximum pressure that should be indicated on the pressure gauge. See Fig. 2. Check regularly that this pressure is maintained and contact your installer or maintenance engineer if there is a permanent significant drop in pressure indicated on the gauge. If the system loses pressure it should be re-pressurised as instructed by the installer (**N.B. Maximum operating pressure 2.5 bar**).

Re-pressurising The System (See Fig. 1a). **(If in doubt leave this procedure to your installer).**

Remove the bottom panel to gain access to the filling loop assembly.

Insert the bayonet end of the filling key into the corresponding cut outs in the filling loop housing and twist to lock the key in place.

Turn the grey knob anti-clockwise to allow water ingress and fill until the required pressure is reached.

Turn the grey knob clockwise to stop filling and remove the filling key by lining up the bayonet end of the key with the cut outs in the filling loop housing and withdrawing the key.

N.B. The key must always be removed from the filling loop housing after the system has been filled to prevent accidental filling and to comply with Bylaw 14 of the Water Bylaws Scheme.

Store the key in a safe place for future use and refit the bottom panel.

OPEN VENTED HEATING SYSTEM

The appliance may be fitted to an open vented heating system your installer will advise you. There is no need to observe the pressure gauge.

CLEARANCES

	24.28CDi RSF	35CDi II	24CDi OF	24CDiBF
Left-hand side	10	10	10	10
Right-hand side	10	10	10	10
In Front	600	600	600	600
Above	180	180	300	100
Below	200	200	200	200

Minimum clearances in millimetres.

Your installer will have provided adequate space around the appliance for safety and servicing. Do not restrict this space by the addition of cupboards, shelves etc. close to the appliance.

ROOM THERMOSTAT

A room thermostat may be fitted for control of the central heating temperature. It will be located in one room of the home. The method of setting a room thermostat varies with the type and manufacture. Refer to the instructions supplied with the room thermostat.

THERMOSTATIC RADIATOR VALVES

If thermostatic radiator valves are fitted to the system then they must conform to the requirements of BS2767:10. It is advisable to leave one valve permanently set at maximum to prevent the boiler short cycling.

SHOWERS, BIDETS, TAPS AND MIXING VALVES

Standard hot and cold taps and mixing valves used with the appliance must be suitable for operating at mains pressure. Thermostatically controlled shower valves will guard against the flow of water at too high a temperature.

If using a pressure equalising valve, set the Domestic Hot Water temperature control knob to the 'MAX' position.

Hot and cold mains fed water can be supplied direct to an overrim flushing bidet subject to local water company requirements.

With all mains fed systems the flow of water from the individual taps will vary with the number of outlets operated simultaneously and the cold water mains supply pressure to the property. Flow balancing using 'Ball-o-Fix' type valves is recommended to avoid an excessive reduction in flow to individual outlets.

For further information contact Worcester Heat Systems Technical Helpline. 08705 266241

HOT AND COLD FLOW

The flow of water demanded from both hot and cold service outlets is dependent upon mains supply, it may not be possible in some installations to operate all outlets simultaneously.

WATER MAINS FAILURE

It is important to note that in the event of a mains water supply failure, no tap water will be available until the mains supply is restored. The appliance can still be used for heating provided that the system is of the sealed system type. Open vent central heating systems should be turned off until the supply is restored.

USE IN HARD WATER AREAS

Normally there is no need for scale protection. However, in areas of exceptionally hard water supply it is recommended that an In-Line scale inhibitor be fitted.

Installation should be strictly in accordance with the requirements of the local Water Company. An isolating valve to facilitate servicing should be incorporated.

The water hardness may be determined using the standard test paper or by reference to the local Water Company.

Further information may be obtained from Worcester Heat Systems Technical Helpline.

AIR SUPPLY FOR OPEN FLUED (O.F.) APPLIANCES

Your installer will have made arrangements for an adequate supply of fresh air to the appliance. Fresh air is required for combustion. Do not block up any air ways which may be let into a wall or door. Do not hang clothes or other combustible materials over the appliance or against the flue pipe.

NOTE: Do not place anything on top of the appliance. If the appliance is fitted in a compartment do not use the compartment for storage purposes unless it conforms to the requirements of BS 6798:1987: Section 6. In particular, the flue pipe should not pass through an airing cupboard space unless protected by a guard (such as wire mesh) concentrically spaced 13mm (1/2in), as described in BS 6798:1987.

VENTILATION OF BALANCED FLUED (BF) AND ROOM SEALED FANNED FLUE (RSF) APPLIANCES

These are room sealed appliances and any ventilation openings in a wall or door must not be obstructed. Do not allow the flue terminal fitted on the outside wall to become obstructed or damaged.

NOTE: Do not place anything on top of the appliance. If the appliance is fitted in a compartment do not use the compartment for storage purposes unless it conforms to the requirements of BS 6798:1987: Section 6. It is essential that the airing space is separated from the boiler space by a perforated non-combustible partition as described in BS 6798:1987.

CIRCULATING PUMP

This may be fitted with a speed adjuster. If so it will be factory set at maximum and should not be changed.

FROST PRECAUTIONS

If the appliance is not to be used for a long period of time and there is a likelihood of freezing, then the appliance should be drained. The Worcester Heat Systems Technical Helpline will advise you on suitable frost precautions. For short periods, the built-in frost protection of the appliance will be adequate.

SERVICE

Annual servicing is important to ensure continuing high efficiency and long life of your appliance. Suitable servicing arrangements should be made with a competent third party. In the event of any difficulty in making suitable service arrangements, Worcester Heat Systems Ltd. will be happy to discuss regular servicing and offer a comprehensive maintenance contract.

IMPORTANT: Do not touch or adjust any sealed component.

WARNING

If a gas leak exists, or is suspected, turn off the gas supply to the appliance at the service cock and consult your local service engineer.

Do not touch any electrical switches to turn them either on or off. Open all windows and doors. Do not smoke. Extinguish all naked lights.

CLEANING

Do not use abrasive cleaners on the outer casing. Use a damp cloth and a little detergent.



OPERATION OF CONTROLS

OPERATING SWITCH

In the '☀' position there is no mains electricity to the appliance.

In the 'I' position mains electricity is connected to the appliance.

CENTRAL HEATING TEMPERATURE CONTROL

The position of this knob will determine the temperature of the water delivered to the radiators between the 'I' and 'MAX' position. When the knob is turned anti-clockwise past the 'I' position towards the '☀' (Summer Position), then the appliance will operate in the HOT WATER mode only and no heat will be delivered to the radiators.

DOMESTIC HOT WATER TEMPERATURE CONTROL

The position of this knob will determine the temperature of the water delivered at the domestic hot water taps between the '☀' and the 'MAX' position.

By slightly reducing the flow of domestic water from the tap, the delivery temperature of the water will be further increased. This is of particular advantage in the winter, for example to increase bath water temperature. Also this will provide an added advantage of reducing the delay before hot water is obtained.

FACIA MOUNTED PROGRAMMER (if fitted)

Your installer may have mounted either a mechanical or an electronic programmer into the fascia of your appliance. Operating instructions are supplied with the programmer.

RESET BUTTON

Press this button in for five seconds if any of the indicator lights are flashing slowly.

SYSTEM PRESSURE GAUGE

The red needle has been set to show the sealed system pressure which is required for the appliance to operate effectively. The grey needle will show the actual pressure in the system. This does not apply to any open vent system.

INDICATOR LIGHTS



Mains electricity indicator:

OFF : No mains electricity to the appliance

ON : Mains electricity is connected to the appliance



Central heating demand indicator:

OFF : No demand for heat to the central heating circuit

ON : Central heating demand

FLASHING SLOW : Ignition lockout
(once per second)

FLASHING FAST : Appliance fault (other than ignition lockout)
(five times per second)



Domestic hot water demand indicator:

OFF : No demand for domestic hot water

ON : Domestic hot water demand

FLASHING FAST : Air flow fault (RSF). Flue gas spillage (OF)
(five times per second)



Central heating and domestic hot water demand indicators:



BOTH FLASHING SLOW : Overheat cut-off
(once per second)




Flame detection indicator:

OFF : Burner off

ON : Burner on

Fig. 2. Controls.

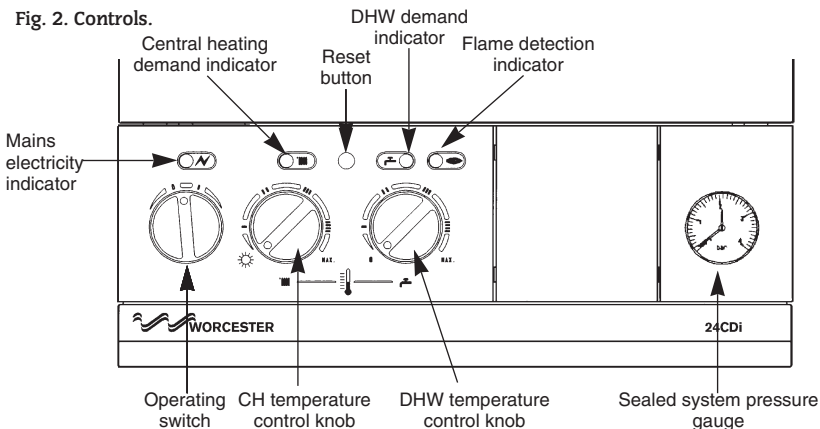



TO LIGHT AND STOP THE APPLIANCE

TO LIGHT THE APPLIANCE

Check that the water valves to the central heating circuit are open.

On sealed systems check that the grey needle on the pressure gauge is not below the required pressure.

Switch on the mains electricity. The green power on indicator will light. Set the room thermostat, if fitted, to maximum. Turn the central heating temperature control knob to 'MAX'. The red central heating demand indicator will light.

The burner will light and the red flame detection indicator will light.

Set the central heating and hot water temperature control knobs and the room thermostat, if fitted, to the desired temperature.

TO STOP THE APPLIANCE

For Short Periods

Turn the central heating temperature control knob fully anti-clockwise to the '☼' position.

For Long Periods

Turn the operating switch to the '☼' position. Switch off the mains electricity.

A fascia mounted electronic programmer will retain its settings for about two weeks, after which it will return to the factory set

programme. The display will disappear after approximately 12 hours.

A fascia mounted mechanical programmer will require resetting once the operating switch has been set to 'O', or the mains supply has been disconnected.

ELECTRICITY SUPPLY FAILURE

If the electricity supply fails the appliance will not operate. Once the supply is restored the appliance will return to normal operation. If a programmer is fitted, check that the settings have been maintained.

OVERHEAT CUT-OFF THERMOSTAT

The appliance will enter a lockout condition in the event of overheating.

An overheat cut-off thermostat is fitted to the appliance which will interrupt the electricity supply to the gas valve.

If the overheat cut-off has operated, both the central heating and the hot water demand indicators will flash together.

Fig. 3. CDi with front panel removed.

